



TWINSHAFT MIXER SPARE PART LIST

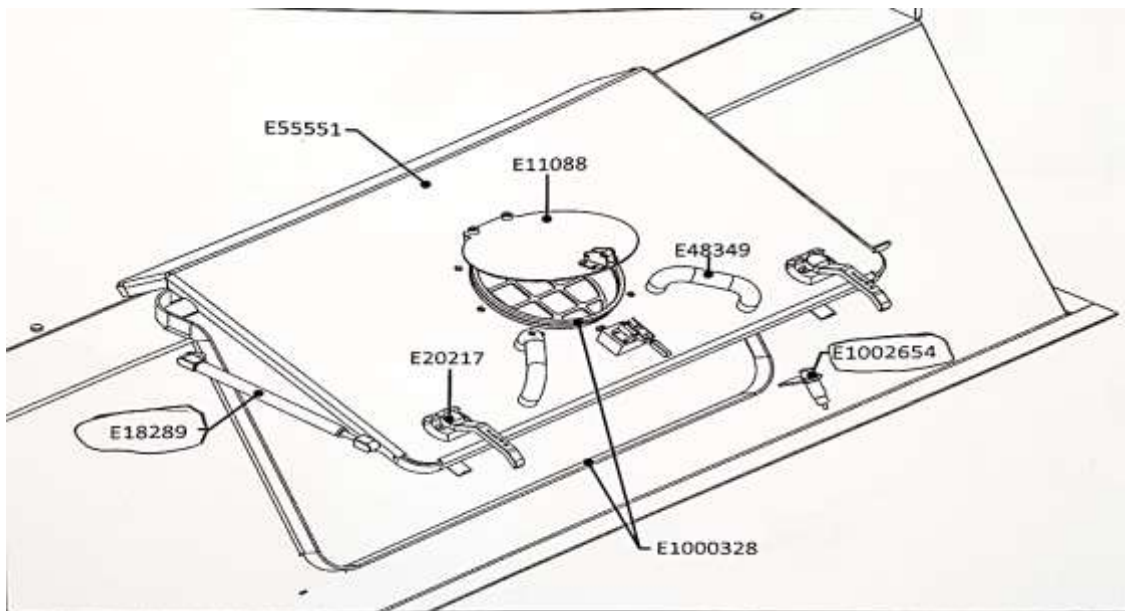


MIXER TOP COVER GROUP

CODE	PART NAME	PIECES	SPARE PART
E11088	MAINTENANCE COVER	2 PCS	
E55551	MAINTENANCE COVER	2 PCS	
E18289	DAMPER	4 PCS	2 PCS
E1002654	PROXIMITY SWITCH	2 PCS	4 PCS
E1000328	RUBBER	---	
E48349	HANDLE	4 PCS	
E20217	HANDLE	4 PCS	

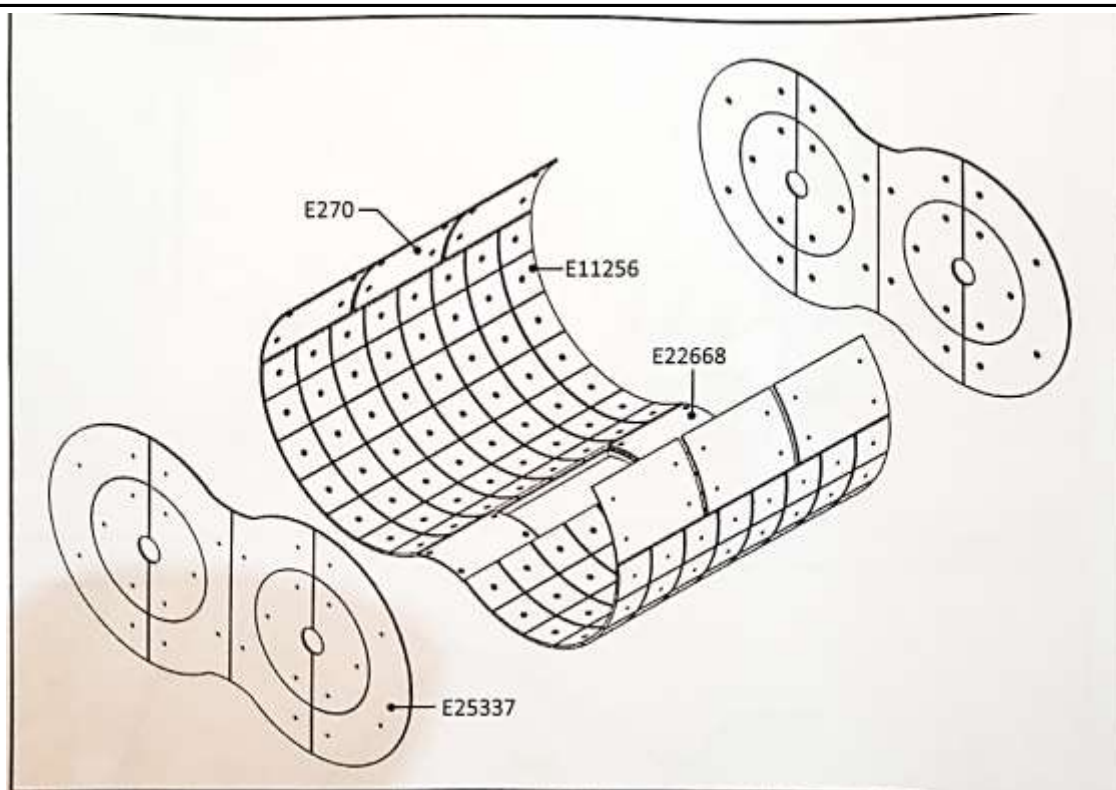


MIXER LINING GROUP (E22667)

CODE	PART NAME	PIECES	SPARE PART
E270	MIXER BODY UPPER LINING	6 PCS	
E11256	MIXER CAST WEAR LINING	112 PCS	112 PCS
E25337	SIDE WALL LINING	2 SET	2 SET
E22668	MIXER COVER SIDE WEARLINING	2 PCS	2 PCS

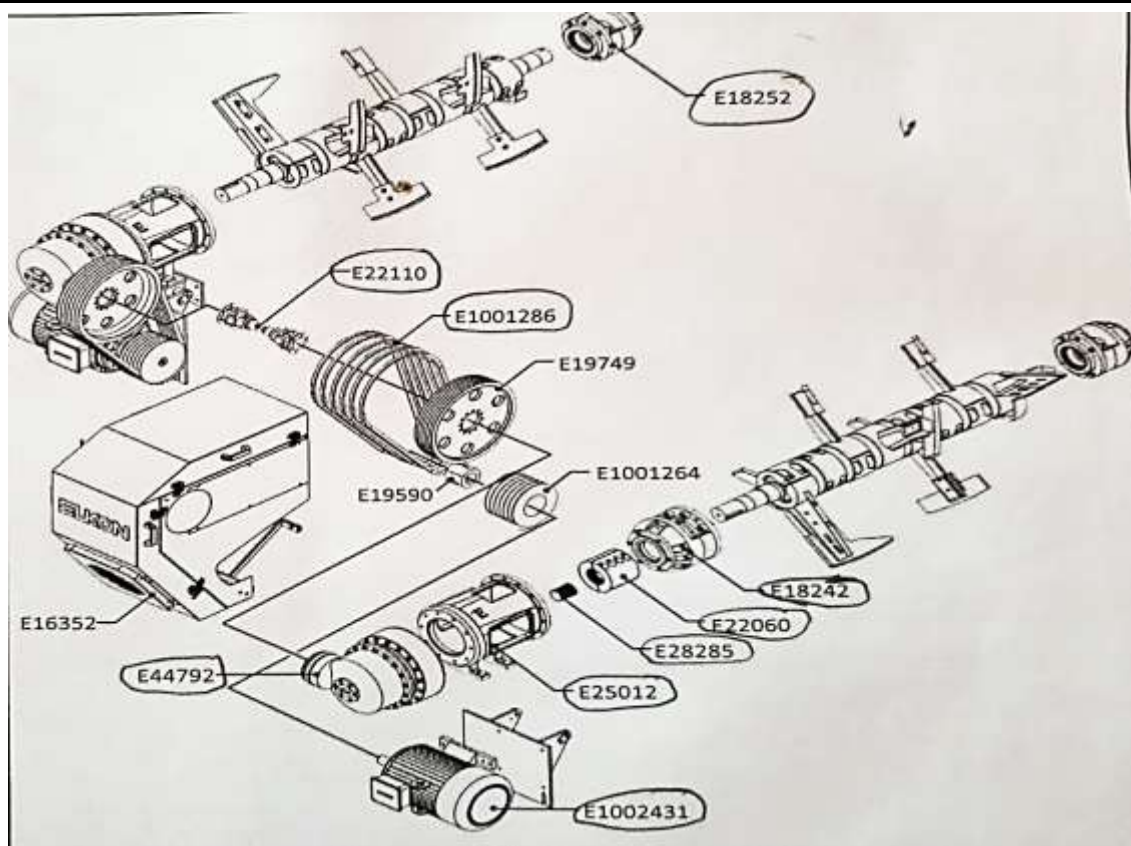


DRIVING GROUP

CODE	PART NAME	PIECES	SPARE PART
E16352	GUARD	1 PCS	
E18252	BEARING (IDLE SIDE) GROUP	2 PCS	2 PCS
E18242	BEARING (DRIVING SIDE) GROUP	2 PCS	2 PCS
E25012	HOUSING	2 PCS	
E22110	SHAFT	1 PCS	2 PCS
E1001286	V BELT	12 PCS	24 PC
E19749	PULLEY	2 PCS	
E1001264	PULLEY	2 PCS	
E1002431	MOTOR	2 PCS	1 PCS
E44792	GEARBOX GROUP	1 PCS	1 PCS
E22060	COUPLING	2 PCS	
E28285	GEARWHEEL	2 PCS	2 PCS
E19590	CLAMPING SLEEVE	2 PCS	

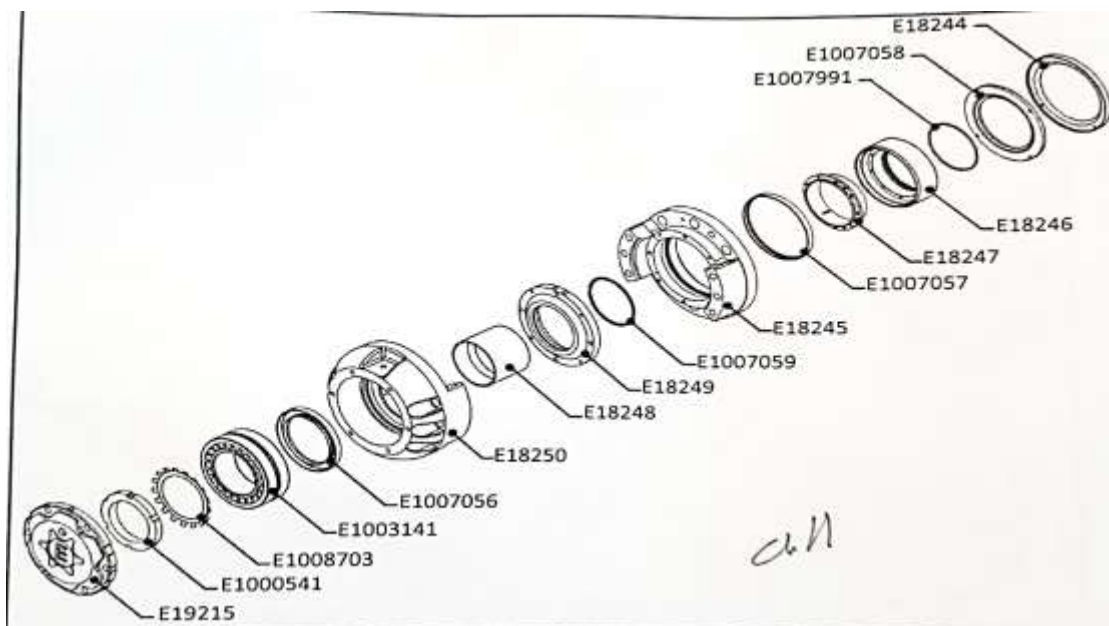


BEARING(IDLE SIDE)GROUP (E18252)

CODE	PART NAME	PIECES	SPARE PART
E18244	FRONT FLANGE	1 PCS	
E1007058	SEAL	1 PCS	
E1007991	BEARING BODY	1 PCS	
E18246	SEAL	1 PCS	
E18247	O RING	1 PCS	
E1007057	LEAKPROOFING PART	1 PCS	
E18245	LEAKPROOFING PART	1 PCS	
E1007059	BEARING COVER	1 PCS	
E18249	ORING	1 PCS	
E18248	SPACER	1 PCS	
E18250	BEARING BODY	1 PCS	
E1007056	SEAL	1 PCS	
E1003141	BALL BEARING	1 PCS	
E1008703	WASHER	1 PCS	
E1000541	NUT	1 PCS	
E19215	COVER	1 PCS	

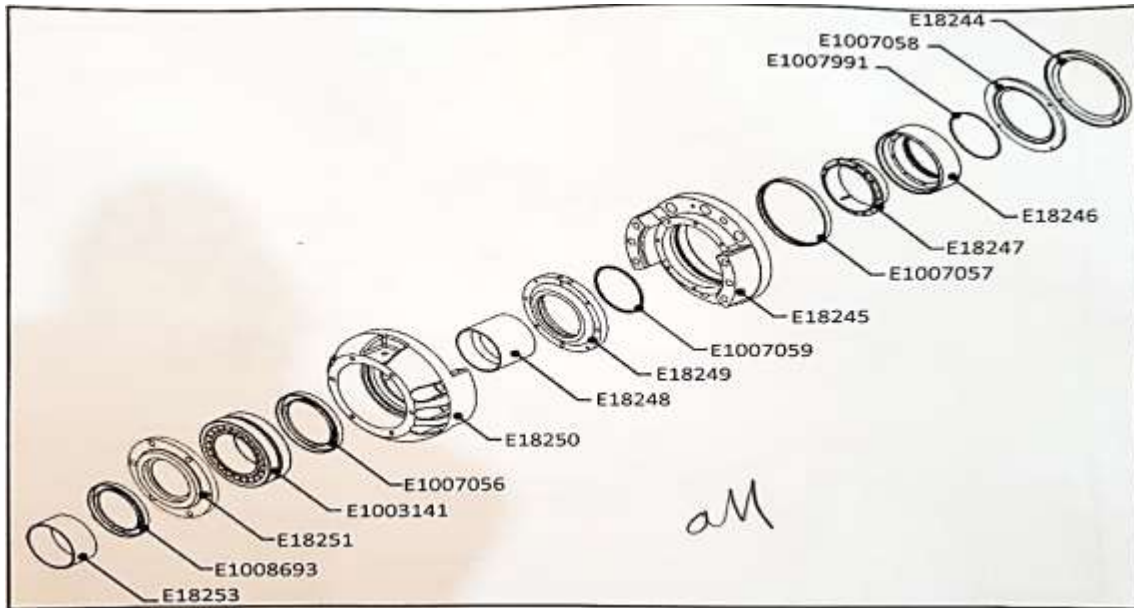


BEARING (DRIVING SIDE)GROUP (E18242)

CODE	PART NAME	PIECES	SPARE PART
E18244	FRONT FLANGE	1 PCS	
E1007058	SEAL	1 PCS	
E1007991	BEARING BODY	1 PCS	
E18246	SEAL	1 PCS	
E18247	O RING	1 PCS	
E1007057	LEAKPROOFING PART	1 PCS	
E18245	LEAKPROOFING PART	1 PCS	
E1007059	BEARING COVER	1 PCS	
E18249	ORING	1 PCS	
E18248	SPACER	1 PCS	
E18250	BEARING BODY	1 PCS	
E1007056	SEAL	1 PCS	
E1003141	BALL BEARING	1 PCS	
E18251	COVER	1 PCS	
E1008693	SEAL	1 PCS	
E18253	SPACER	1 PCS	

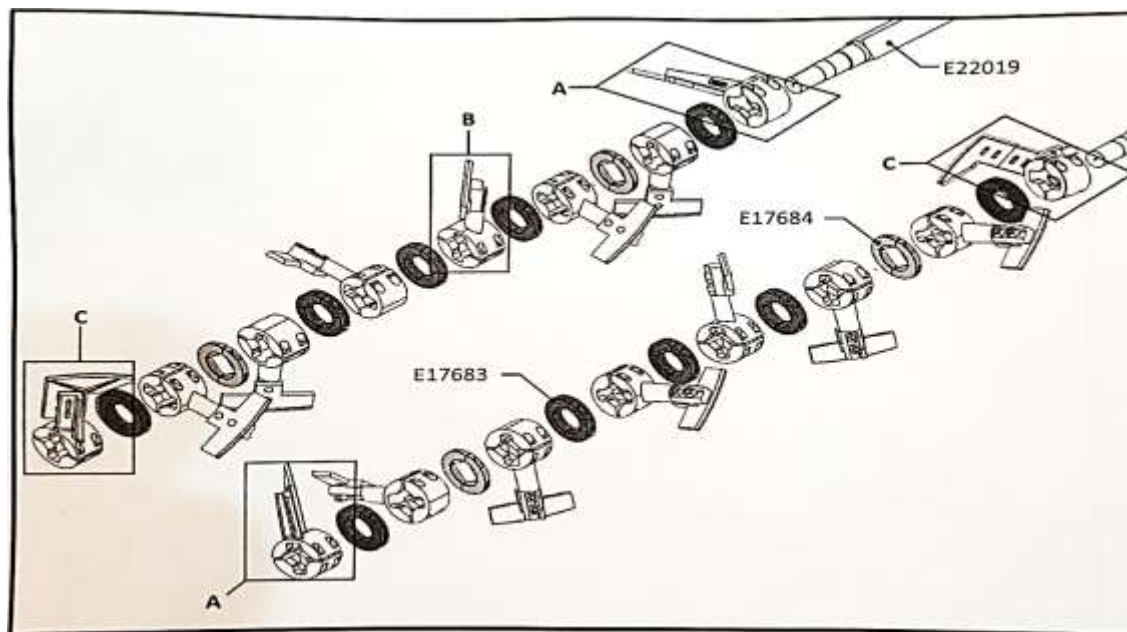

MIXING ARMS AND SCRAPER ARMS GROUP

CODE	PART NAME	PIECES	SPARE PART
E22019	TWINSHAFT MIXER MIXING SHAFT	2 PCS	
E17683	EXTENSIVE SPACER	20 PCS	
E17684	RESTRAINED SPACER	8 PCS	

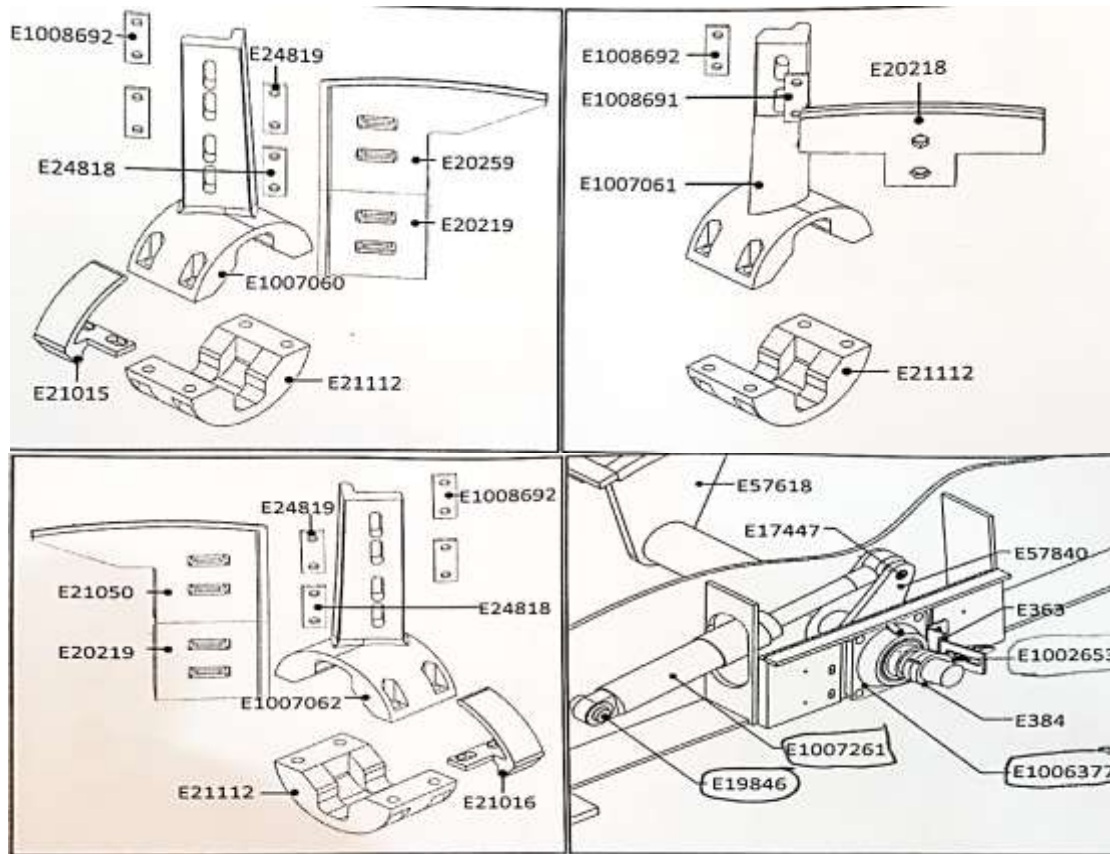

CODE	PART NAME	PIECES	SPARE PART
E1008692	FIXING PLATE	20 PCS	
E24819	FIXING PLATE	4 PCS	
E24818	FIXING PLATE	4 PCS	
E21050	SCRAPER PADDLE	2 PCS	
E20219	SCRAPER PADDLE	4 PCS	
E1007060	SCRAPER ARM	2 PCS	
E21015	LITTLE SCRAPER	2 PCS	
E21112	MIXING ARM FIXER	16 PCS	
E20218	MIXING PADDLE	12 PCS	
E1008691	FIXING PLATE	12 PCS	
E1007061	MIXING ARM	12 PCS	
E20259	SCRAPER PADDLE	2 PCS	
E1007062	SCRAPER ARM	2 PCS	
E21016	LITTLE SCRAPER	2 PCS	
E57618	MIXER DISCHARGING GATE	1 PCS	
E17447	PIN	1 PCS	
E57840	PISTON CONNECTION PART	2 PCS	
E363	SWITCH CONNECTION PART	1 PCS	
E1002653	PROXIMITY SWITCH	2 PCS	4 PCS
E384	ECCENTRIC	2 PCS	
E1006377	BEARING	3 PCS	3 PCS
E1007261	HYDRAULIC PISTON	1 PCS	2PCS
E19846	PN	1 PCS	

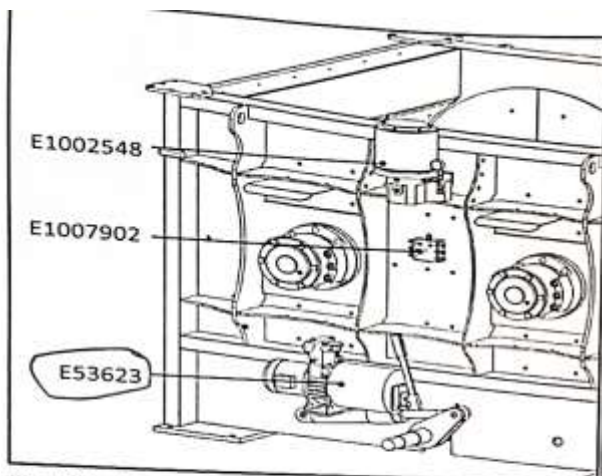


Fig.12: Lubrication group

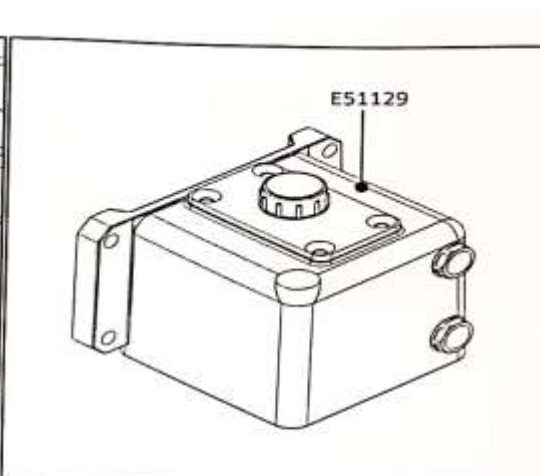


Fig.13: Gear box oil filling cap

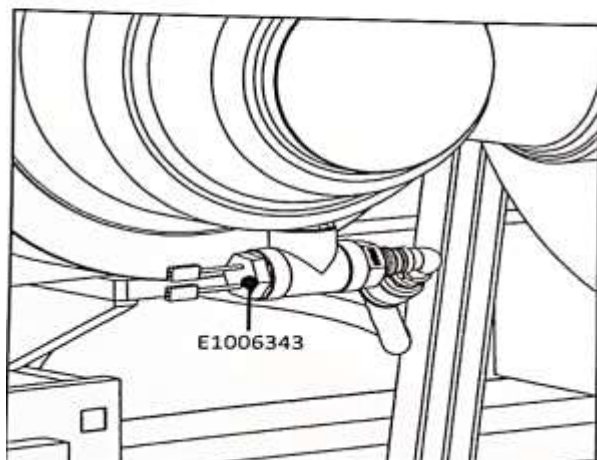


Fig.14: Lubrication sensors

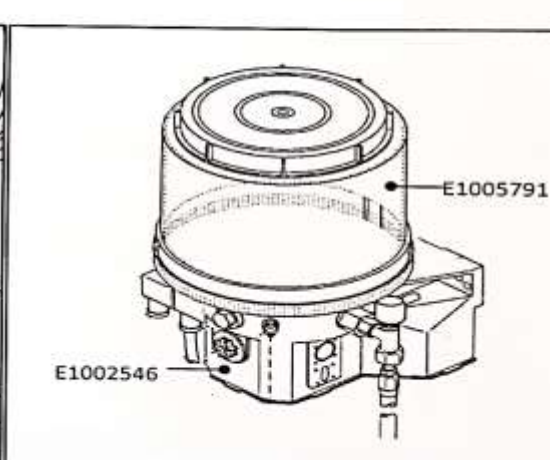


Fig.15: Automatic lubrication (E1002548)

CODE	PART NAME	PIECES	SPARE PART
E1002548	AUTOMATIC LUBRICATION	1 PCS	
E1007902	GREASE DISTRUBITOR	1 PCS	
E53623	HYDRAULIC UNIT	1 PCS	1 PCS
E51129	OIL CAP	1 PCS	
E1006343	LUBRICATION SENSOR	2 PCS	
E1005791	GREASE RESERVOIR	1 PCS	
E1002546	AUTOMATIC OIL PUMP	1 PCS	


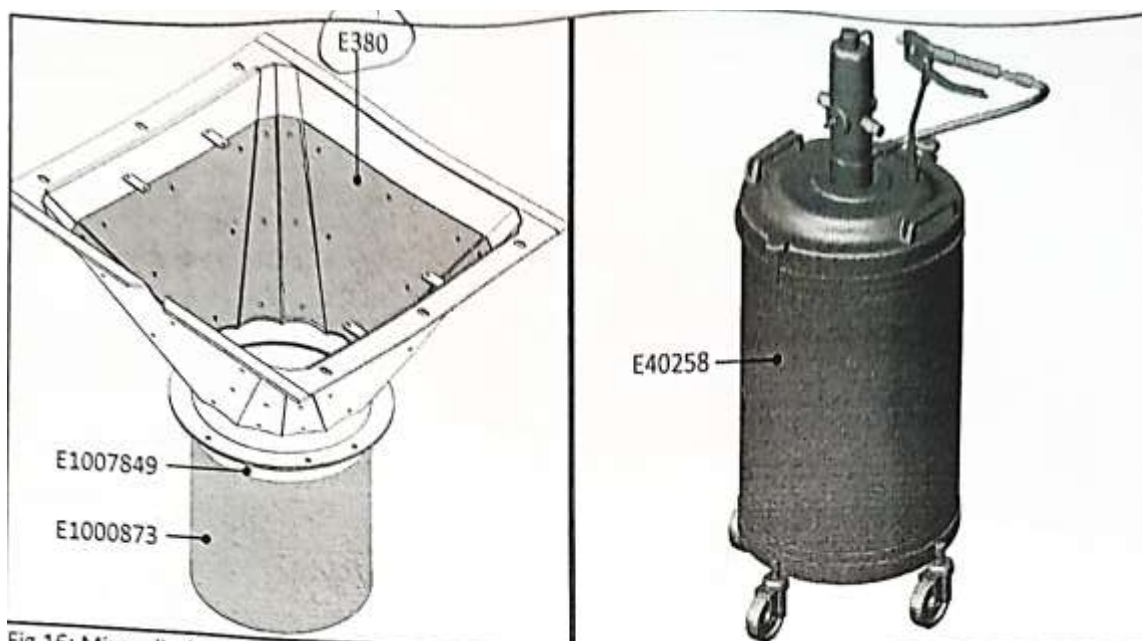



Fig.16: Mixer discharge

CODE	PART NAME	PIECES	SPARE PART
E1000873	RUBBER	1 PCS	
E1007849	CLAMP	1 PCS	
E40258	GREASE HAND PUMP	1 PCS	
E380	DISCHARGING CHUTE	1 PCS	

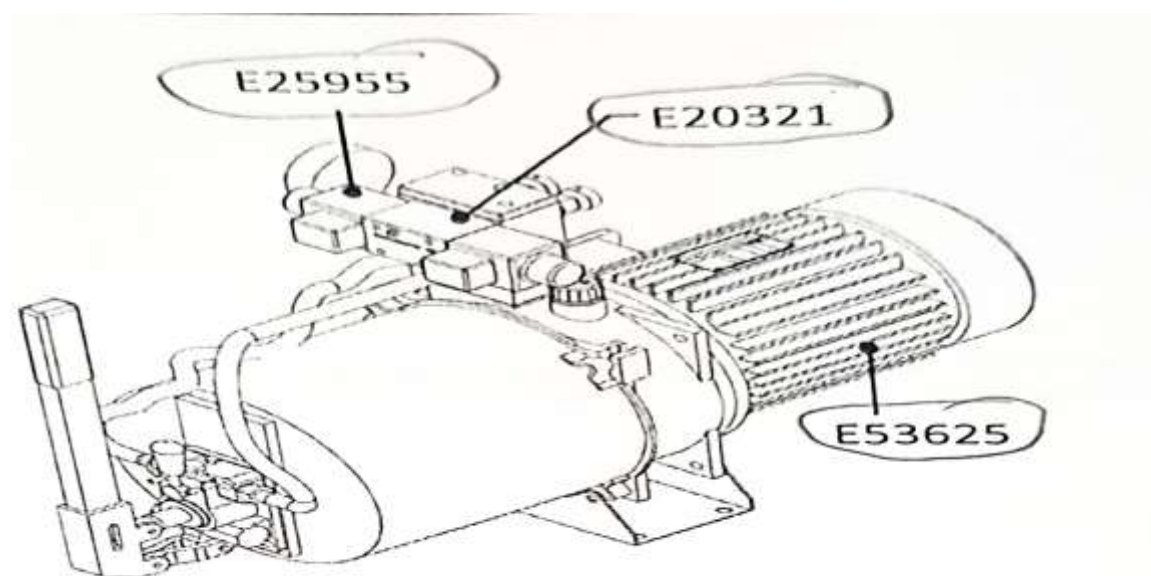


CODE	PART NAME	PIECES	SPARE PART
E25955	COIL	1 PCS	2 PCS
E20321	VALVE	1 PCS	2 PCS
E53625	MOTOR	1 PCS	

Cement Weighing Batcher SPARE PART LIST

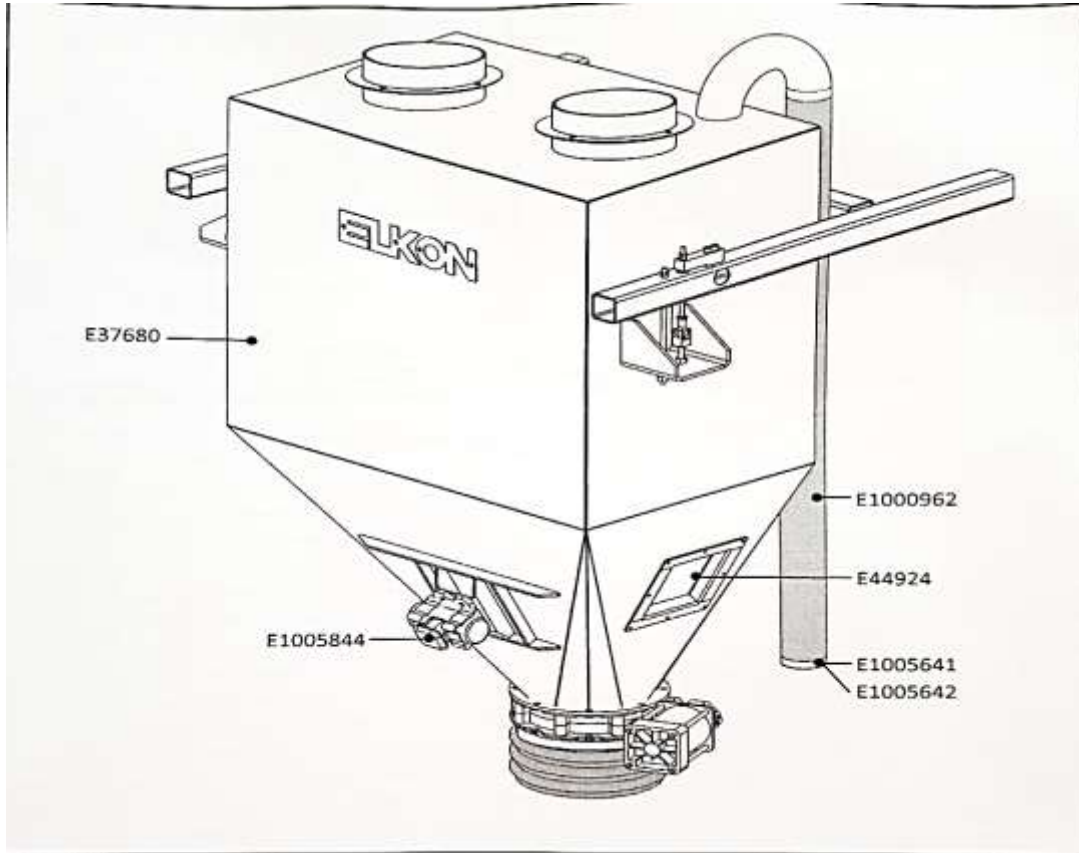

CODE	PART NAME	PIECES	SPARE PART
E37680	CEMENT WEIGHING BATCHER	1 PCS	
E1005641	CLAMP		
E1005642	CLAMP LOCK		
E1000962	VENTING HOSE	1 PCS	1 PCS
E1005844	VIBERATOR	1 PCS	1 PCS
E44924	MAINTENANCE COVER	1 PCS	

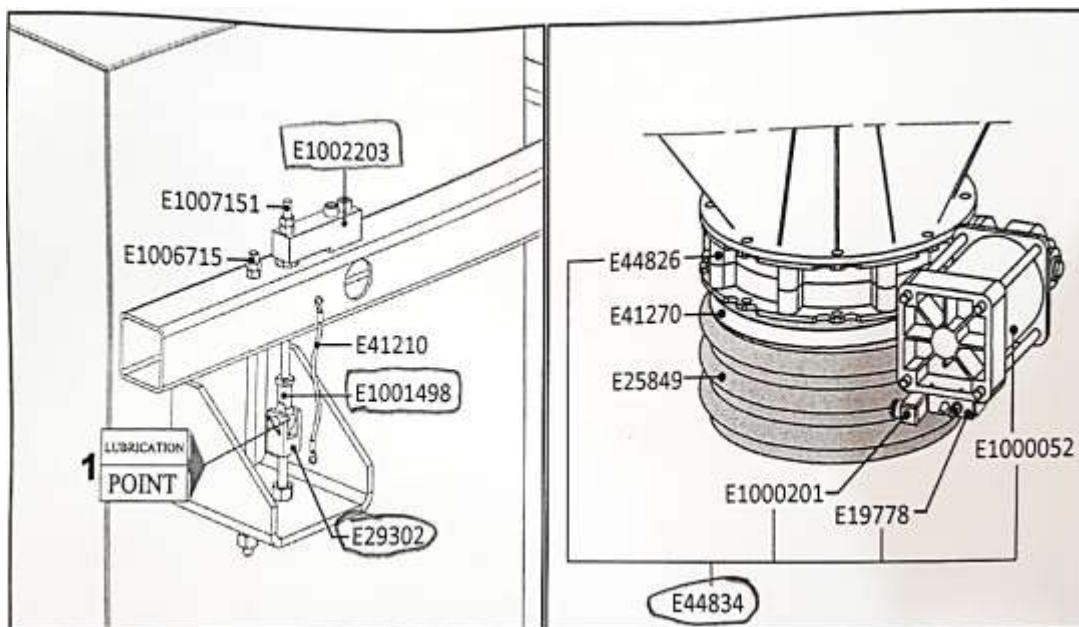

CODE	PART NAME	PIECES	SPARE PART
E1002203	LOAD CELL	3 PCS	2 PCS
E1007151	THREADED STUD	3 PCS	3 PCS
E1006715	THREADED STUD	3 PCS	3 PCS
E41210	EARTHING CABLE	3 PCS	
E1001498	ROD END	3 PCS	3 PCS
E29302	CONNECTION PART	3 PCS	2 PCS
E44834	BUTTERFLY VALVE GROUP	1 SET	1 SET
E44826	BUTTERFLY VALVE	1 PCS	
E1000052	ACTUATOR	1 PCS	
E19778	PENEUMATIC VALVE	1 PCS	1 PCS
E1000201	PENEUMATIC VALVE COIL	1 PCS	1 PCS
E25849	BELLOW HOSE	1 PCS	
E41270	CLAMP	----	

WATER WEIGHING BATCHER SPARE PART LIST

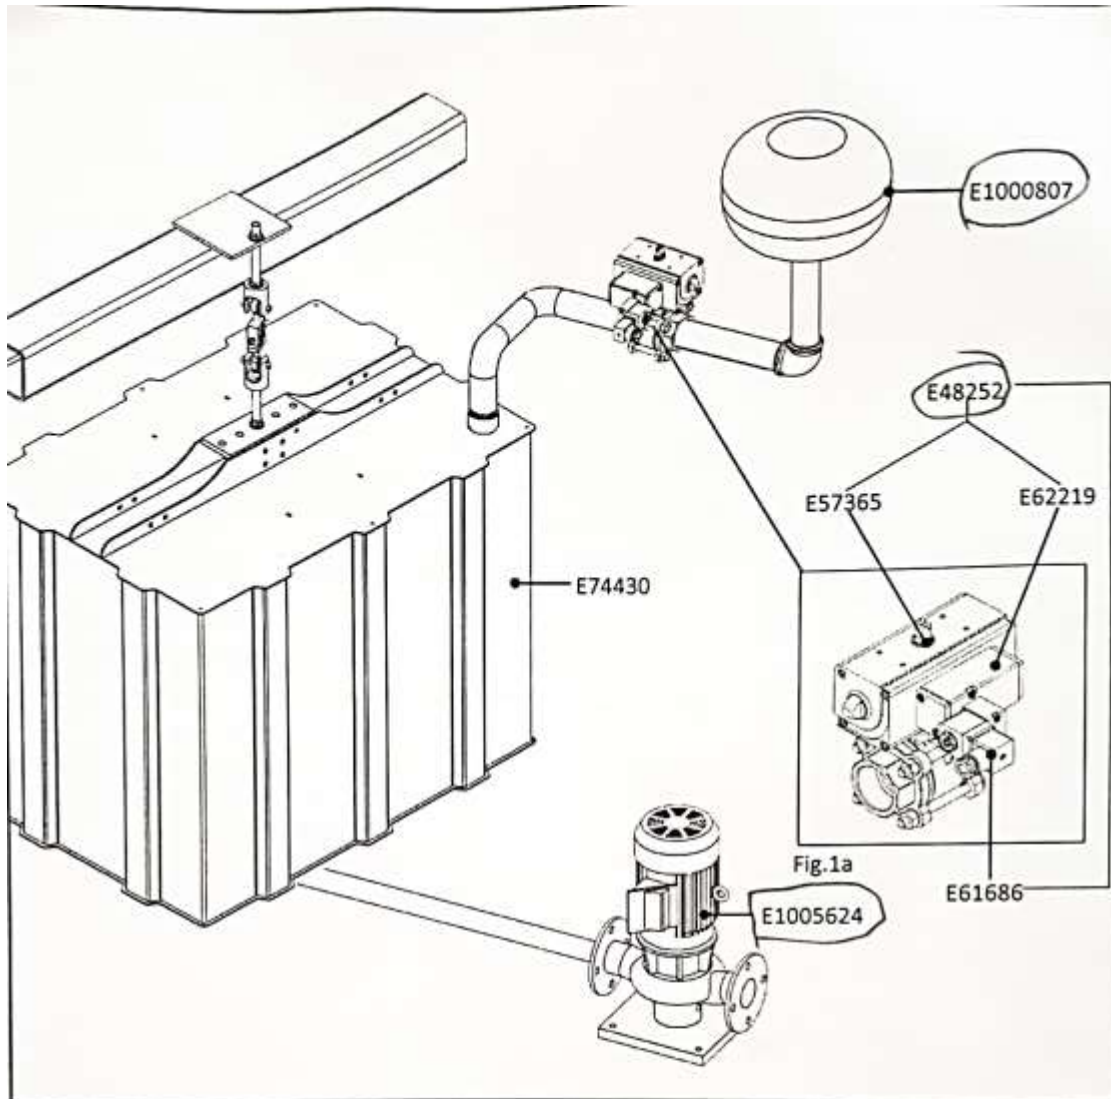
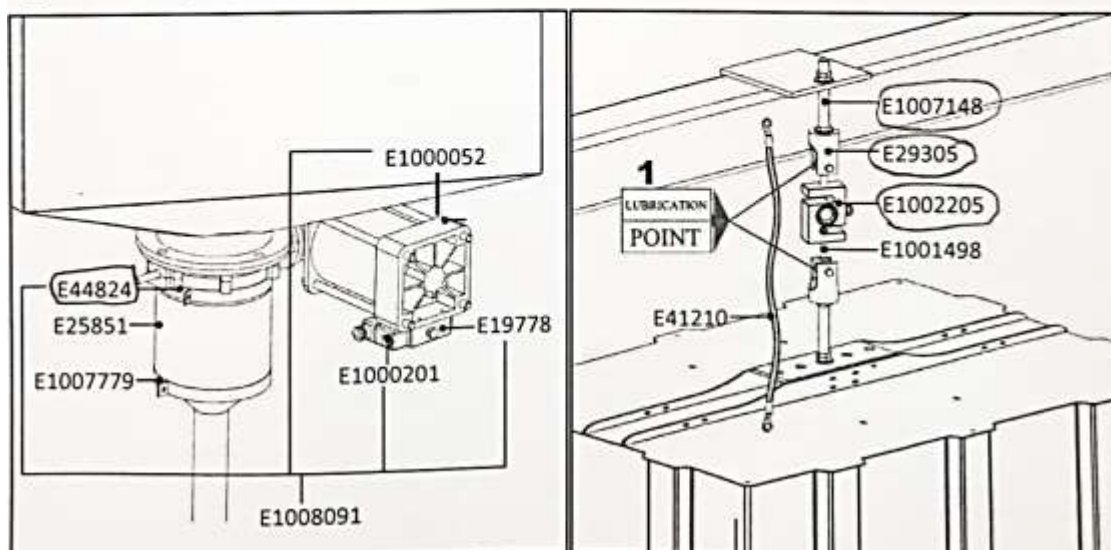


Fig.1: Water weighing batcher




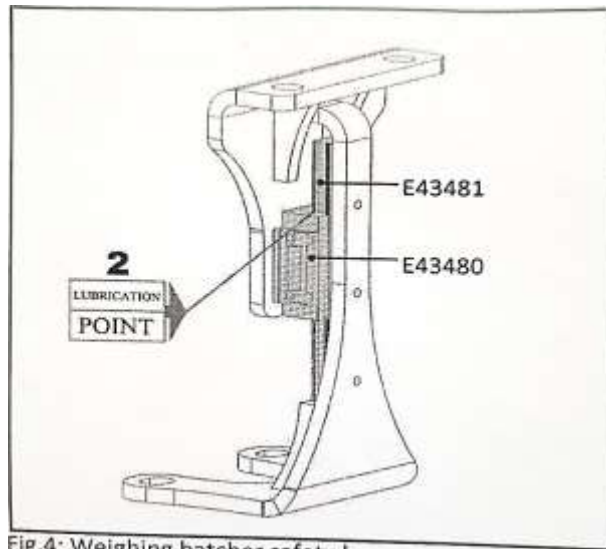


Fig.4: Weighing batcher safety device



CODE	PART NAME	PIECES	SPARE PART
E74430	WATER WEIGHING BATCHER	1 PCS	
E1000807	EXPANSION TANK	1 PCS	2 PCS
E48252	PENUMATIC PISTON VALVE KIT	1 PCS	1 PCS
E57365	ACUATOR	1 PCS	
E62219	PENUMATIC VALVE	1 PCS	
E61686	PENUMATIC VALVE COIL	1 PCS	
E1005624	WATER PUMP	1 PCS	1 PCS
E1008091	BUTTERFLY VALVE GROUP	1 PCS	1 SET
E44824	BUTTERFLY VALVE	1 PCS	
E1000052	ACTUATOR	1 PCS	
E19778	PNEUMATIC VALVE	1 PCS	
E1000201	PNEUMATIC VALVE COIL	1 PCS	
E25851	BELLOW HOSE	2 PCS	
E1007779	CLAMP	2 PCS	
E1002205	LOADCELL	1 PCS	1 PCS
E29305	CONNECTION PART	1 PCS	1 PCS
E1007148	THREADED STUD	2 PCS	4 PCS
E1001498	ROD END	1 PCS	2 PCS
E41210	EARTHING CABLE	1 PCS	
E43480	LINEAR SLIDE CAR	1 PCS	
E43481	GUIDE RAIL	1 PCS	

ADDITIVE WEIGHING BATCHER SPARE PART LIST

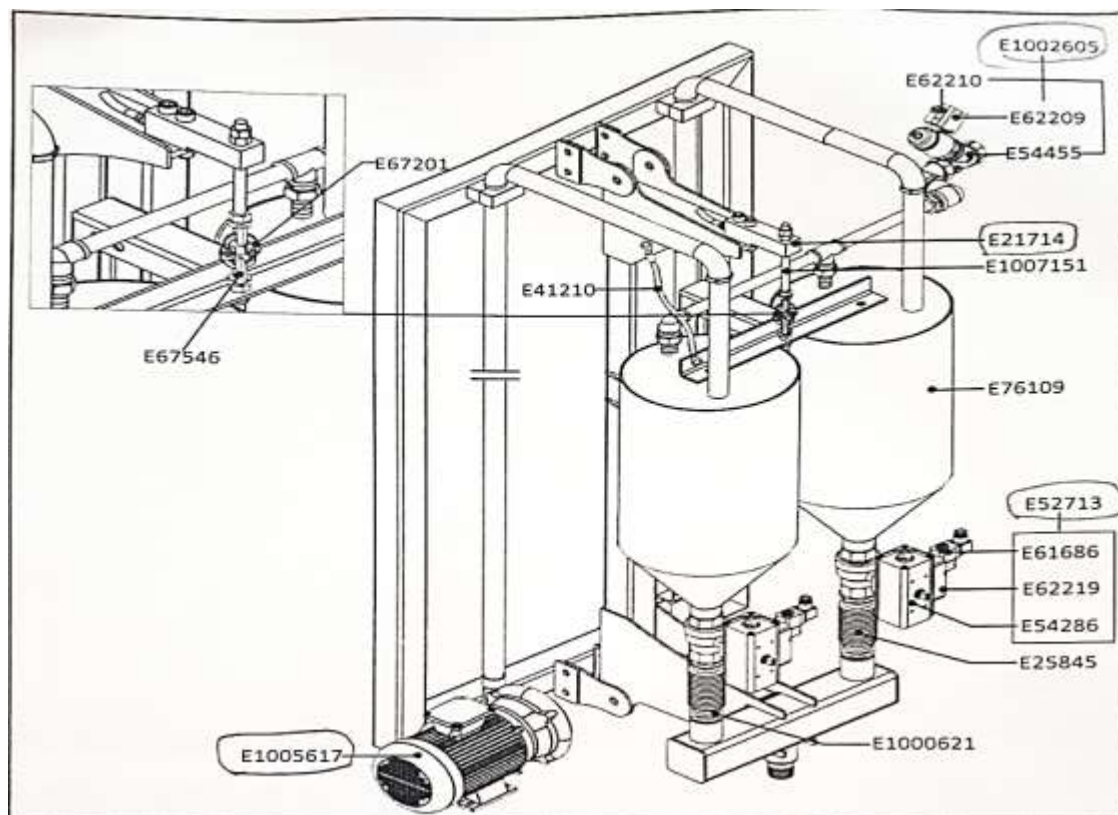


CODE	PART NAME	PIECES	SPARE PART
E76109	ADDITIVE WEIGHING BATCHER	2 PCS	
E1007151	THREADED STUD	1 PCS	
E21714	LOADCELL	1 PCS	1 PCS
E41210	EARTHING GABLE	1 PCS	
E1002605	PNEUMATIC PISTON VALVE KIT	1 SET	2 SET
E54455	PNEUMATIC PISTON VALVE	1 PCS	
E62210	PNEUMATIC VALVE COIL	1 PCS	
E62209	PNEUMATIC VALVE	1 PCS	
E52713	PNEUMATIC PISTON VALVE KIT	2 SET	2 SET
E54286	ACTUATOR	2 PCS	
E62219	PNEUMATIC VALVE	2 PCS	
E61686	PNEUMATIC VALVE COIL	2 PCS	
E25845	BELLOW HOSE	2 PCS	
E1000621	CLAMP	4 PCS	
E1005617	ADDITIVE PUMP	2 PCS	1 PCS
E43480	LINEAR SLIDE CAR	1 PCS	
E43481	GUIDE RAIL	1 PCS	
E67546	LIFTING EYE BOLT	2 PCS	
E67201	HUMMER LOCK	1 PCS	

INLINE SILO SPARE PART LIST

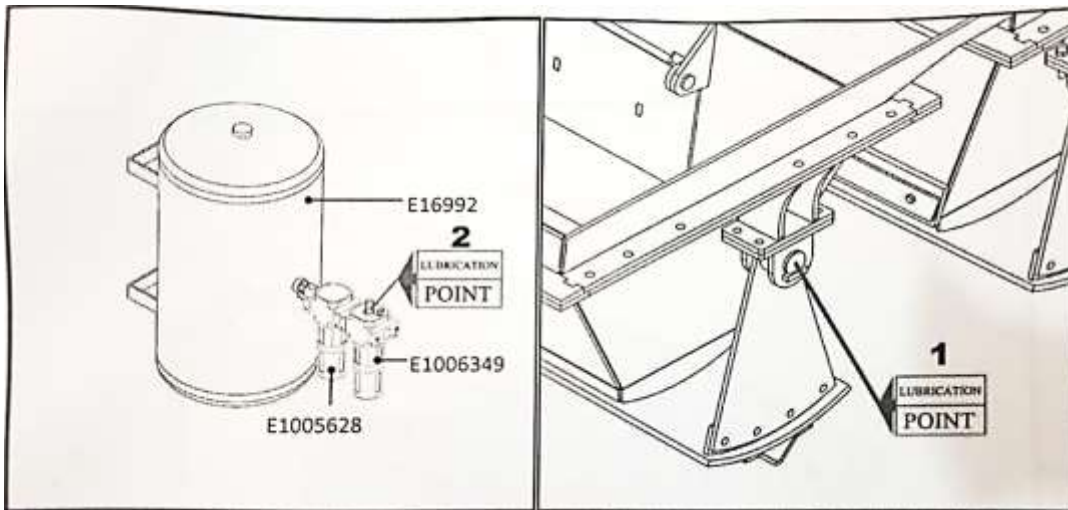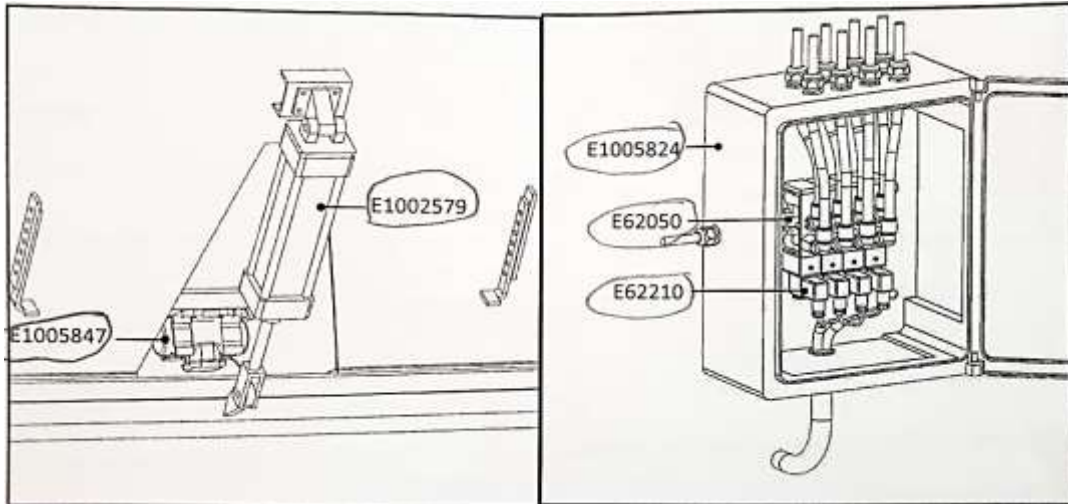

CODE	PART NAME	PIECES	SPARE PART
E1002579	PNEUMATIC PISTON	8 PCS	3 PCS
E1005824	PNEUMATIC VALVE BOX	2 PCS	1 PCS
E62050	PNEUMATIC VALVE	8 PCS	4 PCS
E62210	PNEUMATIC VALVE COIL	8 PCS	4 PCS
E1005847	VIBRATOR	2 PCS	1 PCS
E16992	AIR TANK	2 PCS	
E1006349	AIR LUBRICATOR	2 PCS	2 PCS
E1005628	WATER DRAINER	2 PCS	2 PCS

WEIGHING CONVEYOR SPARE PART LIST

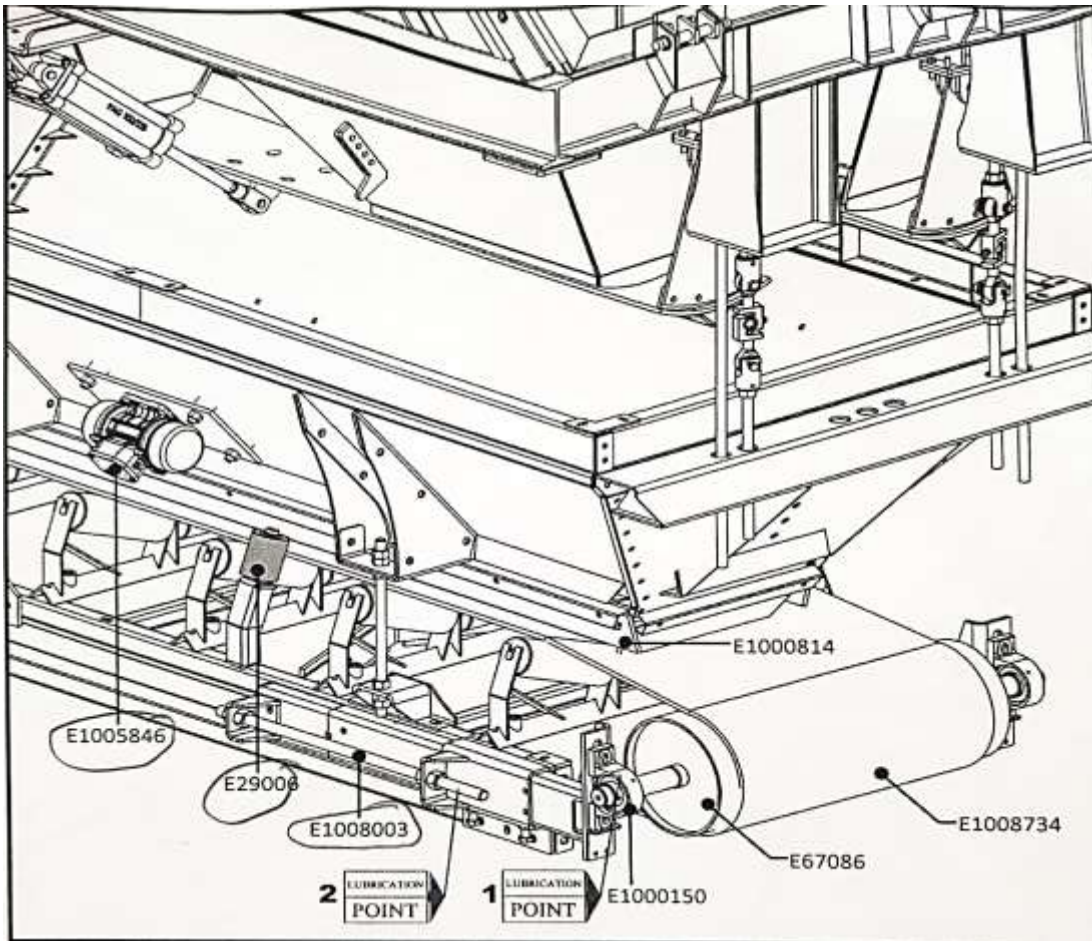

CODE	PART NAME	PIECES	SPARE PART
E1000814	RUBBER	2 PCS	
E1008734	BELT	1 PCS	
E67086	TAIL PULLEY	1 PCS	
E1000150	BEARINGS	2 PCS	4 PCS
E1008003	THREADED STUD	2 PCS	4 PCS
E1005846	VIBRATOR	1 PCS	1 PCS
E29006	BELT CENTERING ROLLER	8 PCS	8 PCS


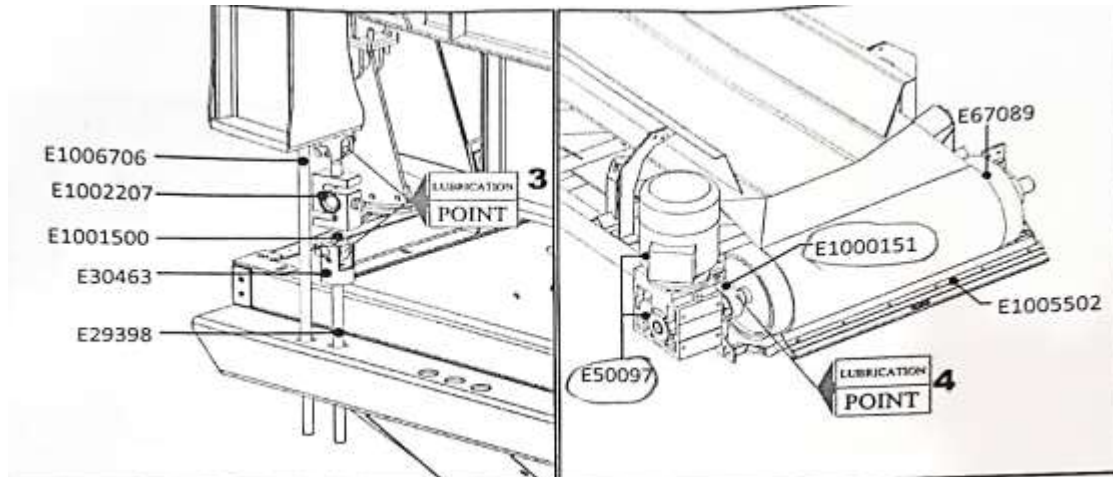



Fig.2: Weighing batcher hanger

Fig.3: Head drive pulley side

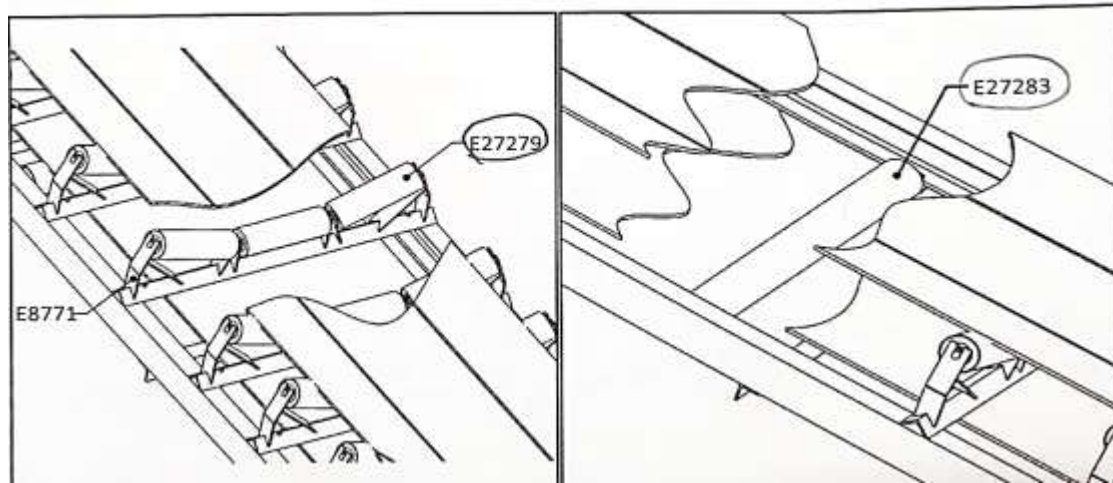


CODE	PART NAME	PIECES	SPARE PART
E1006706	THREADED STUD	6 PCS	3 PCS
E1002207	LOADCELL	6 PCS	2 PCS
E1001500	ROD END	12 PCS	4 PCS
E30463	LOADCELL CONNECTION PART	12 PCS	4 PCS
E29398	THREADED STUD	12 PCS	4 PCS
E50097	ELECTRIC MOTOR AND GEARBOX	1 PCS	1 PCS
E1000151	HEAD DRIVE PULLEY BEARINGS	2 PCS	3 PCS
E67089	HEAD DRIVE PULLEY	1 PCS	
E1005502	BELT CLEANER	1 PCS	
E8771	TROUGHING IDLER CHASSIS	32 PCS	
E27279	TROUGHING IDLER	96 PCS	30 PCS
E27283	RETURN IDLER	7 PCS	10 PCS

TRANSFER CONVEYOR SPARE PART LIST

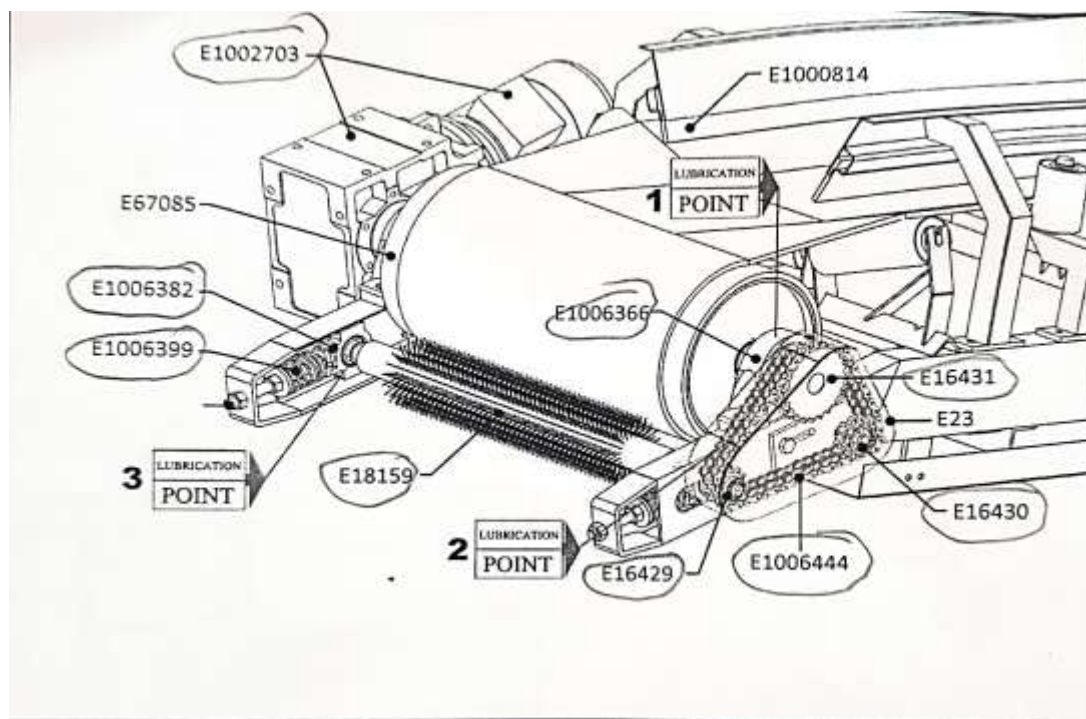


CODE	PART NAME	PIECES	SPARE PART
E1002703	GEARBOX	1 PCS	1 PCS
E1006366	BEARING	2 PCS	
E67085	HEAD DRIVE PULLEY	1 PCS	
E18159	CYLINDRICAL CONVEYOR CLEANING BRUSH	1 PCS	2 PCS
E23	GURD	1 PCS	
E1006399	SPRING	2 PCS	2 PCS
E1006382	BEARING	2 PCS	4 PCS
E16429	CHAIN GEAR	1 PCS	1 PCS
E1006444	CHAIN	1 PCS	2 PCS
E16431	CHAIN GEAR	1 PCS	1 PCS
E16430	CHAIN GEAR	1 PCS	1 PCS
E1000814	RUBBER	2 PCS	

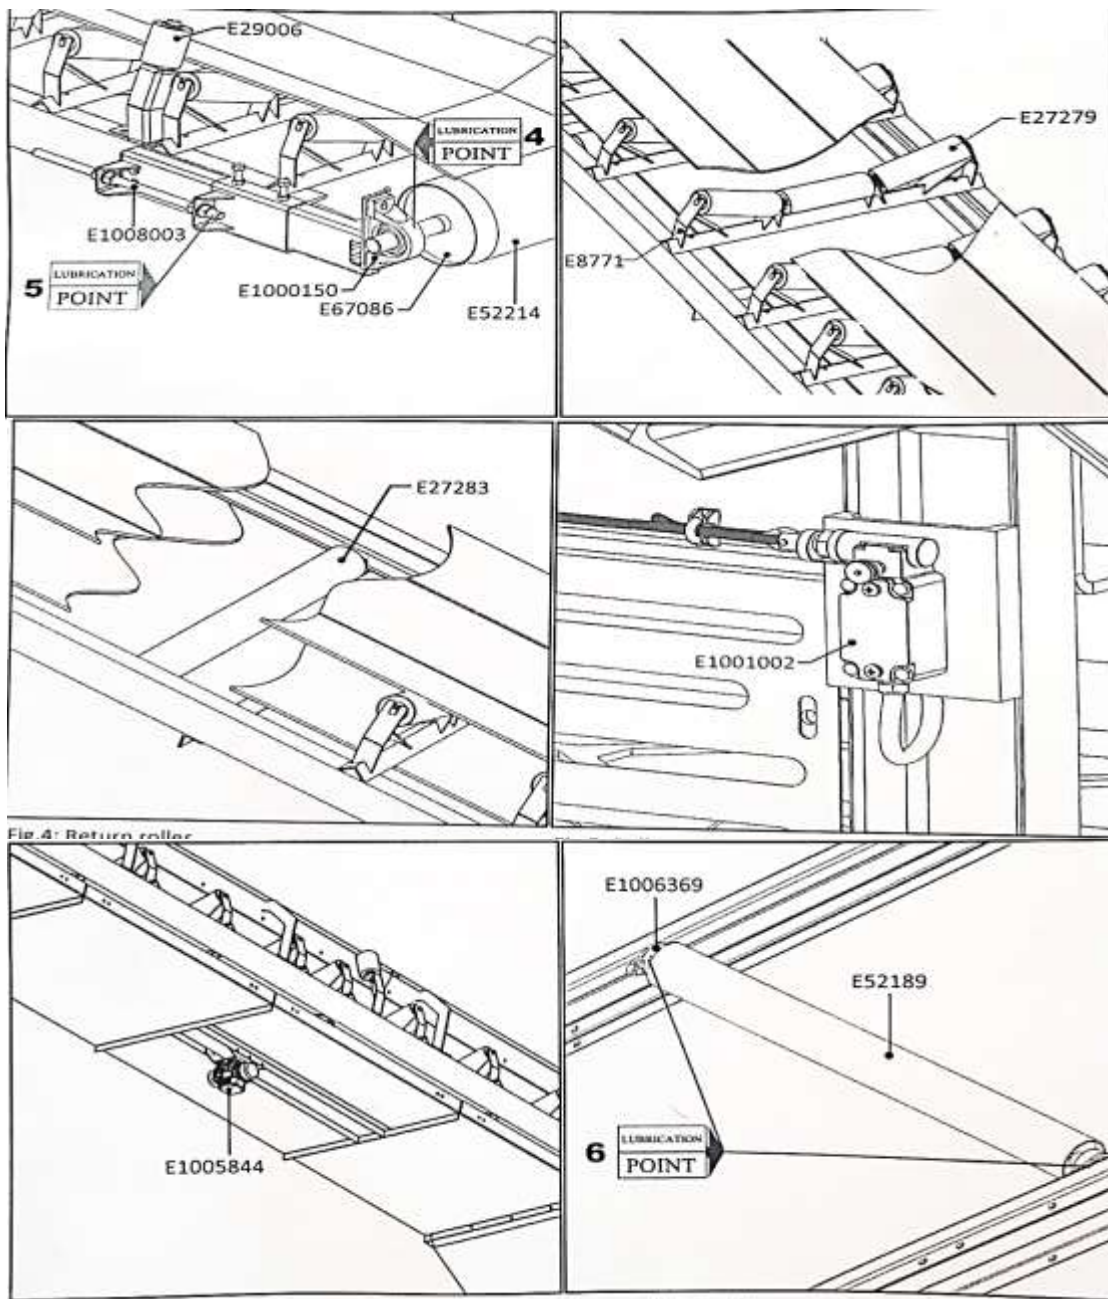


CODE	PART NAME	PIECES	SPARE PART
E29006	CONVEYOR GUIDE ROLLERS	4 PCS	
E1008003	THREADED STUD	2 PCS	
E1000150	BEARINGS	2 PCS	
E67086	TAIL PULLEY	1 PCS	
E52214	TRANSFER BELT	1 PCS	
E8771	TROUGHING IDLER ROLLER CHASSIS	32 PC	
E27279	TROUGHING IDLER ROLLER	96 PCS	
E27283	RETURN IDLER	8 PCS	
E1001002	PULLGUARD	1 PCS	2 PCS
E1005844	VIBRATOR	1 PCS	
E52189	DEFLECTION DRUM	1 PCS	2 PCS
E1006369	BEARINGS	2 PCS	2 PCS

COMPRESSOR SAPRE PART LIST

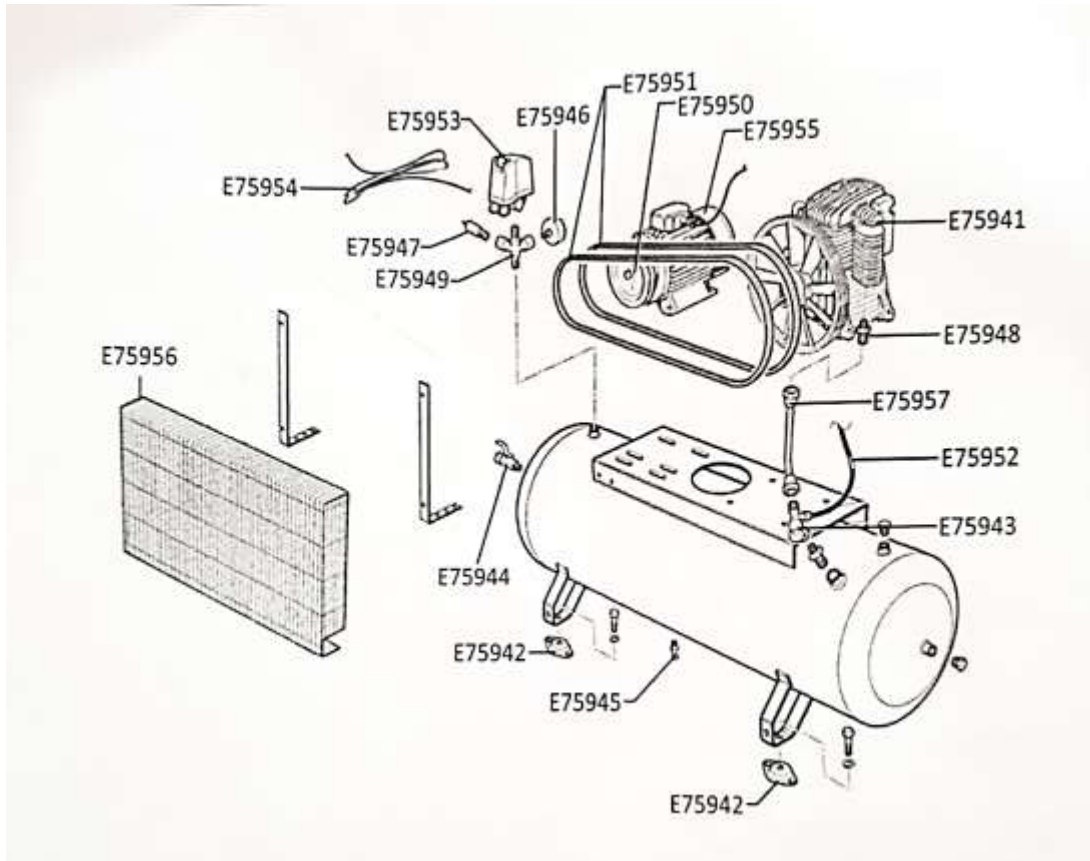

COMPRESSOR (E1001393)

CODE	PART NAME	PIECES	SPARE PART
E75941	PUMP	1 PCS	1 PCS
E75942	FOOT	4 PCS	
E75943	NON RETURN VALVE	1 PCS	2 PCS
E75944	VALVE	1 PCS	
E75945	DRAIN VALVE	1 PCS	
E75946	MANOMETER	1 PCS	2 PCS
E75947	SAFETY VALVE	1 PCS	
E75948	FITTING	2 PCS	
E75949	FITTING	1 PCS	
E75950	PULLEY	1 PCS	
E75951	BELT	2 PCS	4 PCS
E75952	HOSE	1 PCS	
E75953	PRESSURE SWITCH	1 PCS	2 PCS
E75954	CABLE	1 PCS	
E75955	MOTOR	1 PCS	
E75956	BELT GUARD	1 PCS	
E75957	DELIVERY PIPE	1 PCS	

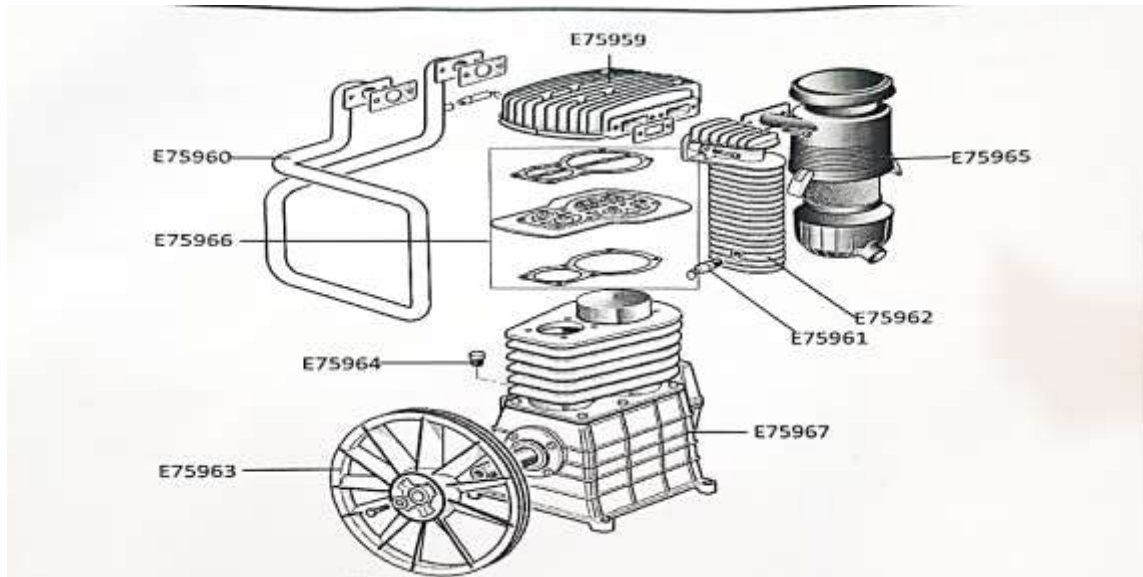

BARE PUMP (E75941)

CODE	PART NAME	PIECES	SPARE PART
E75959	CYLINDER HEAD KIT	1 PCS	
E75960	COOLER KIT	1 PCS	
E75961	SAFTY VALVE KIT	1 PCS	
E75962	AFTERCOOLER KIT	1 PCS	
E75963	PULLEY KIT	1 PCS	
E75964	OIL LEVEL KIT	1 PCS	
E75965	FILTER KIT	1 PCS	
E75966	COVER SEAL SET	1 PCS	
E75967	CYLINDER HOUSING GROUP	1 PCS	

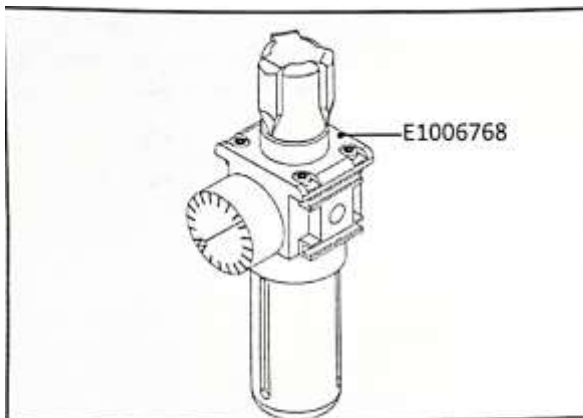


Fig.3: Air service unit

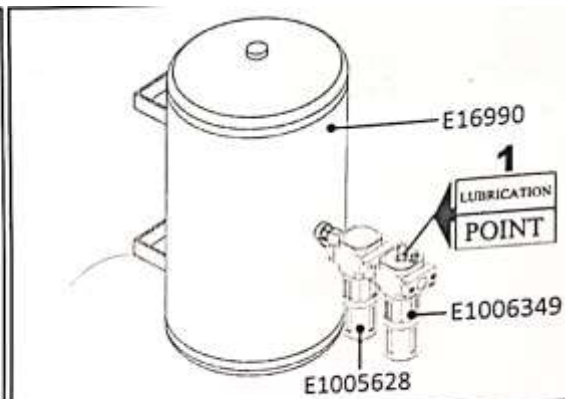


Fig.4: Air tank and lubricator

CODE	PART NAME	PIECES	SPARE PART
E1006768	TWO PIECE AIR SERVICE UNIT	1 PCS	2 PCS
E16990	AIR TANK	1 PCS	
E1006349	LUBRICATOR	2 PCS	2 PCS
E1005628	WATER CATCHER	2 PCS	2 PCS

CEMENT SCREW SPARE PART LIST



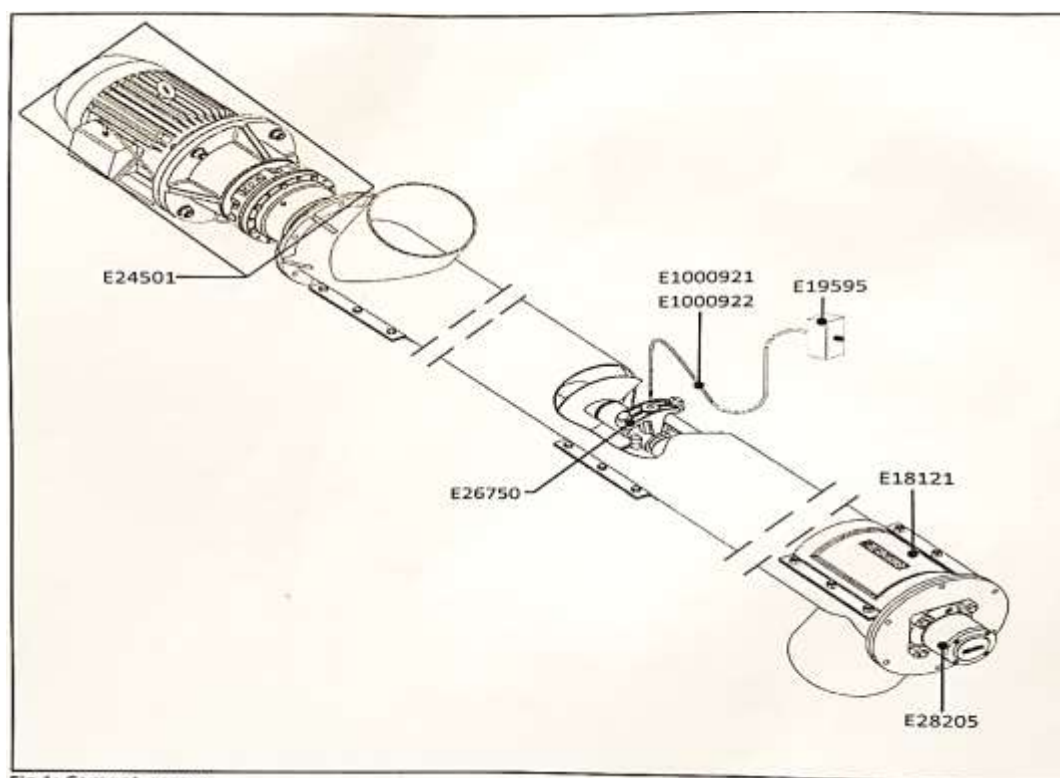


Fig.1: Cement screw

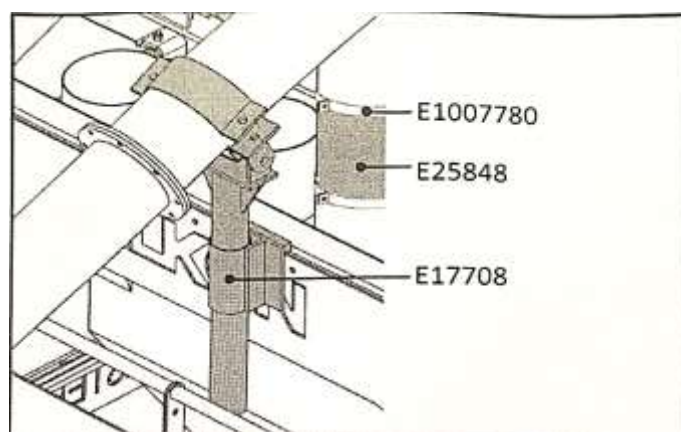


CODE	PART NAME	PIECES	SPARE PART
E24501	GEARBOX AND MOTOR	1 PCS	1 PCS
E26750	INTERMEDIATE BEARING		
E28205	BEARING (IDLE SIDE)	1 PCS	2 PCS
E18121	MAINTENANCE COVER		
E1007780	CLAMP	1 PCS	
E25848	BELLOW HOSE	1 PCS	
E17708	SCREW FIXER CONNECTION PART	1 PS	
E1000921	OIL HOSE (4 M)		
E1000922	OIL HOSE (6M)		
E19595	COLLECTOR		

CEMENT SCREW GEARBOX SPARE PART LIST

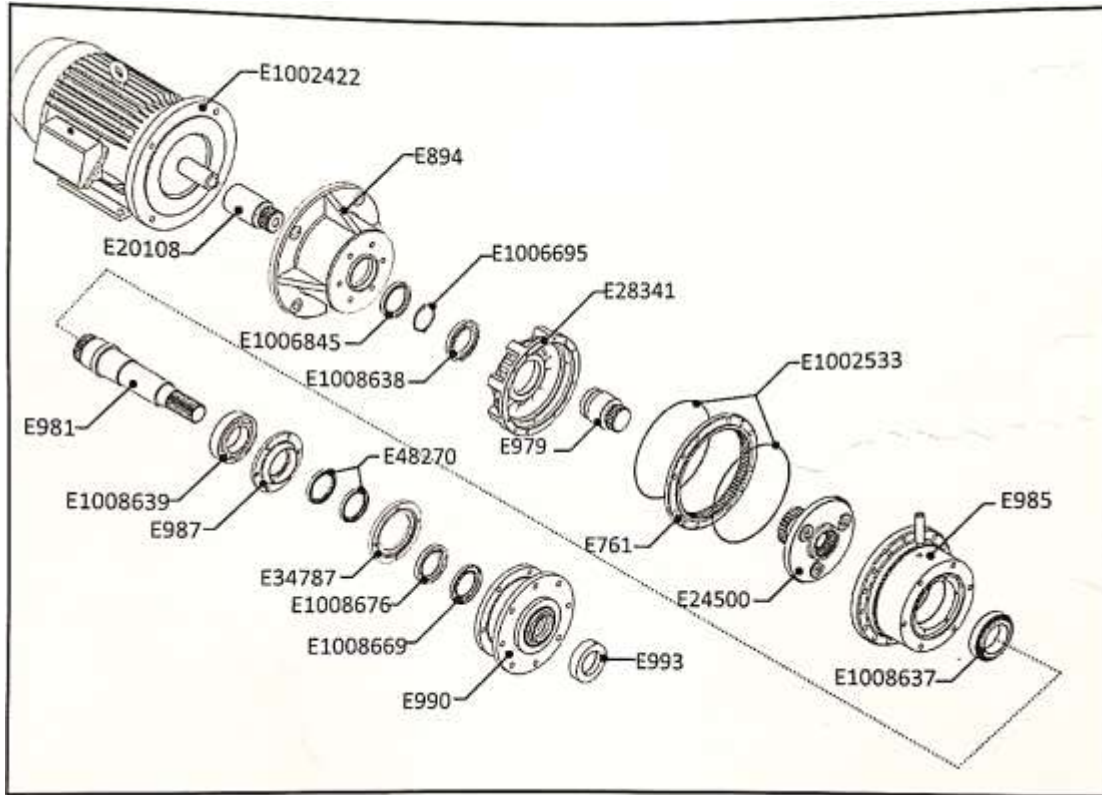


CODE	PART NAME	PIECES	SPARE PART
E1002422	ELECTRICAL MOTOR	1 PCS	
E20108	INLET SHAFT	1 PCS	
E894	MOTOR CONNECTION ADAPTER	1 PCS	
E1006845	OIL SEAL	1 PCS	
E1006695	CIRCLIP	1 PCS	
E1008638	BALL BEARING	1 PCS	
E28341	GEARBOX BODY	1 PCS	
E979	A3 MIDDLE MOTION GEAR	1 PCS	
E1002533	O RING	2 PCS	
E761	A3 RING GEAR	1 PCS	
E24500	A3 TRIAD POLE GEAR	1 PCS	
E985	GEARBOX BODY	1 PCS	
E1008637	BALL BEARING	1 PCS	
E981	GEARBOX OUTLET SHAFT	1 PCS	
E1008639	BALL BEARING	1 PCS	
E987	COVER BEARING PRESSURE	1 PCS	
E48270	SEAL	2 PCS	
E1008676	SEAL	1 PCS	
E1008669	SEAL	1 PCS	
E990	GEARBOX CONNECTION ADAPTER	1 PCS	
E993	GEARBOX FLANGE CONNECTION	1 PCS	
E34787	COVER	1 PCS	

CEMENT SILO SPARE PART LIST

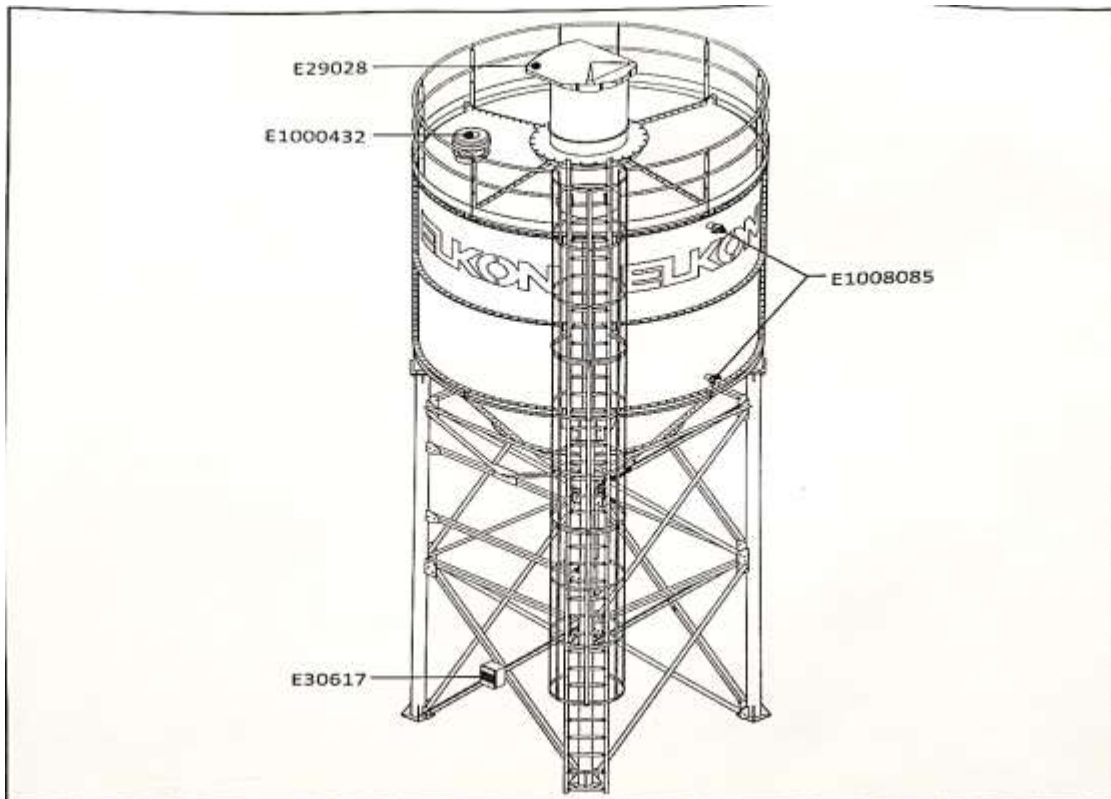


CODE	PART NAME	PIECES	SPARE PART
E29028	AIR FILTER	1 PCS	
E1000432	PRESSURE SAFE	1 PCS	
E30617	CONTROL PANEL	1 PCS	
E1008085	LEVEL INDICATOR	2 PCS	

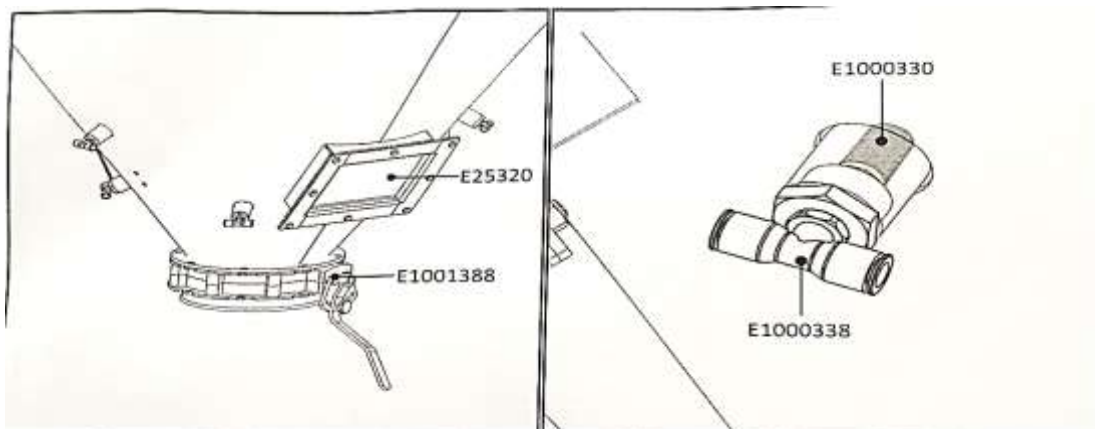


CODE	PART NAME	PIECES	SPARE PART
E25320	MAINTENANCE COVER	1 PCS	
E1001388	BUTTERFLY VALVE	1 PCS	1 PCS
E1000338	AIR SHOCK	6 PCS	
E1000330	PNEUMATIC MUFFLERS	6 PCS	20 PCS

CEMENT SILO AIR FILTER SPARE PART LIST

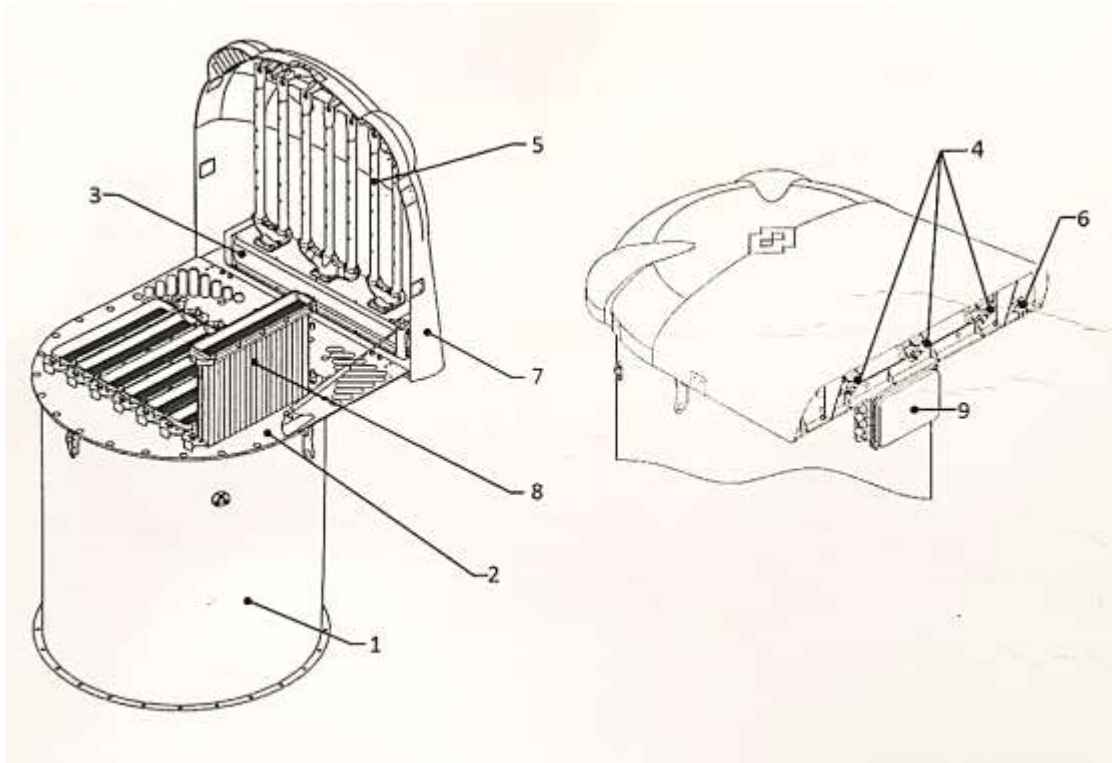

CODE	PART NAME	PIECES	SPARE PART
E29028-1	BODY FILTER	1 PCS	
E29028-2	SEAL FRAME	1 PCS	
E29028-3	AIR TANK	1 PCS	
E29028-4	SOLENOID VALVES	3 PCS	3 PCS
E29028-5	BLOWING PIPES	1 SET	
E29028-6	CONDENSATE DRAINING COCK	1 PCS	
E29028-7	RAIN SHIELD	1 PCS	
E29028-8	FILTER ELEMENT	7 PCS	7 PCS
E29028-9	ELECTRONIC TIMER	1 PCS	

CEMENT SILO PNEUMATIC SCHEMA SPARE PART LIST

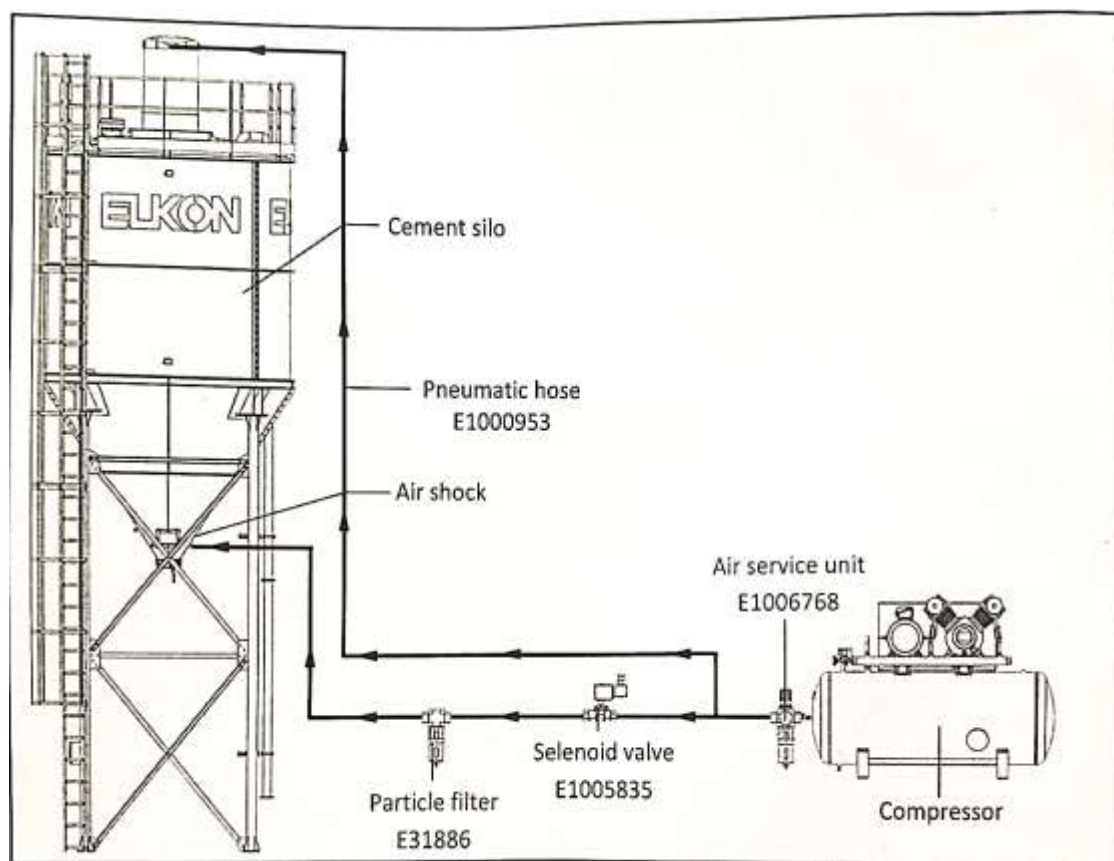

CODE	PART NAME	PIECES	SPARE PART
E1006768	AIR SERVICE UNIT	1 PCS	
E1005835	SELENOID VALVE	1 PCS	2 PCS
E31886	PARTICLE FILTER	1 PCS	
E1000953	PNEUMATIC HOSE		50 M