Integration BDCOM AP to Pallas

"pallas.bdcom.cn"

Step-01: Access Point (AP) Configuration for Pallas

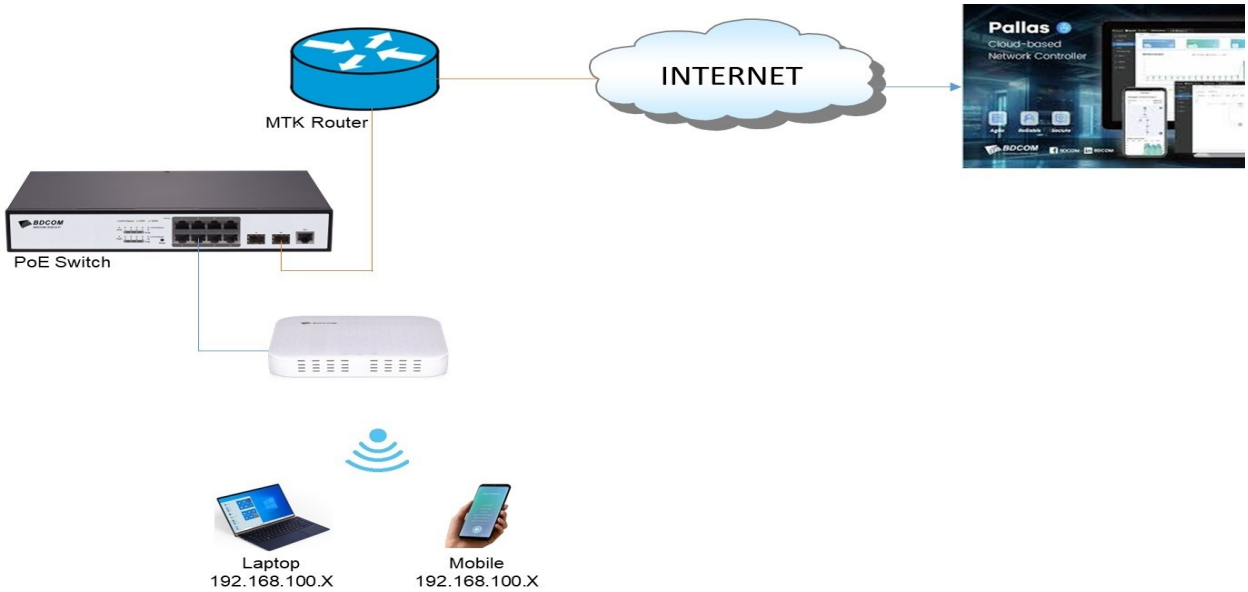

Figure: Basic Topology Diagram for WiFi Solution

1. Access to the AP through web browser. By default, AP LAN side IP is 192.168.1.1/24 and the username & Password is **admin/admin.** From right side pane need to check and ensure **Firmware Version** first to proceed further.

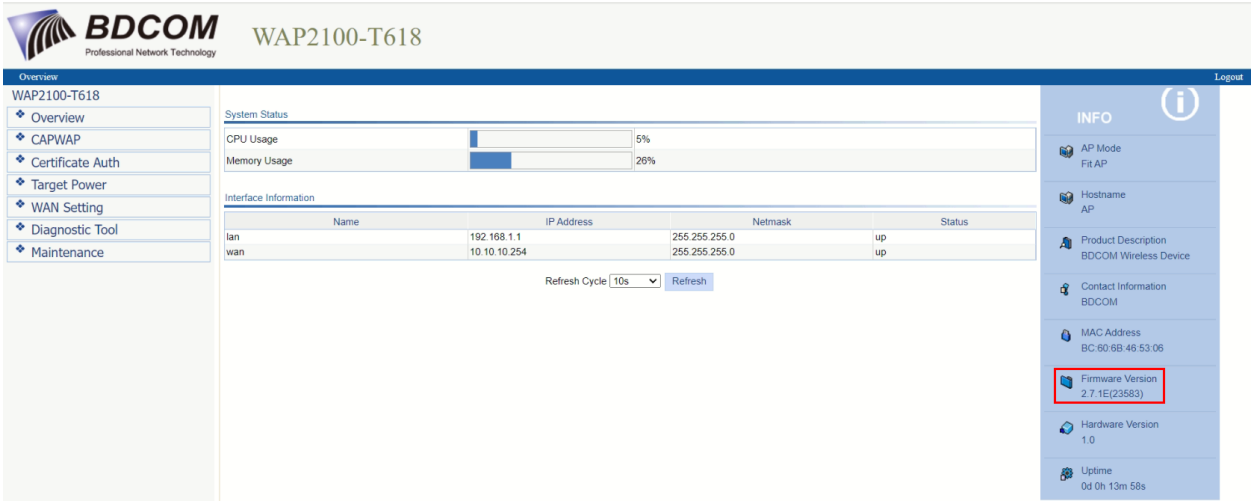

2. To check and download the desired and latest AP firmware and also AP profile for ***Pallas*** cloud platform, need to visit below URL

https://sites.google.com/view/bdcom-international/download/firmware/wireless-ap-ac?authuser=0

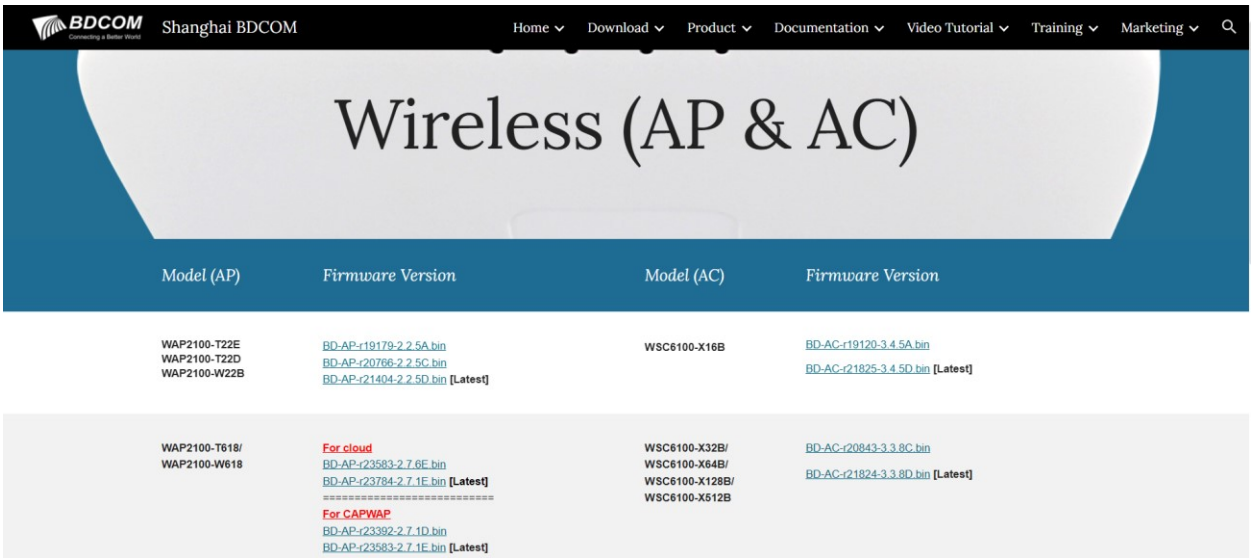

3. **AP Firmware and profile upgrade for cloud platform:** Access to the AP through web browser by using IP. Before adding the AP to the Pallas, need to ensure cloud firmware and cloud profile are installed. If not then need to upgrade the firmware and profile accordingly.

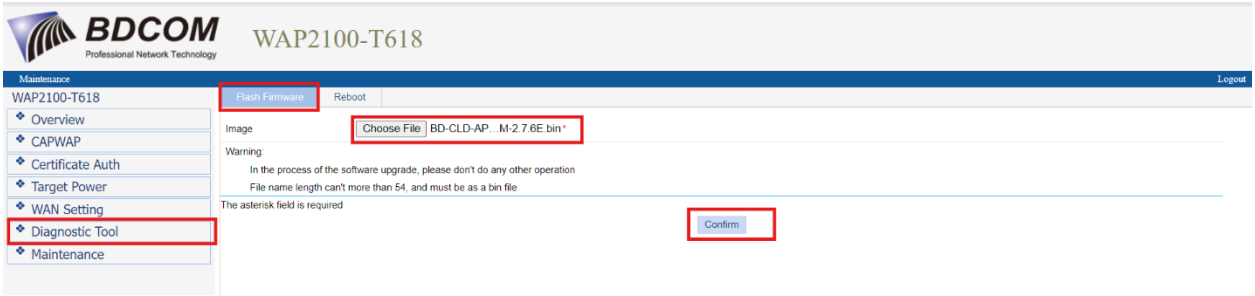

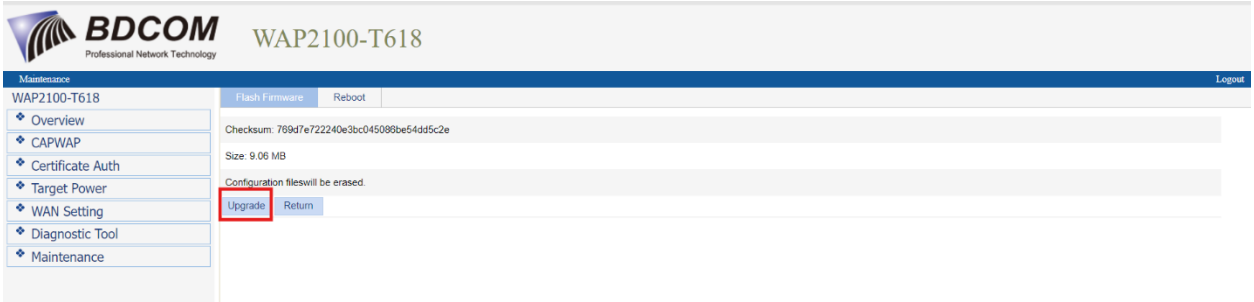

Upgrade AP Profile for Pallas (Cloud Platform) in same way

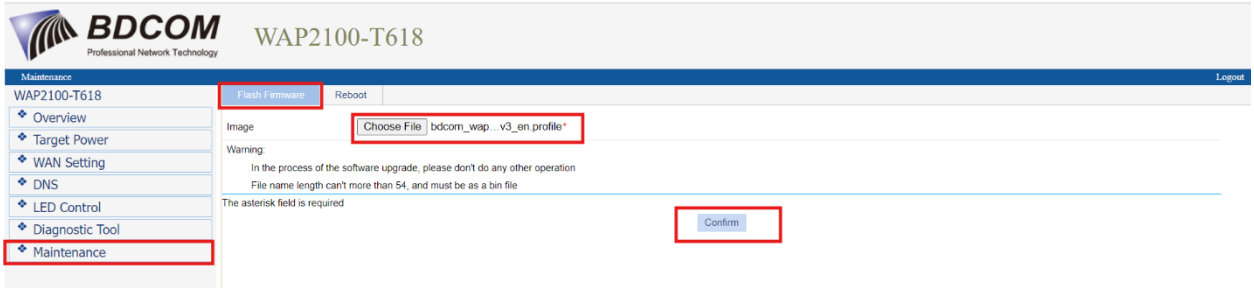

4. **FAT Mode:** By default, AP is in FIT mode. Need to access to the AP through web browser and from **CAPWAP** left pane use tick mark to convert the AP as FAT mode. After tick mark the AP will be rebooted and after a while it will resume automatically. We will be able to access to the AP by it's default IP 192.168.1.1 again.

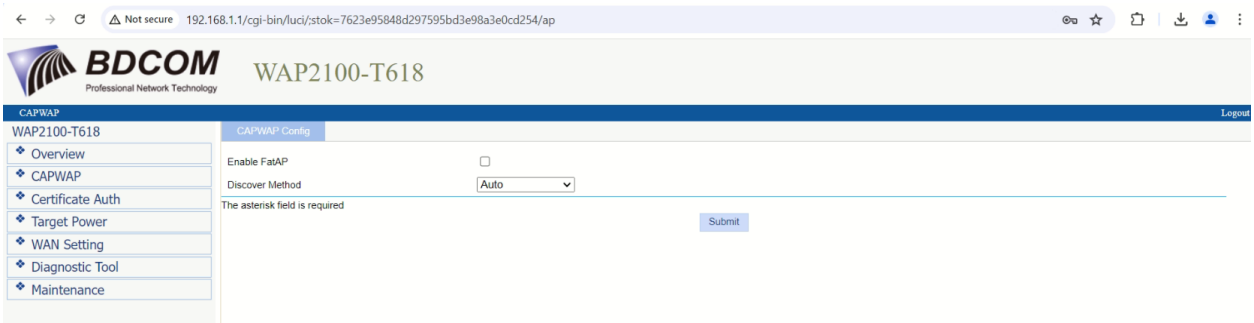

After conversion to FAT mode the **CAPWAP** option from left side will be removed

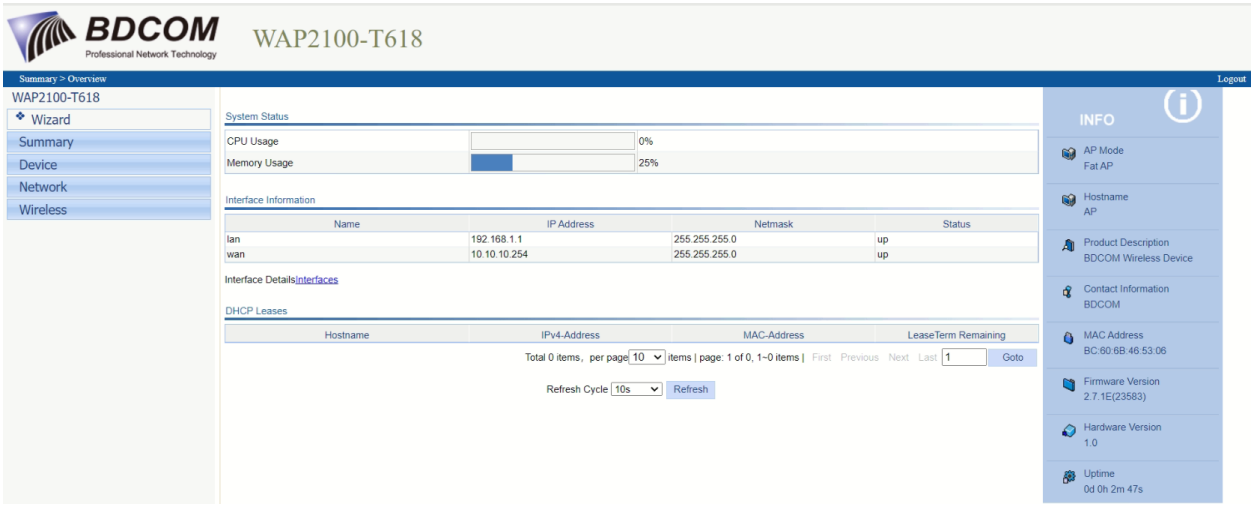

5. **AP WAN Configuration:** Need to configure AP WAN interface. Either DHCP or PPoE or Static IP

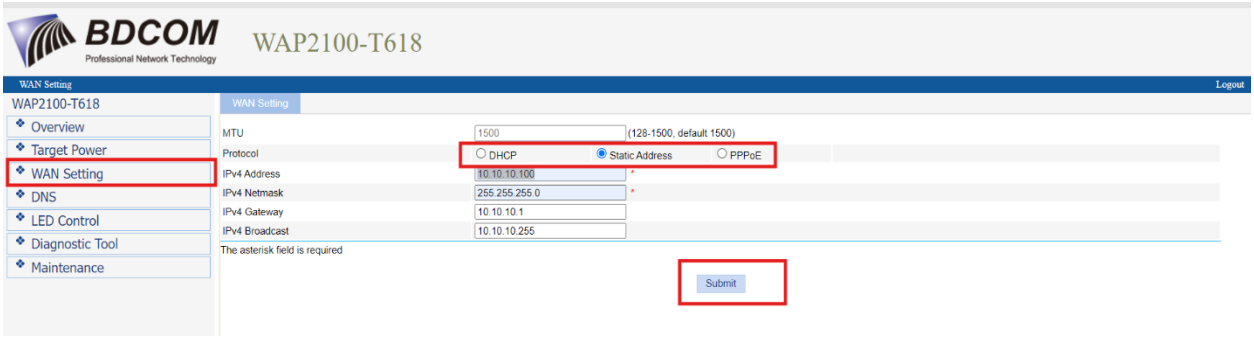

6. **Configure DNS:** Need to configure suggested DNS IP

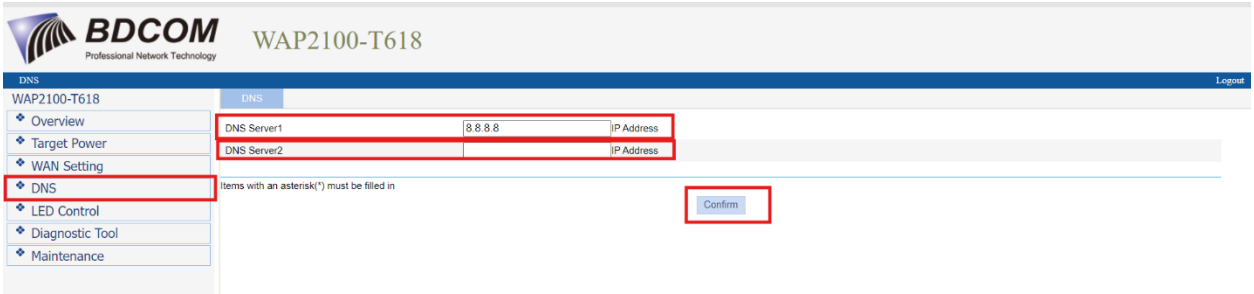

Step-02: User Registration in Pallas

7. **User registration to *Pallas***

   i. Go to https://pallas.bdcom.cn and click on **Register Now**.
   ii. Enter the required information & Email in the respective textbox and click on **Register**.
   iii. Log in registered account and bind mail or WeChat account to send the verification code
   iv. Open the email received from pallas.bdcom.cn and enter the verification code
   v. Click the **OK** button to registration successfully

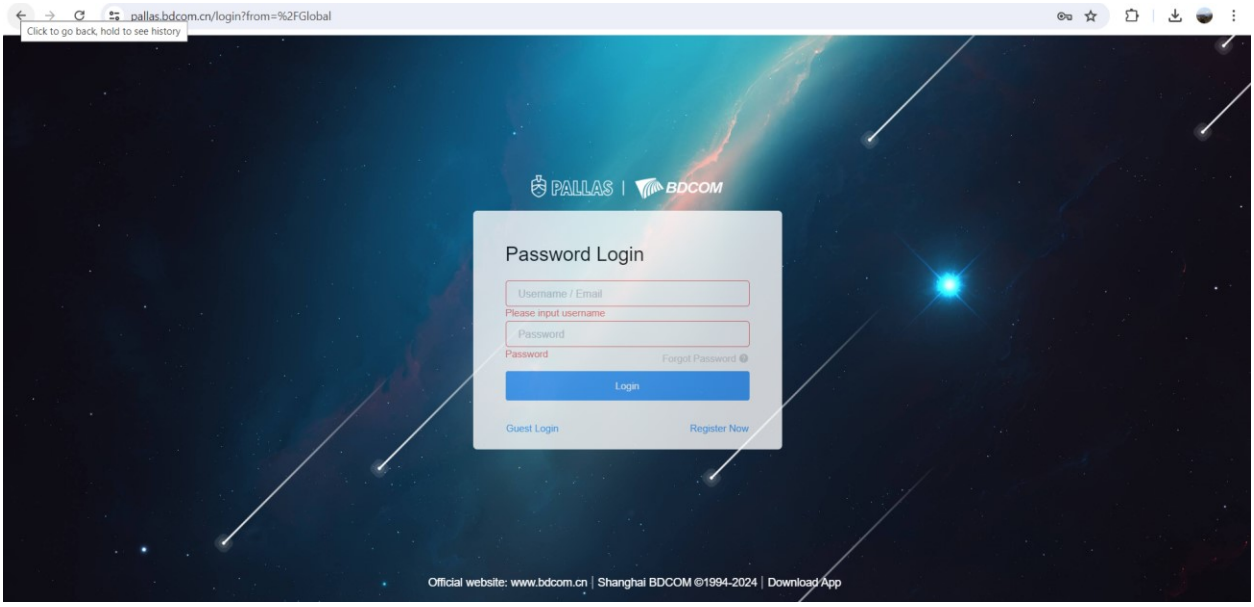

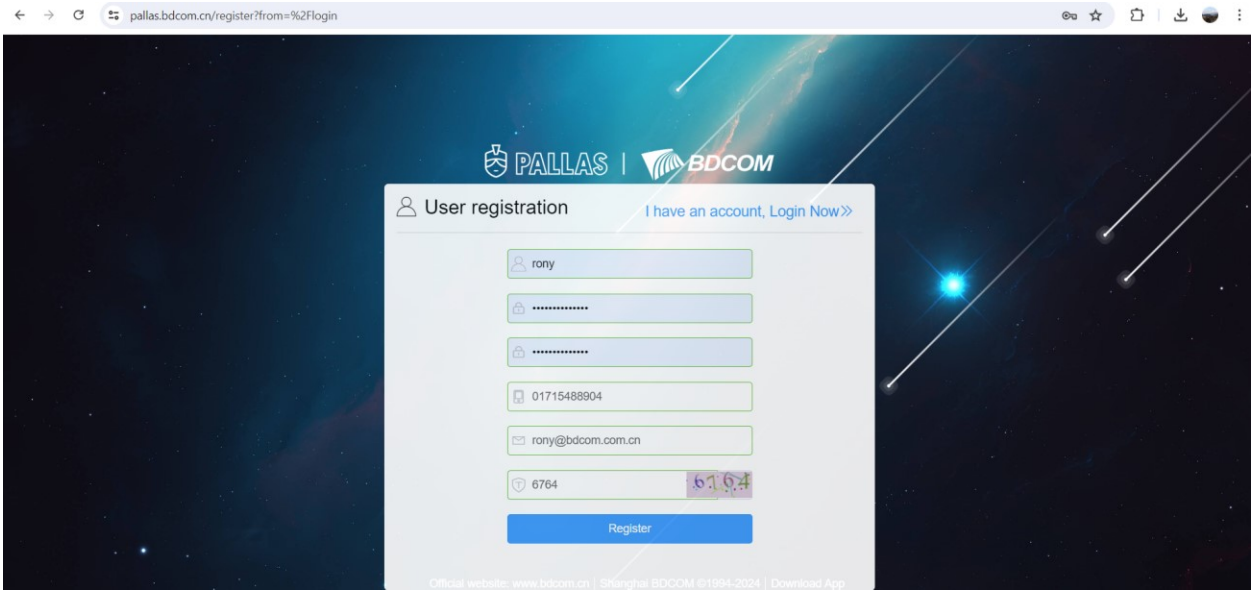

8. **Connect Access Point (AP) to Pallas:** From **Overview > Project** click on **Project Management** from the left Project tab. A pop-up will open.

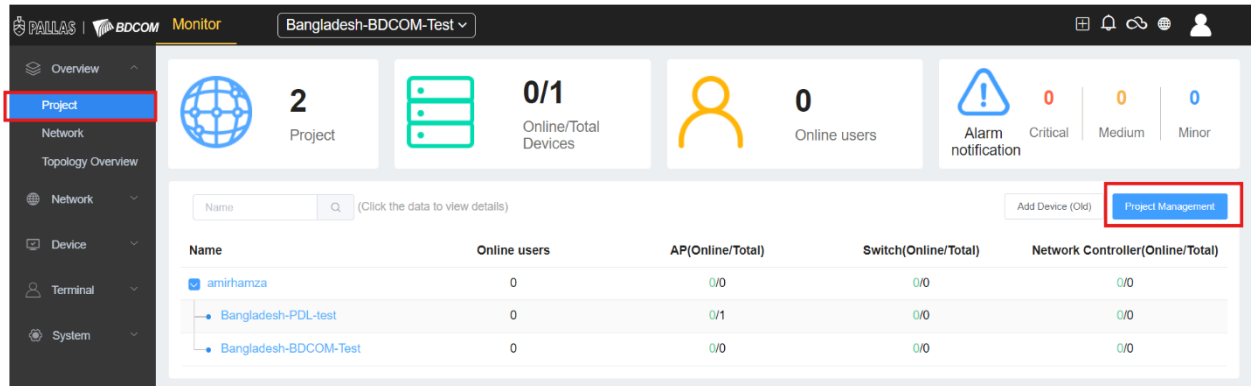

9. Click on **Add Project**. A POP up will open

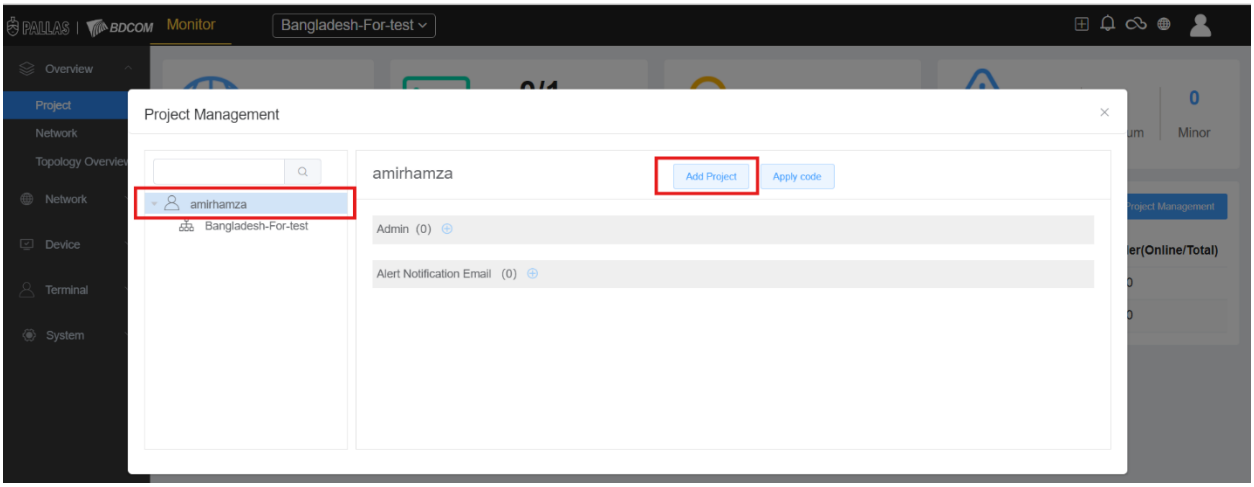

10. Fill the name and password. This will be used as a project name. This password will be used to manage all the devices connected to this *Pallas* network. Click **OK**

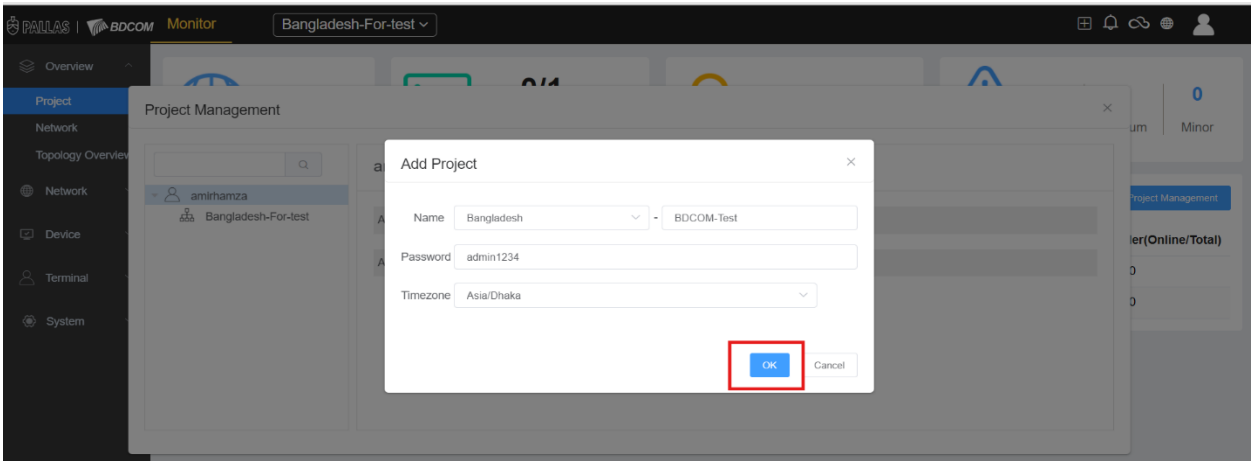

11. Add **+ sign** in the top right corner to add the device. A POP up will open

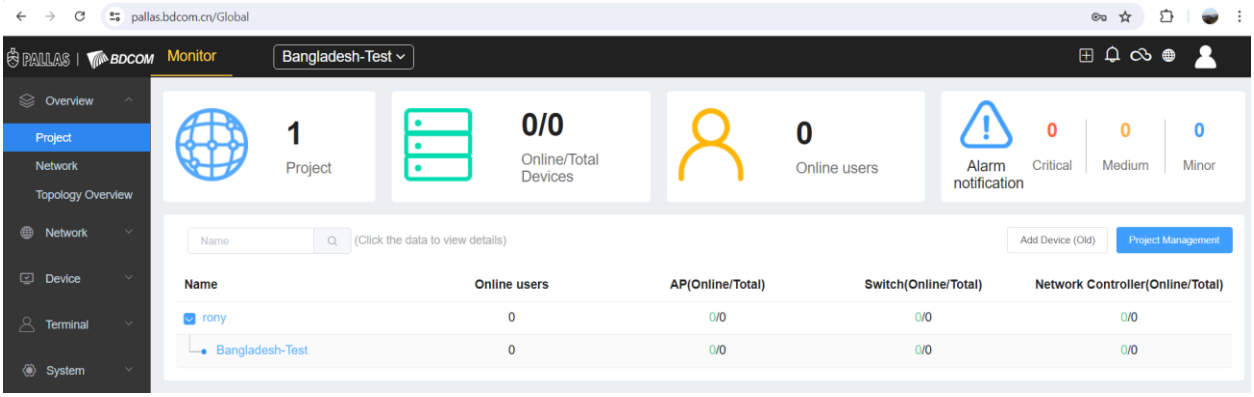

12. From the dropdown menu select the project and click in **Next** to proceed

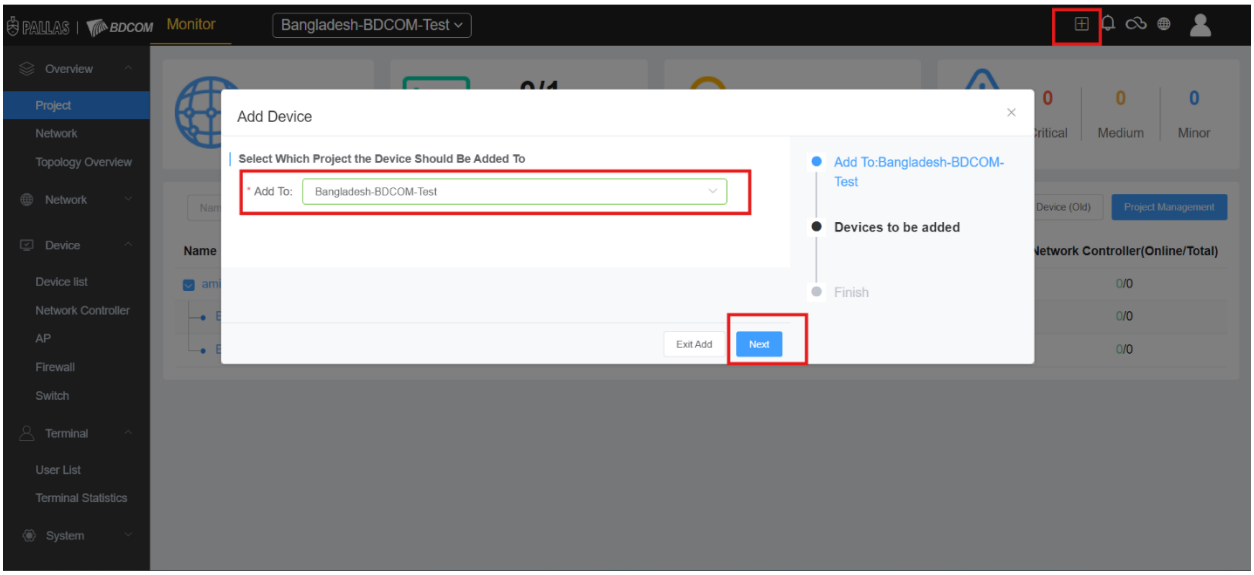

13. Fill up the **Device name** and **MAC** of the AP and click on **Device Add Complete**

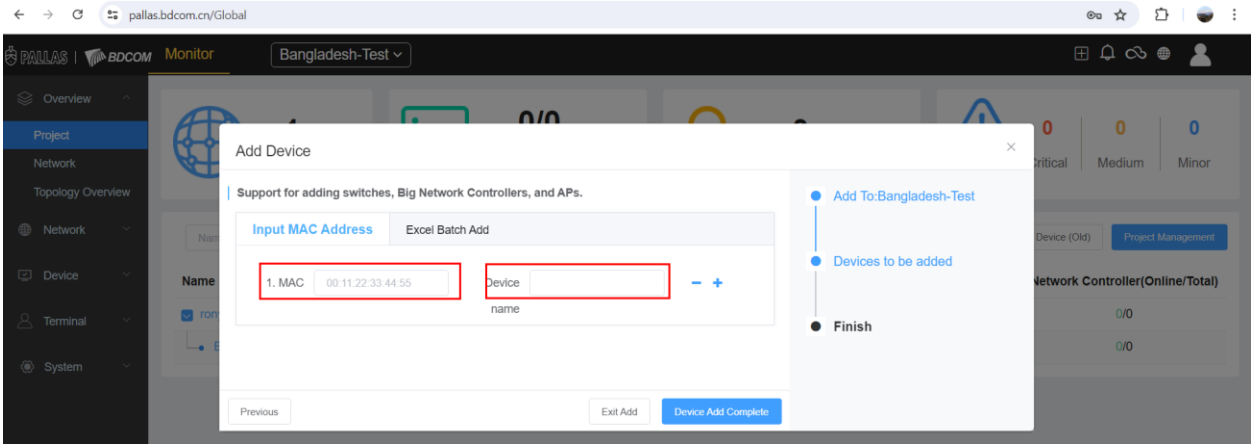

14. The AP is successfully added

Step-03: Manage Access Point (AP) in Pallas

1. Open the web browser and login to *Pallas* (https://pallas.bdcom.cn) From the left pane, **Device** tab we will be able to see **AP** and under this AP registration status, AP MAC, Management address, Software version, Device Model and Run Time will be seen.

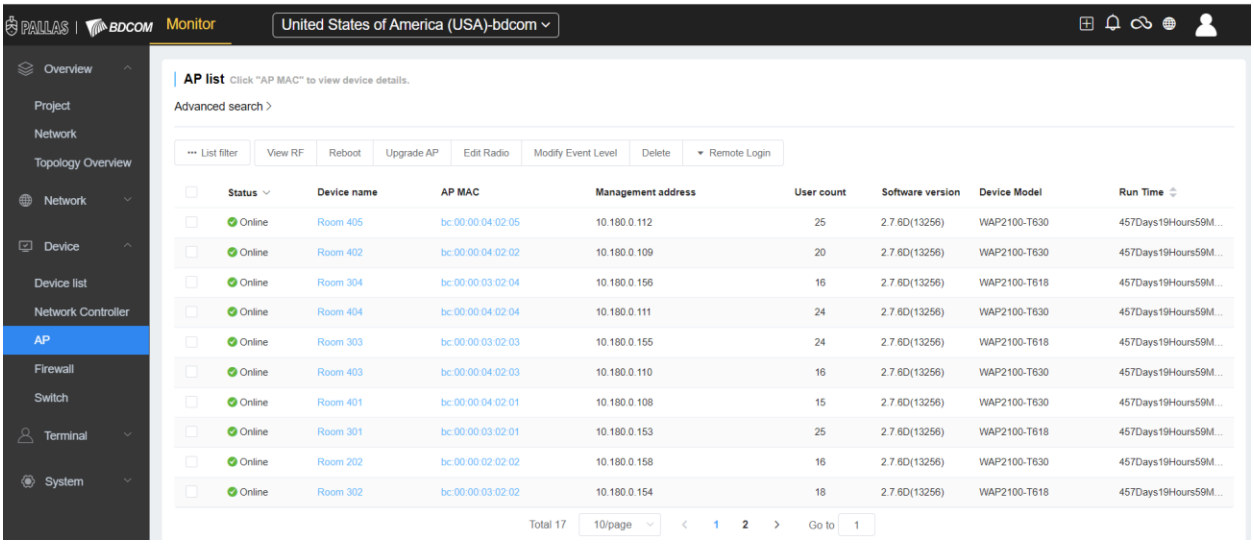

2. **SSID Configuration:** SSID can be configured for 2.4G/5G or for both along with authentication. From **Network** > **SSID** click on **Add SSID**. A POP up will open

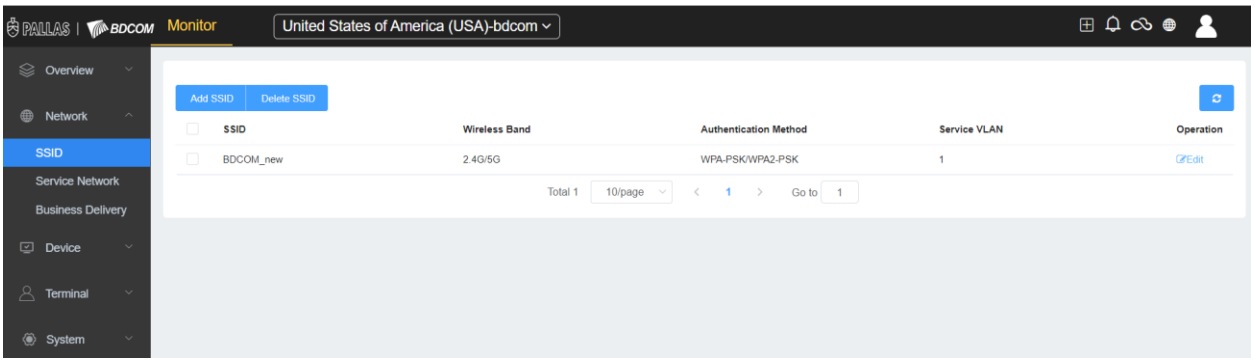

3. Desired SSID for 5G and 2.4G can be configured

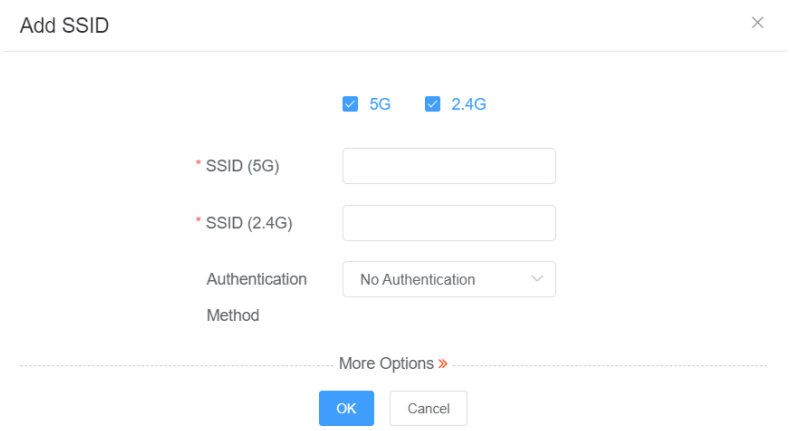

4. From the **Authentication** dropdown menu, we may choose authentication type if required. Also supports **801.1x Authentication** for Radius Server configuration

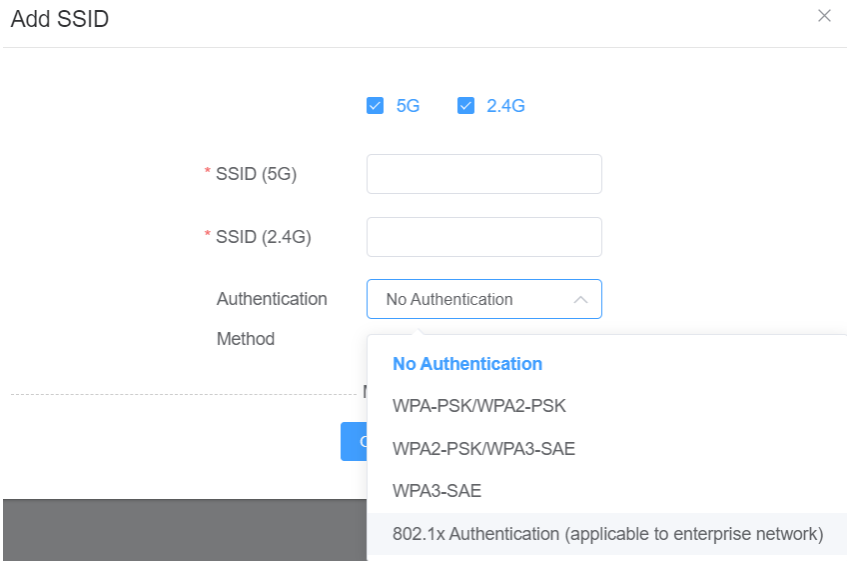

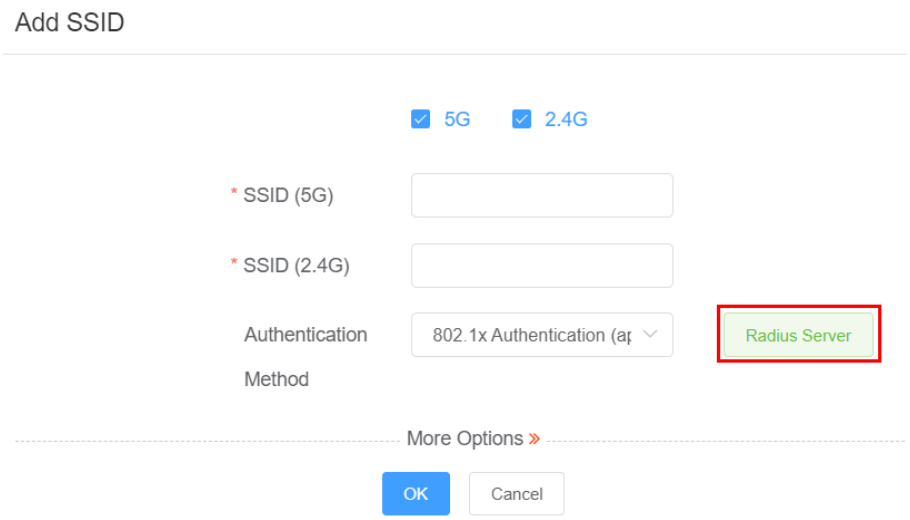

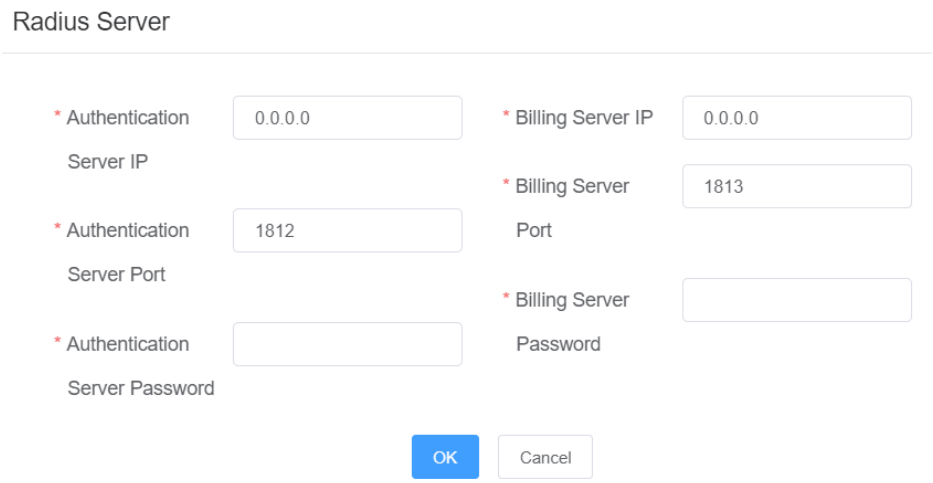

5. Click on More Options to configure -

   I. **Dual Band Integration:** Same Configuration and SSID for Both 2.4G & 5G.
   II. **Service VLAN:** Can Configure VLAN for AP Management and Service VLAN based on SSID.
   III. **Mac Address Filtering:** Blacklist/Whitelist MAC address can be done.
   IV. **Hide SSID:** For security reason, we may also hide the SSID
   V. **Bandwidth Limit:** SSID-based Bandwidth can be limited.
   VI. **Configuration Mode:** Can configure all of the configuration on a single AP/Specified AP or for all AP

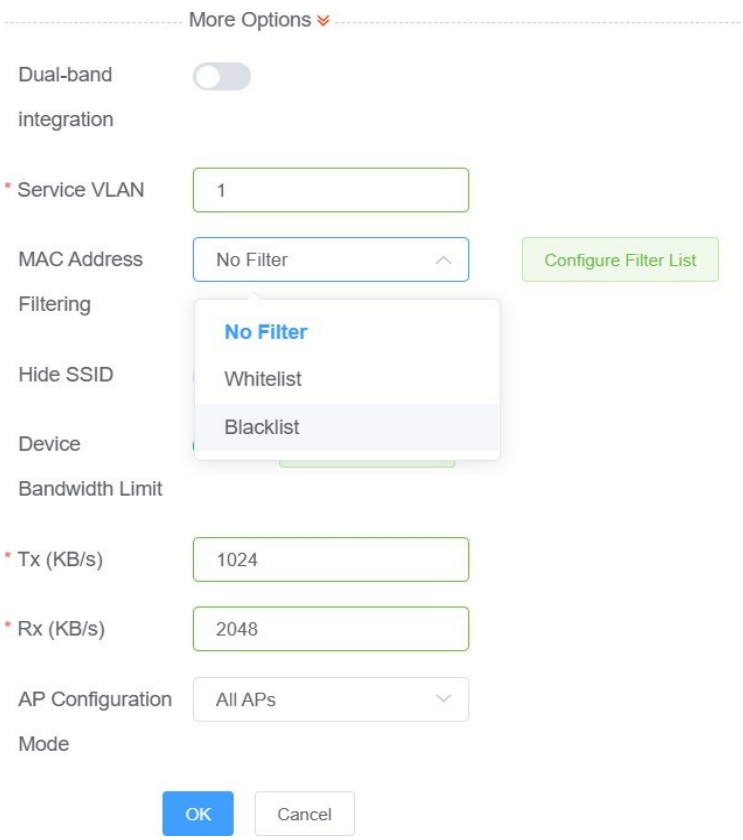

6. **User List:** From **Terminal > User list**, we can monitor the end users. User IP, status, user MAC, AP MAC, Hostname, SSID, signal strength, traffic information, frequency band, data traffic utilization etc.

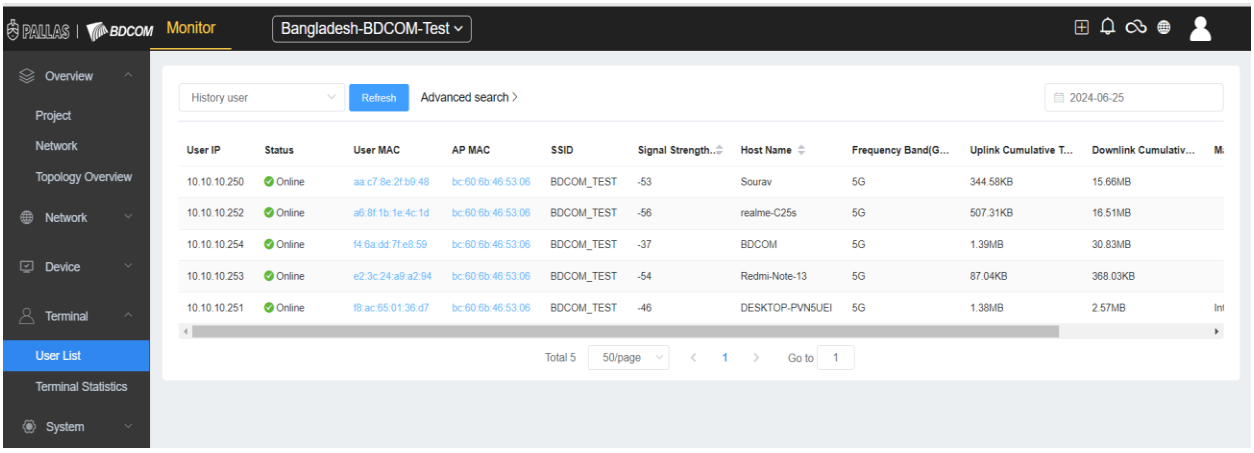

7. **Terminal Statistics:** We can do our user analysis such as 2.4G/5G terminal count Chart, terminal traffic chart, terminal analysis SSID terminal distribution etc.

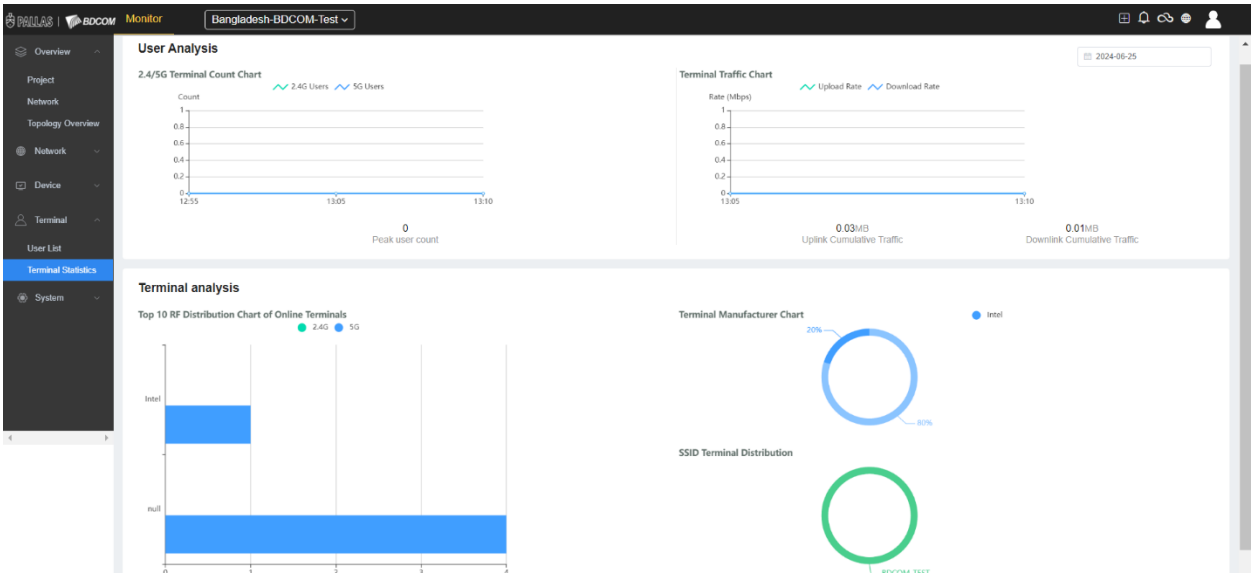

8. **Edit Radio:** From **Device > AP** select one AP and right click to **Edit Radio**, wireless channel frequency, bandwidth frequency and transmit power can be set.

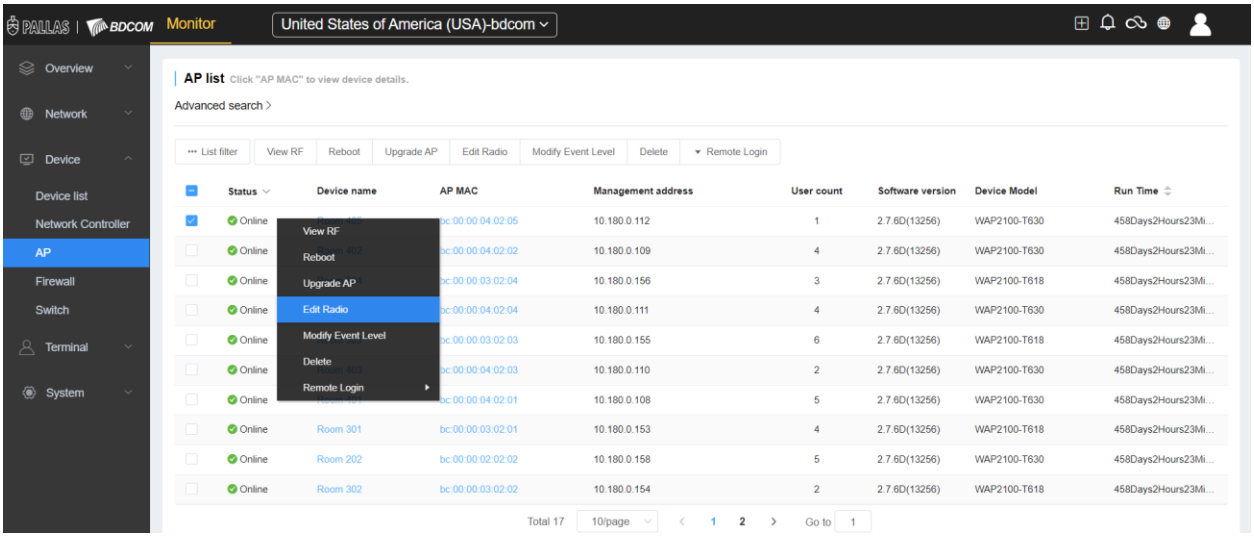

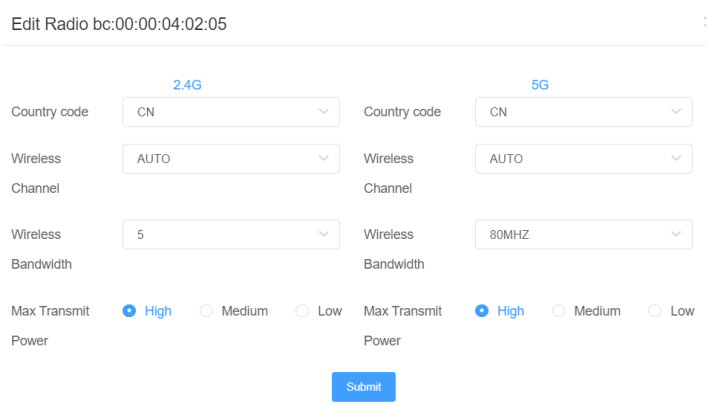

9. **Network Topology:** From **Overview > Topology Overview** we can see the network topology diagram automatically

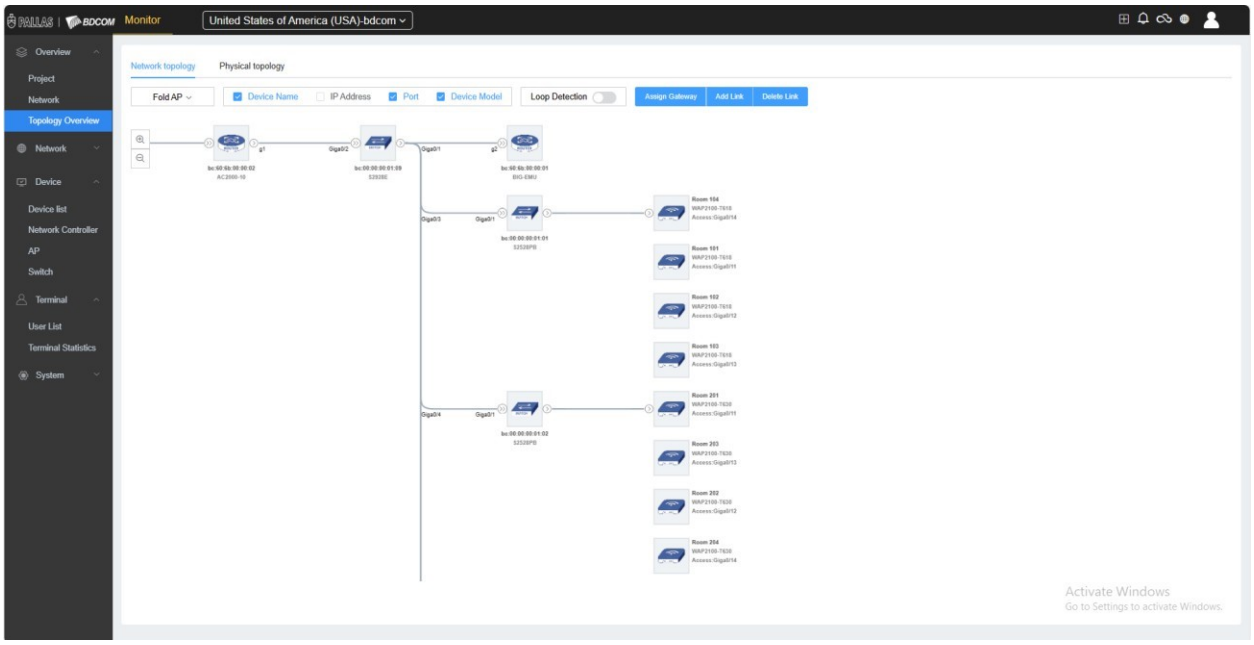

10. **Device Information**: From **Device > AP** double licking on the AP, we can see the device information in detail such as Device name, AP MAC, Management IP, Model, Software Version, Run Time, 2.4/5G User list and Location info. By scrolling down, we can check user count and traffic utilization

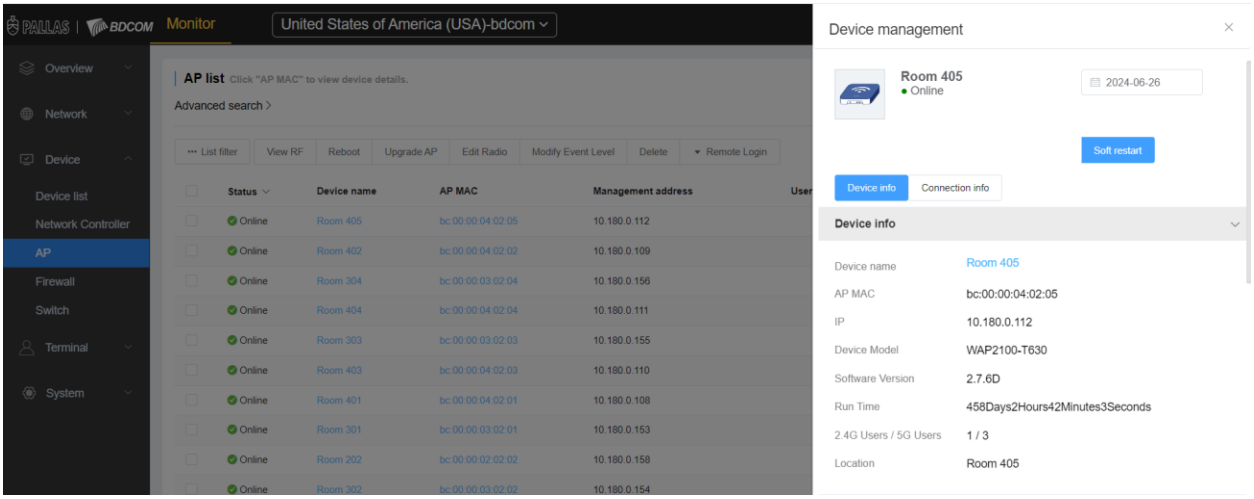

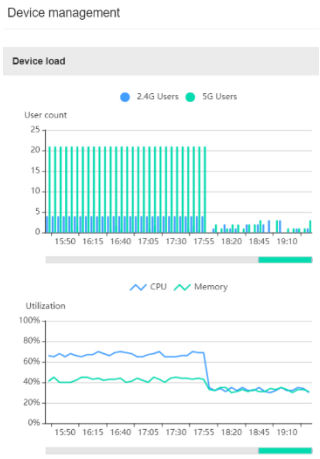

11. **AP login from Pallas:** Can access HTTP and HTTPS access of the specific AP through Pallas. From **Device > AP** select an AP. Right click on that AP and navigate HTTP or HTTPS from **Remote Login**

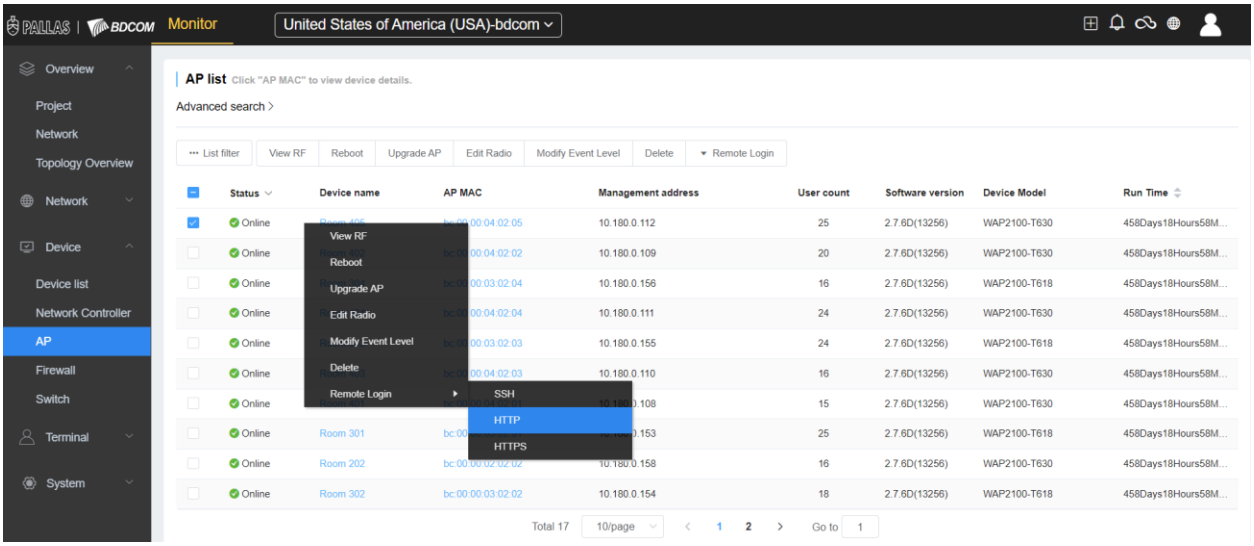

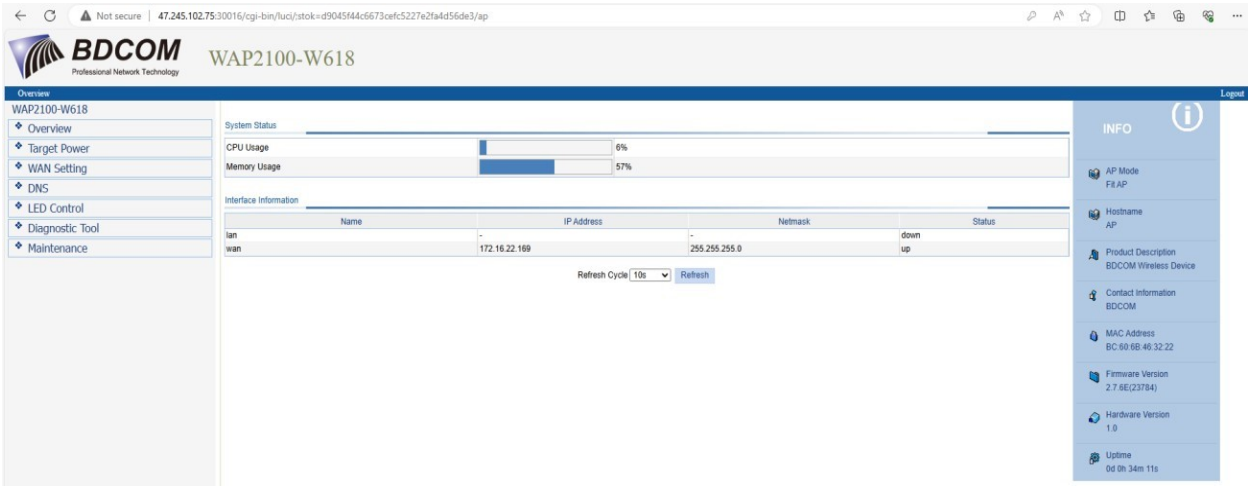

THE END