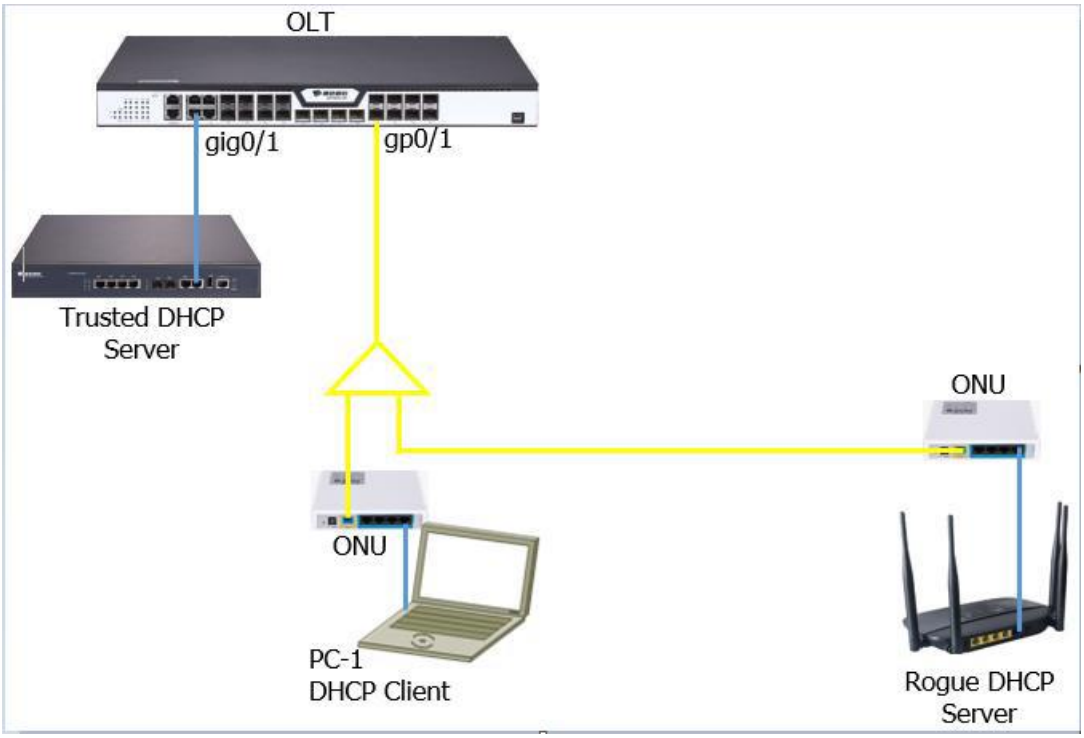

To configure DHCP Snooping in OLT:

- Switch#config **[Enable DHCP snooping in OLT]**
- Switch_config#ip dhcp-relay snooping
- Switch_config#ip dhcp-relay snooping vlan 1
- Switch_config#ip arp inspection vlan 1
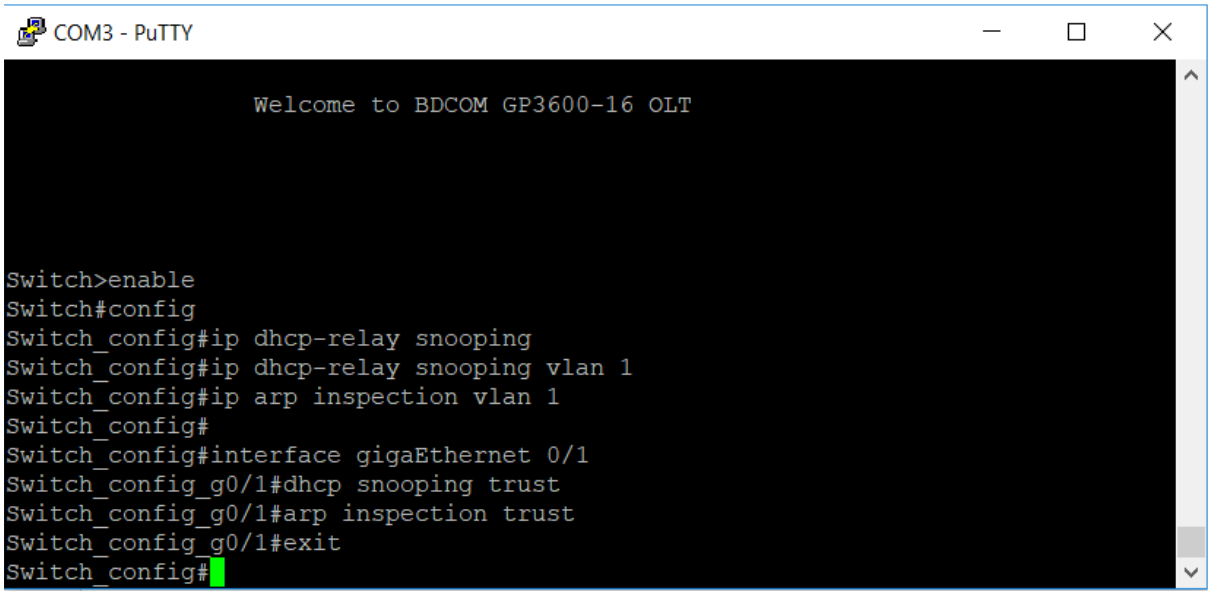
- Switch_config#interface gigaEthernet 0/1 **[Trusted server]**
- Switch_config_g0/1#dhcp snooping trust
- Switch_config_g0/1#arp inspection trust
- Switch_config_g0/1#exit