User Manual for BDCOM Cloud Platform

“pallas.bdcom.cn”

BDCOM Switch S2900/S2500/S3900 series integrated with pallas

1.1 Prepare To connect

Login to Switch CLI Mode and check firmware version. Your firmware version has to be at least 11XXX. If your Firmware version is older than this, First update the firmware.

```
                Welcome to BDCOM S2928-P Ethernet Switch




Switch>Jan  1 00:02:59 User admin logged in from  on console 0

Switch>enable
Switch#Jan  1 00:03:10 User admin enter privilege mode from console 0, level = 15

Switch#show version
BDCOM(tm) S2928-P Software, Version 2.2.0F Build 114933
Copyright by Shanghai Baud Data Communication CO. LTD.
Compiled: 2023-6-29 16:51:22 by SYS, Image text-base: 0x80010000
ROM: System Bootstrap, Version 0.1.4, Serial num:0G20028000273
System image file is "switch.bin"
hardware version:A
(RISC) processor with 262144K bytes of memory, 32768K bytes of flash
Base ethernet MAC Address: 00:37:00:00:13:7c
PCB version:A
snmp info:
  product_ID:469   system_ID:1.3.6.1.4.1.3320.1.469.0
Switch uptime is 0:00:03:06, The current time: 2000-1-1 0:3:18
 Reboot history information:
  No. 1: System is rebooted by power-on
Switch#
```

Pallas Supported Firmware:

S2900 Series:
https://drive.google.com/file/d/1khfLUwrU5qlAow9cpazM_PgBI5AP8vOl/view?usp=sharing

S2500 Series:
https://drive.google.com/file/d/1bk8T7CfPDOvUNBxPg8Q_kCad9JJ3X3NU/view?usp=sharing

S3900 Series:
https://drive.google.com/file/d/1Z7wemucpe_62Oy_Rm9E7tZkJeLJvJnxK/view?usp=sharing

1. Then, go to config mode and add following commands for enabling mqtt feature in Switch.
   Switch#config
   Switch_config# mqtt client enable
   Switch_config# mqtt client server pallas.bdcom.cn
   Switch_config# ip name-server 8.8.8.8

```
Switch#
Switch#config
Switch_config#mqtt client enable
Switch_config#mqtt client server pallas.bdcom.cn
Switch_config#ip name-server 8.8.8.8
Switch_config#
```

2. Check Internet reachability from switch. (If you can't reach internet from switch, you won't be able to add it to Pallas. Example ping to global DNS address: 8.8.8.8

```
Switch#ping 8.8.8.8
PING 8.8.8.8 (8.8.8.8): 56 data bytes
!!!!!
--- 8.8.8.8 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 40/42/50 ms
```

1.2 Connect Switch to Pallas

⇨ Go to https://pallas.bdcom.cn/ and register to Pallas providing necessary information.

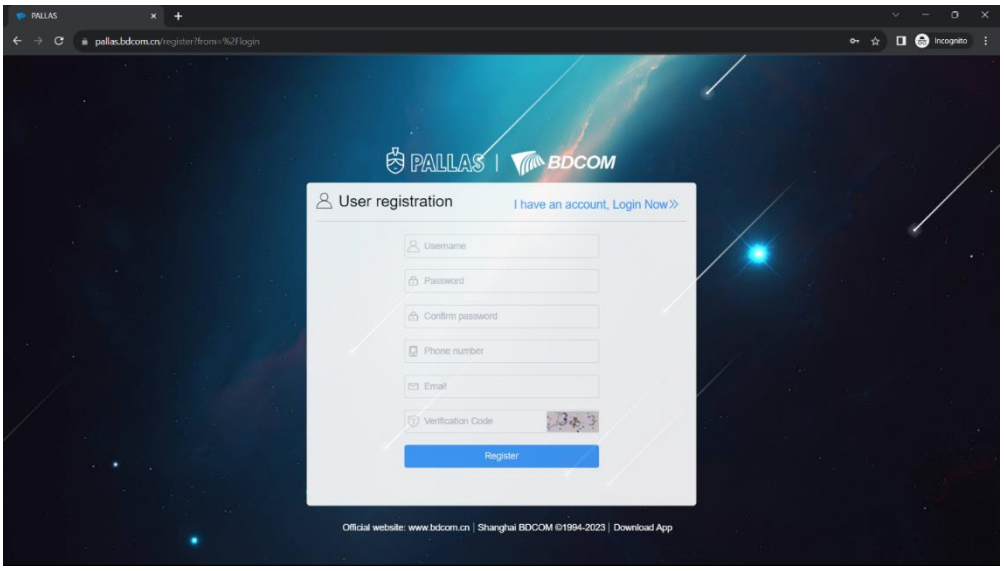

⇨ then login to Pallas providing user credentials.

⇨ Homepage of Pallas after logged in

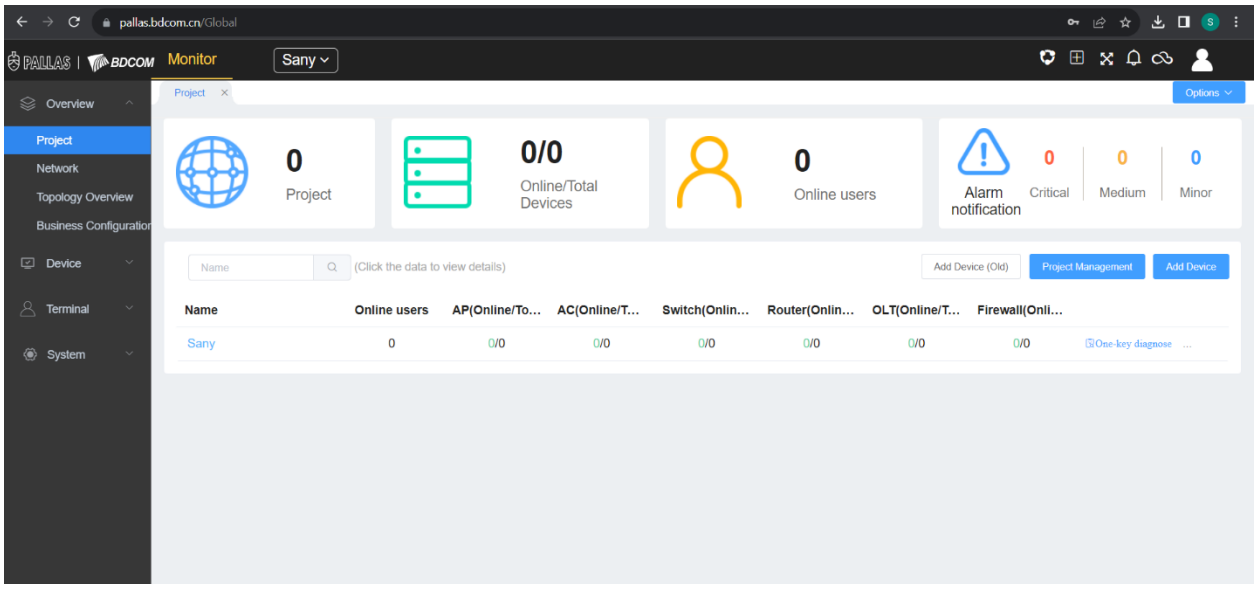

⇨ Go to Project Tab and then Need to setup Project for adding Network Device to the Pallas, Follow the steps, Click on Project Management.

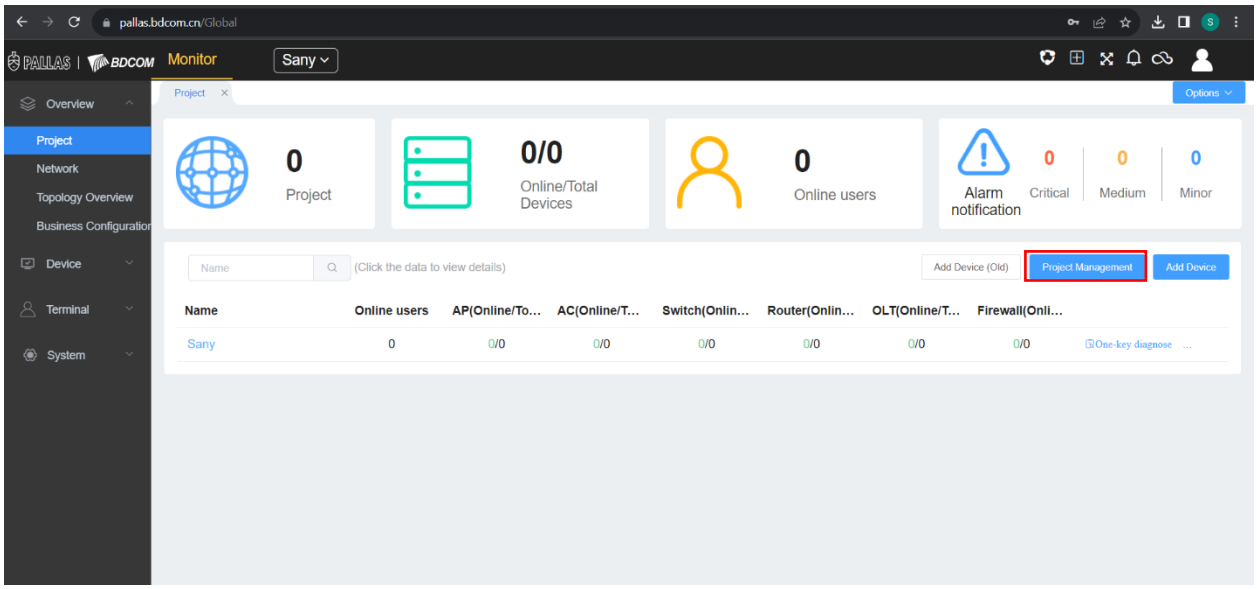

⇨ In the next page, Click on Add Network

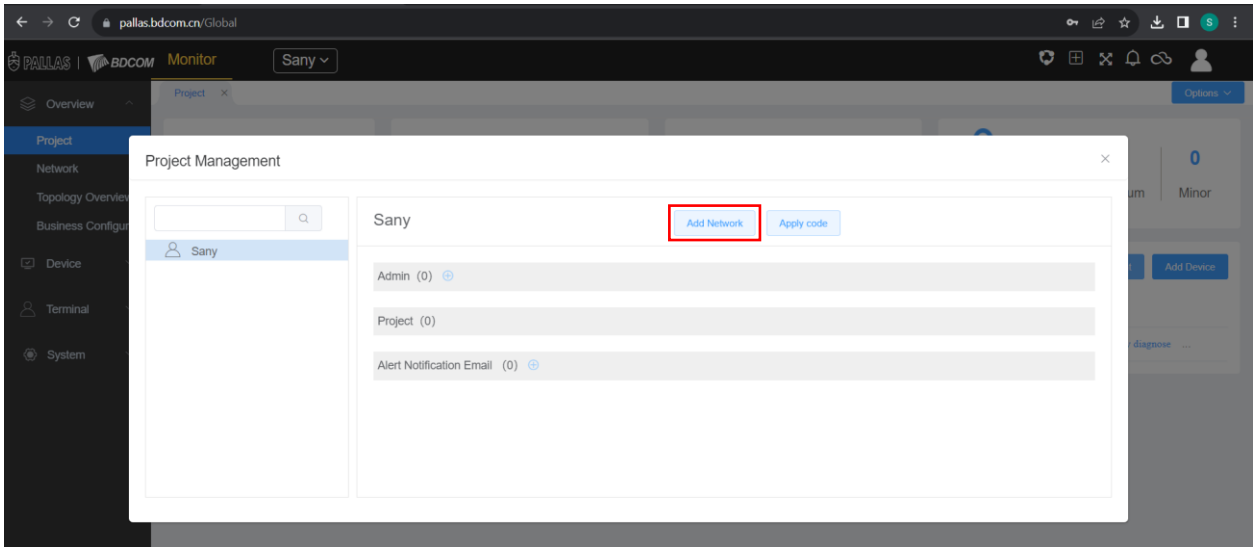

⇨ A pop-up will show up. Fill the name and password in there,This will be used a a project name. This password will be used to Manage all the devices connected to this Pallas network. Click Ok and come back to project tab again.

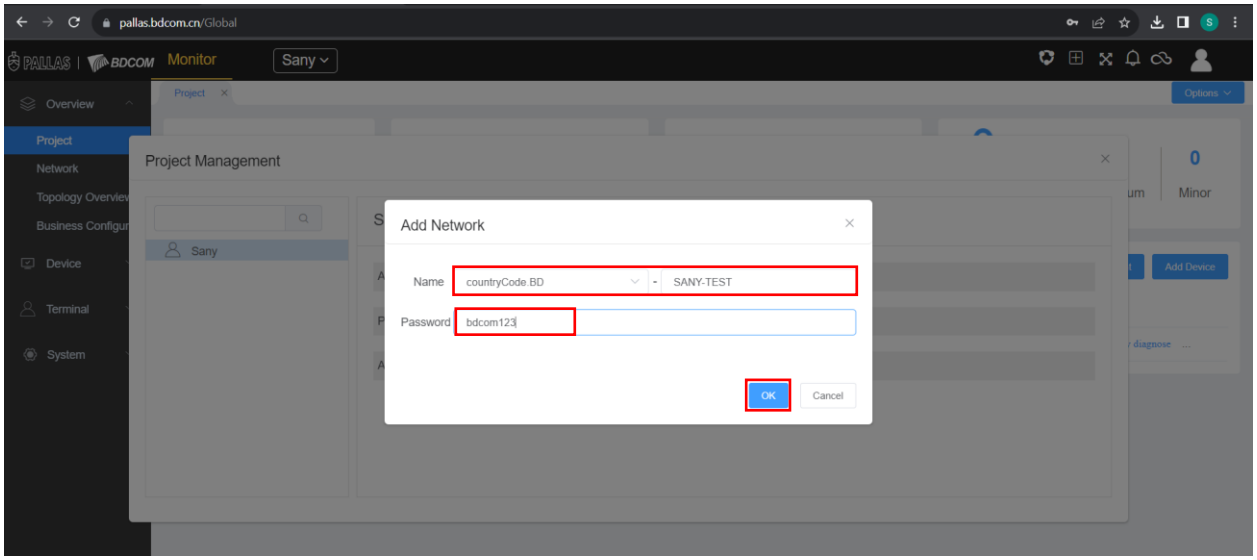

⇨ In here, click Add device to add devices to Pallas,

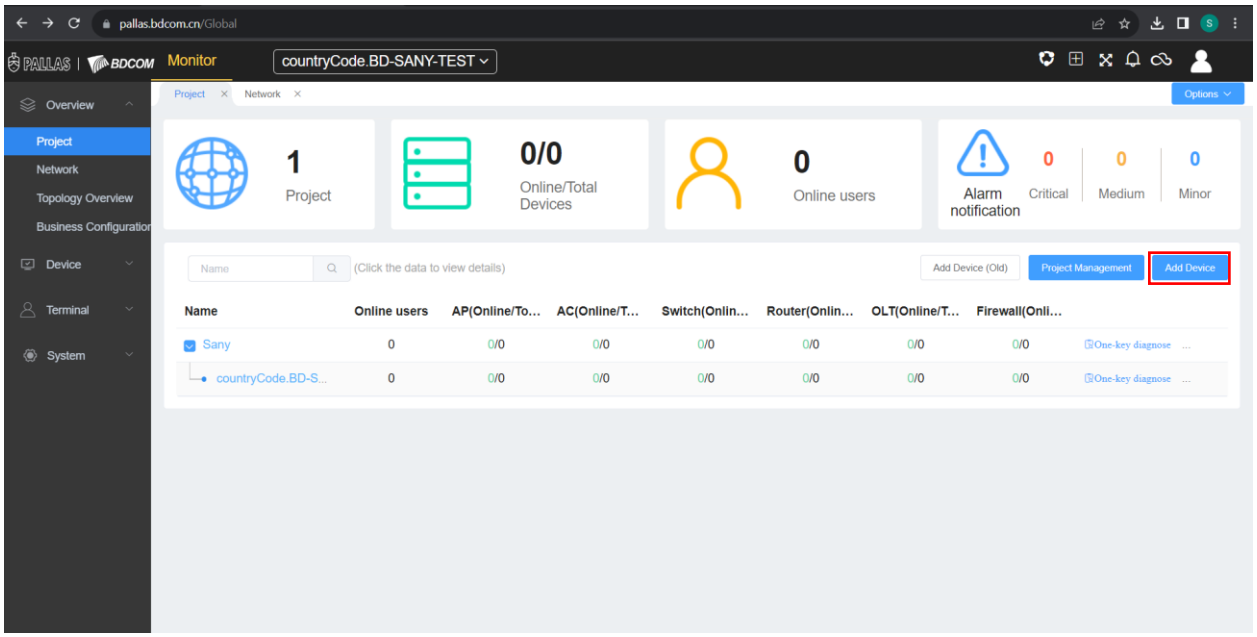

⇨ Select the Project Name in the next page,

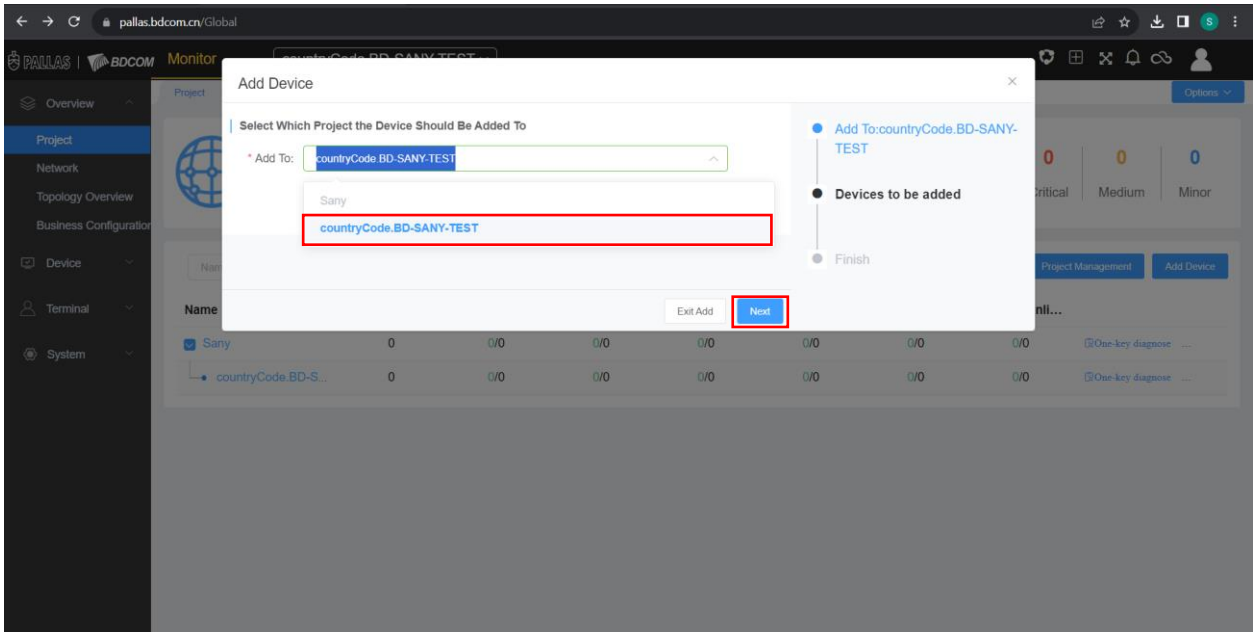

⇨ Select Switch TAB and Add Switch's MAC Address and a Name for the Switch

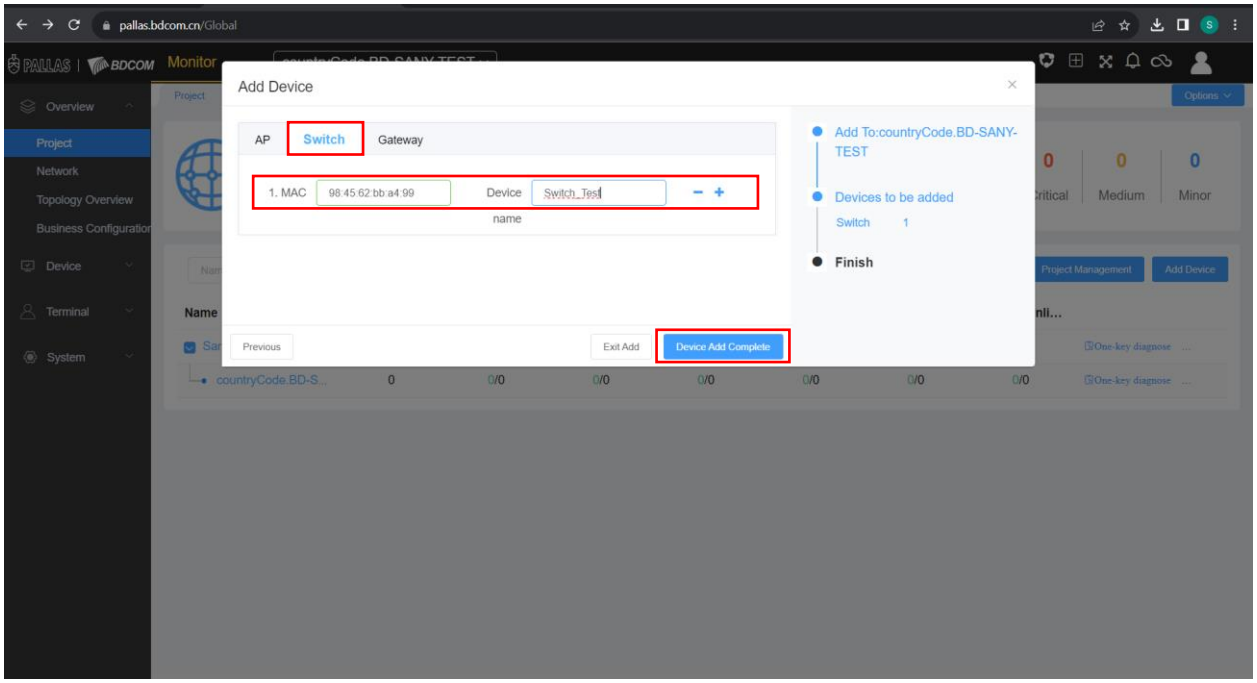

⇨ Go to Device section, Then Switch, you will see the MAC address of the Switch in there. So, the Switch is already Connected to the Pallas.

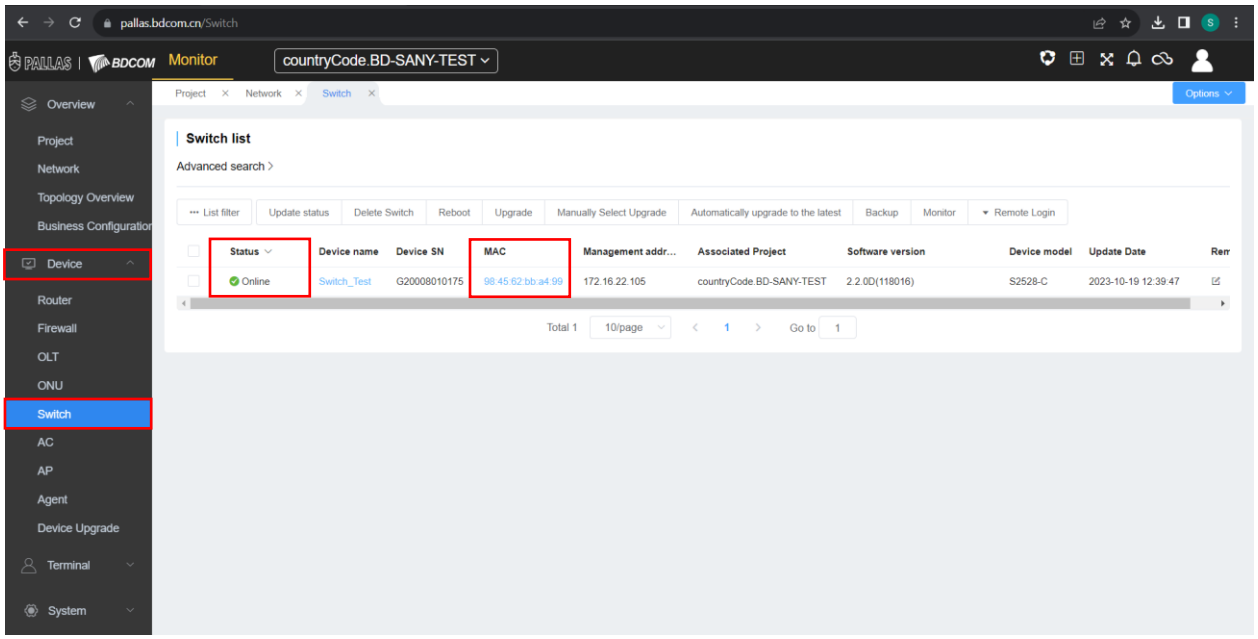

⇨ Go to Overview > Topology Overview, then select the Switch, In here, You can view Device info, CPU Info, Port info, and also can configure VLAN from Here.

Device Info

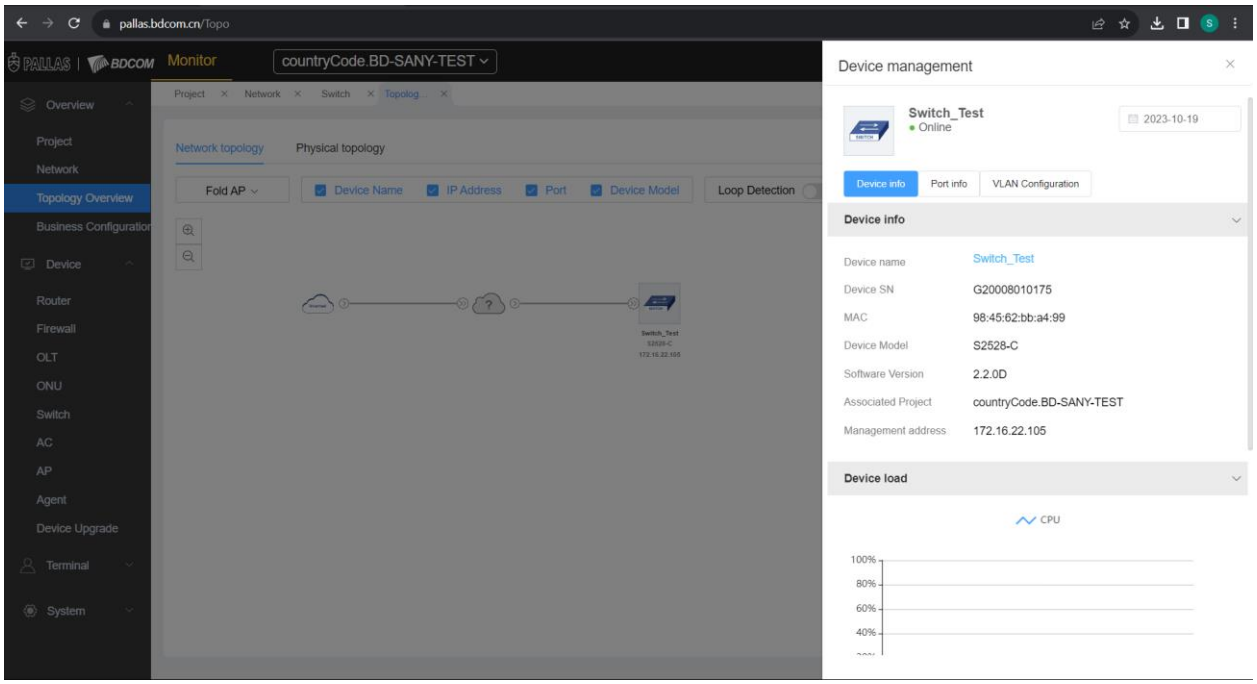

⇨ **Port Info:** You monitor port here (Which port is up or down). You can also Shut down the port here by switching port status here.

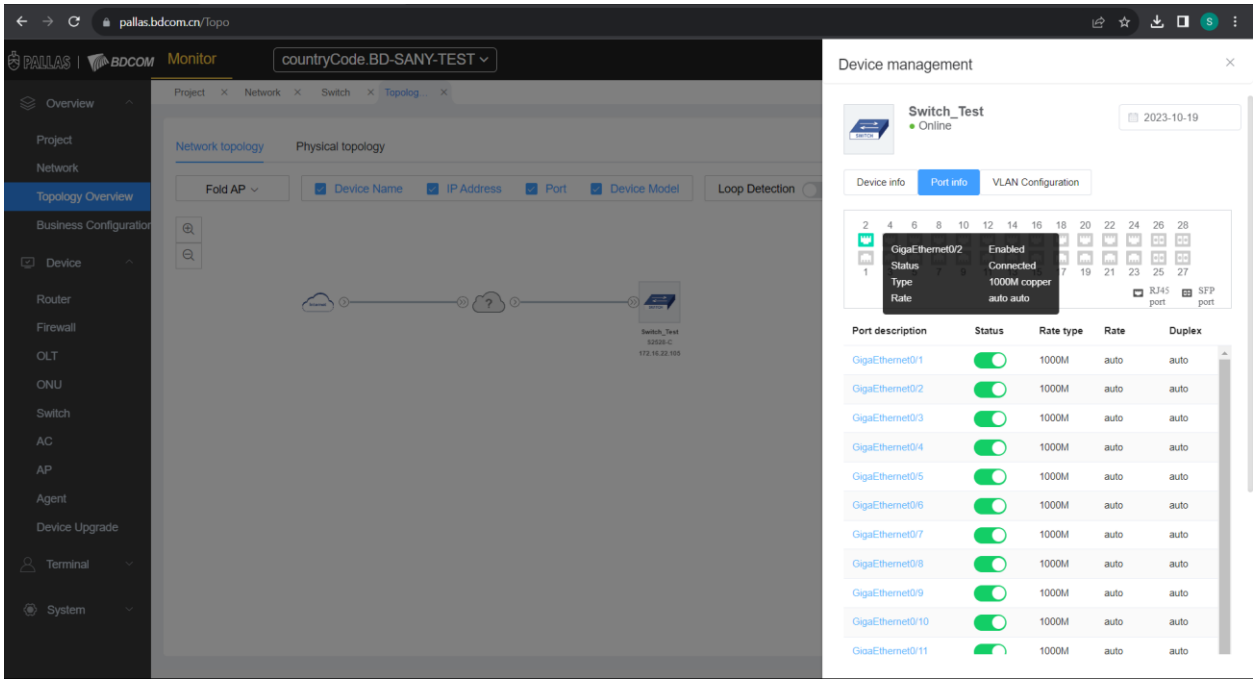

⇨ **VLAN Config:** You can Add/remove VLAN's here, Set Port VLAN and Port VLAN Type for the interface here.

ADD/REMOVE VLAN, SET VLAN IP ADDRESS

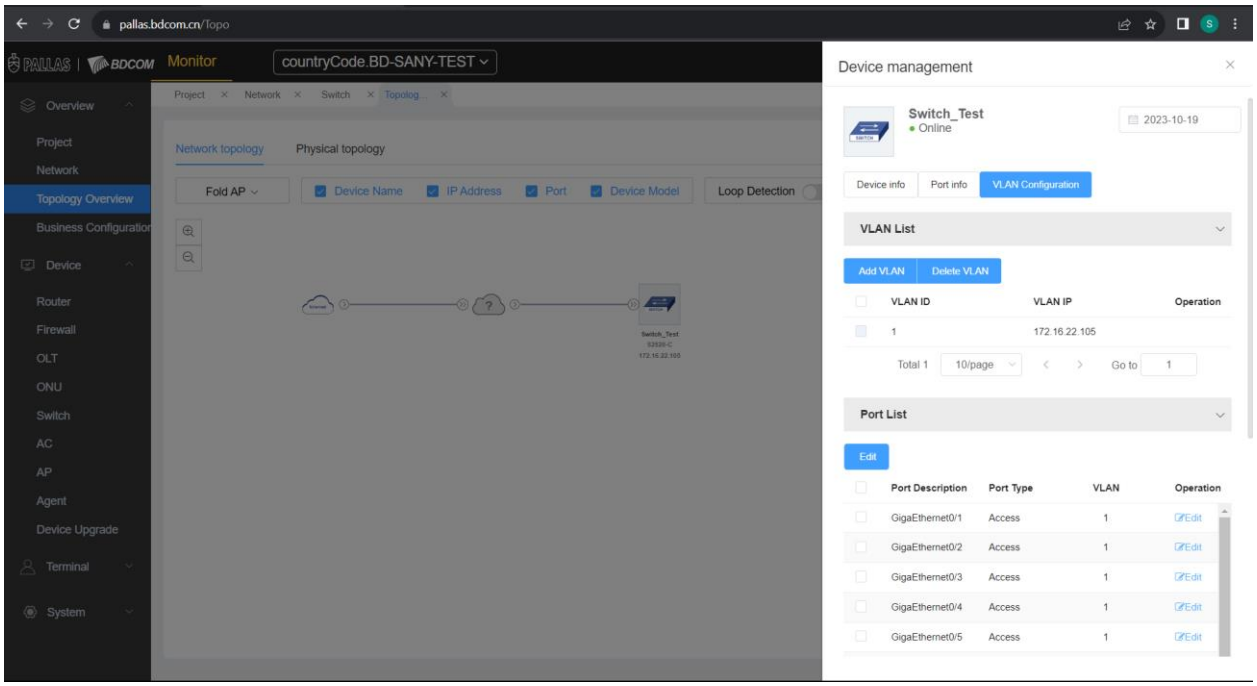

⇨ Port VLAN type and Port VLAN Id configure

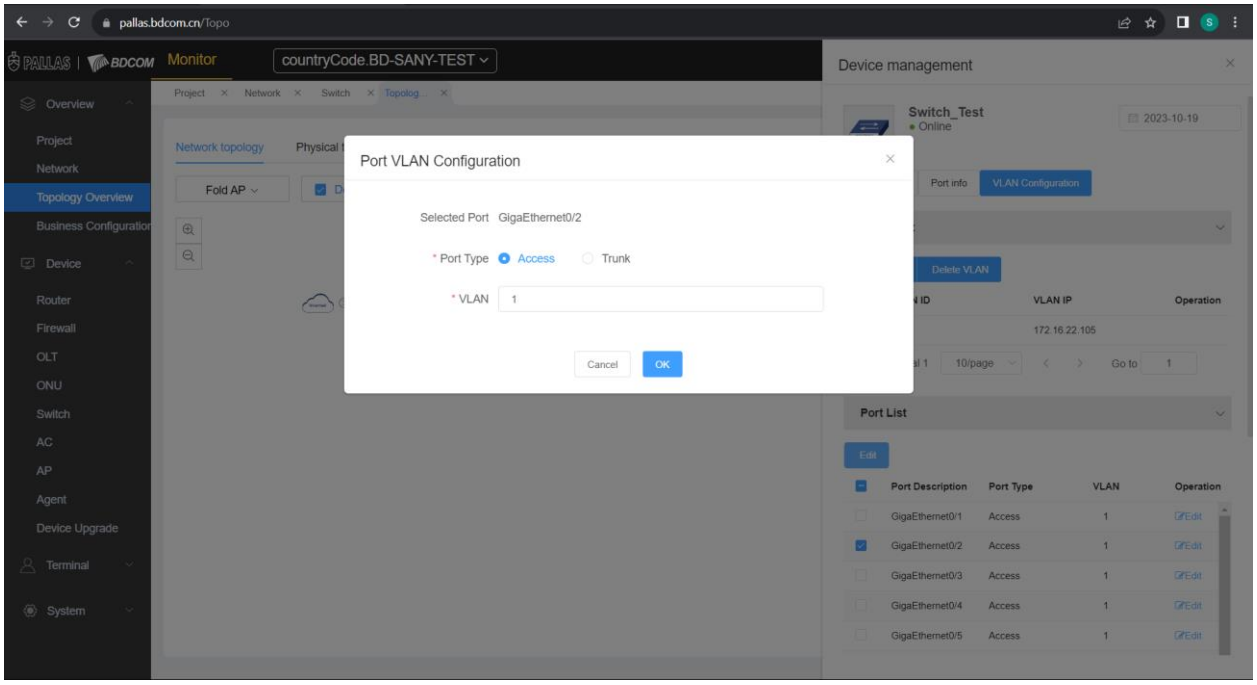

2 Add a BIG series router

Due to the setup of the BIG series router software, no commands need to be configured on the router, set an ip add and after the device is connected to the network, the device can be added to Pallas

The premise is that the BIG router needs to be upgraded to support the cloud version

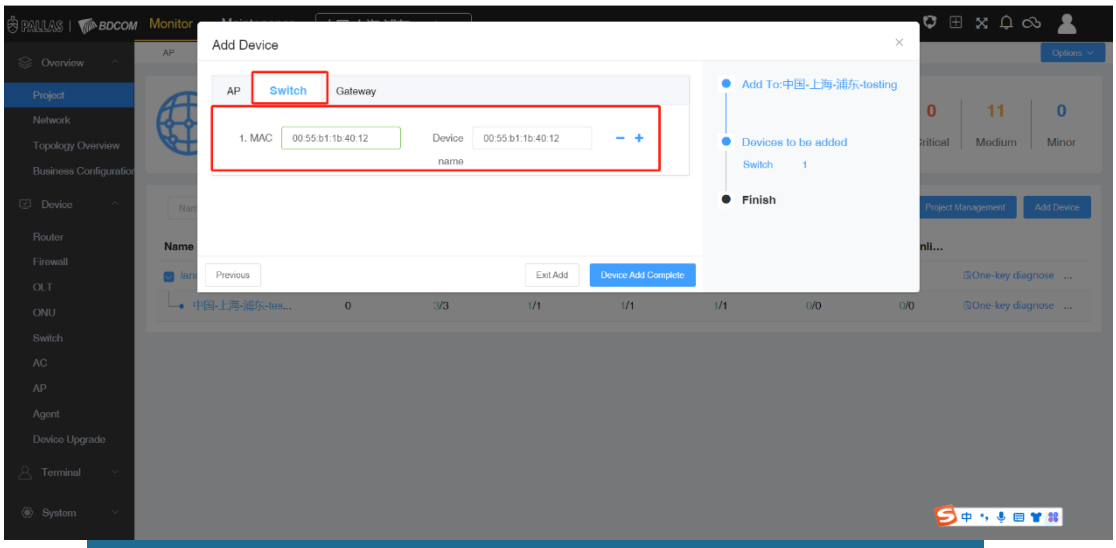

Model	Firmware Version
BIG2000-20/BIG2000-20C/ BIG2000-08LTE	BD_RT_AR_8.2.0A_5305.bin BD_RT_AR_8.2.0A_6245.bin [Latest]
BIG2000-40/BIG2000-40C	BD_RT_LX_8.2.0A_6245.bin

https://sites.google.com/view/bdcom-international/download/firmware/olt?authuser=0

When the BIG router is successfully added.

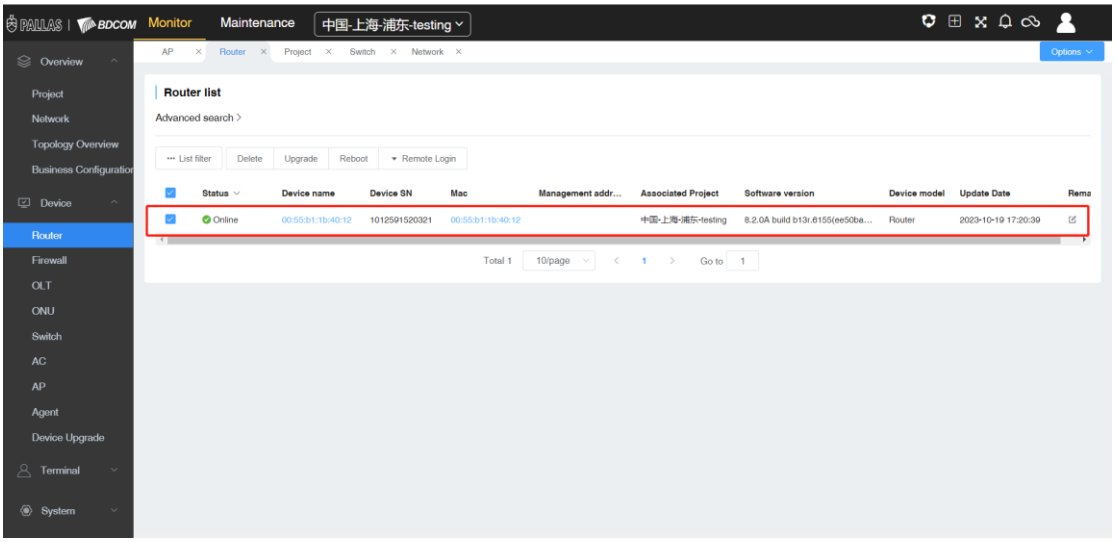

Click device name or MAC address to view basic device information

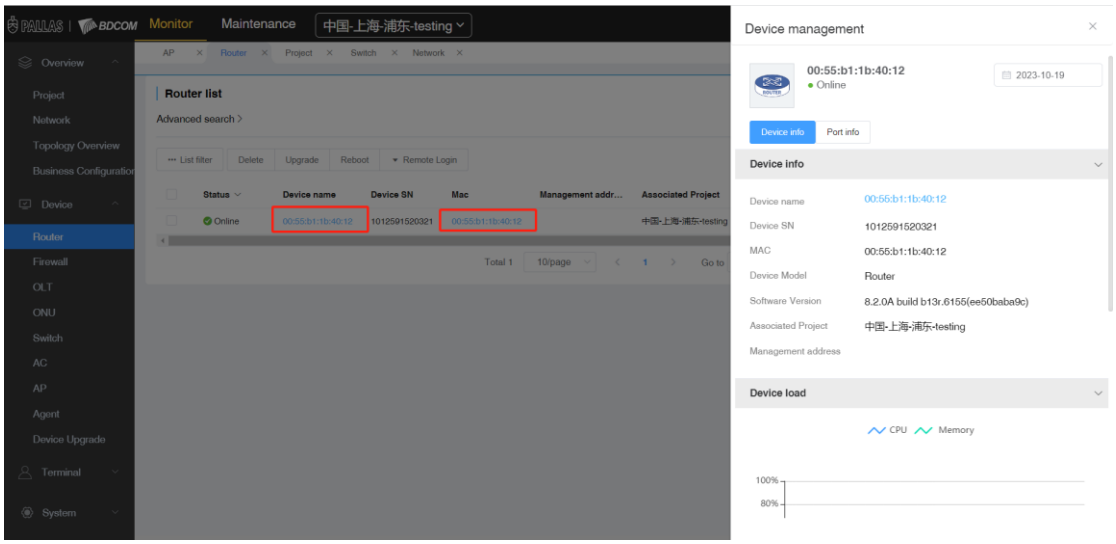

3 Add AC and AP devices

Set the following parameters on the AC web UI

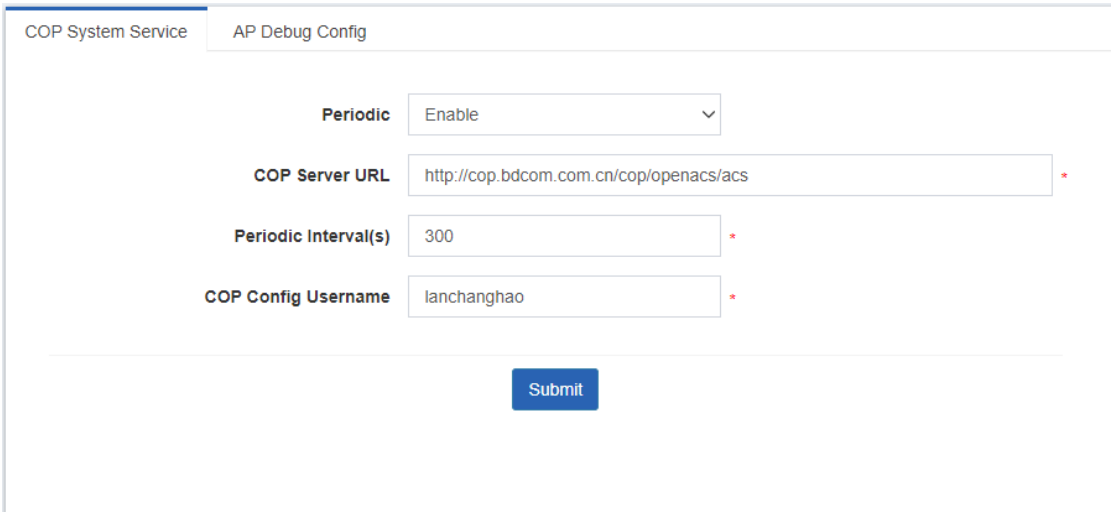

Find Add device(old) in Pallas main screen

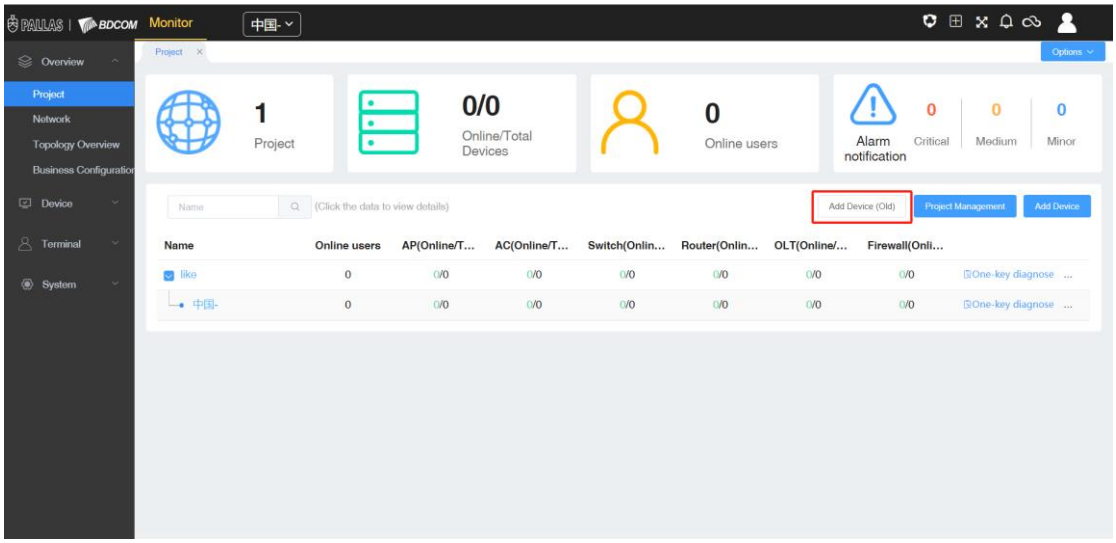

Select the item and enter the device mac address and device name then click Add

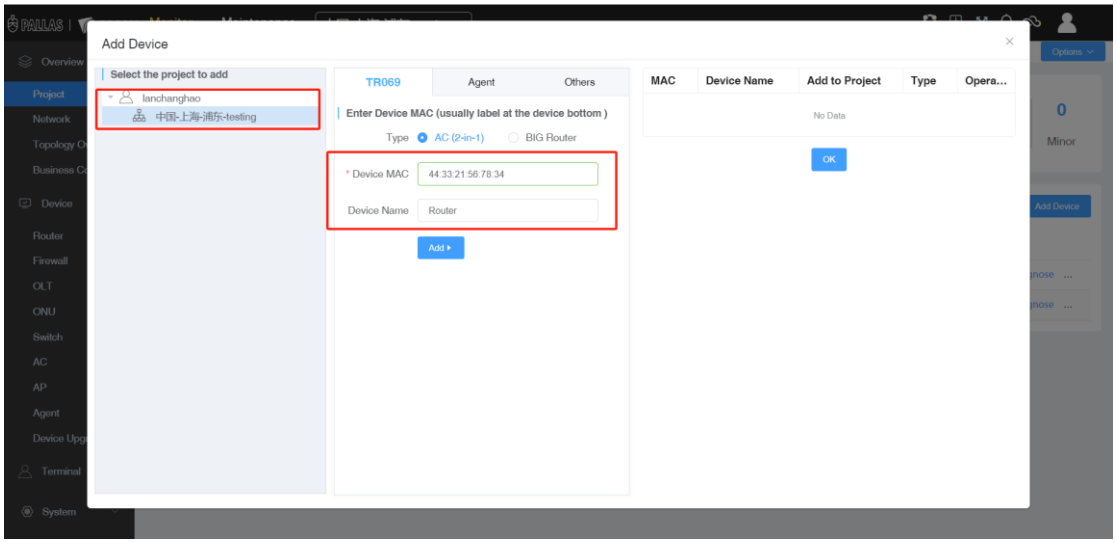

You can view the SSID GROUP and AC version information, restart and upgrade the AC version

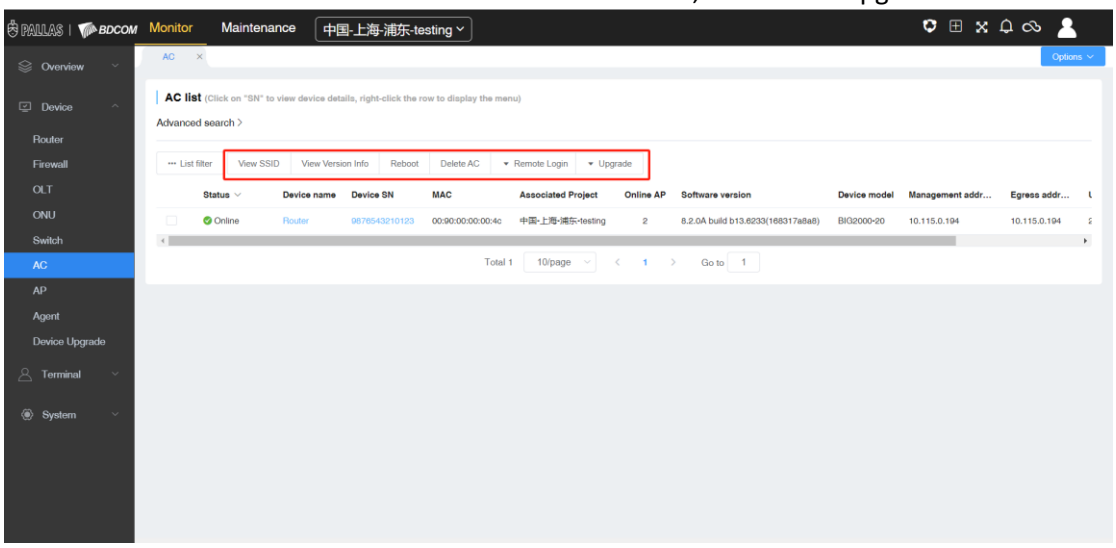

BDCOM
Connecting a Better World

You can upgrade the software version after uploading it

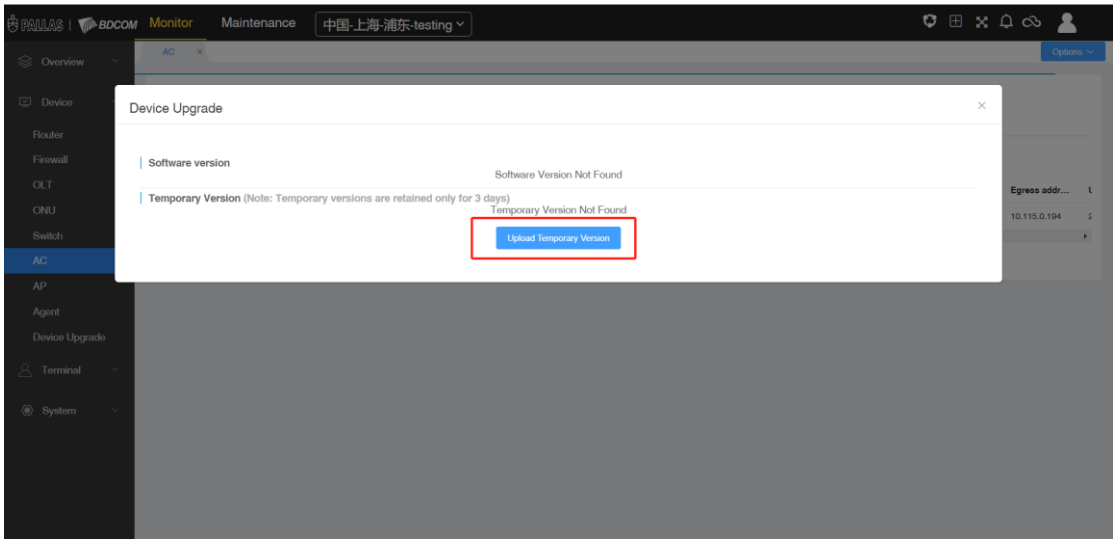

You can also upgrade the AP version

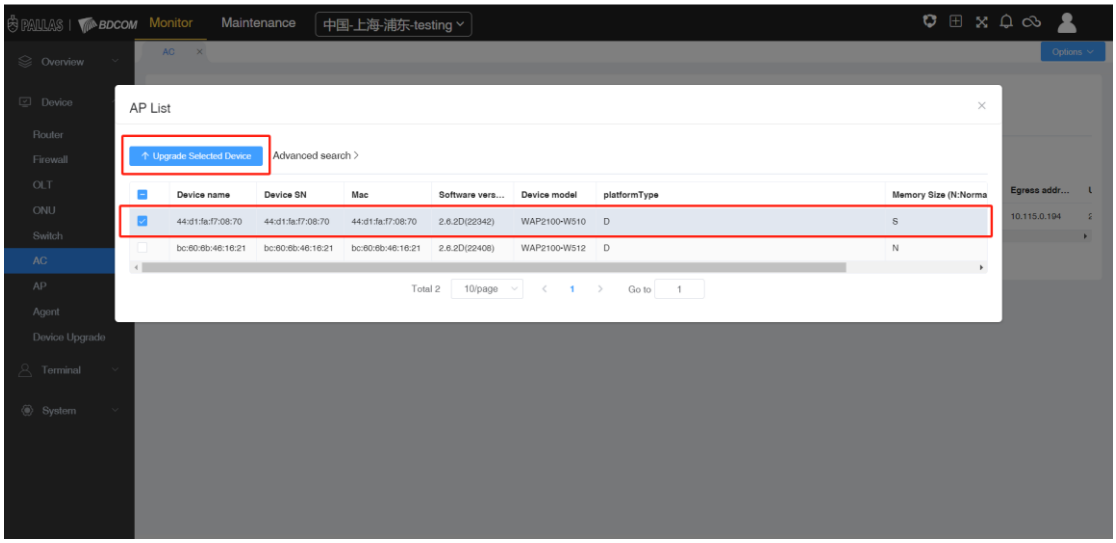

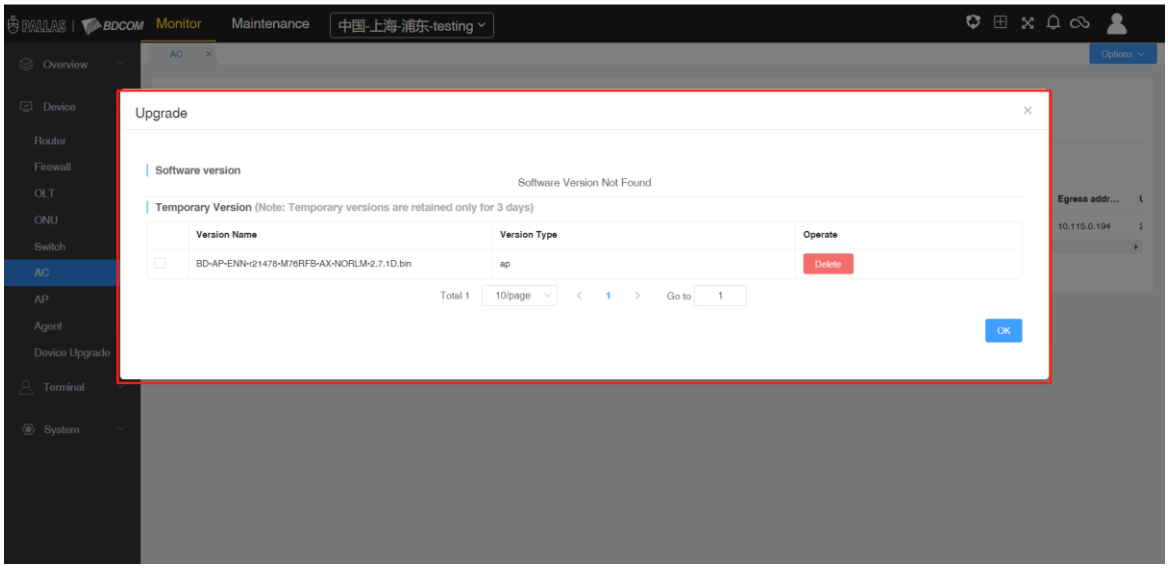

Adding an AP Device

Before adding an AP, update its software and profile to the latest version

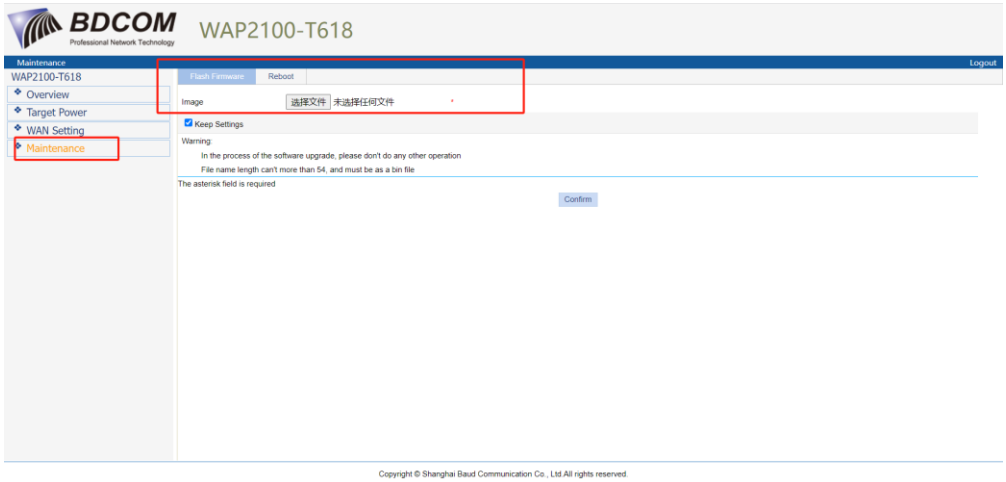

The link of AP software for logging into pallas

https://sites.google.com/view/bdcom-international/download/firmware/wireless-ap-ac

WAP2100-T618/ WAP2100-W618	WAP2100-W512/ WAP2100-T512
BD-AP-r22026-2.7.6D.bin **[For cloud]** BD-AP-r22103-2.7.1D.bin	BD-AP-r21984-2.6.6D.bin **[For cloud]** BD-AP-r22113-2.6.1D.bin

ADD the AP to the Pallas

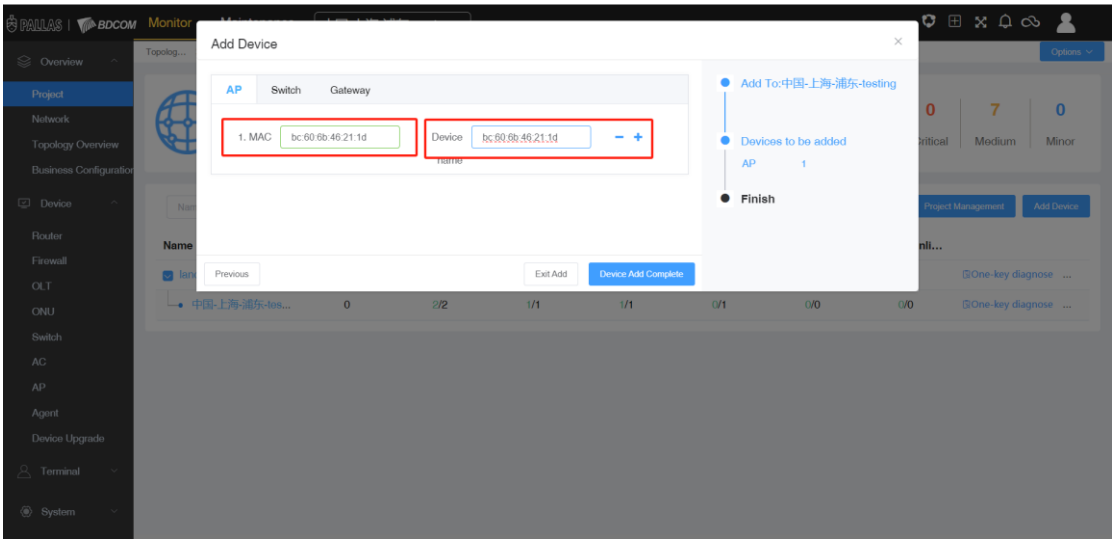

You can view basic AP information and configurations in the AP device list

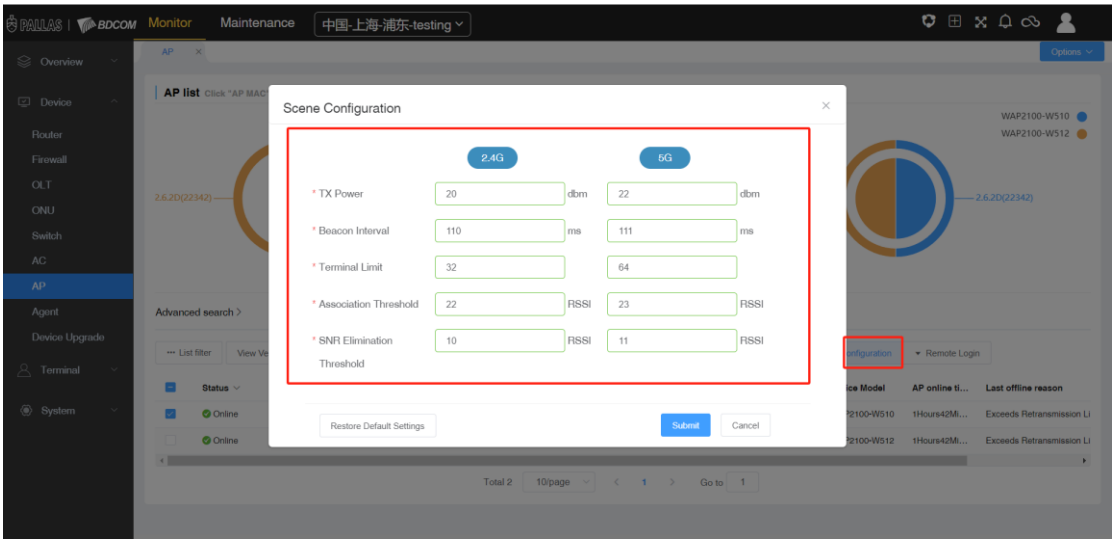

You can view and modify the AP emission frequency

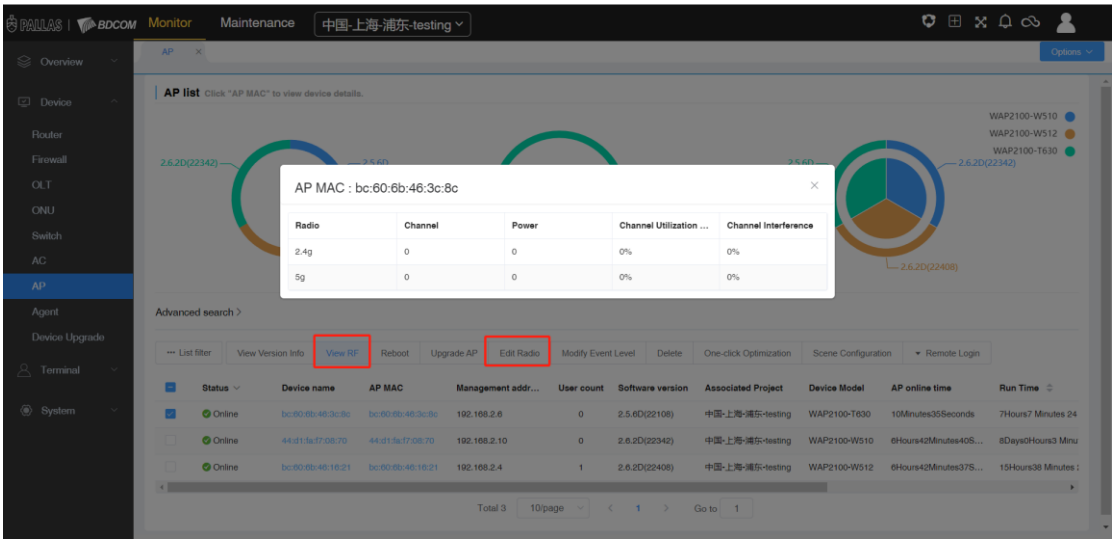

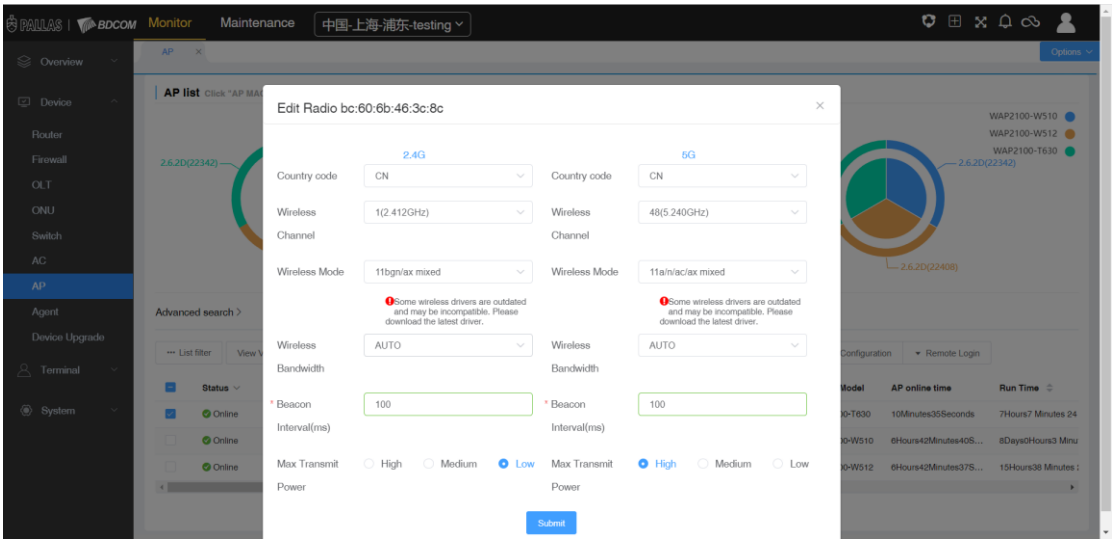

You can upgrade the AP version on the AP device page or upgrade the AP software version on the AC page

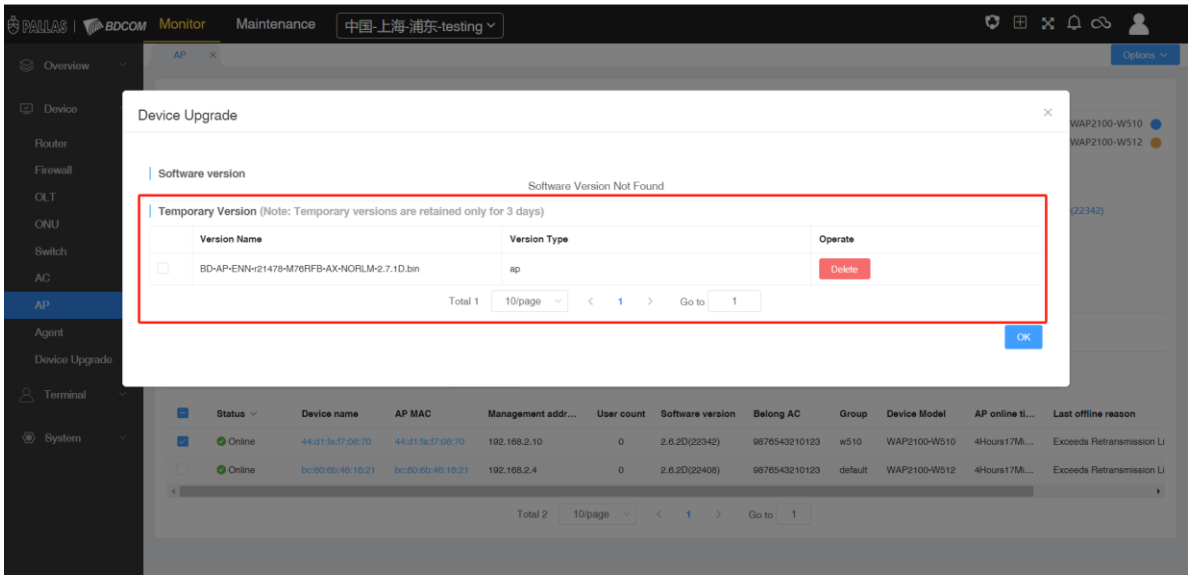

4 Topology preview

After adding devices, you can generate a topology view in the topology overview

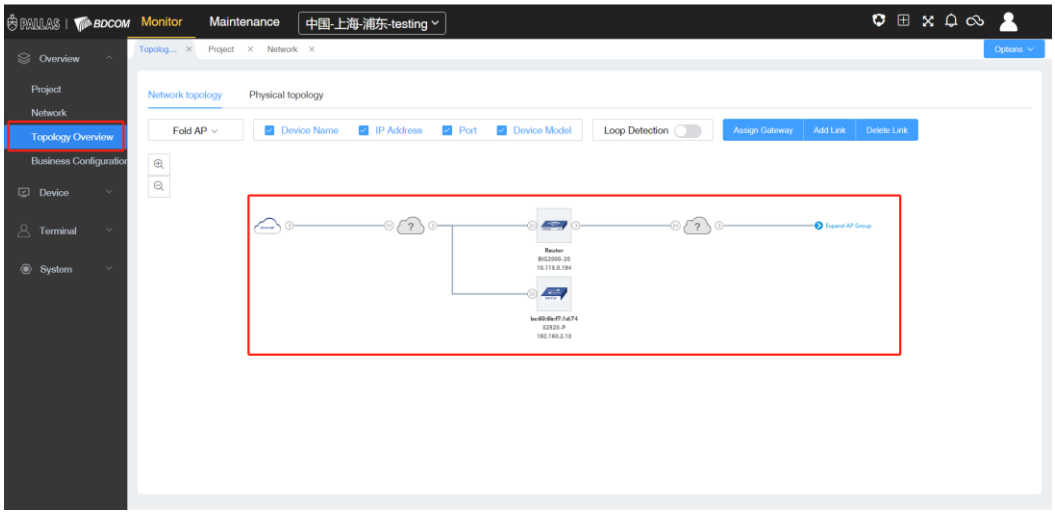

You can specify the device you want to be the gateway

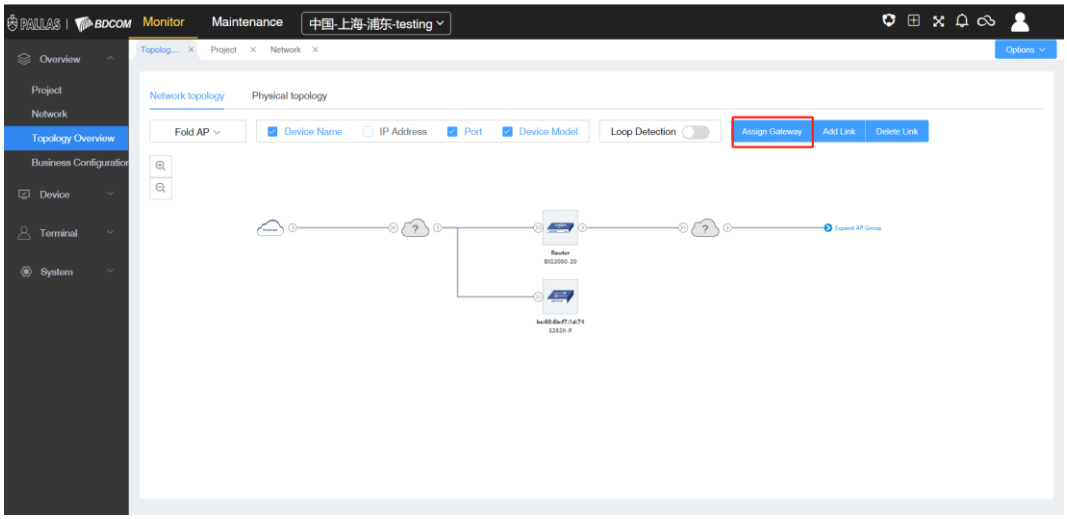

You can also manually add the business network you want

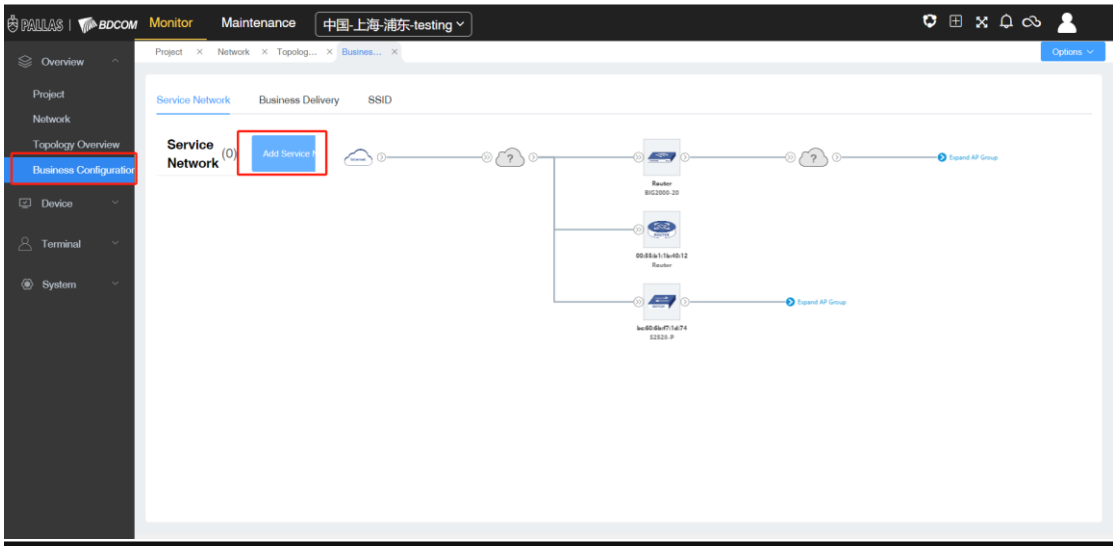

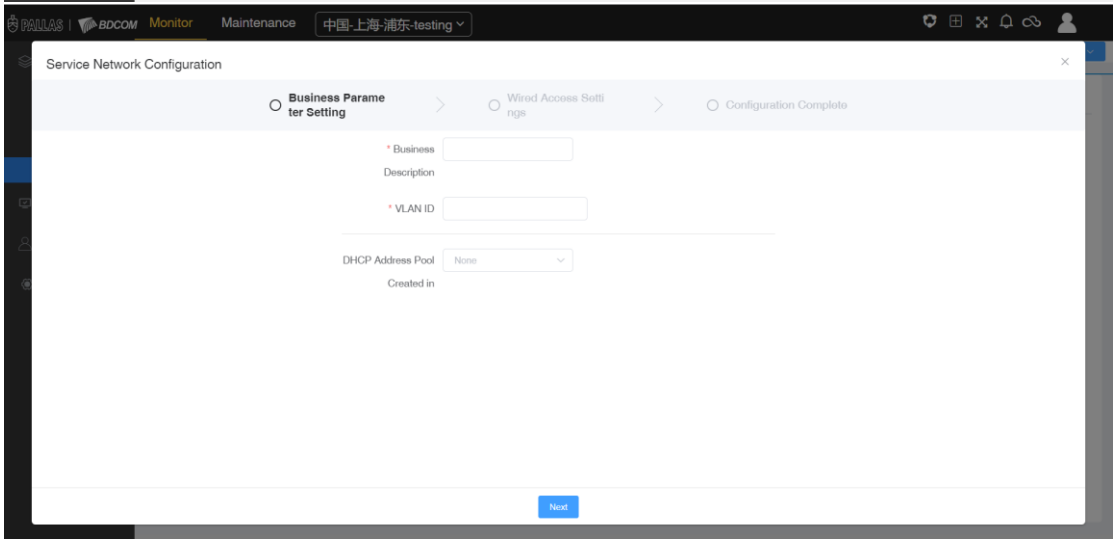

Copyright ©Shanghai Baud Data Communication Co., LTD. 2023. All rights reserved.
No part of this manual may be reproduced or transmitted in any form or by any means without the prior written permission of Shanghai Baud Data Communication Co., LTD.