


DaVinci Tool Recovery:

The methods of tool recovery for DaVinci are different by situation.


1. Acknowledge Error Message

In the simplest situation, just acknowledge the error message.

- a. Click the **Messages** tab, read the error message and understand the error (which module)



- b. Click the **Acknowledge** button to acknowledge each error message or click the **Acknowledge All** button to acknowledge all the error messages at once.

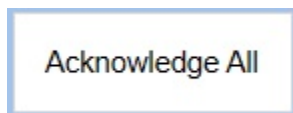

- c. If the wafer is going to be unloaded, it will be auto unloaded back to cassette.

For **Robot (Transfer Module) & Aligner** initialisation which the error message appeared as yellow color, the error message will be auto disappeared after initialisation is done.


For **Host Interface: Host connection error** message, it also appears as yellow color. When Host connection is restored, the error message will be auto disappeared.

Host Interface: Host connection error

2. Clear Machine

In another situation, just clear machine after acknowledgement of the error messages.

- a. Click the **Clear Machine** button to unload the wafer back to cassette.

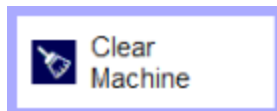

- b. The wafer will be auto unloaded back to cassette into its original slot where it is picked up previously if the wafer info is still in the system memory and the cassette in the loadport is still loaded.


3. Tool Commander di Nanostar

In more complex situations, where the status of the PM is under **Active** state. The handshake between robot & PM is prohibited if PM is **Active** state. The wafer is only allowed to be transferred when PM is under **Idle** state.


- a. Go to Nanostar of PM1/PM2 (which is under Active state) and in the **Task** window, open **ToolControl** icon to open the **ToolControl** window.




- b. On the tab menu of the **ToolControl** window, click **Control** and activate **Local Control**.

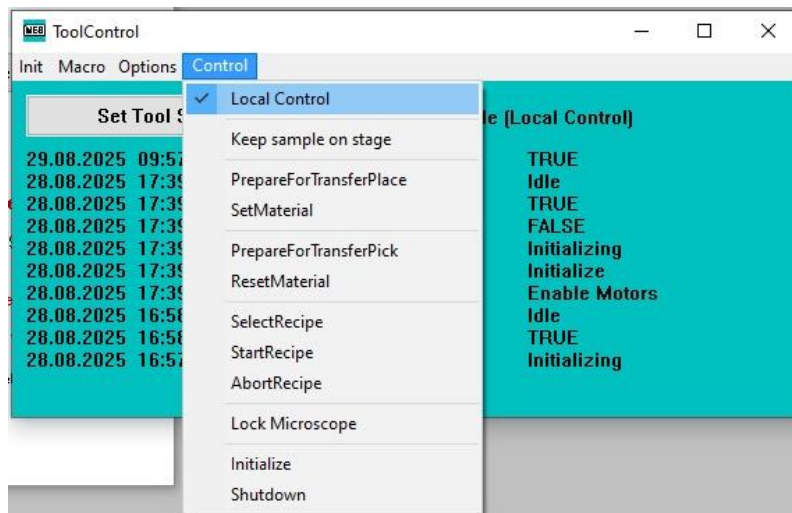

- c. Click the **Set Tool Status** button to open the **Set Module State** window. Select **Idle** radio button to switch the PM to Idle state.

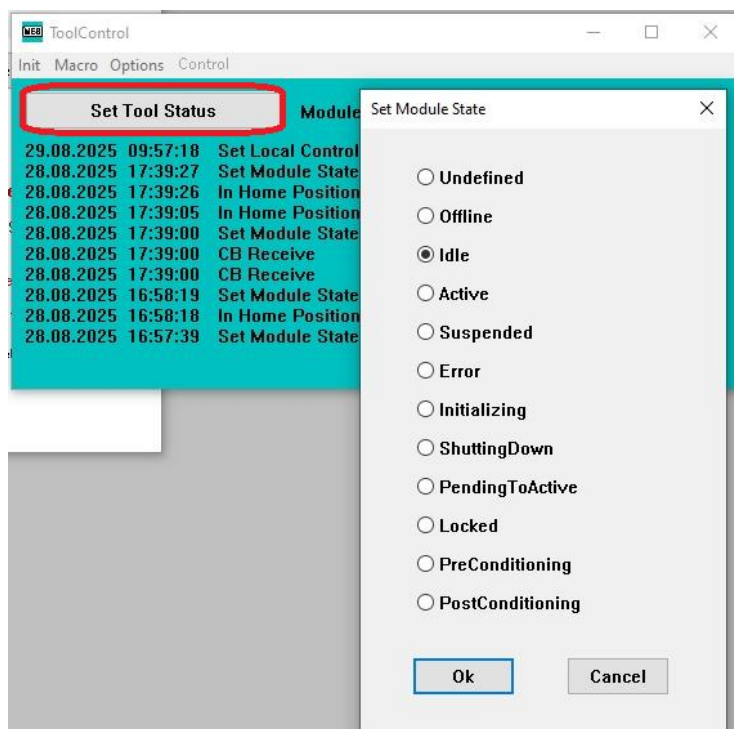

- d. After done switching the tool status, deactivate **Local Control**.

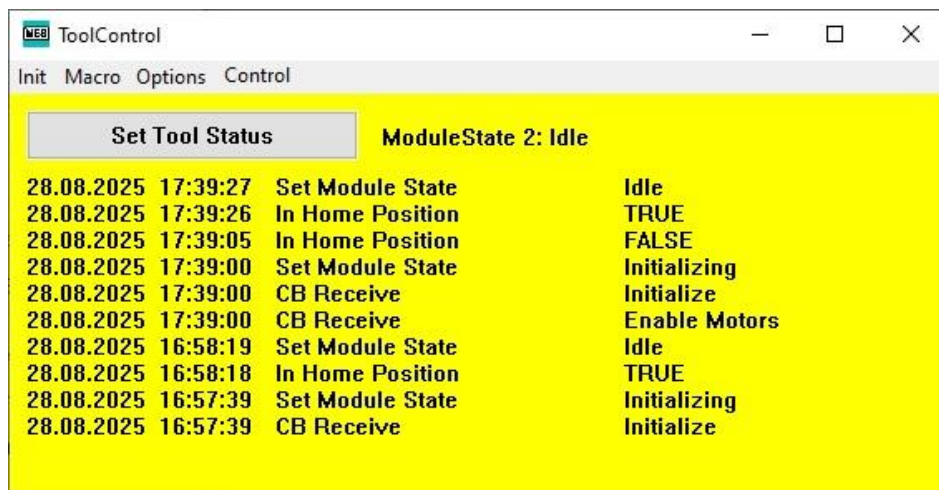


- e. After the PM is set to **Idle** state, the wafer is allowed to be transferred by robot from stage, either automatically or with **Clear Machine** button.

4. Manually Remove Wafer & Clear Wafer from System Memory

If there is vacuum related/wafer detection error and there is a need to remove the wafer manually by hand, it is needed to remove the wafer from system memory.

- a. After remove the physical wafer, click the **Production** tab and select the wafer at which module it is removed.

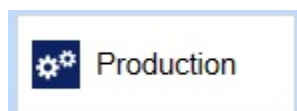

- b. Click the **Delete** button after selecting the wafer.

▶ Start	Name	State
■ Stop	DaVinci 150OC	Idle
▶ Resume	Modules	
⏸ Suspend	Process Module 1	Idle
✖ Abort	Process Module 2	Idle
	Loadport 1	Idle
	Loadport 2	Locked
	Loadport 3	Locked
	Transfer Module1	Idle
	Slots	
	Lower Arm	Correctly Occupied
	test.01	Needs Processing
	Upper Arm	Empty
	Components	
	Aligner	Idle
	ID Reader	Idle
	Control Jobs	
	Unassigned Process Jobs	
	test	Executing
	Scheduler	Inactive
↻ Reload	▼ Identity	
➕ Add Material(s)	Name	
— Delete...		

c. The **Delete Item** window will be shown and asked for delete confirmation.

Delete Item

? Do you want to delete the selected item?


✓ Yes

✖ No

d. After selecting **YES**, the wafer info will be deleted and cleared from system memory.

▶ Start	Name	State
■ Stop	DaVinci 150OC	Error
▶ Resume	Modules	
⏸ Suspend	Process Module 1	Idle
✖ Abort	Process Module 2	Idle
	Loadport 1	Locked
	Loadport 2	Locked
	Loadport 3	Locked
	Transfer Module1	Error
	Slots	
	Lower Arm	Empty
	Upper Arm	Empty
	Components	
	Aligner	Idle
	ID Reader	Idle
	Control Jobs	
	Unassigned Process Jobs	
	test	Executing
	Scheduler	Inactive
↻ Reload	▼ Identity	
➕ Add Material	Name	
— Delete...		

e. Then can continue with **Clear Machine** button to clear other wafers in the tool or **Init Machine** button to initialise all the modules.

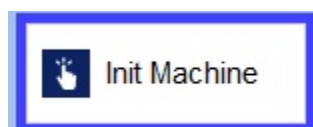

5. Solely Initialise PM

If need to initialise PM alone, under **Local Control** mode, select the Initialize. After initialisation done, deactivate **Local Control**.

