



GENERAL SAFETY	1-1	TORQUE VALUES	1-4
SERVICE RULES	1-1	TOOLS	1-6
SPECIFICATIONS	1-2	CABLES & HARNESS ROUTING	1-8

GENERAL SAFETY

WARNING

If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in a closed area. The exhaust gas contains poisonous carbon monoxide gas.

WARNING

Gasoline is extremely flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks in your working area.

WARNING

The battery electrolyte contains sulphuric acid. Protect your eyes, skin and clothing. In case of contact, flush thoroughly with water and call a doctor if electrolyte gets in your eyes

WARNING

The battery generates hydrogen gas which can become highly explosive. Do not smoke or allow flames or sparks near the battery, especially while charging it.

SERVICE RULES

1. Use genuine HONDA or Honda recommended parts and lubricants or their equivalents. Parts that do not meet HONDA's design specifications may damage the motorcycle.
2. Use the special tools designed for this project.
3. Use only metric tools when servicing this motorcycle. Metric bolts, nuts and screws are not interchangeable with English fasteners. The use of incorrect tools and fasteners may damage the motorcycle.
4. Install new gaskets, O-rings, cotter pins, lock plates etc when reassembling.
5. When tightening bolts or nuts, begin with the larger diameter or inner bolts first, and tighten to the specified torque diagonally, unless a particular sequence is specified.
6. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
7. After reassembly, check all parts for proper installation and operation.



HONDA CBX750F

1. General Information

SPECIFICATIONS

* E, F, U, SA, IT, H ** G, ED, AR *** SW, ND

ITEM		SPECIFICATIONS
DIMENSIONS	Overall Length	*2145mm (84.4") **2175mm (85.6") ***2180 (85.8")
	Overall width	740 mm (29.1")
	Overall height	1240 mm (48.8")
	Wheelbase	1465 mm (57.7")
	Seat Height	795 mm (31.3")
	Footpeg Height	365 mm (14.4")
	Ground Clearance	145 mm (5.7")
	Dry Weight	218 kg (481 lb)
	Curb Weight	238 kg (525 lb)
FRAME	Type	Double Cradle
	Front Suspension, travel	Telescopic fork, 150 mm (5.9")
	Rear Suspension, travel	Swingarm/shock absorber, 42.5 mm (1.67")
	Front suspension air pressure	0-40 kPa (0-0.4 kg/cm ² , 0-6 psi)
	Rear suspension air pressure	0-400 kPa (0-4.0 kg/cm ² , 0-57 psi)
	Front tyre size	110/90 V16 Tubeless
	Rear tyre size	130/80 V18 Tubeless
	Cold tyre pressures	Driver only Front 250 kPa (2.50 kg/cm ² 36 psi)
		Rear 250 kPa (2.50 kg/cm ² 36 psi)
		Driver & one passenger Front 250 kPa (2.50 kg/cm ² 36 psi)
		Rear 290 kPa (2.90 kg/cm ² 41 psi)
ENGINE	Front brake, lining swept area	Double disk 904 cm ² (140 sq in)
	Rear brake, lining swept area	Single disk 452 cm ² (70 sq in)
	Fuel capacity	22 litres (5.8 US gal, 4.8 Imp gal)
	Fuel reserve capacity	4 litres (1.1 US gal, 0.9 Imp gal)
	Caster angle	63°00'
	Trail	93 mm (3.7 in)
	Front fork capacity	Right: 375 cc (132 oz), Left: 400 cc (14.1 oz)
	Type	Air cooled 4 stroke, DOHC
	Cylinder arrangement	Vertical in line four
	Bore and stroke	67.0 x 53.0 mm (2.6 x 2.1 in)
	Displacement	747 cm ³ (45.6 cu. in)
	Compression ratio	9.3 : 1
	Valve train	Chain driven DOHC, 4 valves per cylinder
	Maximum horsepower	(DIN) 67 kW (91 ps)/9500 rpm
	Maximum torque	70 nm (7.1 kg.m)/8500 rpm
	Oil capacity	3.6 litres (3.8 US qt, 3.2 Imp qt) after disassembly
		2.5 litres (2.6 US qt, 2.2 Imp qt) after draining
	Lubrication system	Forced pressure and wet sump
	Air filtration	Paper filter
	Cylinder compression	1,200 ± 200 kPa (12.0 ± 2.0 kg/ cm ² . 171 ± 28 psi)
	Intake valve	Opens 10° (BTDC)
		Closes 40° (ABDC)
	Exhaust valve	Opens 45° (BBDC)
		Closes 5° (ATDC)
	Valve clearance (Cold)	IN: 0 mm HYDRAULIC
		EX: "
	Engine weight (dry)	80 kg (176 lb)
	Idle speed	1,000 ± 100 rpm



HONDA CBX750F

1. General Information

ITEM		SPECIFICATIONS	
CARBURETION	Carburettor type/throttle bore	KEIHIN VE/34 mm (1.34 in)	
	Identification number	VE64B	
DRIVE TRAIN	Pilot screw initial setting	2 turns out	
	Float level (gauge level)	18.5 mm (0.73 in)	
ELECTRICAL	Clutch	Wet, multi plate	
	Transmission	6 speed	
	Primary reduction	1.780	
	Final reduction	2.812	
	Gear ratio I	3.000	
	Gear ratio II	2.235	
	Gear ratio III	1.750	
	Gear ratio IV	1.434	
	Gear ratio V	1.240	
	Gear ratio VI	1.115	
ELECTRICAL	Gear shift pattern	Left foot operated return system 1-N-2-3-4-5-6	
	Ignition	Full transistor ignition	
	Ignition timing "F" mark	10° BTDC at idle	
	Full advance	32° BTDC at 3,150 rpm	
	Starting system	Starting motor	
	Alternator	320 W/5,000 rpm (engine rpm)	
	Battery capacity	12V-14V AH	
	Spark plugs	< > : U	
		NGK	ND
	Standard	DPR8EA-9 <DP8EA-9>	X24EPR-U9 <X24EP-U9>
ELECTRICAL	For cold climate (below 5°C, 41°F)	DPR7EA-9 <DP7EA-9>	X22EPR-U9 <X22EP-U9>
	For extended high speed riding	DPR9EA-9 <DP9EA-9>	X27EPR-U9 <X27EP-U9>
	Spark plug gap	0.8-0.9 mm (0.031-0.035 in)	
	Firing order	1-3-4-2	
	Fuse/Main fuse	10A x 3, 15A x 3/30A	
LIGHTS	Headlight (high/low beam)	61/55W x 2 (E, U, SA, ED)	
		60W + 60/55W (G, AR, H)	
		60W + 55W (F)	
		60/55W (SW, IT, ND)	
	Tail/stoplight	5/21W	
	Front turn signal	21W	
	Rear turn signal	21W	
	Instrument lights	3.4W x 4	
	Neutral indicator	3.4W	
	Turn signal indicator	3.4W	
	High beam indicator	3.4W	
	Position light	4W (G, AR, F, SW, IT, ND)	
		4W x 2 (E, U, SA, ED)	
	Open circuit indicator	3.4W	



TORQUE VALUES

ENGINE

Item	Q'ty	Thread Dia. (mm)	Torque N-m (kg-m, ft-lb)	Remarks
Main gallery plug	2	20	25-35 (2.5-3.5, 18-25)	Apply thread lock agent to the threads
Oil Filter	1	20	15-20 (1.5-2.0, 11-14)	Apply thread lock agent to the filter boss threads in the crank case
Engine oil drain plug	1	12	30-40 (3.0-4.0, 22-29)	
Cylinder head cover	8	6	8-12 (0.8-1.2, 6-9)	
Drive sprocket	1	10	50-55 (5.0-5.5, 36-40)	
Gear shift pedal	1	6	8-12 (0.8-1.2, 6-9)	
Camshaft holder	20	6	12-16 (1.2-1.6, 9-12)	
Cam sprocket	4	7	18-20 (1.8-2.0, 13-14)	
Centre shift fork	1	7	16-20 (1.6-2.0, 12-14)	
Oil bolt (7 mm)	4	7	10-14 (1.0-1.4, 7-10)	
Oil bolt (8 mm)	2	8	12-16 (1.2-1.6, 9-12)	
Oil bolt (10 mm)	4	10	23-27 (2.3-2.7, 17-20)	
Cylinder head	12	9	26-30 (2.6-3.0, 19-22)	Apply engine oil to the threads and flange
Spark plug	4	12	12-18 (1.2-1.8, 9-13)	
Oil pressure switch	1	-	16-20 (1.6-2.0, 12-14)	Apply thread lock agent to the threads
Clutch lock nut	1	22	75-85 (7.5-8.0, 54-61)	Apply thread lock agent to the threads
Shift drum stopper arm	1	6	10-14 (1.0-1.4, 7-10)	
Crank case (6 mm)	16	6	10-14 (1.0-1.4, 7-10)	
Crank case (7 mm)	2	7	15-19 (1.5-1.9, 11-14)	
Crank case (8 mm)	12	8	21-25 (2.1-2.5, 15-18)	Apply molybdenum disulfide grease to the threads & flange
Countershaft bearing cover	7	8	21-25 (2.1-2.5, 15-18)	Apply thread lock agent to the threads
Air separator cover	1	10	23-27 (2.3-2.7, 17-20)	
Alternator shaft	1	10	30-38 (3.0-3.8, 22-27)	
Connecting rod cap	8	8	30-34 (3.0-3.4, 22-25)	Apply molybdenum disulfide grease to the threads & flange
Pulse rotor	1	10	30-40 (3.0-4.0, 22-29)	
Alternator rotor	1	10	30-38 (3.0-3.8, 22-27)	
Slave cylinder bleed valve	1	8	4-7 (0.4-0.7, 2.9-5.1)	

FRAME

Item	Q'ty	Thread Dia. (mm)	Torque N-m (kg-m, ft-lb)	Remarks
Engine mount bolt (8 mm)	8	8	20-30 (2.0-3.0, 14-22)	
Engine mount bolt (10 mm)	4	10	45-60 (4.5-6.0, 33-43)	
Muffler to engine	2	10	45-60 (4.5-6.0, 33-43)	
Master cylinder reservoir cap	4	4	1-2 (0.1-0.2, 0.7-1.4)	
Master cylinder holder	4	6	10-14 (1.0-1.4, 7-10)	
Oil bolt	9	-	25-30 (2.5-3.0, 18-22)	
Oil hose bolt (engine to frame)	4	8	24-30 (2.4-3.0, 17-22)	Apply thread lock agent to the threads



HONDA CBX750F

1. General Information

FRAME continued

Item	Q'ty	Thread Dia. (mm)	Torque N-m (kg-m, ft-lb)	Remarks
Handlebar pinch bolt	2	8	25-30 (2.5-3.5, 18-25)	Apply grease to the threads
Frame oil drain bolt	2	8	24-30 (2.4-3.0, 17-22)	
Front brake disk	12	8	35-40 (3.5-4.0, 25-29)	Apply grease to the threads
Front axle nut	1	14	55-65 (5.5-6.5, 40-47)	
Front caliper bracket	3	10	35-45 (3.5-4.5, 25-33)	
Anti dive pivot bolt	1	6	10-14 (1.0-1.4, 7-10)	
Axle holder	4	8	18-26 (1.8-2.6, 13-19)	
Fork piston	2	8	15-25 (1.5-2.5, 11-18)	
Fork top pinch bolt	2	7	9-15 (0.9-1.5, 7-11)	
Fork bottom pinch bolt	2	10	45-55 (4.5-5.5, 33-40)	
Fork brace	4	6	10-15 (1.0-1.5, 7-11)	
Steering bearing adjustment nut	1	26	23-27 (2.3-2.7, 17-20)	Apply engine oil to the threads
Steering stem nut	1	24	90-120 (9.0-12.0, 65-87)	
Steering stem pinch bolt	1	8	20-30 (2.0-3.0, 14-22)	
Fork cap	2	35	15-30 (1.5-3.0, 11-22)	
Anti dive case	4	6	6-9 (0.6-0.9, 4-7)	
Rear brake disk	6	8	35-40 (3.5-4.0, 25-29)	Apply grease to the threads
Final drive sprocket	5	12	80-100 (8.0-10.0, 58-72)	
Rear axle nut	1	18	85-105 (8.5-10.5, 61-76)	
Rear shock absorber	2	10	40-50 (4.0-5.0, 29-36)	
Shock link-to-arm	1	10	40-50 (4.0-5.0, 29-36)	
Shock arm-to-frame	1	10	40-50 (4.0-5.0, 29-36)	
Shock link-to-swingarm	1	10	40-50 (4.0-5.0, 29-36)	
Rear brake caliper-to torque link	1	10	30-40 (3.0-4.0, 22-29)	
Swingarm pivot bolt	1	14	60-70 (6.0-7.0, 43-51)	
Caliper mount bolt	3	8	20-25 (2.0-2.5, 14-18)	
Caliper pin	3	12	25-30 (2.5-3.0, 18-22)	
Pad pin retainer	3	6	8-13 (0.8-1.3, 6-9)	
Footpeg bracket	6	10	35-45 (3.5-4.5, 25-33)	

- Torque specifications listed above are for important fasteners. Others should be tightened to the standard torque values below

STANDARD TORQUE VALUES

Type	Torque N-m (kg-m, ft-lb)	Type	Torque N-m (kg-m, ft-lb)
5 mm bolt, nut	4.5-6 (0.45-0.6, 3.5-4.5)	5 mm screw	3.5-5.0 (0.35-5.0, 2.5-3.6)
6 mm bolt, nut	8-12 (0.8-1.2, 6-9)	6 mm screw	7-11 (0.7-1.1, 5-8)
8 mm bolt, nut	18-25 (1.8-2.5, 13-18)	6 mm flange bolt, nut	10-14 (1.0-1.4, 7-10)
10 mm bolt, nut	30-40 (3.0-4.0, 22-29)	8 mm flange bolt, nut	24-30 (2.4-3.0, 17-22)
12 mm bolt, nut	50-60 (5.0-6.0, 36-43)	10 mm flange bolt, nut	30-40 (3.0-4.0, 22-29)



HONDA CBX750F

1. General Information

TOOLS

SPECIAL

TOOL NAME	TOOL NUMBER	REFERENCE PAGE
Bearing remover set	07946-MJ00000	14-18
Driver shaft	07946-MJ00100	14-18
Driver head	07946-MJ00200	14-18
Pilot screw wrench	07908-4220201	3-8, 4-14
Oil filter wrench	07912-6110001	2-3
Steering stem socket	07916-3710100	13-33, 13-36
Hex wrench, 6 mm	07917-3230000	13-21
Rotor puller	07933-2160000	16-7
Bearing remover, 17 mm	07936-3710300	12-7
Bearing remover handle	07936-3710100	12-7
Bearing remover weight	07741-0010201	12-7
Bearing driver attachment, 28 x 30 mm	07946-1870100	9-2
Bearing race remover	07946-3710500	13-34
Ball race remover	07953-MJ10000	13-34
Fork seal driver	07946-4630100	13-28
Piston ring compressor	07954-2830000	7-7, 7-8
Piston base	07958-3000000	7-7
Oil seal driver attachment	07965-MA10200	14-10, 14-11
Oil seal driver attachment	07965-MB00100	14-12
Oil seal driver adapter	07965-ME70100	14-12
Oil seal driver	07965-MC70100	14-10, 14-12
Crank case assembly pin	07973-ME50000	10-4
Hydraulic tappet bleeder	07973-MJ00000	6-8, 6-18
Valve guide reamer	07984-MA60000	6-12, 6-13
Valve guide driver	07942-MA60000	6-13
Steering stem guide	07946-MB00000	13-35
Oil pressure gauge attachment	07510-MJ10100	2-4
Compression gauge attachment	07510-MB00101	3-9
Snap ring pliers	07914-3230001	8-4, 8-6, 13-22, 13-29, 15-9, 15-10, 15-16, 15-17

COMMON

TOOL NAME	TOOL NUMBER	REFERENCE PAGE
Float level gauge	07401-0010000	4-6
Lock nut wrench, 17 x 27 mm	07716-0020300	8-10, 8-17
Lock nut wrench, 30 x 32 mm	07716-0020400	13-32, 13-37
Extension bar	07716-0020500	8-10, 8-17, 13-32, 13-33, 13-36, 13-37
Universal holder	07725-0030000	8-10, 8-17, 12-2, 12-9



HONDA CBX750F

1. General Information

COMMON continued

TOOL NAME	TOOL NUMBER	REFERENCE PAGE
Attachment, 32 x 35 mm	07746-0010100	14-18, 14-19
Attachment, 37 x 40 mm	07746-0010200	12-17, 8-13
Attachment, 42 x 47 mm	07746-0010300	12-6, 13-16, 13-35
Attachment, 52 x 55 mm	07746-0010400	13-35, 14-6
Attachment, 62 x 68 mm	07746-0010500	14-6
Pilot, 15 mm	07746-0040300	13-16, 14-18
Pilot, 17 mm	07746-0040400	12-7
Pilot, 20 mm	07746-0040500	12-6, 14-6
Pilot, 22 mm	07746-0041000	14-19
Pilot, 25 mm	07746-0040600	14-6
Pilot, 35 mm	07746-0040800	8-13
Driver	07749-0010000	
Driver	07746-0020100	12-6
Attachment, I.D. 20 mm	07746-0020400	12-6
Driver	07746-0030100	11-5
Attachment, I.D. 25 mm	07746-0030200	11-5
Bearing remover shaft	07746-0050100	13-15, 14-5
Bearing remover head, 15 mm	07746-0050400	13-15
Valve spring compressor	07757-0010000	6-11, 6-15

VALVE SET CUTTER


TOOL NAME	TOOL NUMBER	REFERENCE PAGE
Valve seat cutter, 24.5 mm (EX 45°)	07780-0010100	6-14
Valve seat cutter, 27.5 mm (IN 45°)	07780-0010200	6-14
Valve seat cutter, 25 mm (EX 32°)	07780-0012000	6-14
Valve seat cutter, 28 mm (IN 32°)	07780-0012100	6-14
Valve seat cutter, 22 mm (EX 60°)	07780-0014202	6-14
Valve seat cutter, 26 mm (IN 60°)	07780-0014500	6-14
Valve seat cutter holder	07781-0010400	6-14



CABLE & HARNESS ROUTING

Note the following when routing cables and wire harnesses:



- A loose wire, harness or cable can be a safety hazard. After clamping, check each wire to be sure it is secure
- Do not squeeze wires against the weld or end of its clamp when a weld on clamp is used
- Secure wires and wire harnesses to the frame with their respective wire bands at the designated locations. Tighten the bands so that only the insulated surfaces contact the wires or wire harnesses.
- Route harnesses so that they are not pulled or that have excessive slack
- Protect wires and harnesses with electrical tape or tube if they are in contact with a sharp edge or corner. Clean the attaching surface thoroughly before applying tape.
- Do not use wires or harnesses with a broken insulator. Repair by wrapping them in a protective tape or replace them.
- Route wire harnesses to avoid sharp edges or corners.
- Also avoid the projected ends of bolts and screws.
- Keep wire harnesses away from the exhaust pipes and other hot parts.
- Be sure grommets are seated in their grooves properly.
- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts.
- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses routed along the handle bars should not be pulled taut, have excessive slack, be pinched, or interfere with adjacent or surrounding parts in all steering positions.

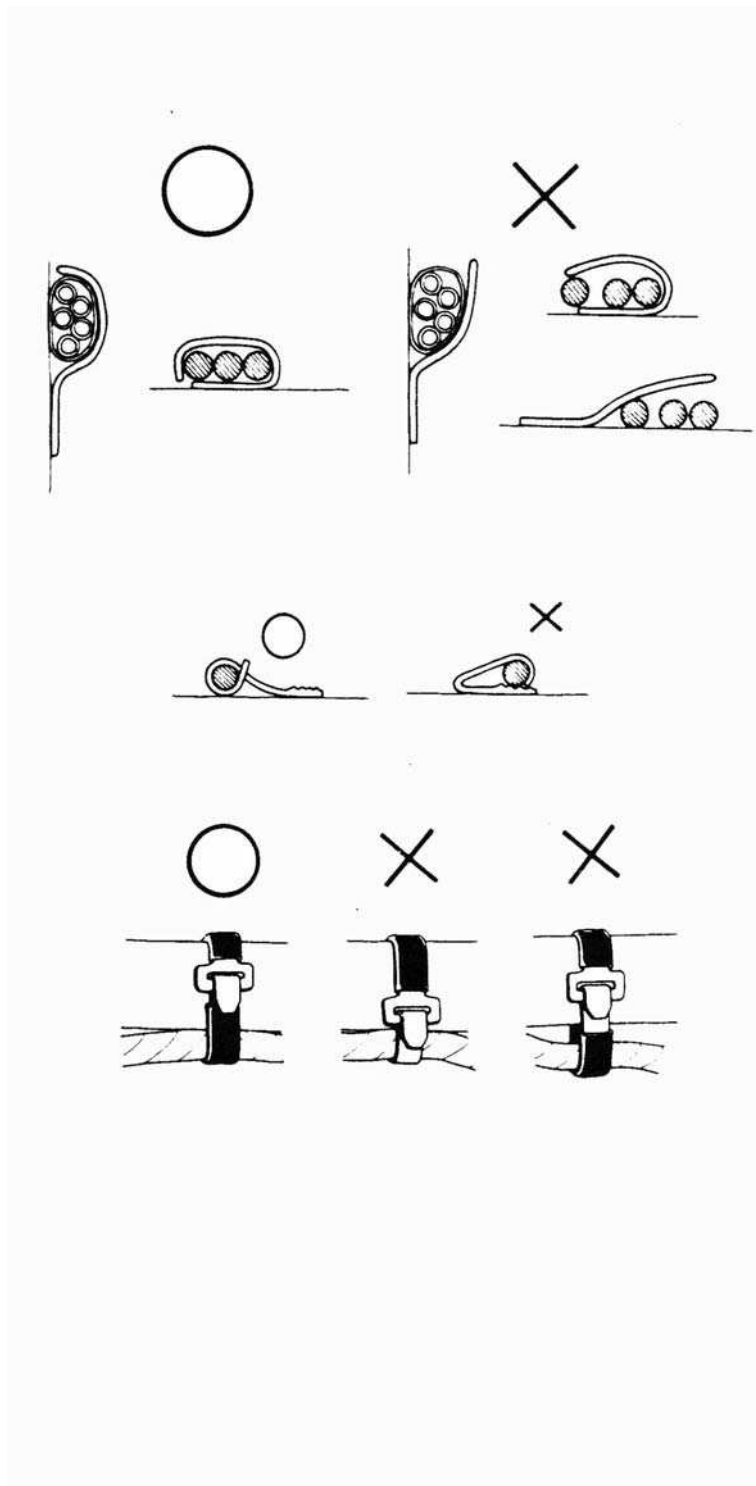




HONDA CBX750F

1. General Information

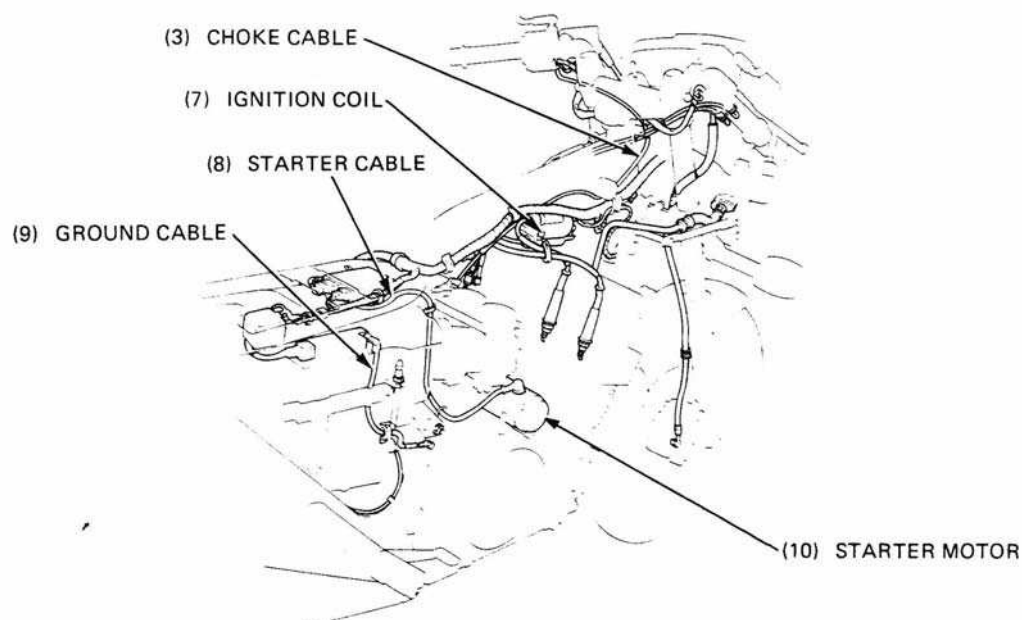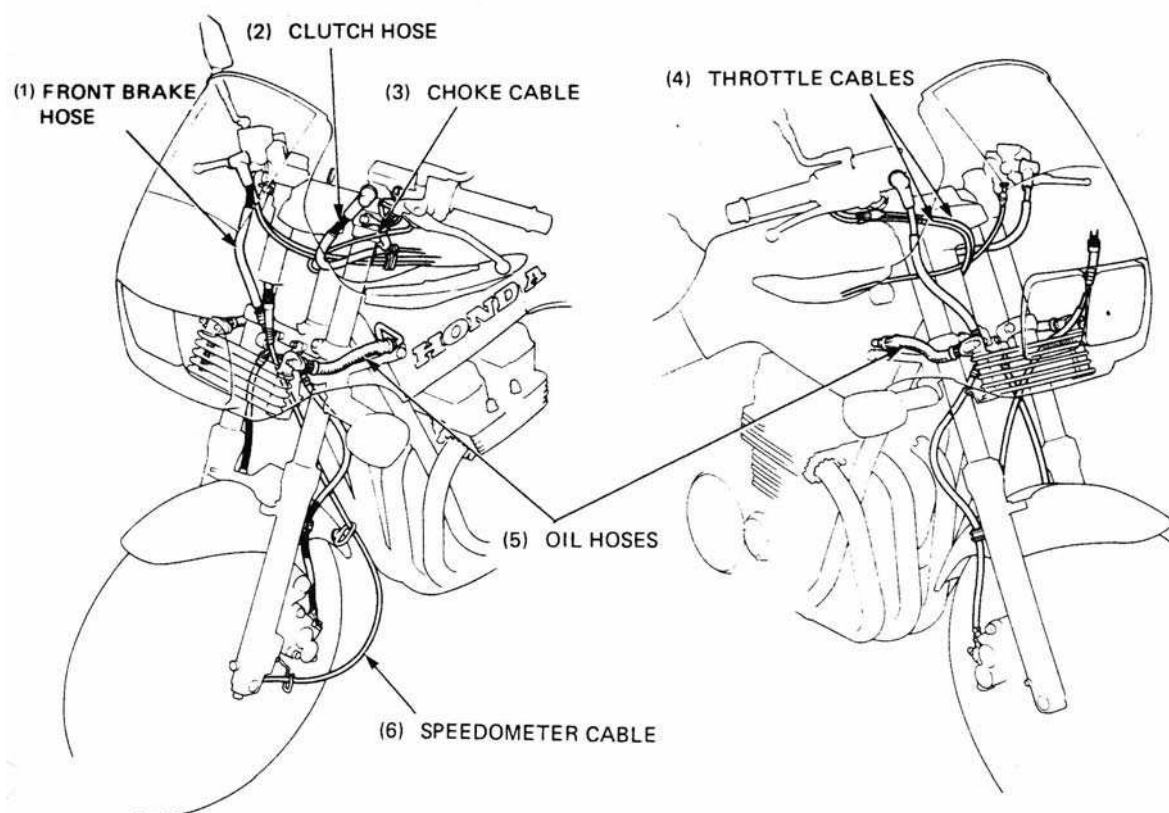

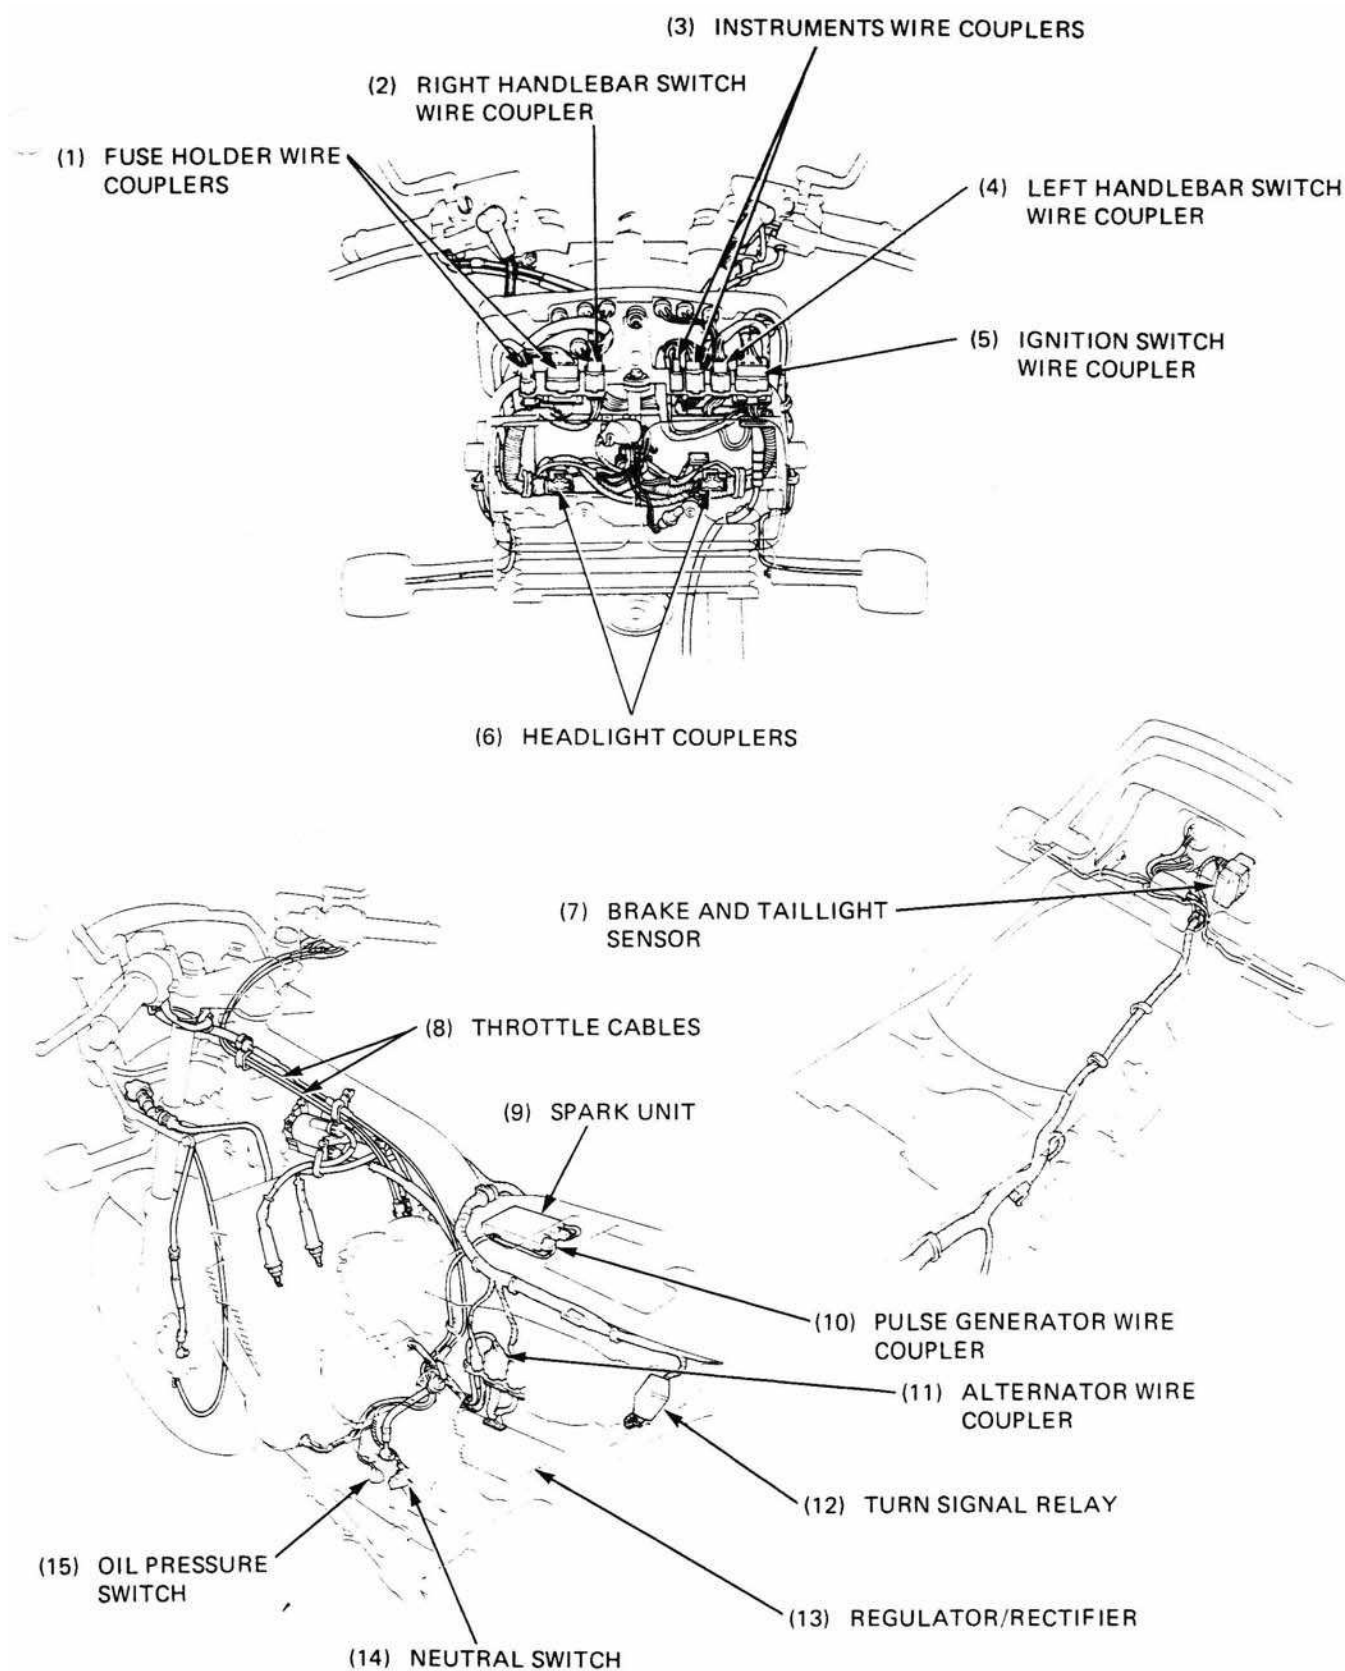



HONDA CBX750F

1. General Information

