



SERVICE INFORMATION	3-1	BATTERY	3-11
MAINTENANCE SCHEDULE	3-3	BRAKE FLUID	3-11
FUEL LINES	3-4	BRAKE PAD WEAR	3-12
FUEL STRAINER	3-4	BRAKE SYSTEM	3-12
THROTTLE OPERATION	3-5	BRAKE LIGHT SWITCH	3-12
CARBURETOR – CHOKE	3-6	HEADLIGHT AIM	3-12
AIR CLEANER	3-6	CLUTCH	3-13
CRANKCASE BREATHER	3-7	SIDE STAND	3-13
SPARK PLUGS	3-7	SUSPENSION	3-13
CARBURETOR SYBCRONIZATION	3-8	NUTS, BOLTS AND FASTENERS	3-15
CARBURETOR IDLE SPEED	3-9	WHEELS	3-15
CYLINDER COMPRESSION	3-9	STEERING HEAD BEARINGS	3-16
DRIVE CHAIN	3-9		

SERVICE INFORMATION

GENERAL

- Engine Oil See page 2-3
- Engine oil filter See page 2-3

SPECIFICATIONS

<Engine>
Spark Plugs

Standard		For Cold climate (below 5°C, 41°F)		For extended high speed driving	
NKG	ND	NKG	ND	NKG	ND
DPR8EA-9 <DP8EA-9>	X24EPR-U9 <X24EP-U9>	DPR7EA-9 <DP7EA-9>	X22EPR-U9 <X22EP-U9>	DPR9EA-9 <DP9EA-9>	X27EPR-U9 <X27EP-U9>

Spark plug gap: 0.8-0.9 mm (0.031-0.035 in)
 Idle speed: 1,000 ± 11 rpm
 Carburettor synchronisation: All carburetors within 60 mm (2.4 in) Hg
 Cylinder compression: 1,200 ± 200 kPa (12.0 ± 2.0 kg/cm², 171 ± 28 psi)
 Throttle grip free play: 2-6 mm (1/8-1/4 in)
 Choke valve stroke: 5-7 mm (3/16-1/4 in)



HONDA CBX750F

3. Maintenance

<CHASSIS>

Drive chain slack: 15-25 mm (5/8-1 in)

Tyres

Tyre Size		Front	Rear
		110/90 V16	130/80 V18
Cold tyre pressure kPa (kg/cm ² , psi)	Driver only	250 (2.50, 36)	250 (2.50, 36)
	Driver and one passenger	250 (2.50, 36)	290 (2.90, 41)
Tyre brand	Bridgestone	G511	G510
	Dunlop	K527A	K527
Minimum tread depth		1.5 mm (1/16 in)	2.0 mm (3/32 in)

Suspension air pressure: Front, 0-40 kPa (0-0.4 kg/cm², 0-6 psi)
Rear, 0-100 kPa (0-4.0 kg/cm², 0-57 psi)

TOOLS

Special

Carburettor pilot screw wrench: 07908-4220201
Compression gauge attachment: 07510-MB00101



MAINTENANCE SCHEDULE

Perform the Pre Ride inspection at each scheduled period.

I : Inspect And Clean, Adjust, Lubricate Or Replace If Necessary

C : CLEAN R : REPLACE

L : LUBRICATE

Frequency Item		Whichever comes first	Odometer Reading (Note 3)							Refer to page
			1,000 km 600 miles	6,400 km 4,000 miles	12,800 km 8,000 miles	19,200 km 12,000 miles	25,600 km 16,000 miles	32,000 km 20,000 miles	38,400 km 24,000 miles	
			Every							
*	Fuel Lines			I	I	I	I	I	I	3-4
*	Fuel Strainer		C	C	C	C	C	C	C	3-4
*	Throttle Operation		I	I	I	I	I	I	I	3-5
*	Carburettor – Choke			I	I	I	I	I	I	3-6
*	Air Cleaner	Note 1			R		R		R	3-6
	Crankcase Breather	Note 2		C	C	C	C	C	C	3-7
	Spark Plugs			I	R	I	R	I	R	3-7
	Engine Oil	Year	R	R	R	R	R	R	R	2-3
	Engine Oil Filter	Year	R	R	R	R	R	R	R	2-3
*	Carburettor Synchronisation		I	I	I	I	I	I	I	3-8
*	Carburettor - Idle Speed		I	I	I	I	I	I	I	13-9
	Drive Chain		I & L Every 1,000 km (600 miles)							3-9
	Battery	Month	I	I	I	I	I	I	I	3-11
	Brake Fluid	Month I 2 Years *R	I	I	I	*R	I	I	*R	3-11
	Brake Pad Wear			I	I	I	I	I	I	3-12
	Brake System		I	I	I	I	I	I	I	3-12
*	Brake Light Switch		I	I	I	I	I	I	I	3-12
*	Headlight Aim		I	I	I	I	I	I	I	3-12
	Clutch Fluid	Month I 2 Years *R	I	I	I	*R	I	I	*R	3-13
	Clutch System		I	I	I	I	I	I	I	3-13
	Side Stand			I	I	I	I	I	I	3-13
*	Suspension		I	I	I	I	I	I	I	3-13
	Nuts, Bolts, Fasteners		I	I	I	I	I	I	I	3-15
**	Wheels		I	I	I	I	I	I	I	3-15
**	Steering Head Bearing		I		I		I		I	3-16

* Should be serviced by an authorised Honda Dealer unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by an authorised Honda Dealer

Notes:

- (1) Service more frequently when riding in dusty areas
- (2) Service more frequently when riding in rain, or at full throttle
- (3) For higher odometer reading, repeat at the frequency interval established here



FUEL LINES

Check the fuel lines and replace any parts which show deterioration, damage or leakage.

FUEL STRAINER

Turn the fuel valve OFF.
Remove the fuel cup, O-ring and strainer screen, draining the gasoline into a suitable container

WARNING





Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.

Wash the cup and strainer screen in clean non flammable or high flash point solvent.

Reinstall the screen, aligning the index marks on the fuel valve body and screen. Install a new O-ring into the fuel valve body. Reinstall the fuel cup, making sure the new O-ring is in place. Hand tighten the fuel cup and torque to specification.

TORQUE: 3-5 Nm (0.3-0.5 kg.m, 2-4 ft.lb)

After installing and refilling the tank, turn the fuel valve ON and check that there are no leaks.

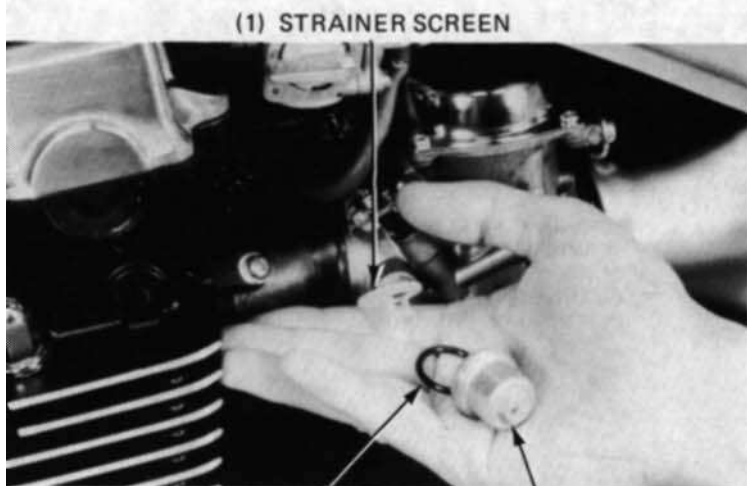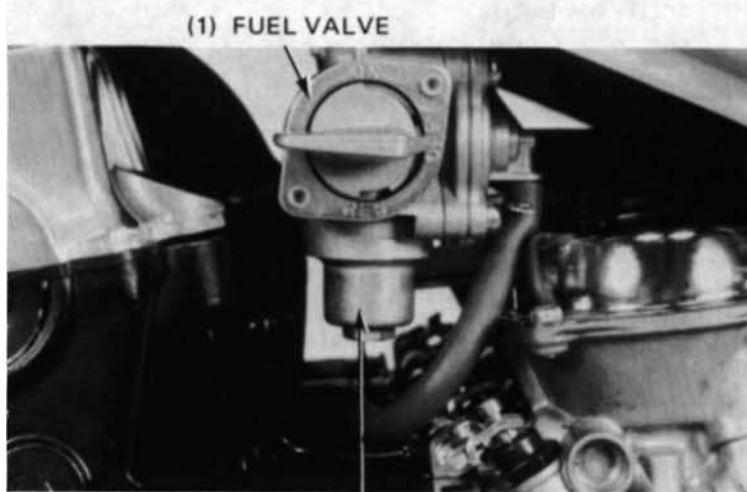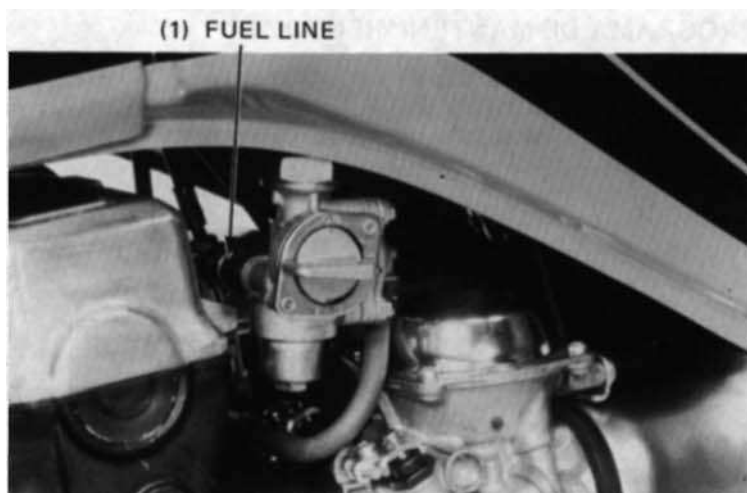



THROTTLE OPERATION

Check that the throttle grip opens smoothly to full throttle and fully closes automatically, in all steering positions. Check the throttle cables and replace them if they are deteriorated, kinked or damaged.

Lubricate the throttle cables (page 2-13), if throttle operation is not smooth.




Measure throttle grip free play at the throttle grip flange.

FREE PLAY: 2- 6 mm (1/8 - 1/4 in)

Adjustment can be made at either end of the throttle cable.

Minor adjustments are made with the upper adjuster and major adjustments are made with the lower adjuster. Adjust by loosening the lock nut and turning the adjuster.

Tighten the lock nut and recheck throttle operation

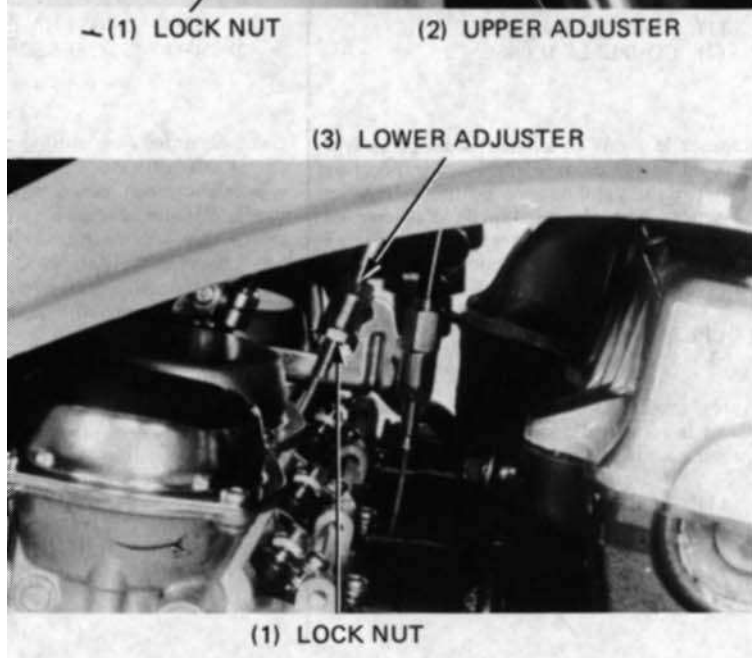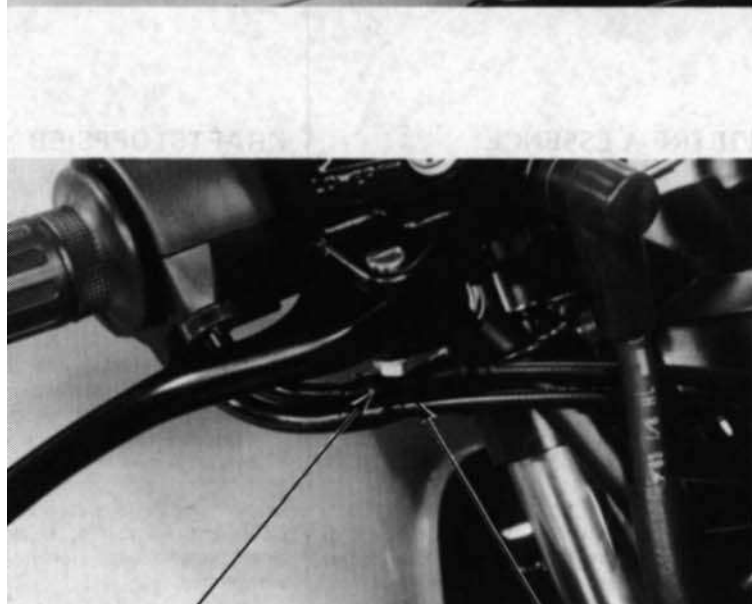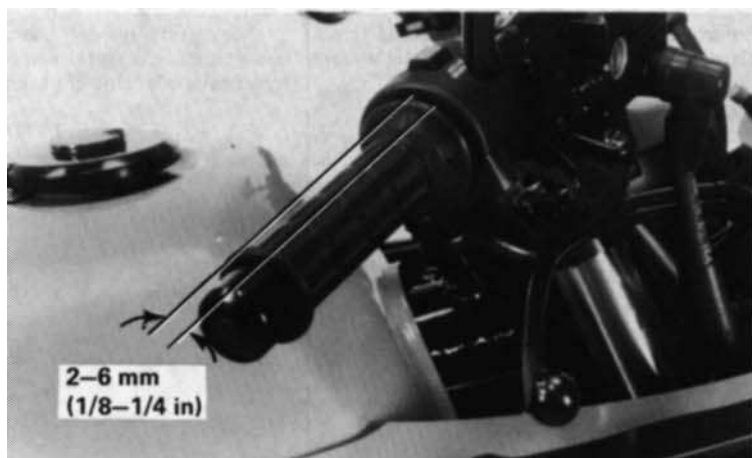



CARBURETOR - CHOKE

The choke system uses a fuel enriching circuit controlled by a bystarter valve. The bystarter valve opens the enriching circuit via cable when the choke lever on the handlebar is pulled back. Check for smooth operation of the choke lever.

Lubricate the choke cable, if the operation is not smooth.

Pull the choke lever on the handlebar all the way back to fully open position and measure the choke valve stroke valve at the No 3 carburettor between the fully closed and fully open positions.

**CHOKE VALVE STROKE: 5 - 7 mm
(3/16-1/4 in)**

Adjust if necessary, by loosening the choke cable clamp on the carburettor and moving the choke cable casing so the choke is fully open. Tighten the clamp.

Push the choke lever all the way to fully closed.




Make sure the choke valve is fully closed by checking for free play in the cable between the lever on the carburettor and cable casing.

Reinstall the removed parts in the reverse order of disassembly.

AIR CLEANER

Remove the left from side cover.

Disconnect the regulator/rectifier couplers and remove the air cleaner case cover by removing the four screws.

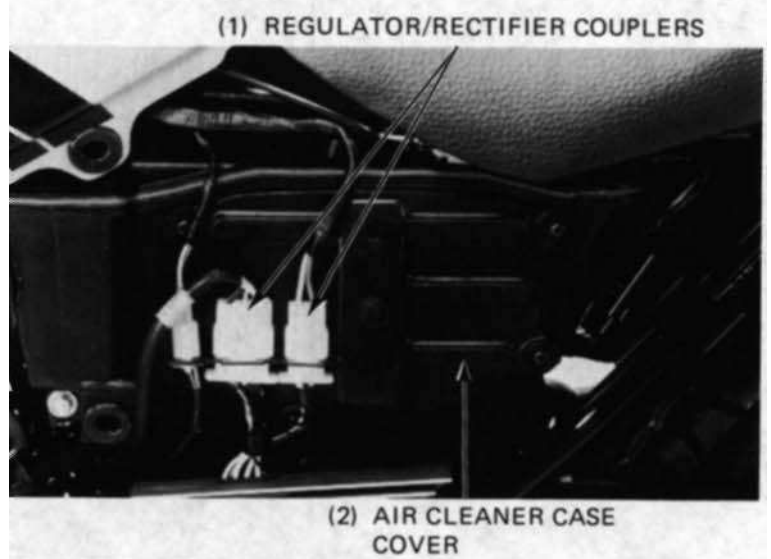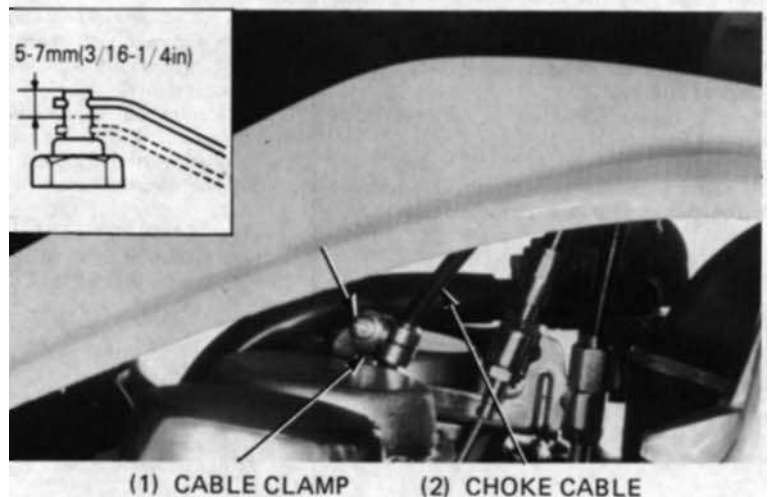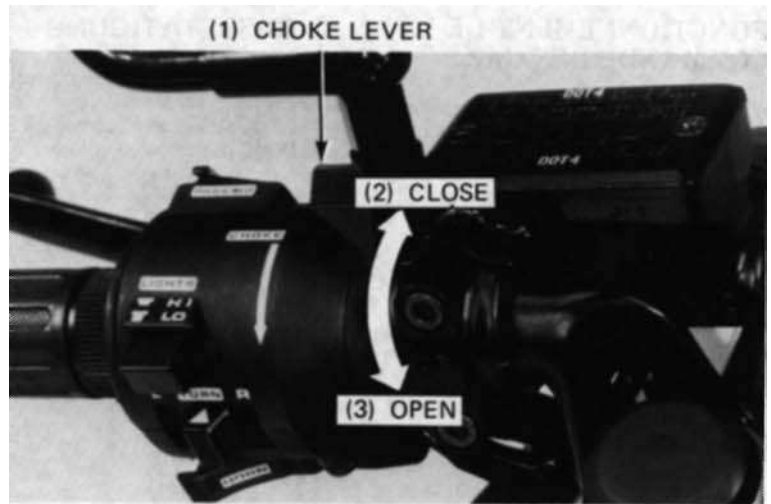



HONDA CBX750F

3. Maintenance

Pull the air cleaner element set spring out and remove the element.

Discard the element in accordance with the maintenance schedule.

Also, replace the element any time it is excessively dirty

Install a new element and secure it with the set spring.

Install the air cleaner cover, connect the regulator/rectifier couplers and install the left frame cover.

CRANKCASE BREATHER

Remove the plug from the drain tube to empty any deposits.

Install the drain plug

NOTE:

Service more frequently when riding in rain or at full throttle, or if the deposit can be seen in the transparent section of the drain tube.

SPARK PLUGS

RECOMMENDED SPARK PLUGS

<> : U

	NKG	ND
Standard	DPR8EA-9 <DP8EA-9>	X24EPR-U9 <X24EP-U9>
For Cold climate (below 5°C)	DPR7EA-9 <DP7EA-9>	X22EPR-U9 <X22EP-U9>
For extended high speed driving	DPR9EA-9 <DP9EA-9>	X27EPR-U9 <X27EP-U9>

Disconnect the spark plug caps.

Clean any dirt from around the spark plug bases.

Remove the spark plug.

Visually inspect the spark plug.

Discard the spark plug if the insulator is cracked or chipped.




Measure the spark plug gap with a wire type feeler gauge.

SPARK PLUG GAP: 0.8-0.9 mm (0.031-0.035 in)

Adjust by bending the side electrode carefully.

With the plug washer attached, thread each spark plug in by hand to prevent cross threading. Continue tightening by hand until the spark plug bottoms.

Then, tighten the spark plug another 1/2 turn with a spark plug wrench to compress the plug washer. Connect the spark plug caps.

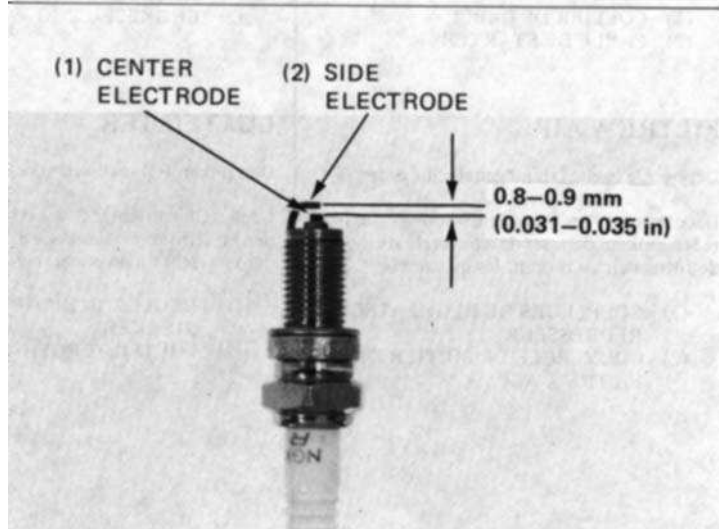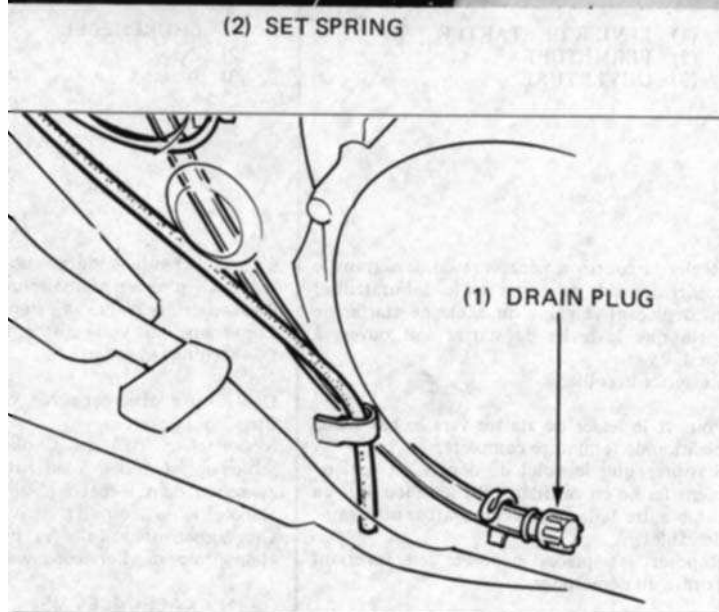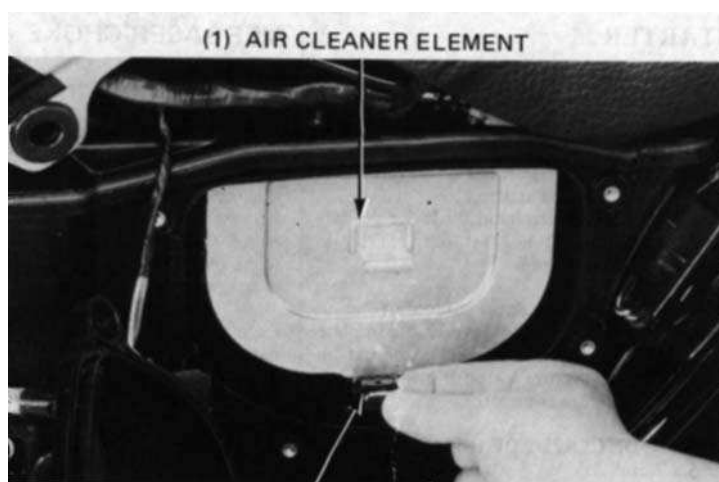



CARBURETTOR SYNCHRONIZATION

NOTE:

Synchronise the carburettors with the engine at normal operating temperatures, transmission in neutral and motorcycle on the centre stand.

Disconnect the fuel valve vacuum hose from the No. 2 intake pipe.

Remove the screw plug and vacuum hose connector from the intake pipes and install vacuum gauge adapters. Connect vacuum gauge.

Apply vacuum to the fuel valve vacuum hose with a hand vacuum pump.

NOTE:

If the hand vacuum pump is not available, start the engine and pinch the vacuum hose with a tube clamp before disconnecting the fuel valve vacuum hose.

Start the engine and warm it up. Adjust the idle speed with the throttle stop screw.

IDLE SPEED: 1,000 +/- 100 min⁻¹ (rpm)

Check that the difference in vacuum readings is within 60mmHg (2.4 in.Hg)







NOTE:

The No.2 carburettor cannot be adjusted; it is base carburettor.

Synchronise to specification by turning the adjusting screws with carburettor pilot screw wrench (07908-4220201)

Recheck the idle speed and synchronisation.

Remove the gauge and adapters, install the plugs and vacuum tube connector. Connect the fuel valve vacuum hose to the No.2 intake pipe.

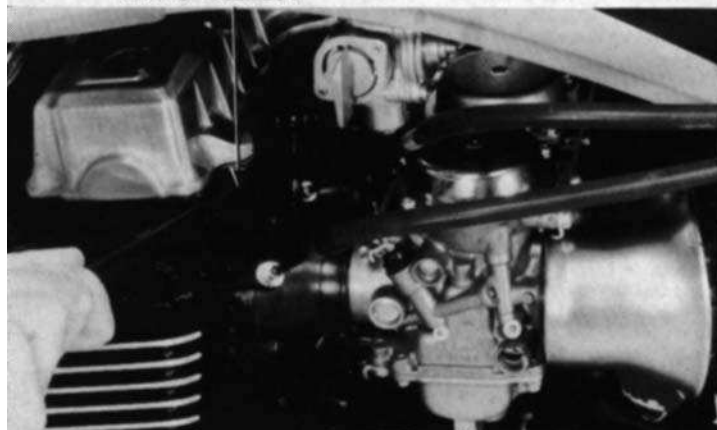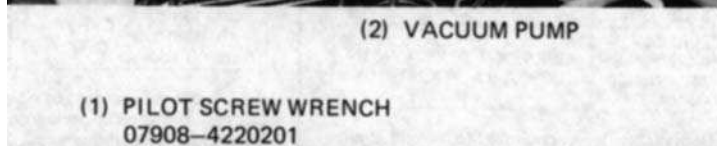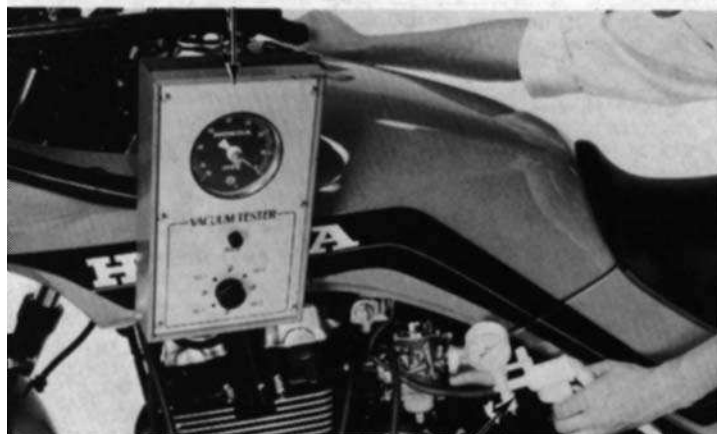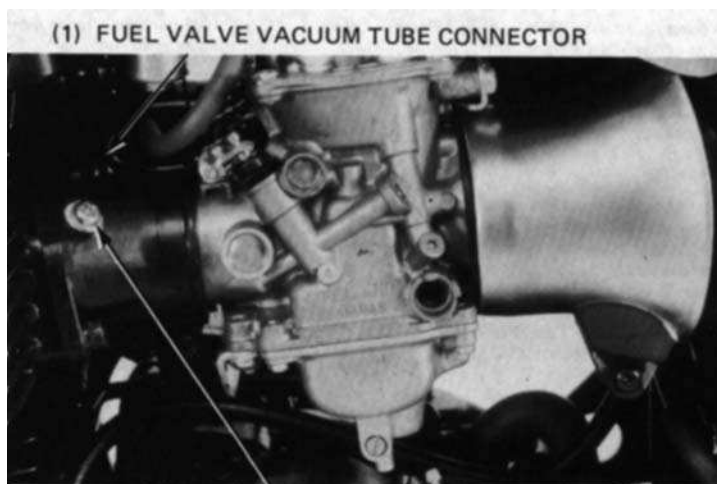



CARBURETTOR IDLE SPEED

NOTE:

Inspect and adjust idle speed after all other engine adjustments are within specification. The engine must be warm for accurate adjustment. Ten minutes of stop and go riding is sufficient.

Warm up the engine, shift to neutral, and place the motorcycle on its centre stand.

Turn the throttle stop screw as required to obtain the specified idle speed.

IDLE SPEED: 1,000 +/- 100 min⁻¹ (rpm)

CYLINDER COMPRESSION.

Warm up the engine.

Stop the engine, then disconnect the spark plug caps and remove the spark plugs.

Insert the compression gauge.

Open the throttle all the way and crank the engine with the starter motor.

NOTE:

Crank the engine until the gauge reading stops rising. The maximum reading is usually reached within 4-7 seconds.

COMPRESSION PRESSURE:

1,200 ± 200 kPa (12.0 ± 2.0 kg/cm², 171 ± 28 psi)

If compression is low, check for the following:

- Improper valve clearance
- Leaky valves
- Leaking cylinder head gasket
- Worn piston/ring/cylinder
- Faulty hydraulic tappet

If compression is high, it indicates that carbon deposits have accumulated on the combustion chamber and or the piston crown.


DRIVE CHAIN

Turn the engine off, place the motorcycle on its centre stand and shift the transmission into neutral. Check slack in the drive chain lower midway between the sprockets.


SLACK: 15-25 mm (5/8-1in)

CAUTION


Excessive chain slack, 50 mm (2 in) or more, may damage the frame.

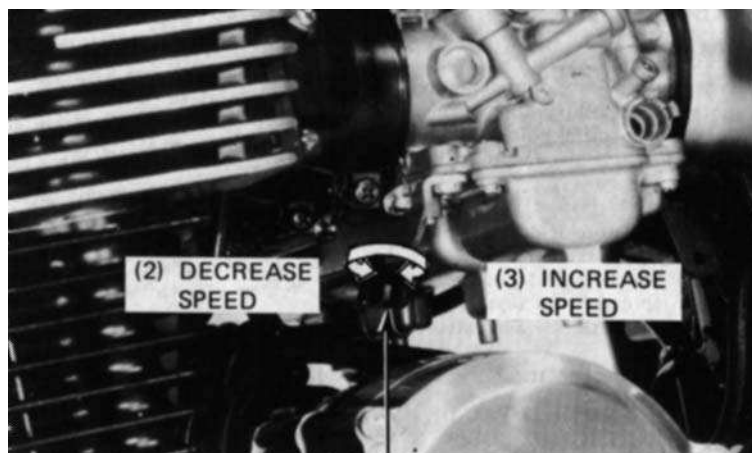

(1) THROTTLE STOP SCREW

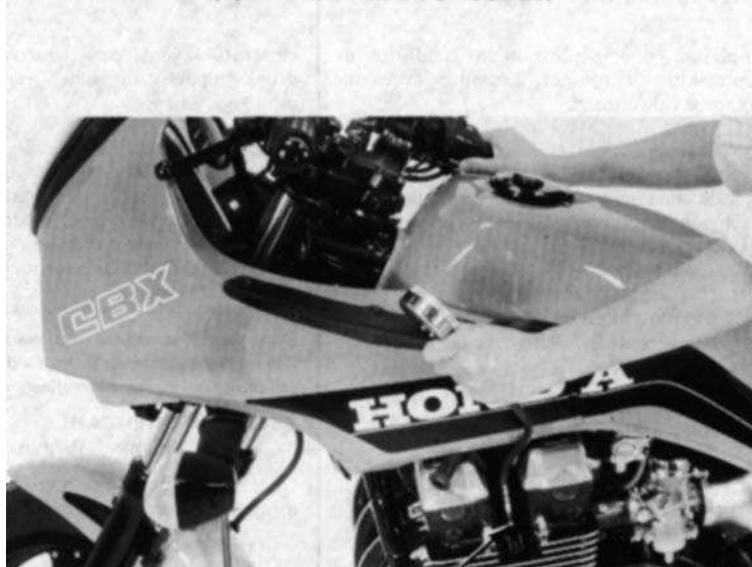

(1) COMPRESSION GAUGE ATTACHMENT
07510-MB00101

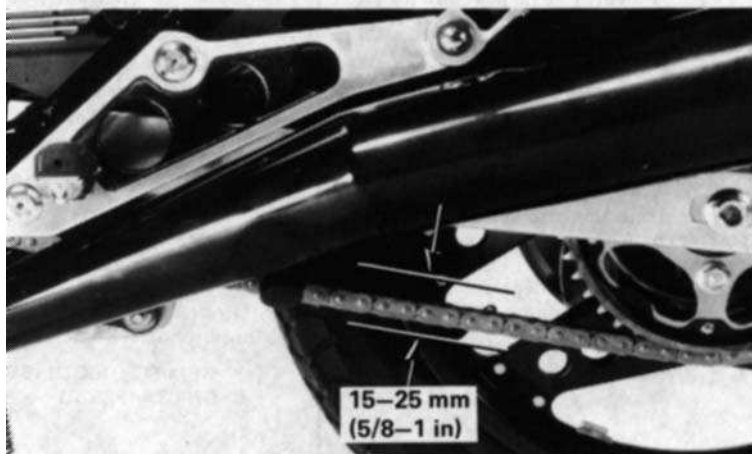



HONDA CBX750F

3. Maintenance

Adjust as follows:

- Loosen the axle nut.
- Loosen the drive chain adjuster lock nuts.
- Turn both adjusting nuts an equal number of turns until the correct drive chain slack is obtained.

CAUTION

Make sure that the same graduation scale on both adjusters align with the rear ends of the axle hole in the swing arm.

Tighten the adjuster lock nuts.

Tighten the rear axle nut.

TORQUE:

85-105 N.m (8.5-10.5 kg.m, 61-76 ft-lb)

Recheck chain slack and free wheel rotation.
Lubricate the drive chain with SAE 80 or 90 gear oil.

Check the chain wear label. If the red zone on the label aligns with, or is beyond, the arrow on the adjuster, the chain must be replaced.

Inspect the drive chain and sprockets for damage or wear. A drive chain with damaged rollers, loose pins, or missing O rings must be replaced. Replace any sprocket which is damaged or excessively worn.

NOTE:




Never install a new drive chain on worn sprockets or a worn chain on new sprockets. Both chain and sprockets must be in good condition or the replacement chain or sprockets will wear rapidly.

Lubrication and cleaning:

The drive chain on this motorcycle is equipped with small O-rings between the link plates. The O-rings can be damaged by steam cleaner, high pressure washers, and certain solvents.

Clean the chain with kerosene. Wipe dry and lubricate only with SAE 80 or 90 gear oil.

Commercial chain lubricants may contain solvents which could damage the rubber O-rings.

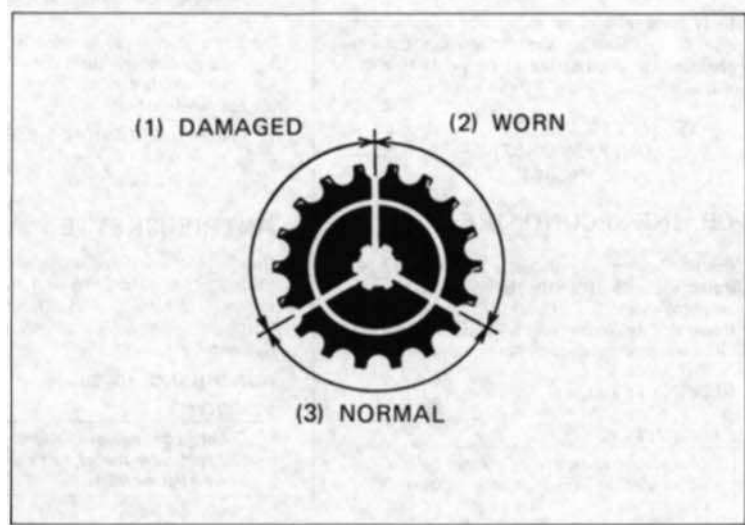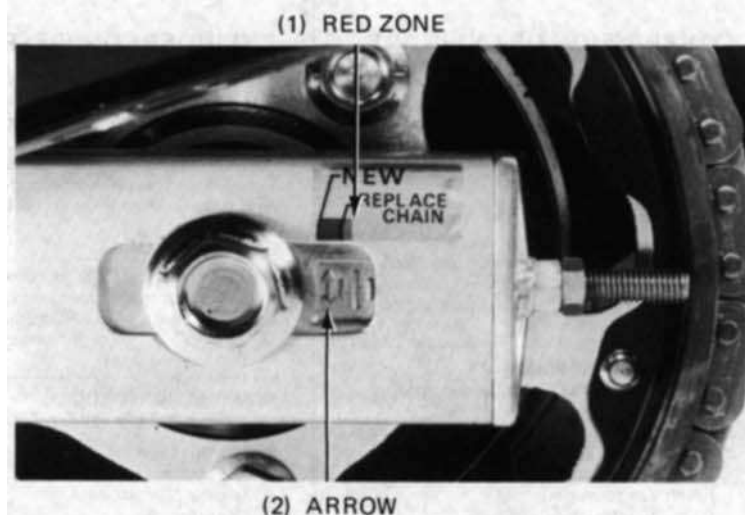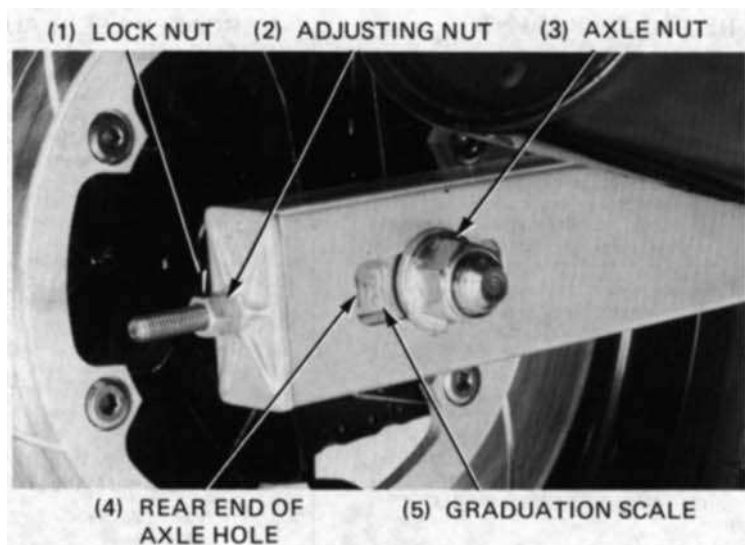



BATTERY

Remove the right hand side cover and inspect the battery fluid level. When the battery level nears the lower level, remove the battery and add distilled water to the upper level line as follows:

Remove the three battery holder bolts and the battery holder.

Disconnect the negative cable at the battery, then disconnect the positive cable. Disconnect the battery breather hose from the battery.

Pull the battery out, remove the filler caps and add distilled water to the upper level line.

Reinstall the filler caps and battery.

NOTE:

Add only distilled water. Tap water will shorten the service life of the battery.

WARNING

The battery electrolyte contains sulphuric acid. Protect your eyes, skin and clothing. If electrolyte gets in your eyes, flush them thoroughly with water and get prompt medical attention.


BRAKE FLUID

Check the front brake fluid reservoir level. If the level nears the lower level mark, fill the reservoir with DOT 4 BRAKE FLUID to the upper level mark. Check the entire system for leaks, if the level is low.

CAUTION.

- **Do not remove the cover until the handle bar has been turned so that the reservoir is level. Do not mix different types of fluids, as they are not compatible.**
- **Do not allow foreign material to enter the system when filling the reservoir.**
- **Avoid spilling brake fluid on painted surfaces or instrument lenses, as severe damage can result.**

Refer to section 15 for brake bleeding procedures.

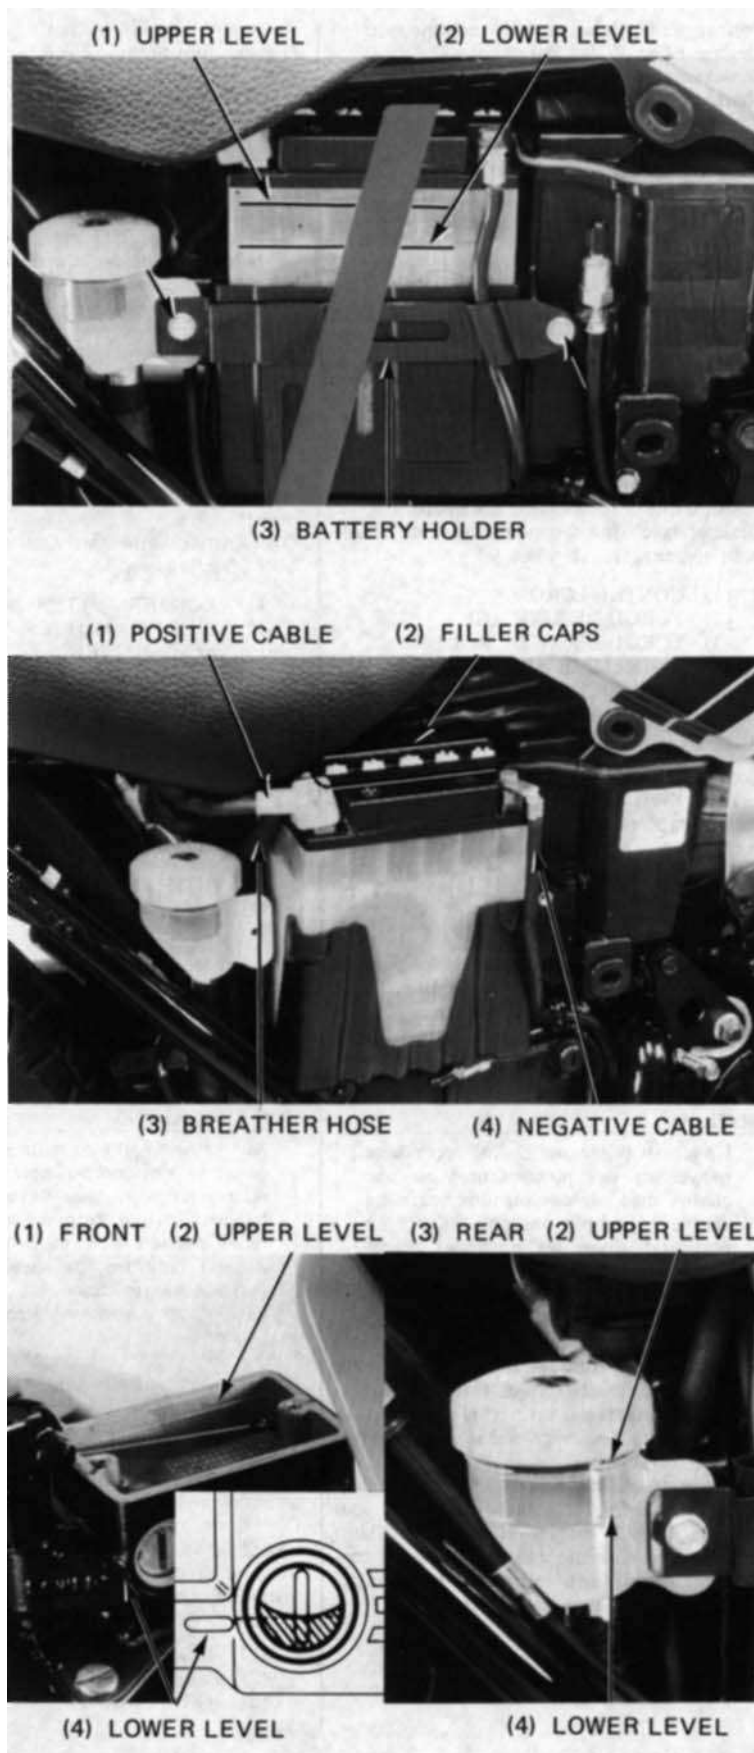



3. Maintenance

BRAKE PAD WEAR

Check the brake pads for wear.
Replace the brake pads if the wear line on the pads reaches the edge of the brake disc.
(page 15-5)

CAUTION

Always replace the brake pads in pairs to assure even disc pressure.



BRAKE SYSTEM

Inspect the brake hoses and fittings for deterioration, cracks and signs of leakage.
Tighten any loose fittings.
Replace hoses and fittings as required.

BRAKE LIGHT SWITCH

Adjust the brake light switch so that the brake light will come on when brake engagement begins. Adjust by holding the switch body and turning the adjusting nut.
Do not turn the switch body.

Turn the adjusting nut clockwise if the brake light comes on too late.

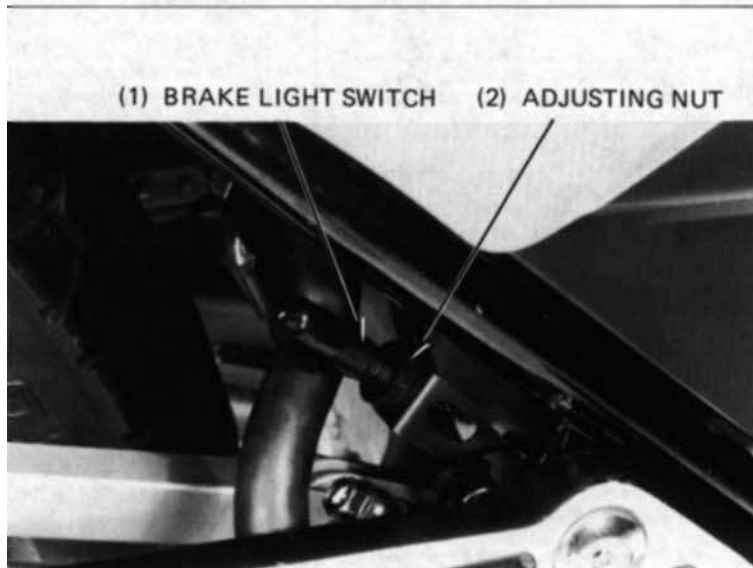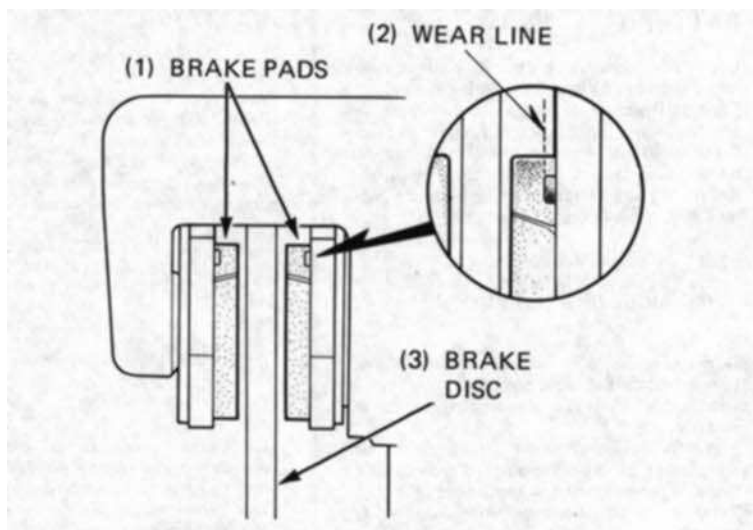

HEADLIGHT AIM

NOTE:

- Adjust the headlight beam as specified by local laws and regulations.
- Adjust the right and left headlights individually.

Adjust vertically by turning the vertical adjusting screw.
Adjust horizontally by turning the horizontal adjusting screw.

WARNING

An improperly adjusted headlight may blind oncoming drivers, or it may fail to light the road for a safe distance.





HONDA CBX750F


3. Maintenance

CLUTCH

Check the clutch fluid reservoir level.
If the level nears the lower level mark, fill the reservoir with **DOT 4 FLUID** until the level is between the upper and lower level mark.
Check the entire system for leaks, if the level is low.

CAUTION

- **Do not remove the cover until the handle bar has been turned so that the reservoir is level.**
- **Do not mix different types of fluid, as they are not compatible.**
- **Do not allow foreign material to enter the system when filling the reservoir.**
- **Avoid spilling brake fluid on painted surfaces or instrument lenses, as severe damage can result.**

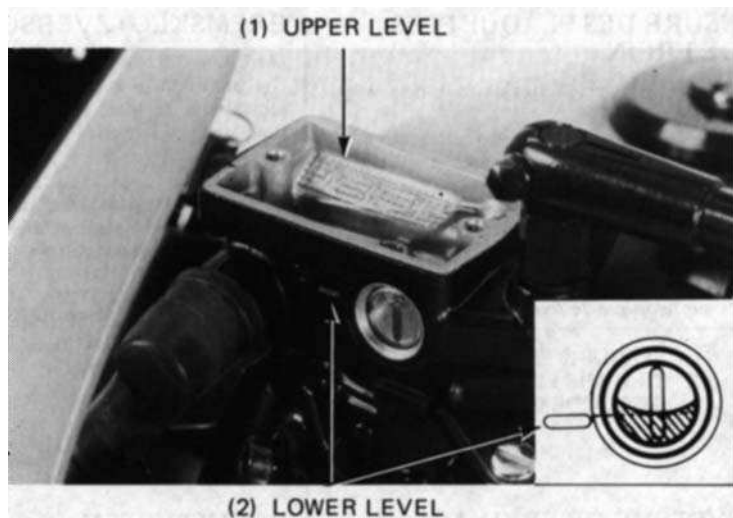


SIDE STAND

Check the rubber pad for deterioration or wear. Replace if any wear extends to wear line as shown.
Check the side stand spring for damage and loss of tension, and the side stand assembly for freedom of movement. Make sure the side stand is not bent.

NOTE:

- **When replacing, use a rubber pad with the mark "Over 260 kg ONLY".**
- **Spring tension is correct if the measurement falls within 2-3 kg (4.4-6.6 lb) when pulling the side stand lower end with a spring scale.**

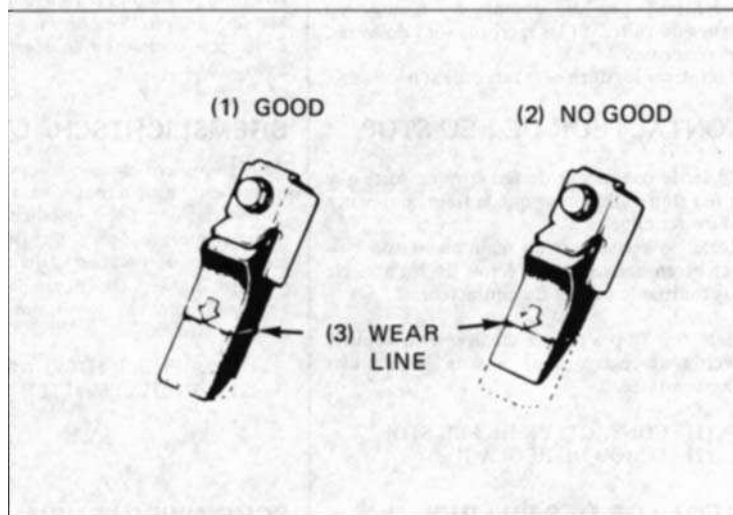

SUSPENSION

WARNING

Do not ride a vehicle with faulty suspension. Loose, worn or damaged suspension parts impair vehicle stability and control.

FRONT

Check the action of the front forks by compressing them several times.
Check the entire fork assembly for leaks or damage.
Replace damaged components which cannot be repaired.
Tighten all nuts and bolts.





3. Maintenance

Check the front fork air pressure when the forks are cold.
Place the vehicle on its centre stand.
Remove the air valve cap and measure the air pressure.

AIR PRESSURE:

0-40 kPa (0 - 0.4 kg/cm², 0 - 6 psi)

ANTI DIVE SYSTEM INSPECTION

WARNING

Select a safe place away from traffic to perform this inspection.



Check the operation of the anti dive system by riding the motorcycle and firmly applying the brakes.

Position	Anti dive damper force
1	LIGHT ANTI DIVE
2	MEDIUM
3	HARD
4	MAXIMUM ANTI DIVE

Inspect and if necessary, repair the system
(Refer to section 13)

REAR

Place the motorcycle on its centre stand.
Move the wheel sideways with force to see if the swing arm bearings are worn.
Replace the bearings if there is any looseness (page 14-18)
Check the shock absorber for leaks or damage.
Tighten all rear suspension nuts and bolts.

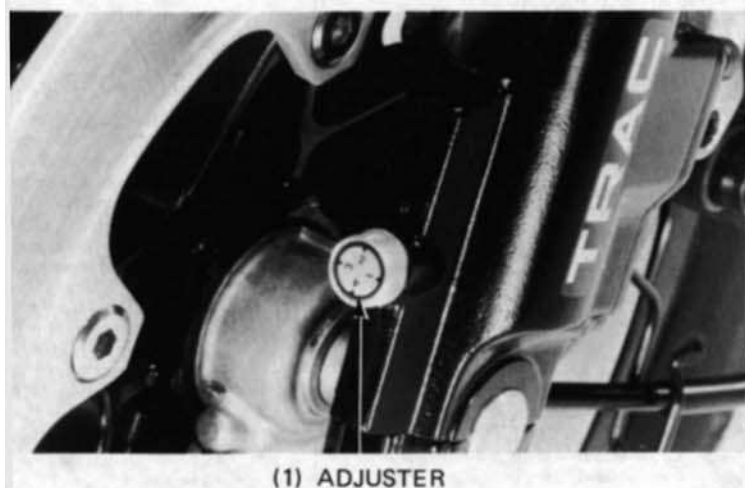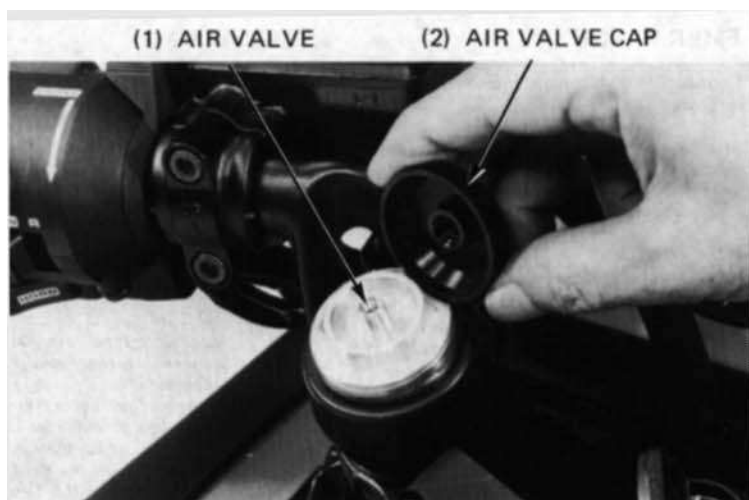



HONDA CBX750F

3. Maintenance

Remove the frame left cover.
Remove the valve cap and measure the shock absorber air pressure.

REAR SHOCK ABSORBER AIR PRESSURE:
0-400 kPa (0-4.0 kg/cm², 0-57 psi)

NOTE:

Check the air pressure when the shock absorber is cold.

NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to their correct torque values (Section 1) at the intervals shown in the Maintenance Schedule (page 3-3).
Check all cotter pins, safety clips, hose clamps and cable stays.

WHEELS

NOTE:

Tyre pressure should be checked when tires are COLD.


Check the tyres for cuts, imbedded nails, or other sharp objects.

RECOMMENDED TYRES AND PRESSURES

		Front	Rear
Tyre size		110/90V16	130/80V18
Cold tyre pressure kPa (kg/cm ² , psi)	Driver only	250 (2.5, 36)	250 (2.5, 36)
	Driver and one passenger	250 (2.5,36)	290 (2.9, 41)
Tyre Brand	Bridgstone	G511	G510
	Dunlop	K527A	K527

Check the front and rear wheels for trueness (Section 13 and 14)
Measure the tread depth at the centre of the tyres following limits

Minimum tread depth:
Front: 1.5 mm (1/16 in)
Rear: 2.0 mm (3/32 in)

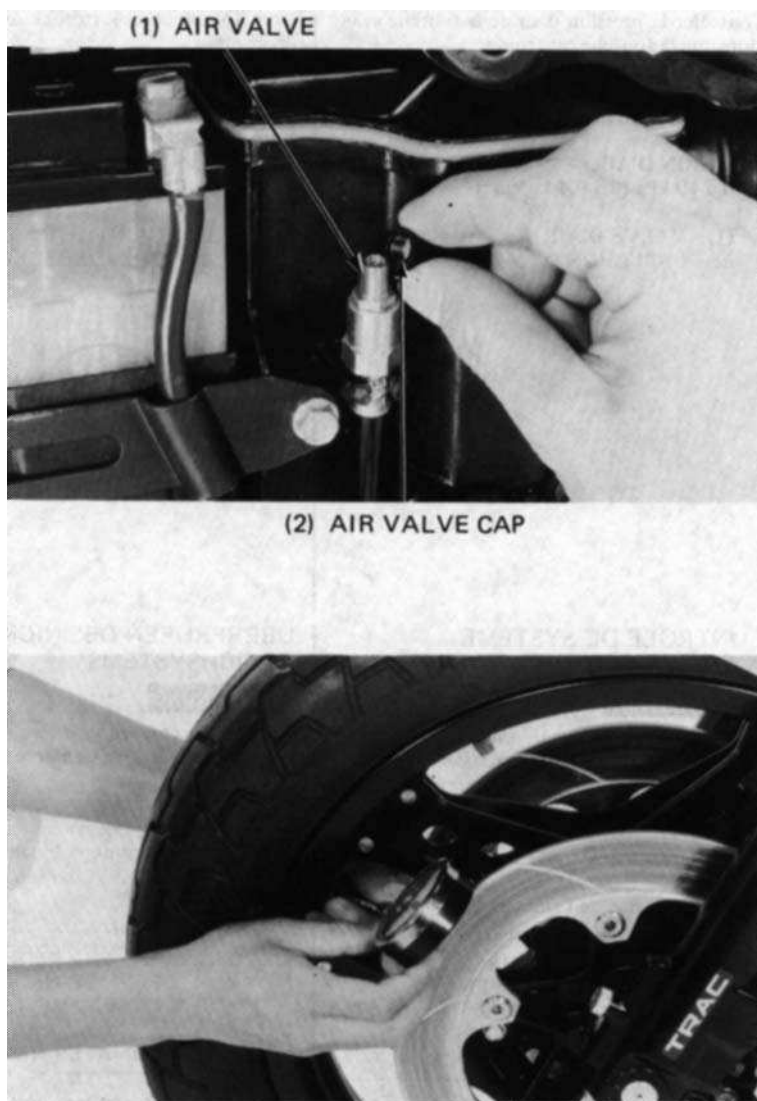



HONDA CBX750F

3. Maintenance

STEERING HEAD BEARINGS

NOTE:

Check that the control cables do not interfere with handle bar rotation.

Raise the front wheel off the ground and check that the handle bar rotates freely.

CAUTION

*When jacking up the engine, place a jack under the No. 2 and 3 exhaust pipes.
Never support the oil hoses and oil filter.*

If the handle bar moves unevenly, binds, or has vertical movement, adjust the steering head bearing by turning the steering head adjusting nut (page 13-36)

