




HONDA CBX750F

5. Engine Removal & Installation

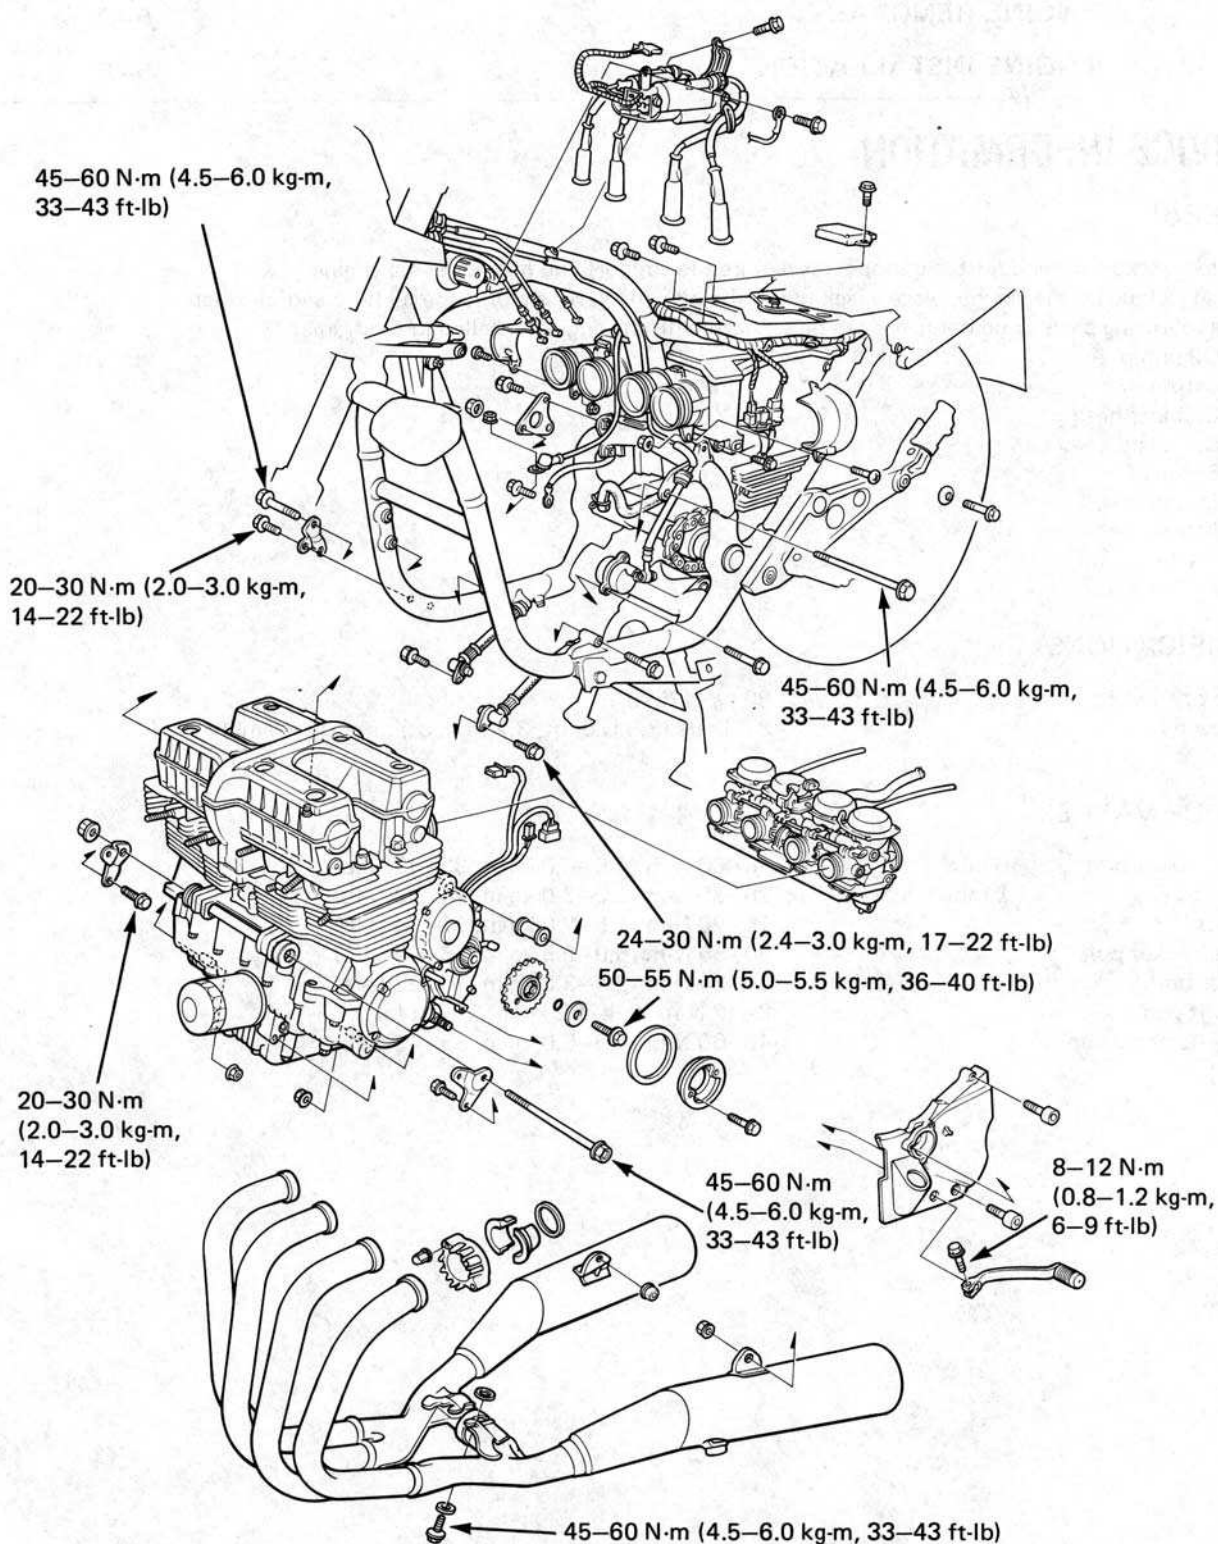



SERVICE INFORMATION	5-1
ENGINE REMOVAL	5-2
ENGINE INSTALLATION	5-5

SERVICE INFORMATION

GENERAL

- A floor jack or other adjustable support is required to support and manoeuvre the engine.
- When jacking up the engine, place a jack under the oil pan. Never support the oil hose and oil filter.
- The following parts or components can be serviced with the engine installed in the frame.
 - Oil pump
 - Carburettor
 - Cylinder head
 - Cylinder
 - Piston
 - Clutch
 - Alternator
 - Starter motor

SPECIFICATIONS

Engine dry weight	80 kg (176 lbs)
Oil capacity	3.6 litres (3.8 US qt, 3.2 Imp qt) after disassembly

TORQUE VALUES

Engine mount bolt	10 mm	45-60 Nm (4.5-6.0 kg.m, 33-43 ft-lb)
	8 mm	20-30 Nm (2.0-3.0 kg.m, 14-22 ft-lb)
Oil filter		15-20 Nm (1.5-2.0 kg.m, 11-14 ft-lb)
Drive sprocket bolt		50-55 Nm (5.0-5.5 kg.m, 36-40 ft-lb)
Oil hose bolt		24-30 Nm (2.4-3.0 kg.m, 17-22 ft-lb)
Gear shift pedal		8-12 Nm (0.8-1.2 kg.m, 6-9 ft-lb)
Muffler to engine bolts		45-60 Nm (4.5-6.0 kg.m, 33-43 ft-lb)



ENGINE REMOVAL

Place the motorbike on its centre stand.
Drain the engine oil (page 2-3).
Remove the following parts:
-fairing (page 13-3)
-fuel tank (4-15)
-exhaust system


Disconnect the alternator wire coupler
and neutral/oil pressure switch wire
coupler.

Remove the clutch slave cylinder


NOTE:

- It is not necessary to disconnect the clutch oil line.
- To prevent the clutch system from air contamination, and the slave cylinder piston from falling, squeeze the clutch lever immediately after removing the slave cylinder, and tie the lever to the handle grip with a string.

Remove the gear shift pedal

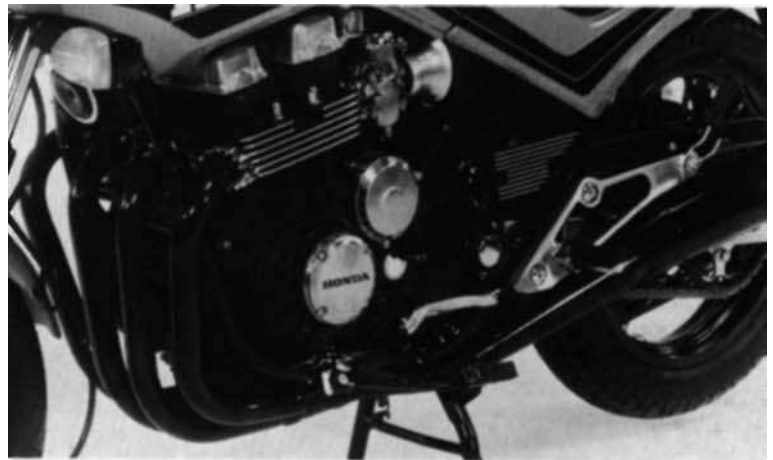


(1) NEUTRAL/OIL PRESSURE
SWITCH WIRE COUPLER

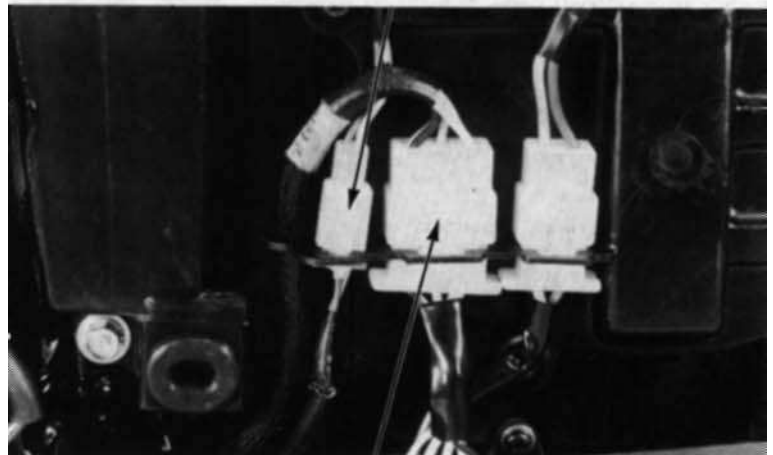

(2) ALTERNATOR WIRE COUPLER



(1) CLUTCH SLAVE CYLINDER

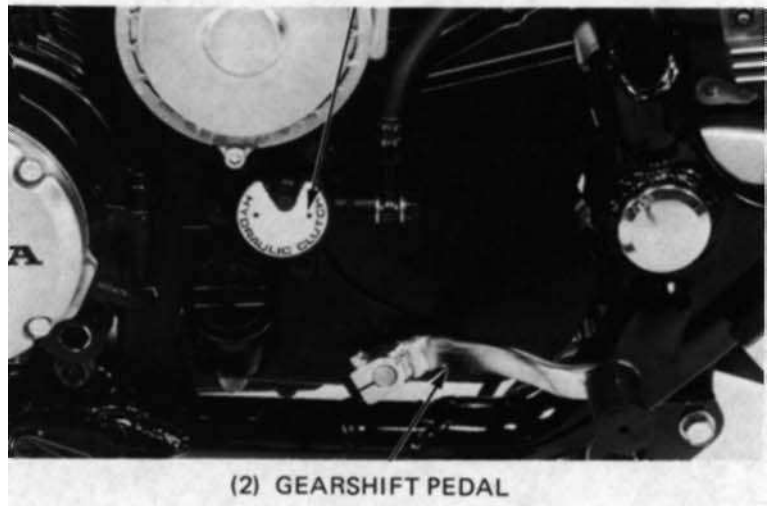


(2) GEARSHIFT PEDAL




5. Engine Removal & Installation

Remove the drive sprocket cover.

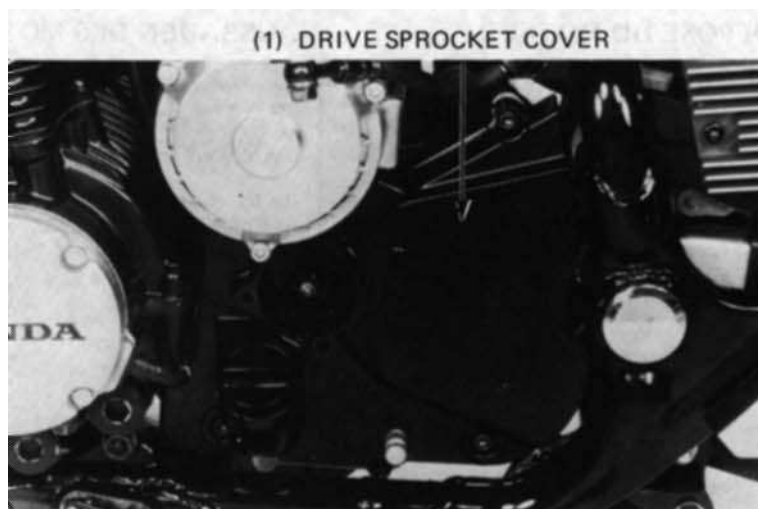

Loosen the axle nut, drive chain adjuster lock nut and adjusting nut. Remove the drive sprocket bolt, O-ring and washer. Remove the drive sprocket with the drive chain.

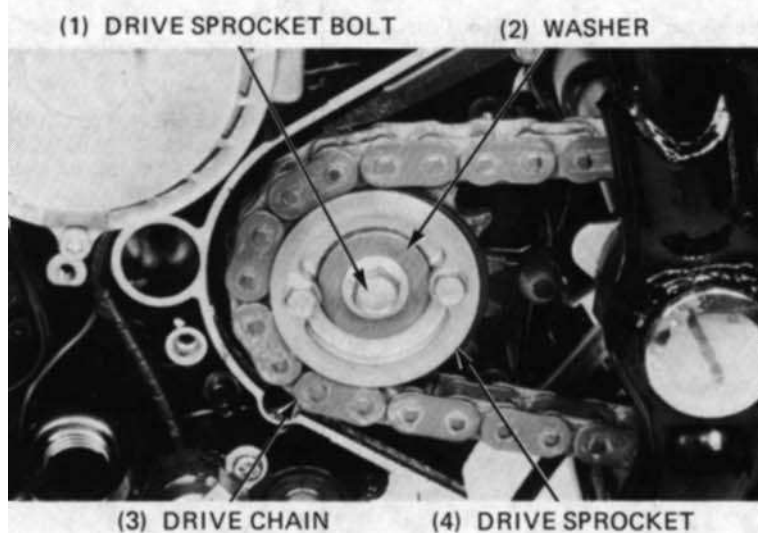

Remove the carburetors (page 4-3).






HONDA CBX750F


5. Engine Removal & Installation

Disconnect the starter motor cable and engine ground cable.

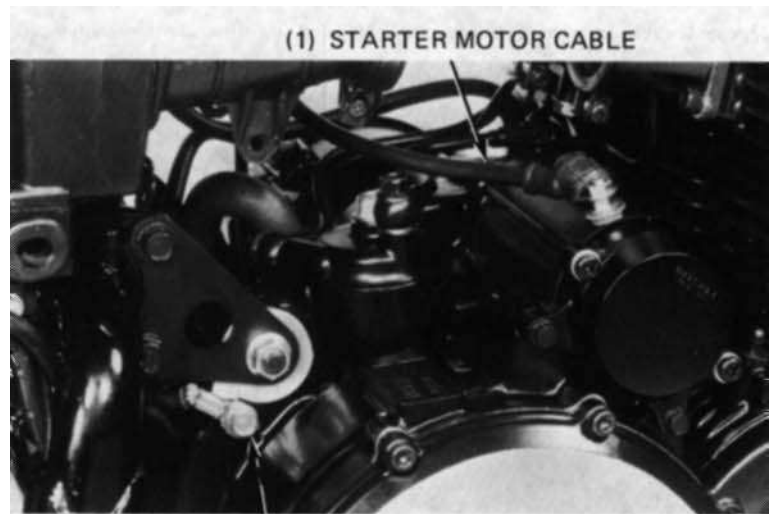

(2) ENGINE GROUND CABLE

Remove the ignition coils with the spark plug wires.

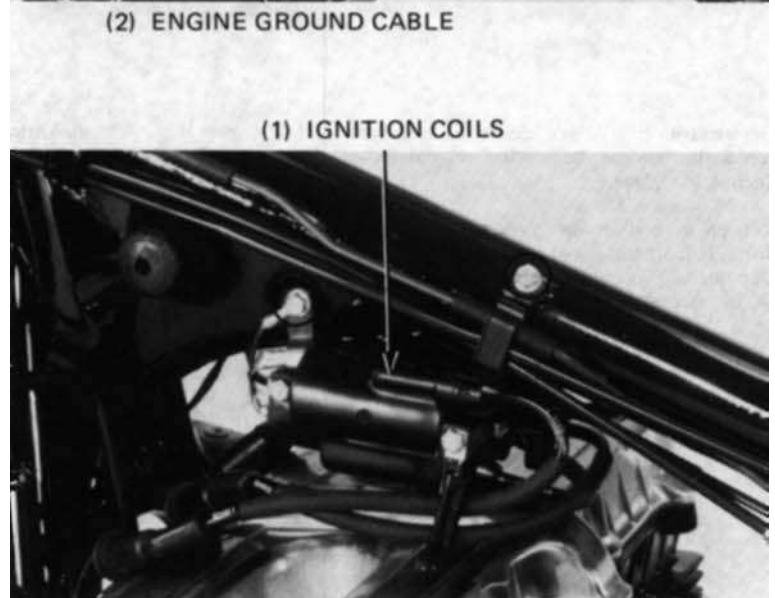

Disconnect the pulse generator wire connector from the spark unit.






HONDA CBX750F


5. Engine Removal & Installation

Remove the left and right oil hoses connecting the engine to the frame.

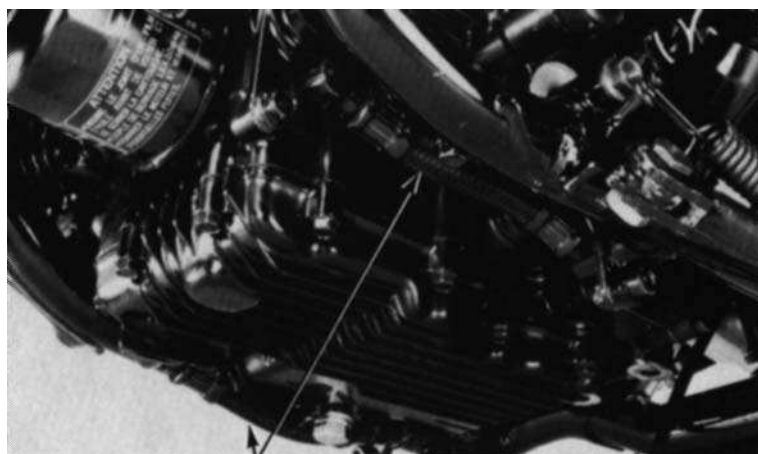

(1) OIL HOSES

Remove the oil filter.
Disconnect the crank case breather hose.
Place the floor jack or other adjustable support under the engine

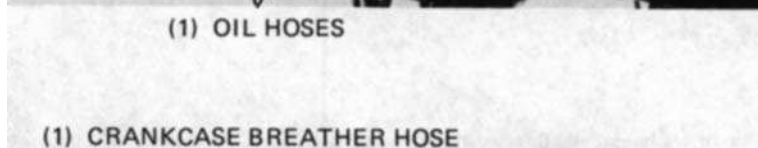


(1) CRANKCASE BREATHER HOSE

NOTE:
The jack height must be continuously adjusted to relieve stress from bolts that are being removed



(2) OIL FILTER


Remove the engine mount bolts and brackets.
Remove the engine from the right side.

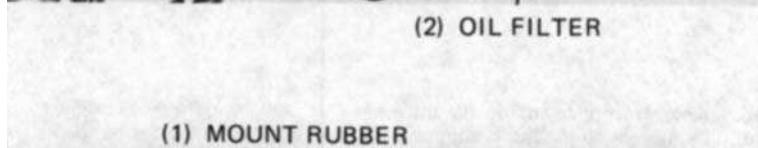

(1) MOUNT RUBBER

ENGINE INSTALLATION

Check the engine mount rubbers for damage and replace if necessary.

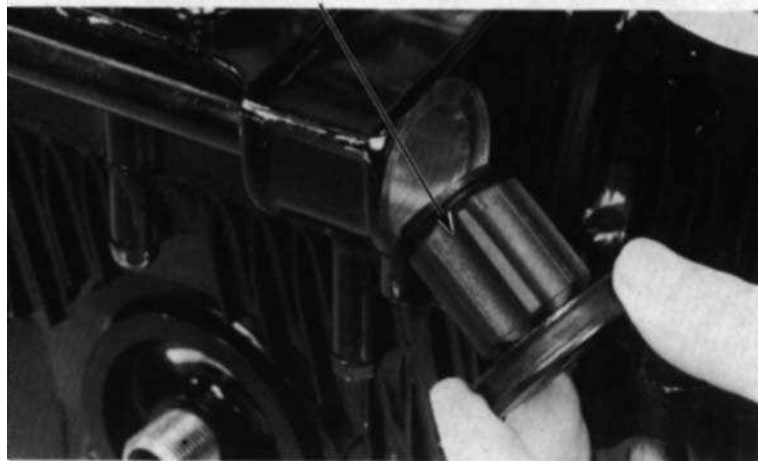



HONDA CBX750F


5. Engine Removal & Installation

Engine installation is essentially the reverse of removal.

Use a floor jack or other adjustable support to carefully manoeuvre the engine into place.

CAUTION

- *When installing the clutch slave cylinder, temporarily install it to the drive sprocket cover, release the clutch lever from the handle grip by removing the string, and then tighten the slave cylinder bolts.*
- *Do not forget to install the engine mount collar.*
- *Carefully align mounting points with the jack to prevent damage to mounting bolt threads, wire harnesses and cables.*
- *When installing the gear shift pedal, align the punch marks on the gearshift shaft and pedal.*

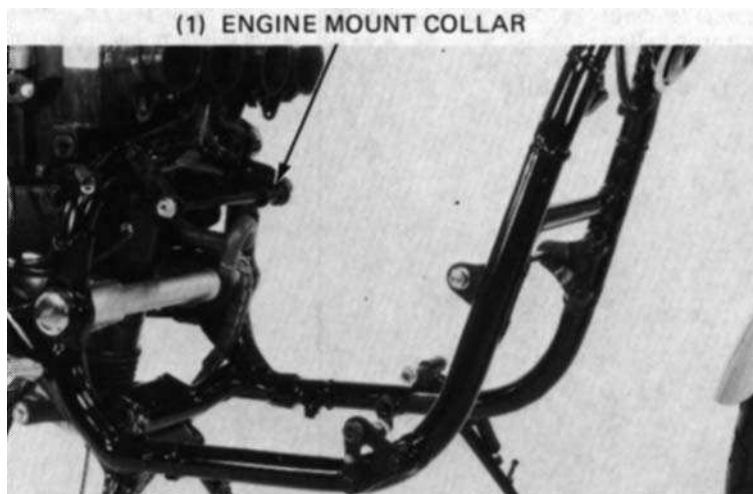

Tighten all fasteners to the torque values given on page 5-1.

NOTE:

- Route the wires and cables properly (pages 1-8 through 1-11).
- Fill the crankcase to the proper level with the recommended oil (page 2-1).
- Perform the following inspection and adjustments:
 - Throttle operation (page 3-5).
 - Clutch (page 3-13)
 - Drive chain (page 3-9).