


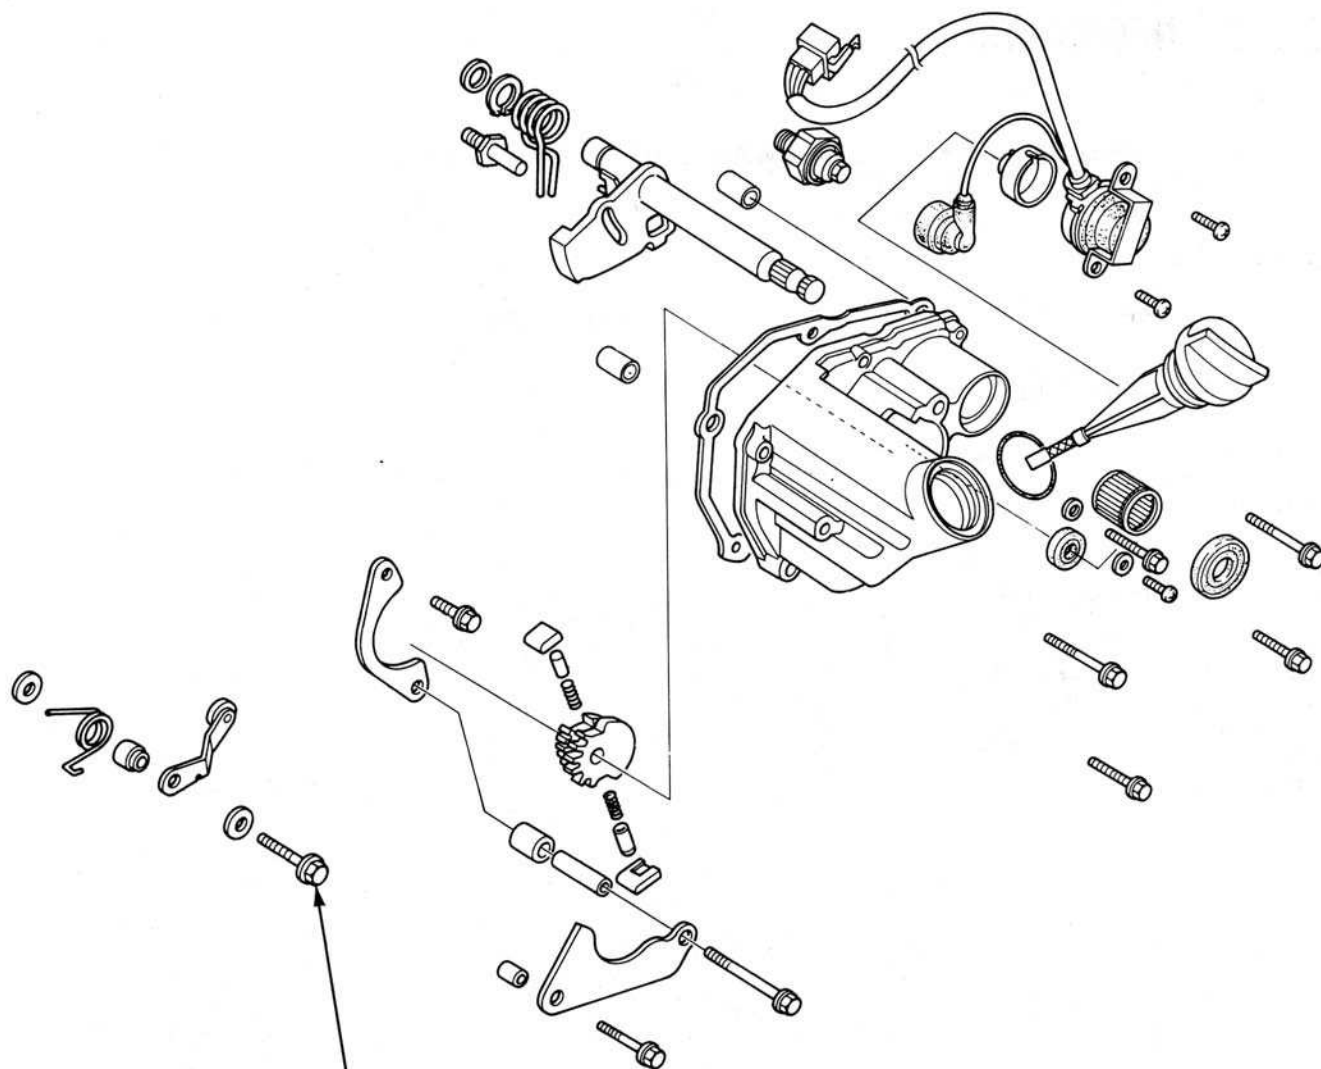

10–14 N·m (1.0–1.4 kg-m, 7–10 ft-lb)



SERVICE INFORMATION	9-1
TROUBLE SHOOTING	9-1
GEAR SHIFT LINKAGE REMOVAL	9-2
GEAR SHIFT LINKAGE INSTALLATION	9-4

SERVICE INFORMATION

GENERAL

- If the shift forks, drum and transmission require servicing, remove the engine and separate the crankcase.
- For neutral switch inspection, see page 19-3

TORQUE VALUE

Stopper arm pivot bolt 10-14 Nm (1.0-1.4 kg.m, 7-10 ft.lb)

TROUBLE SHOOTING

Hard to shift

1. Improper clutch operation
2. Shift forks bent
3. Shift shaft bent
4. Shift claw bent
5. Shift drum cam grooves damaged

Transmission jumps out of gear

1. Gear dogs worn
2. Shift shaft bent
3. Shift drum stopper broken
4. Shift forks bent




9. Gear Shift Linkage

GEAR SHIFT LINKAGE REMOVAL

Slip the rubber cover off the oil pressure switch and disconnect the switch wire by removing the terminal screw.
Remove the neutral switch by removing the two mounting screws.
Remove the neutral switch joint.

Remove the gear shift linkage cover by removing the five socket bolts.
Remove the dowel pins and gasket.


Remove the gear shift shaft.

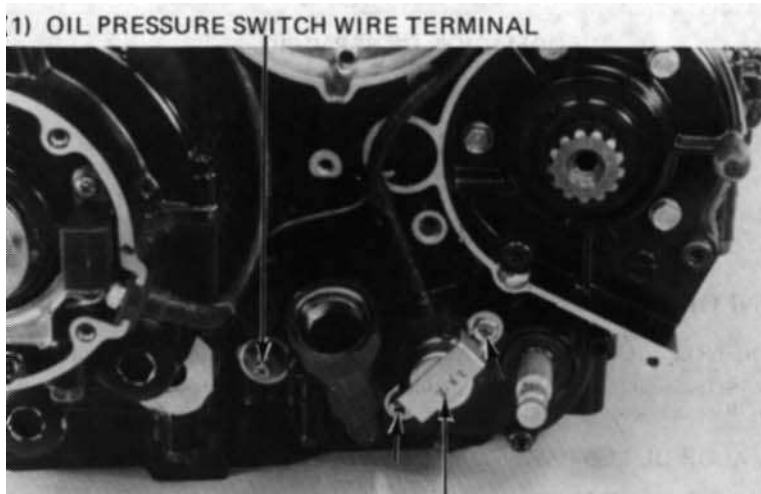

(2) NEUTRAL SWITCH



(1) GEARSHIFT LINKAGE COVER

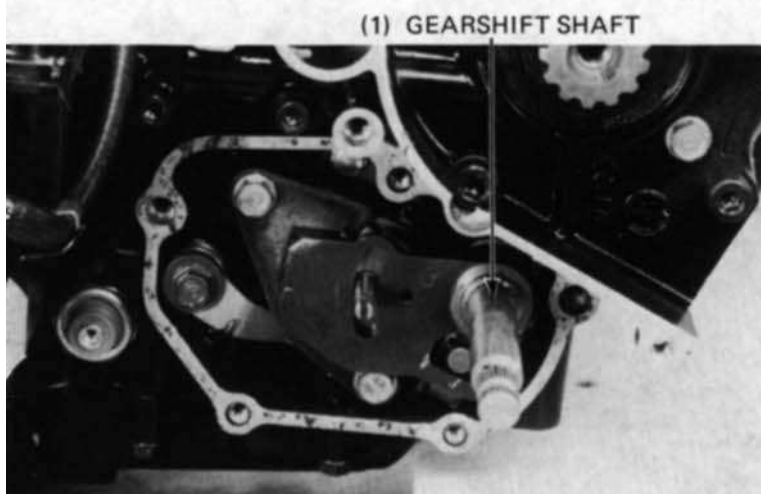


(1) GEARSHIFT SHAFT




9. Gear Shift Linkage


Remove the guide plate.

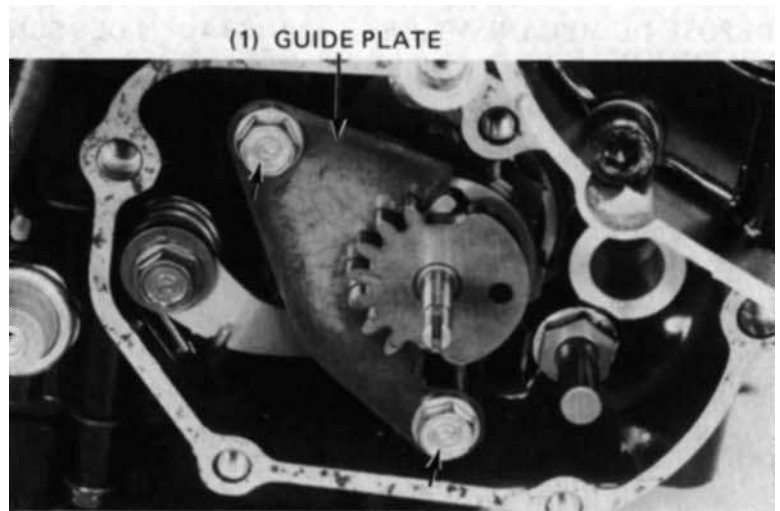

Remove the guide plate spacer collar and dowel pins.
Remove the drum shifter with the pawls, plungers and springs.

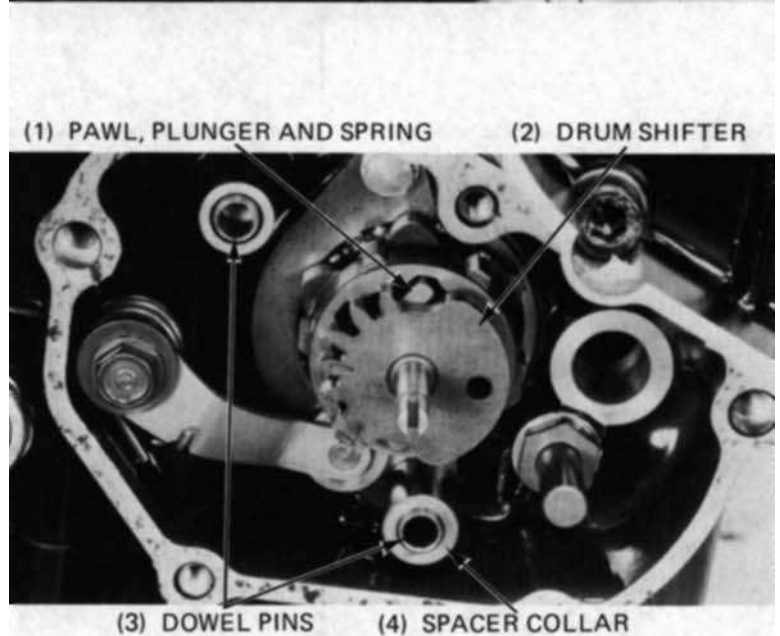

Remove the stopper arm bolt, washers, arm, collar and spring.

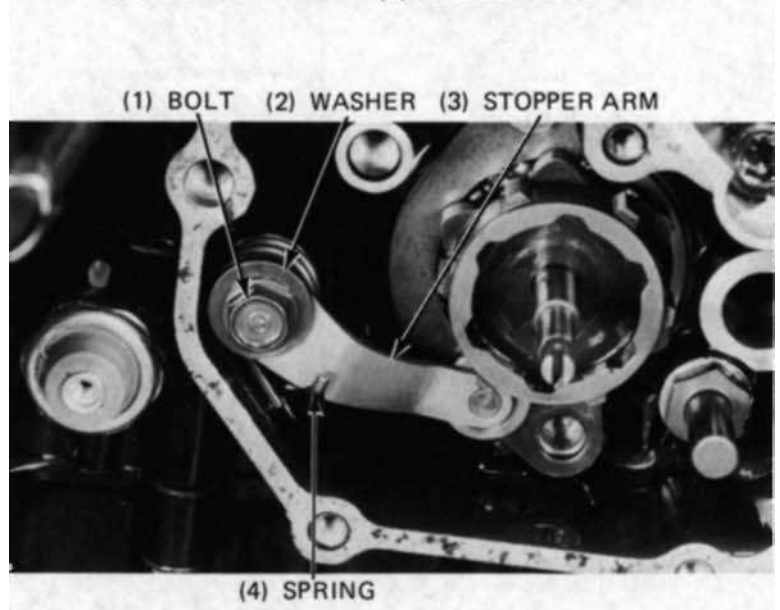



HONDA CBX750F


9. Gear Shift Linkage

INSPECTION

Check the gear shift shaft, drum shifter, pawls, plungers and springs for wear and damage.


GEAR SHIFT LINKAGE INSTALLATION

Install the washers, stopper arm, collar and return spring onto the bolt.

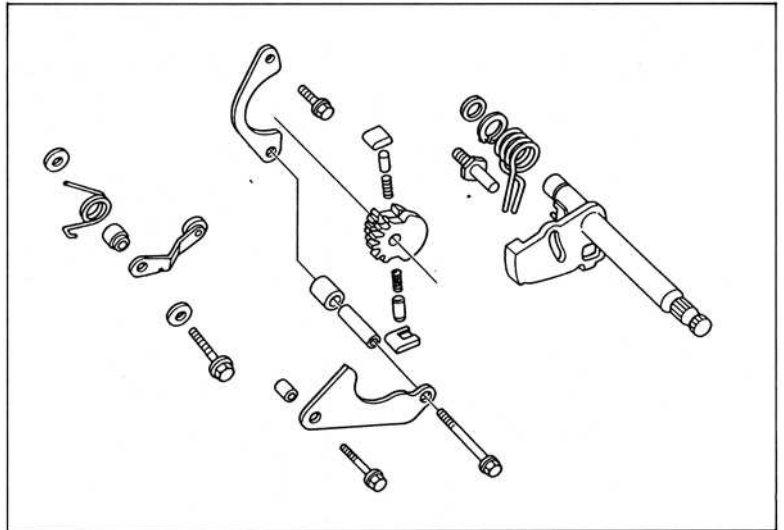


Temporarily install the stopper arm bolt and hook the spring to the stopper arm, then tighten the bolt.

TORQUE: 10-14 Nm
(1.0-1.4 kg.m, 7-10 ft.lb)

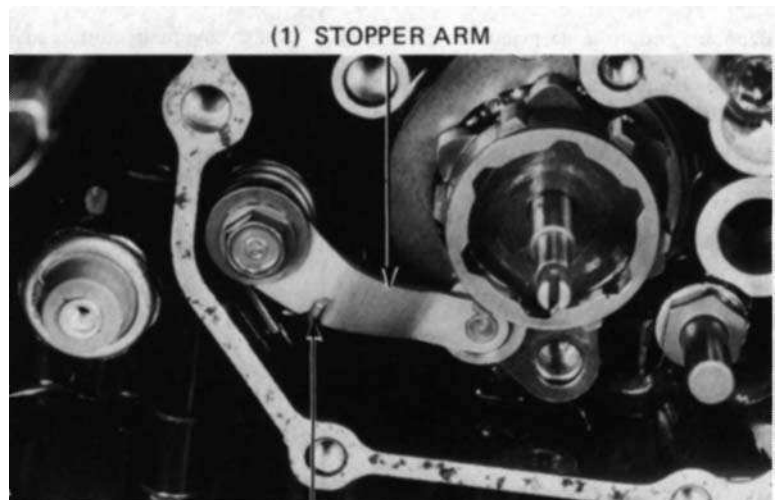

(2) RETURN SPRING

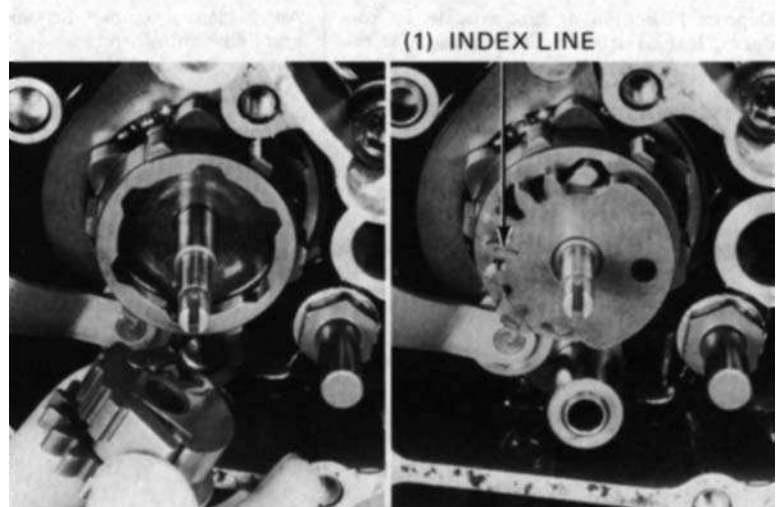

Install the springs, plungers and pawls to the drum shifter.


While holding the pawls, install the drum shifter assembly into the gear shift drum so that the index line on the shifter tooth faces forward as shown.

Install the guide plate dowel pins and spacer collar.




9. Gear Shift Linkage


Install the guide plate.

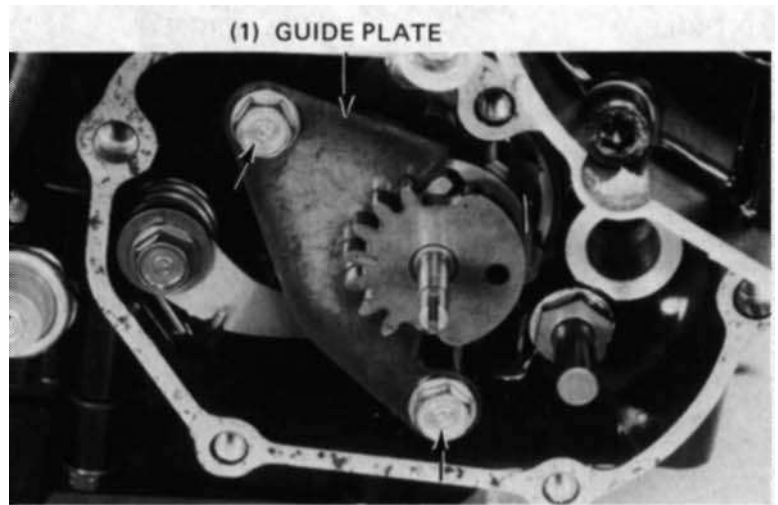

Install the return spring, snap ring and thrust washer onto the gear shift shaft.

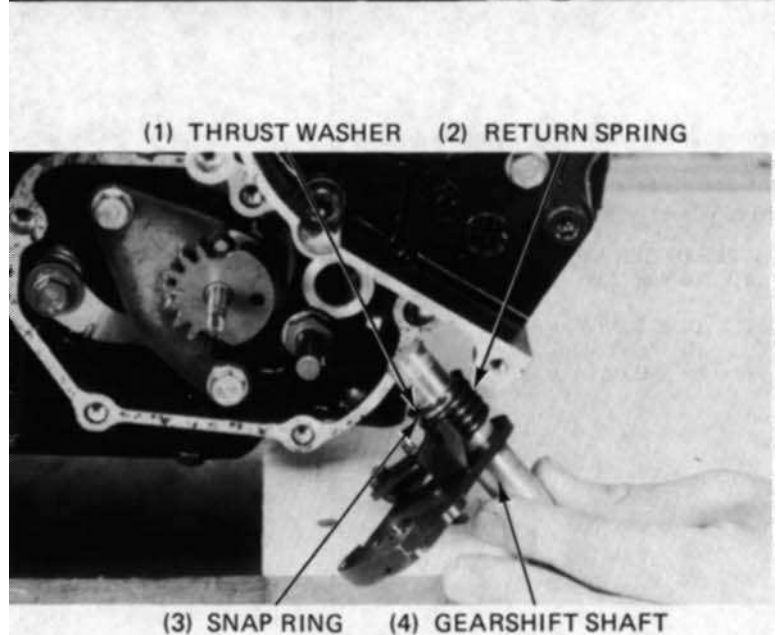

Aligning the holes in the gear shift shaft and drum shifter with a pin, install the gear shift shaft assembly as shown.
Install the dowel pins and a new gasket.

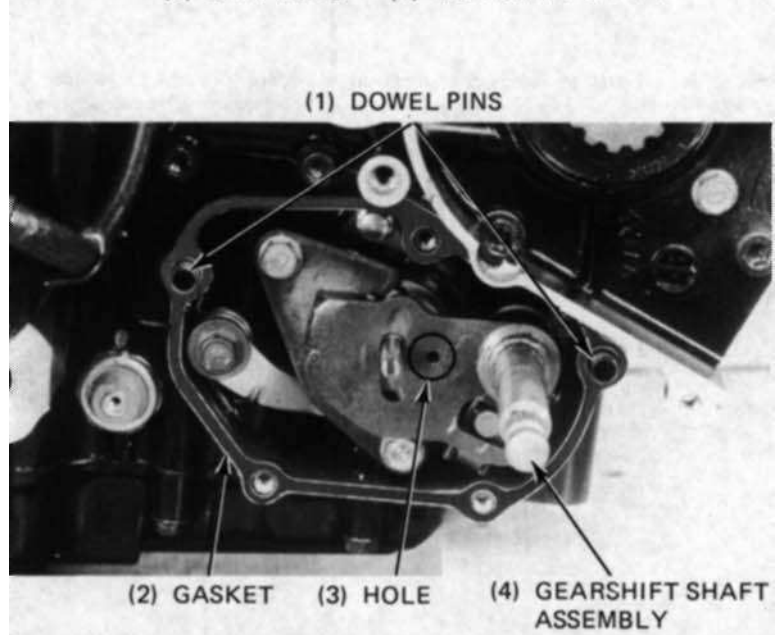



HONDA CBX750F


9. Gear Shift Linkage

Install the gear shift linkage cover and tighten it with the five socket bolts.



Install the neutral switch joint, aligning the pin of the joint with the groove in the gear shift drum.

Install the neutral switch, aligning the pin of the switch with the cut out in the switch joint.

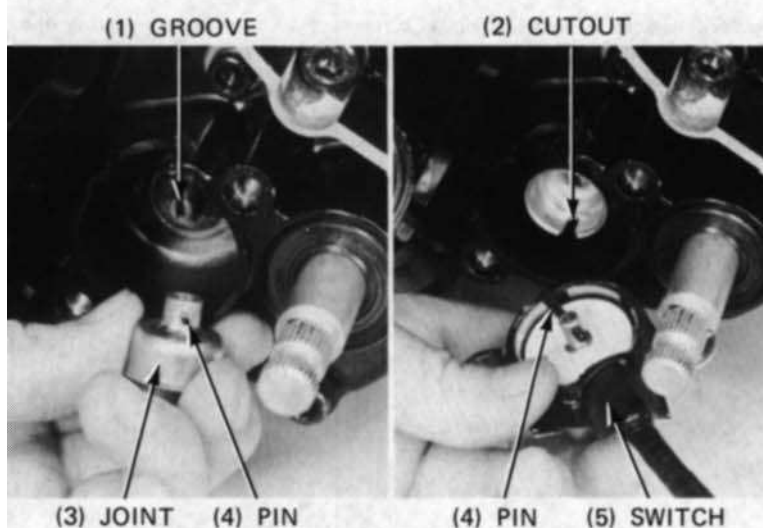

Secure the neutral switch with the two mounting screws.

Connect the oil pressure switch wire with the terminal screw.

Install the rubber cover over the oil pressure switch.

