



SERVICE INFORMATION	10-1
CRANKCASE DISASSEMBLY	10-2
CRANKCASE ASSEMBLY	10-3

SERVICE INFORMATION

GENERAL

- To service the crankshaft, connecting rods, starter clutch and transmission, the crankcase halves must be separated.
- The following parts must be removed before disassembling the crankcase.

- Oil pump	Section 2
- Cylinder head	Section 6
- Cylinder/Pistons	Section 7
- Clutch	Section 8
- Alternator	Section 16
- Starter motor	Section 18

TORQUE VALUES

Crankcase	6 mm	10-14 Nm (1.0-1.4 kg.m, 7-10 ft.lb)
	7 mm	15-19 Nm (1.5-1.9 kg.m, 11-14 ft.lb)
	8 mm	21-25 Nm (2.1-2.5 kg.m, 15-18 ft.lb)
Counter shaft bearing cover		21-25 Nm (2.1-2.5 kg.m, 15-18 ft.lb)
Pulse rotor		30-40 Nm (3.0-4.0 kg.m, 22-29 ft.lb)
Air separator cover		23-27 Nm (2.3-2.7 kg.m, 17-20 ft.lb)
Oil bolt	10 mm	23-27 Nm (2.3-2.7 kg.m, 17-20 ft.lb)

TOOL

Special

Crankcase assembly pin (2 required)	07973-ME50000
-------------------------------------	---------------




CRANKCASE DISASSEMBLY

Remove the engine (section 5)
Refer to Service Information (page 10-1) for removal of necessary parts before disassembling the crankcase.
Remove the oil bolts and the oil pipe from the crankcase.
Remove the special bolt and the air separator cover.
Remove the pulse generator cover.

Remove the pulse generator rotor, pulse generators and wire protector cover.

Remove the countershaft bearing cover.

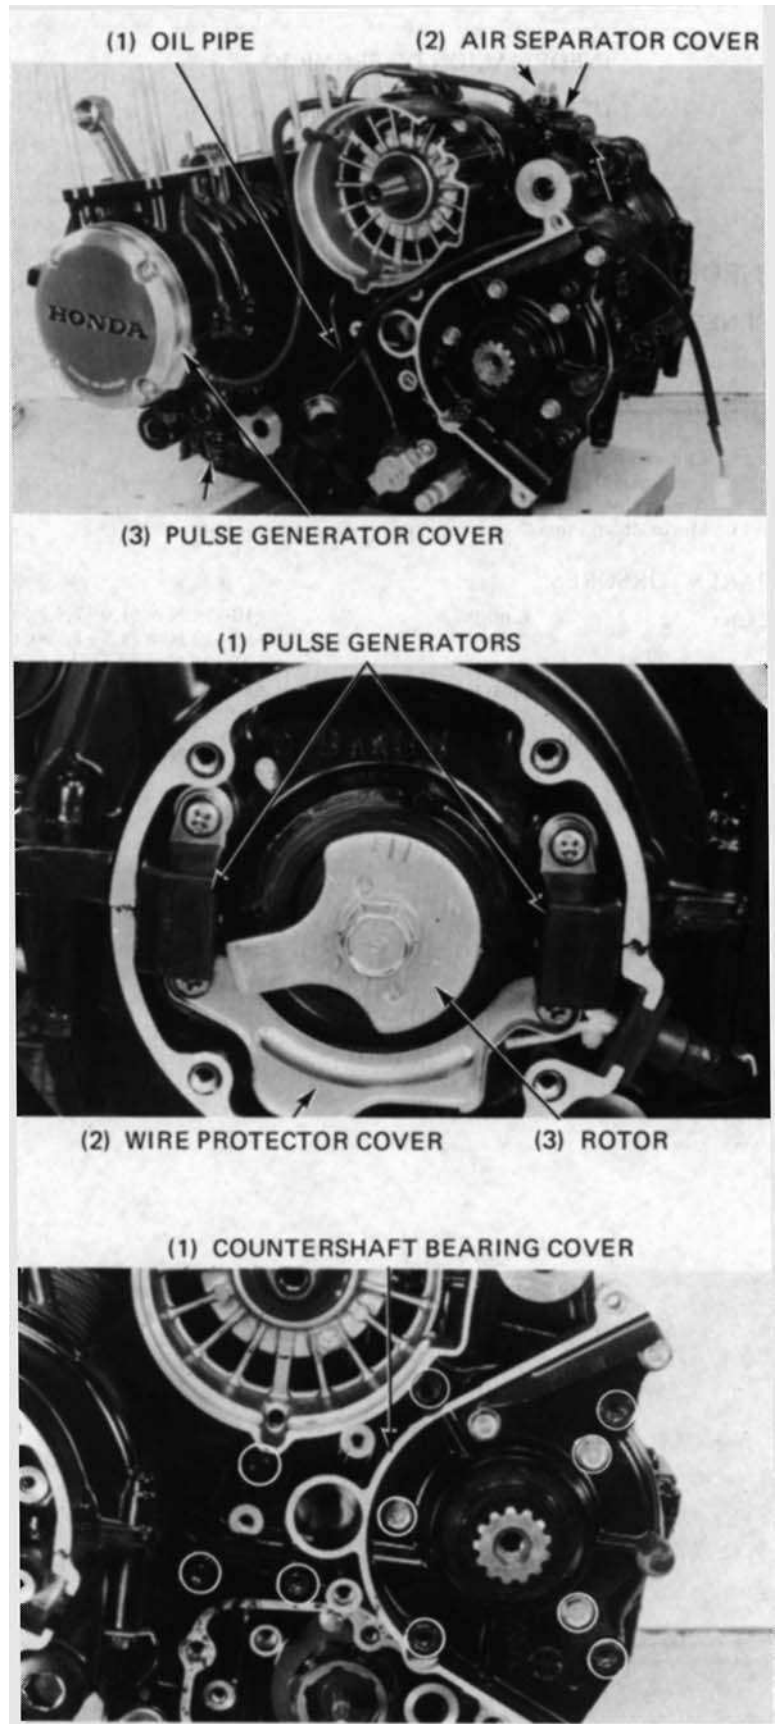




HONDA CBX750F

10. Crankcase

Remove the four upper crankcase bolts.

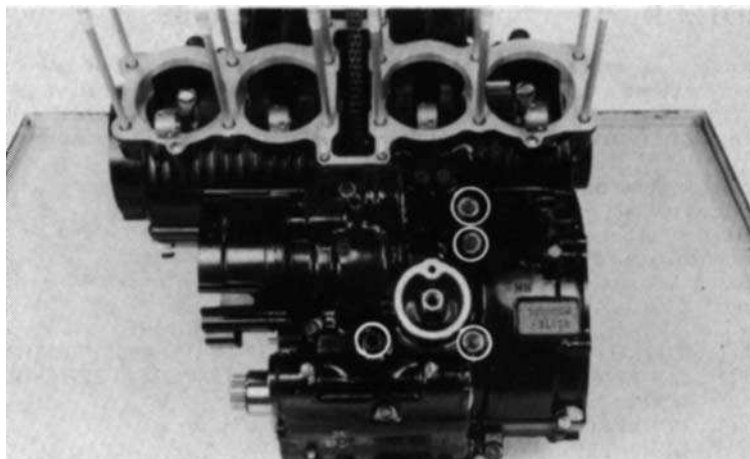


Turn the engine over.
Remove the fifteen 6 mm and eleven 8 mm lower crankcase bolts.

CAUTION


Loosen the bolts in 2-3 steps in a criss-cross pattern to prevent distorting the crankcase.

Separate the crankcase.

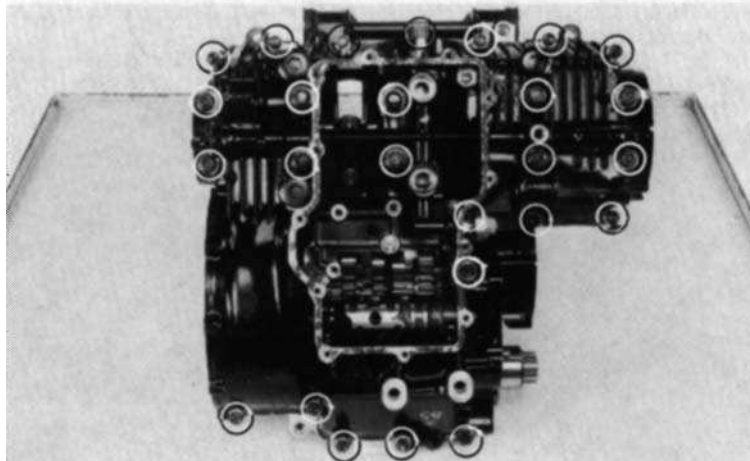

CRANKCASE ASSEMBLY

Apply molybdenum disulphide grease to the shift fork grooves and the crankshaft main bearings.

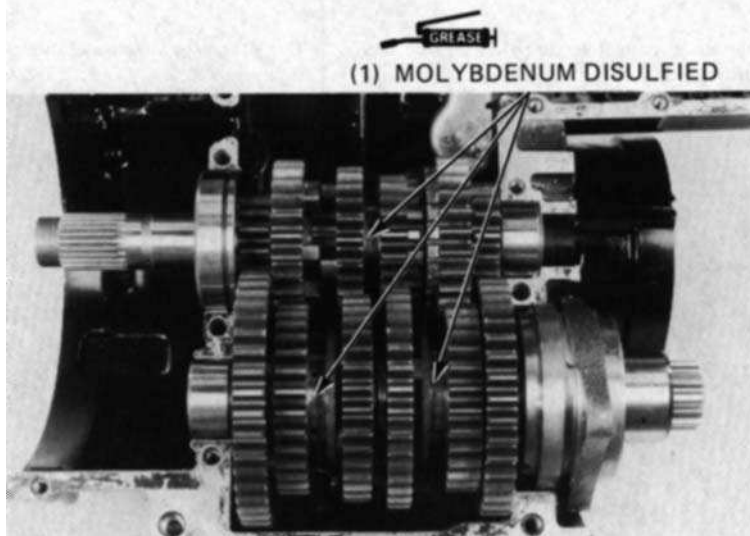



HONDA CBX750F

10. Crankcase

Clean the crankcase mating surfaces and apply liquid sealant to the mating surface of the lower crankcase

CAUTION

Do not apply sealant to the areas near the main bearings and tapered holes.

Install two crankcase assembly pins (09793-ME50000) into the upper crankcase taper holes.

Shift the gear shift linkage into neutral for easier assembly, if the gear shift linkage is installed in the lower crankcase.

Install the lower crankcase over the upper crankcase, aligning the shift fork cawls with the shift fork grooves.

NOTE:

Clean the thread and seating surface of the bolts and the thread in the crankcase with a degreasing agent before installing the 8 mm crankcase bolts.

Tighten the crankcase assembly pins with 6 x 15 mm bolts.

Tighten the lower crankcase bolts shown in 2-3 steps.

TORQUE:


8 mm BOLTS:

21-25 Nm (2.1-2.5 kg.m, 15-18 ft.lb)

6 mm BOLTS:

10-14 Nm (1.0-1.4 kg.m, 7-10 ft.lb)

Loosen the 6 x 15 mm bolts several turns and tap the bolt heads with a hammer. Remove the bolts and pins.

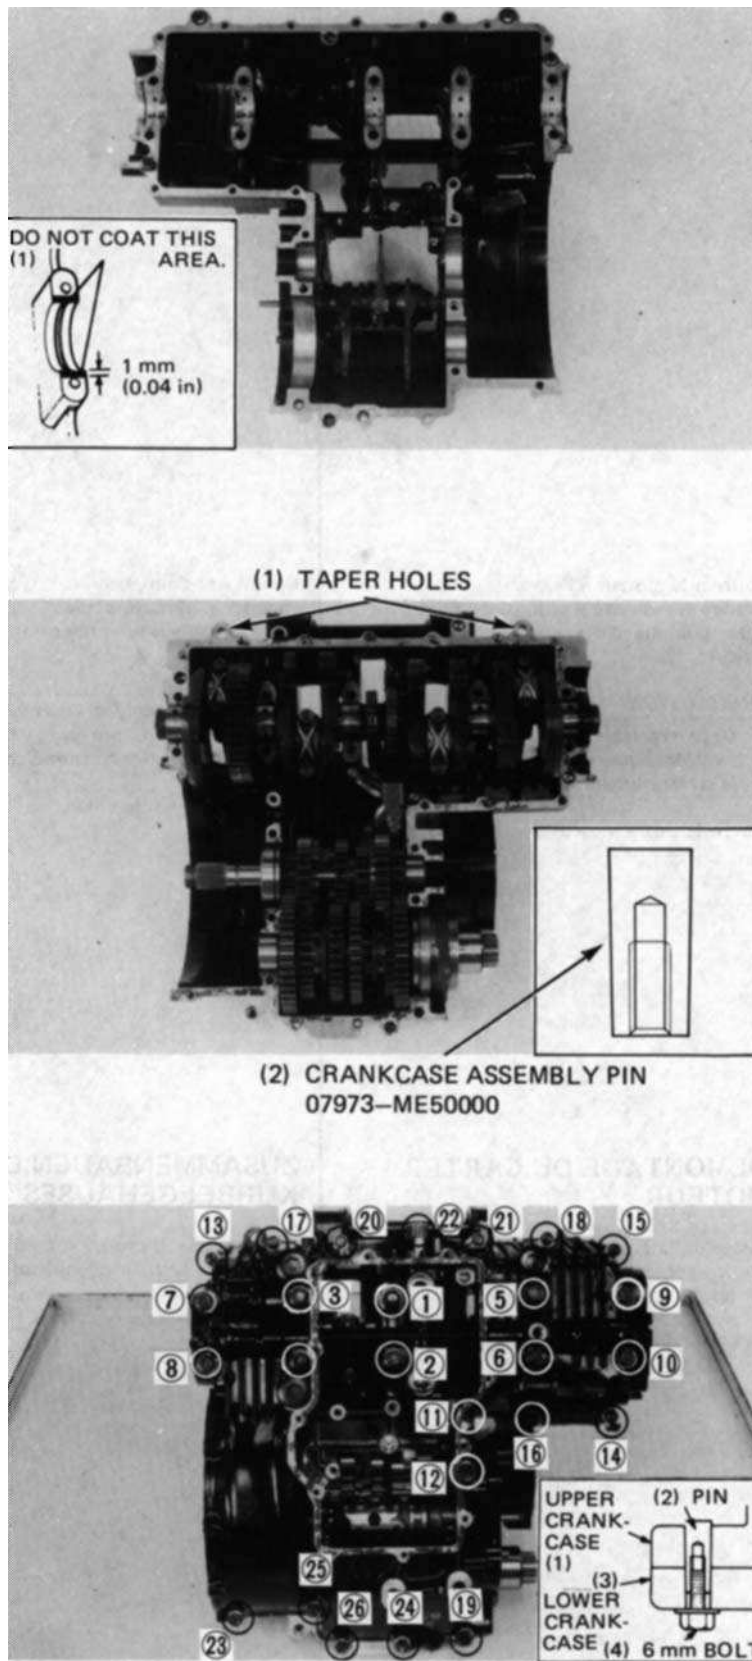



10. Crankcase

Turn the engine over and tighten the upper crankcase bolts.

TORQUE:

6 mm BOLT:

10-14 Nm (1.0-1.4 kg.m, 7-10 ft.lb)

7 mm Bolt:

15-19 Nm (1.5-1.9 kg.m, 11-14 ft.lb)

8 mm BOLT:

21-25 NNm (2.1-2.5 kg.m, 15-18 ft.lb)

Apply sealant to 10-15 mm (0.4-0.6 in) width on the crankcase mating surface area of the counter-shaft bearing cover gasket surface and install a new cover gasket.

Install the oil orifice and O-ring.

Apply thread lock agent to the threads of the 8 mm countershaft bearing cover bolts and install the cover and bolts.

Tighten the 6 mm special bolt first, then tighten the 8 mm and 6 mm bolts.

TORQUE:

8 mm BOLTS:



21-25 Nm (2.1-2.5 kg.m, 15-18 ft.lb)

6 mm BOLTS:

10-14 Nm (1.0-1.4 kg.m, 7-10 ft.lb)

CAUTION

If the crankcase is serviced with the neutral switch installed, be careful not to bind the switch harness.

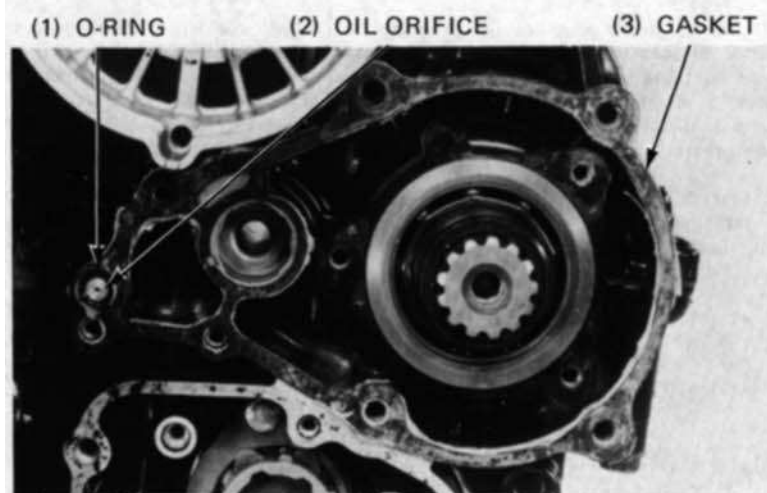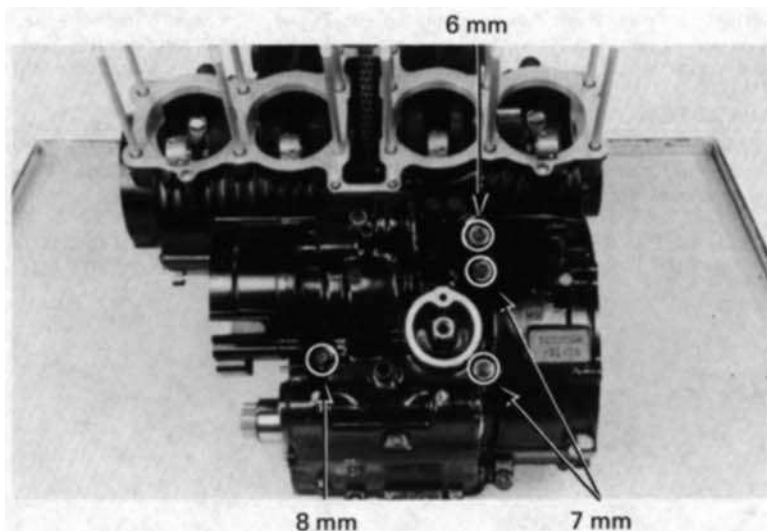




HONDA CBX750F

10. Crankcase

Install the pulse generators and wire protector cover.

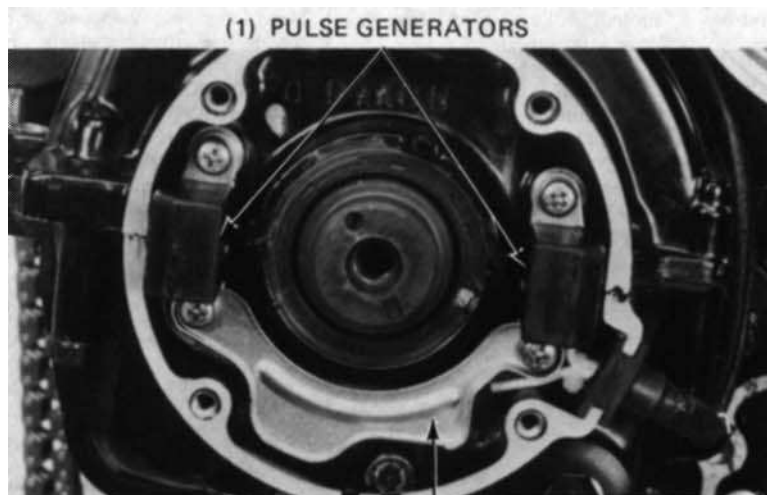


Install the pulse generator rotor, aligning the pins with the hole and groove in the crankshaft.

TORQUE:
30-40 Nm (3.0-4.0 kg.m, 22-29 ft.lb)


NOTE:
The rotor bolt cannot be installed if the rotor is installed in the opposite direction.

Install the pulse generator cover.

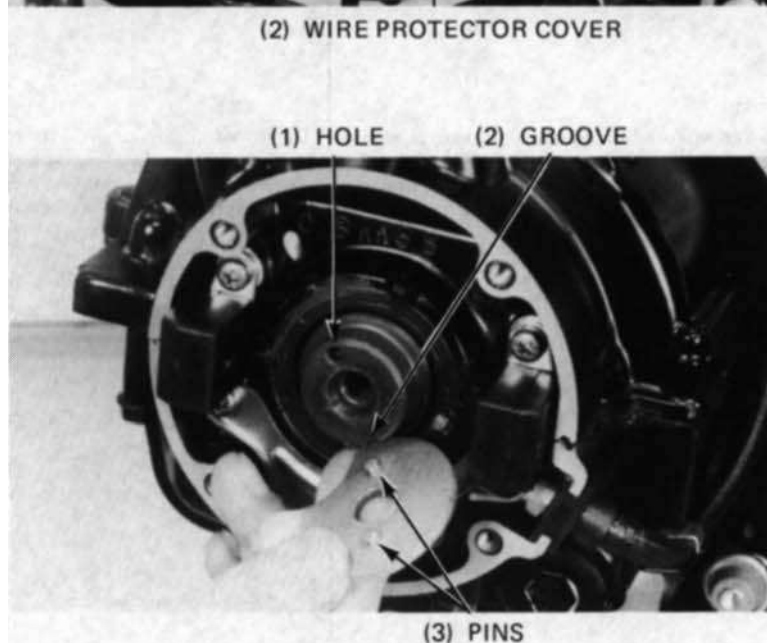

Blow the oil hole in the air separator cover with compressed air.

Make sure that the O-ring on the air separator cover is in good condition and install the cover on the upper crankcase.

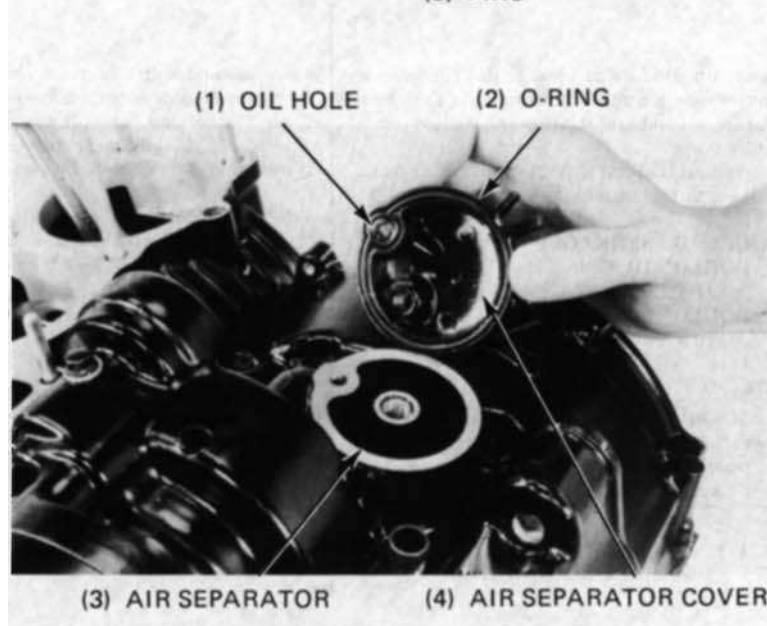



HONDA CBX750F

10. Crankcase

Tighten the air separator cover bolts.

TORQUE:

23-27 Nm (2.3-2.7 kg.m, 17-20 ft.lb)

Blow the oil pipe and the oil bolts with compressed air.

Install the oil pipe with the oil bolts and sealing washers and tighten the oil bolts.

TORQUE:

23-27 Nm (2.3-2.7 kg.m, 17-20 ft.lb)

Install the removed parts.

Install the engine (section 5).

