




HONDA CBX750F

13. Front Wheel, Suspension & Steering

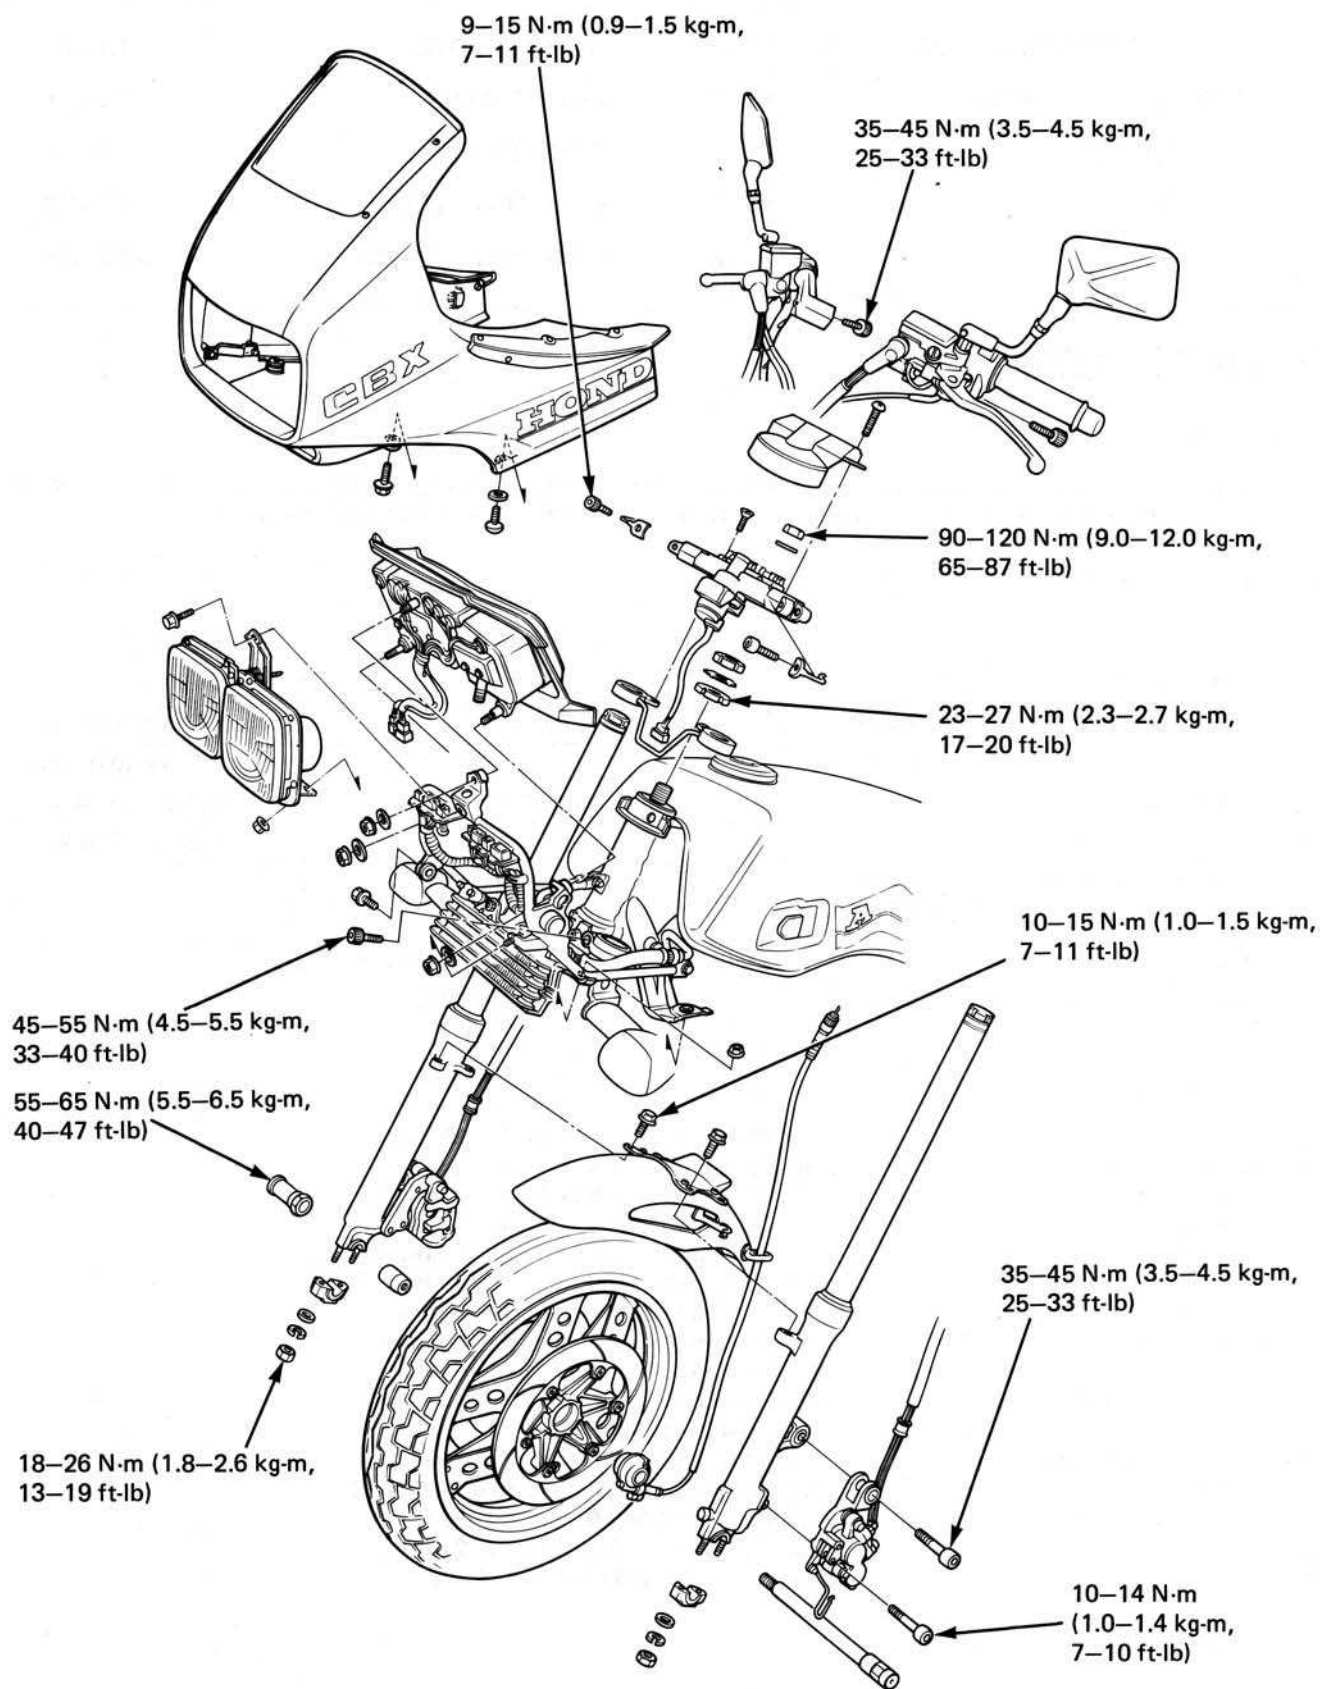



SERVICE INFORMATION	13-1	HANDLEBARS	13-7
TROUBLESHOOTING	13-2	FRONT WHEEL	13-11
HEADLIGHT	13-3	FRONT FORKS	13-19
INSTRUMENTS	13-3	STEERING STEM	13-32
FUSE HOLDER	13-6	IGNITION SWITCH	13-38

SERVICE INFORMATION

GENERAL

- A jack or other support is required to support the front of the motorcycle when you are working on the front wheel or forks
- The front wheel uses a tubeless tyre. For tubeless tyre repairs, refer to the TUBELESS TYRE MANUAL.

SPECIFICATIONS

		STANDARD	SERVICE LIMIT
Axle shaft runout		-	0.2 mm (0.01 in)
Front wheel rim runout	Radial	-	2.0 mm (0.08 in)
	Axial	-	2.0 mm (0.08 in)
Fork spring length		553.7 mm (21.80 in)	543 mm (21.4 in)
Fork tube runout		-	0.2 mm (0.01 in)
Fork fluid capacity	Right	375 cc (13.2 oz)	-
	Left	400 cc (14.1 oz)	-
Fork air pressure		0-40 kPa (0-0.4 kg/cm ² , 0-6 psi)	-
Steering head bearing preload		1.1-1.7 kg (2.4-3.7 lbs)	-

TORQUE VALUES

Handlebar pinch bolt	35-45 Nm (3.5-4.5 kg.m, 25-33 ft.lb)
Master cylinder holder	10-14 Nm (1.0-1.4 kg.m, 7-10 ft.lb)
Front brake disk	35-40 Nm (3.5-4.0 kg.m, 25-29 ft.lb)
Front axle nut	55-65 Nm (5.5-6.5 kg.m, 40-47 ft.lb)
Front calliper bracket	35-45 Nm (3.5-4.5 kgm, 25-33 ft.lb)
Axle holder	18-26 Nm (1.8-2.6 kg.m, 13-19 ft.lb)
Anti dive pivot bolt	10-14 Nm (1.0-1.4 kg.m, 7-10 ft.lb)
Fork piston socket bolt	15-25 Nm. (1.5-2.5 kg.m, 11-18 ft.lb)
Fork top pinch bolt	9-15 Nm (0.9-1.5 kg.m, 7-11 ft.lb)
Fork bottom pinch bolt	45-55 Nm (4.5-5.5 kg.m, 33-40 ft.lb)
Fork brace	10-15 Nm (1.0-1.5 kg.m, 7-11 ft.lb)
Steering bearing adjustment nut	23-27 Nm (2.3-2.7 kg.m, 17-20 ft.lb)
Steering stem nut	90-120 Nm (9.0-12.0 kg.m, 65-87 ft.lb)
Steering stem pinch nut	20-30 Nm (2.0-3.0 kg.m, 14-22 ft.lb)
Fork cap	15-30 Nm 91.5-3.0 kg.m, 11-22 ft.lb)
Anti dive case	6-9 Nm (0.6-0.9 kg.m, 4-7 ft.lb)



TOOLS

Special

Hex, wrench, 6 mm	07917-3230000
Snap ring pliers	07914-3230001
Fork seal driver	07947-4630100
Steering stem socket	07916-3710100
Bearing race remover	07946-3710500
Ball race remover	07953-MJ10000
Steering stem driver	07946-MB00000

Common

Driver	07749-0010000
Attachment, 42 x 47	07746-0010300
Pilot, 15 mm	07746-0040300
Lock nut wrench, 30 x 32 mm	07716-0020400
Extension	07716-0020500
Attachment, 52 x 55 mm	07746-0020400
Bearing remover shaft	07746-0050100
Bearing remover head, 15 mm	07746-0050400

TROUBLESHOOTING

Hard Steering

- 1 Steering bearing adjustment nut too tight
- 2 Faulty steering stem bearings
- 3 Damaged steering stem bearings
- 4 Insufficient tyre pressure

Steers to one side or does not track straight

- 1 Bent forks
- 2 Bent front axle
- 3 Wheel installed incorrectly

Front wheel wobbling

- 1 Bent rim
- 2 Bent front axle
- 3 Faulty tyre
- 4 Axle nut tightened incorrectly

Soft suspension

- 1 Weak fork springs
- 2 Insufficient fluid in forks
- 3 Fork air pressure incorrect

Hard suspension

- 1 Incorrect fluid weights in forks
- 2 Fork air pressure incorrect
- 3 Bent fork tubes
- 4 Clogged fluid passage
- 5 Clogged anti dive orifice

Front suspension noise

- 1 worn slide or guide bushings
- 2 Insufficient fluid in forks
- 3 loose front fork fasteners
- 4 Lack of grease in speedometer gearbox



HEADLIGHT

REMOVAL/INSTALLATION

Remove the fairing by removing the two bolts and two screw.

Remove the headlight from the bracket by removing the headlight adjusting screws.


NOTE:

Never remove the headlight from the bracket unless the headlight must be replaced.

Disconnect the headlight coupler.
Install the headlight in the reverse order of removal.
Adjust the headlight aim after installation.




(1) FAIRING

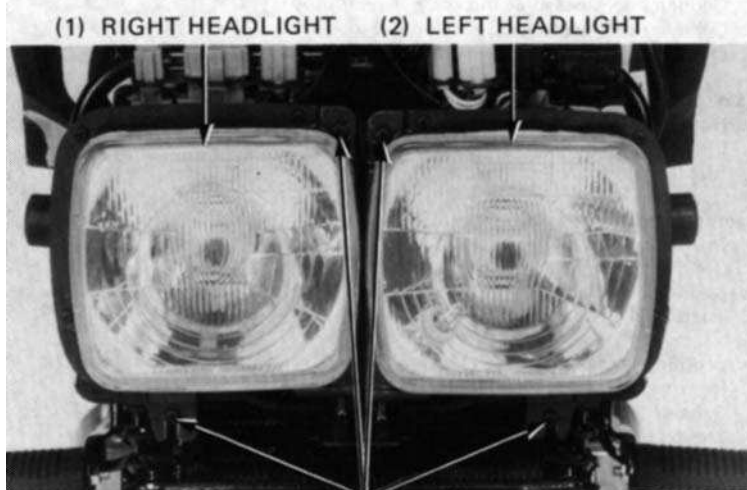

(1) RIGHT HEADLIGHT (2) LEFT HEADLIGHT



(3) ADJUSTING SCREWS

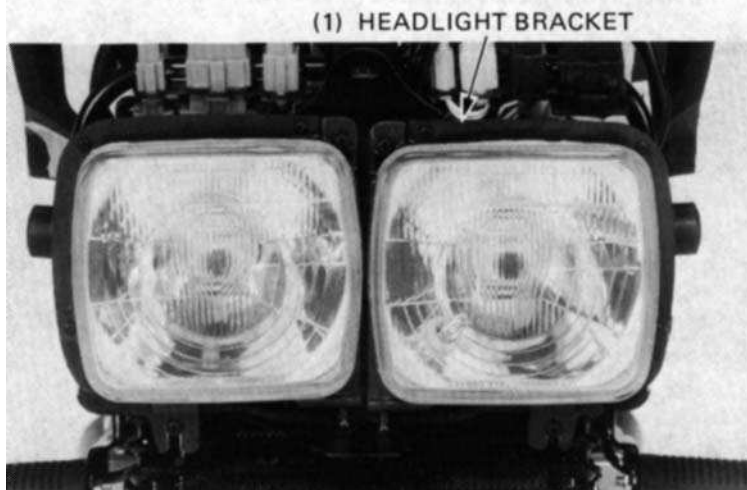

(1) HEADLIGHT BRACKET

INSTRUMENTS

REMOVAL

Remove the fairing.
Remove the headlights with their brackets by removing the mount nut and bolt.
Disconnect the headlight couplers.



HONDA CBX750F


13. Front Wheel, Suspension & Steering

Disconnect the instrument wire couplers and the speedometer cable.
Remove the three mount nuts and remove the instrument assembly from the bracket.


DISSAMBLEY

Remove the four screws attaching the instrument case to the instrument panel.


Pull the instrument case to remove the trip meter reset shaft from the knob and grommet and separate the case and panel.

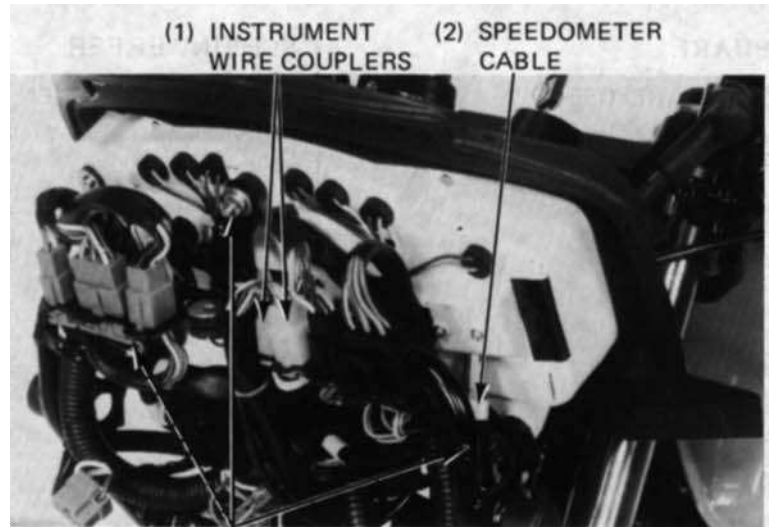

(3) MOUNT NUTS

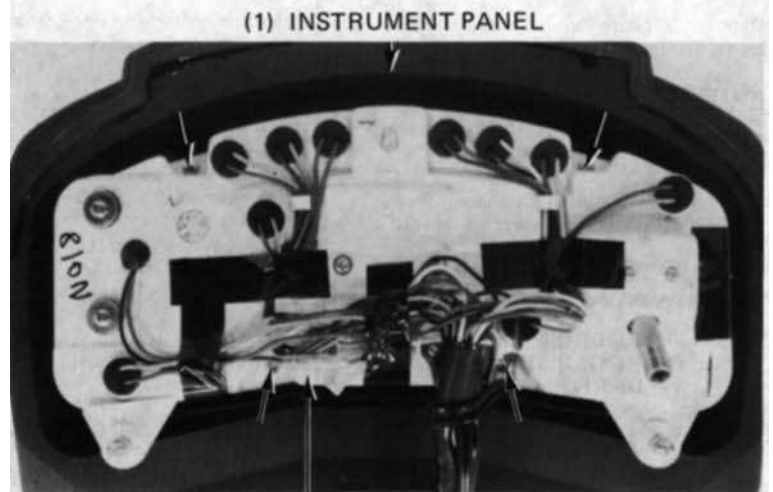

(2) INSTRUMENT CASE

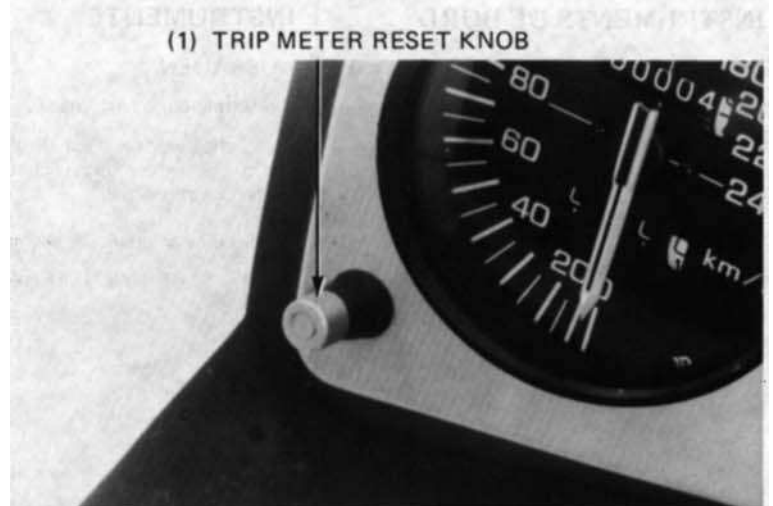




HONDA CBX750F

13. Front Wheel, Suspension & Steering


Remove the bulb sockets and meter terminals, and disconnect the meter wire connectors.

Remove the attaching screws and disassemble the instruments.

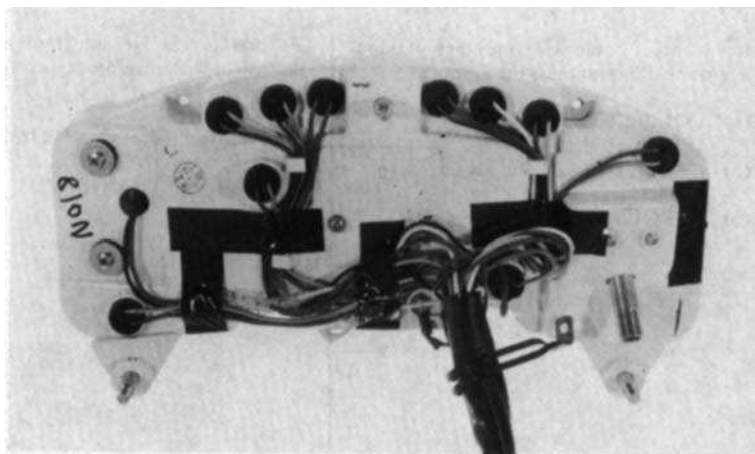

INSTRUMENTS ASSEMBLY/INSTALLATION

Assemble and install the instruments in the reverse order of disassembly and removal.

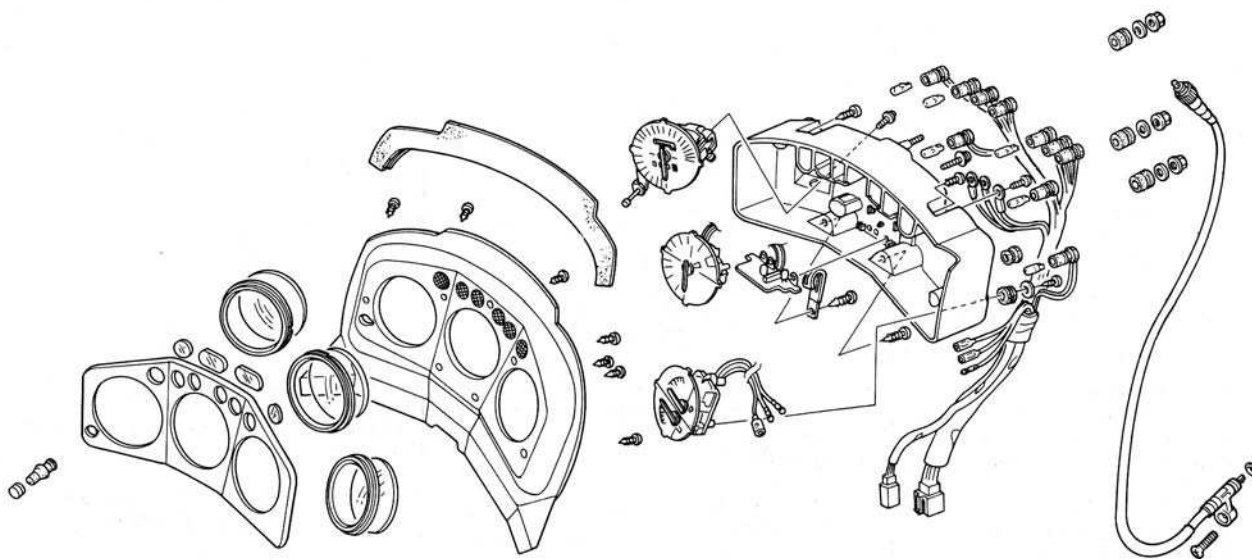



FUSE HOLDER

REPLACEMENT




Remove the fairing (page 13-3)
Disconnect the fuse holder wire couplers.

Remove the fuse holder cover.

Remove the two attaching screws and
remove the fuse holder from the fork bridge,
Install the fuse holder in the reverse order of
removal.

NOTE:

Be sure to route the fuse holder wire
harness properly (pages 1-9 thru 1-10)

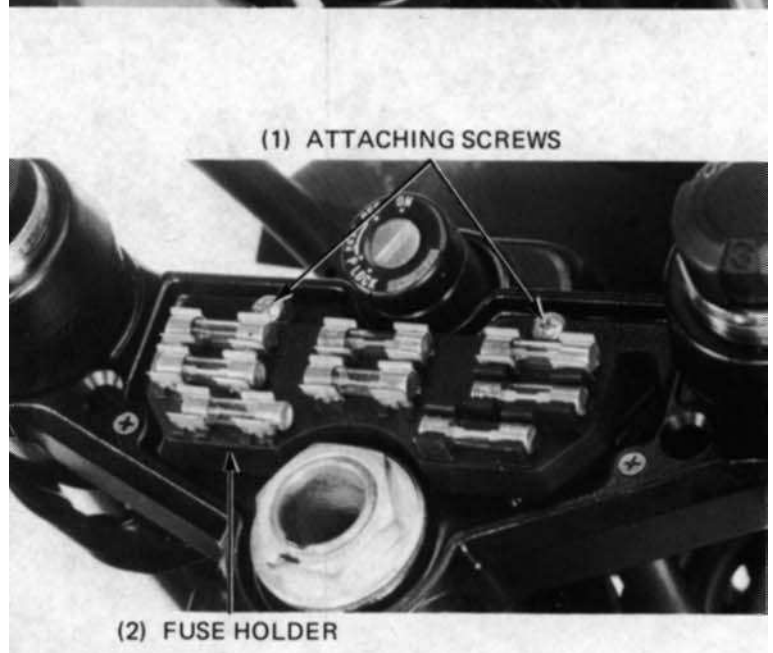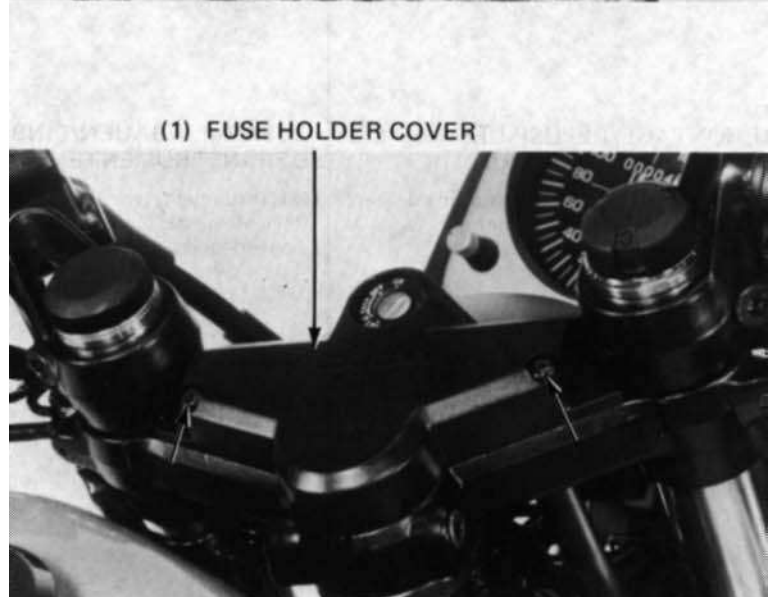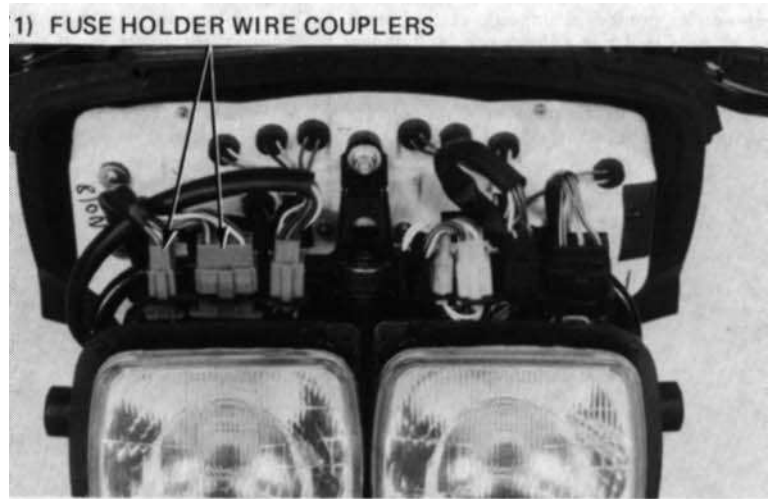




HANDLEBARS

RIGHT HANDLEBAR REMOVAL


Disconnect the front brake switch wires from the switch.
Remove the front brake master cylinder.



Remove the right handlebar switch housing.

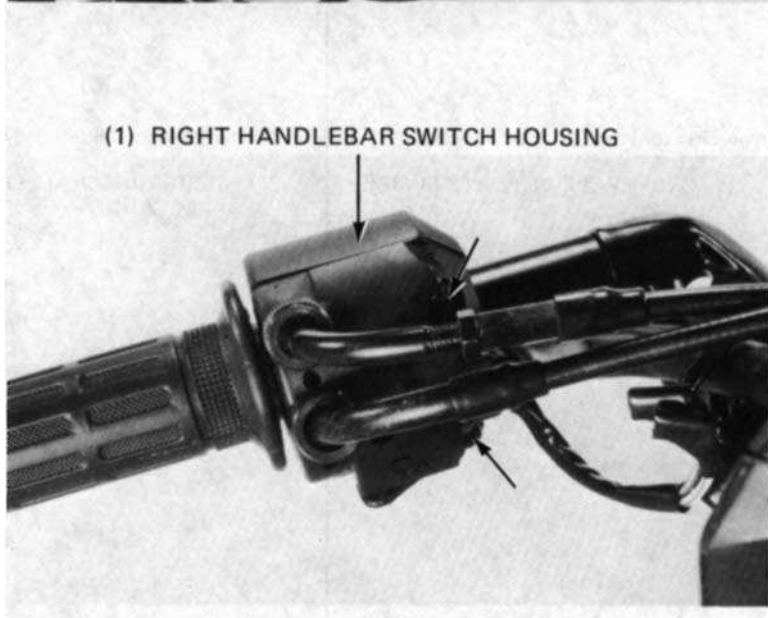

Hold the handle weight with pliers and shop towel, and remove the handle weight attaching screw and weight.

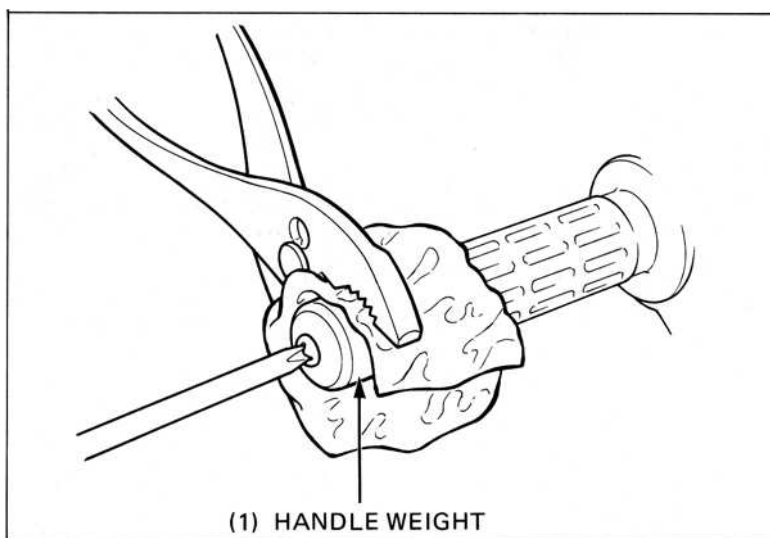




HONDA CBX750F


13. Front Wheel, Suspension & Steering

Remove the handlebar retainer ring.
Loosen the handle bar pinch bolt and
remove the right handle bar from the fork
tube.
Remove the throttle grip from the right
handlebar.

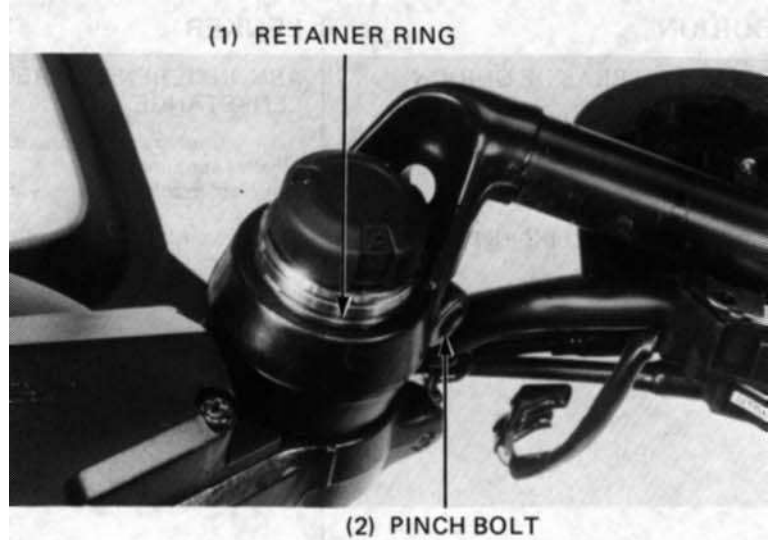


LEFT HANDLEBAR REMOVAL

Disconnect the clutch switch wires from the
switch.
Remove the clutch master cylinder.

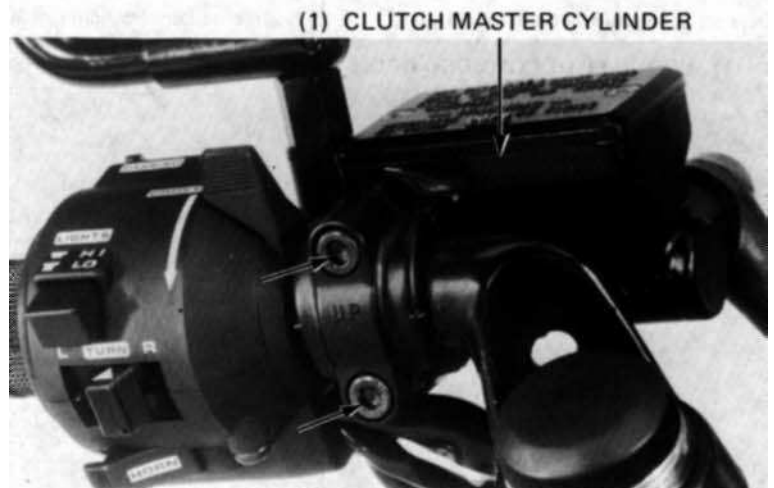

Remove the left handlebar switch housing.

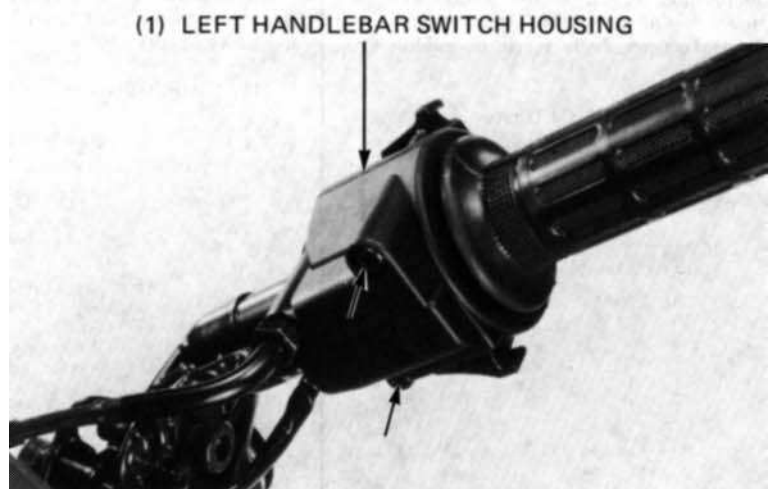



HONDA CBX750F

13. Front Wheel, Suspension & Steering

Disconnect the choke cable from the choke lever.

remove the retainer ring, loosen the pinch bolt and remove the left handlebar from the fork tube.




RIGHT HANDLEBAR INSTALLATION

Apply grease to the throttle grip sliding surface and slide the throttle grip over the right handlebar.

Install the right handlebar onto the fork tube and on the top bridge, aligning the pin on the bottom of the handlebar with the slit of the top bridge. Put the pin of the handlebar to the rear surface of the slit and tighten the handlebar pinch bolt.

TORQUE: 35-45 Nm
(3.5-4-5 kgm, 25-33 ft.lb)

Install the handlebar retainer ring.
Install the handle weight and attaching screw to the handlebar.
Hold the weight with pliers and shop towel, and tighten the attaching screw.

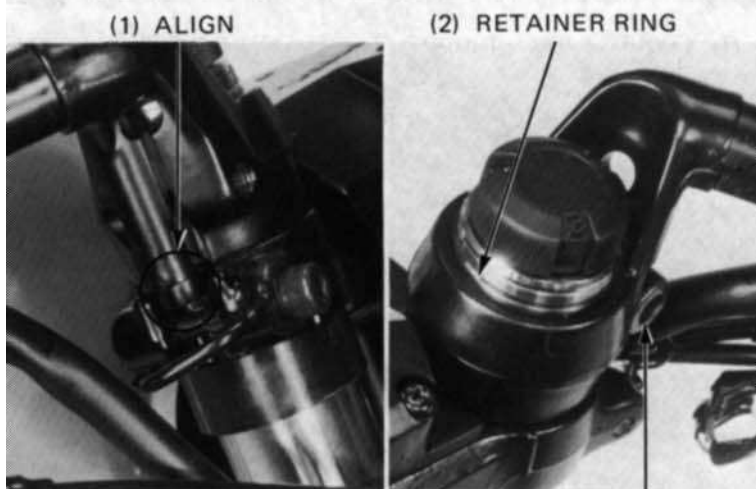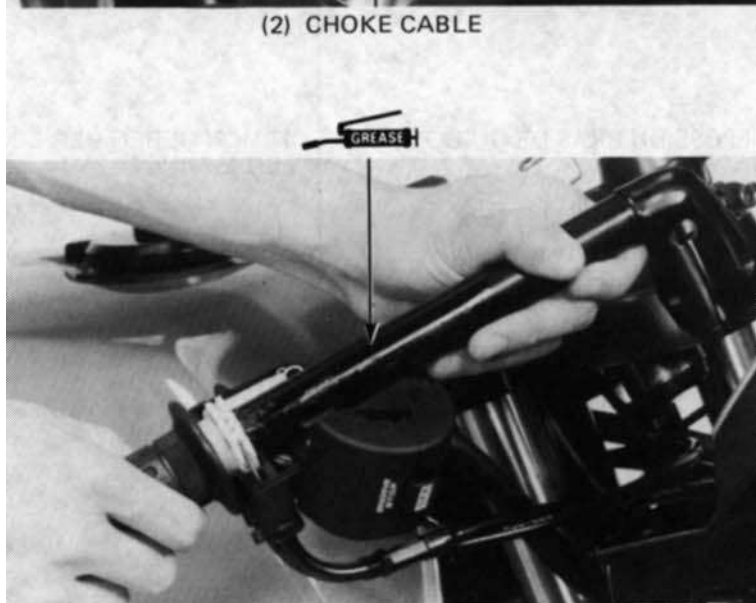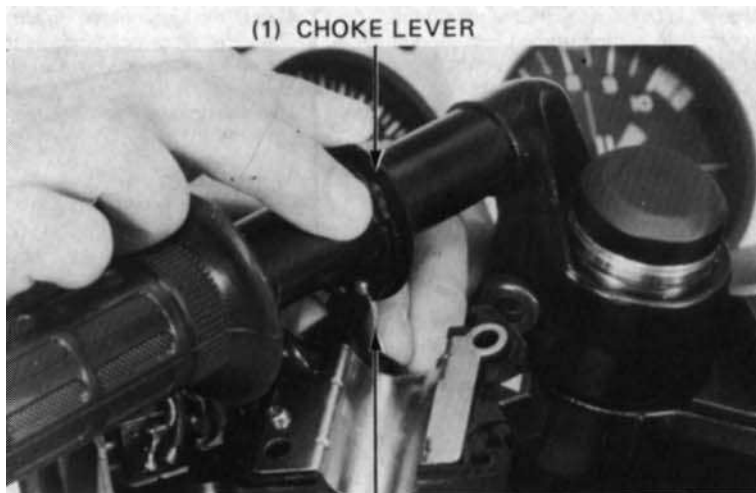



13. Front Wheel, Suspension & Steering

Install the right handlebar switch housing, aligning the locating tab of the housing with the hole in the handlebar.

Tighten the forward screw first, then tighten the rear screw.




(1) LOCATING TAB

Place the front brake master cylinder on the handlebar and install the master cylinder holder with the "UP" mark facing up.

Align the index mark on the holder with the punch mark on the handlebar, and tighten the upper bolt first then tighten the lower bolt.

TORQUE: 10-14 Nm
(1.0-1.4 kg.m, 7-10 ft.lb)

Connect the front brake switch wires.

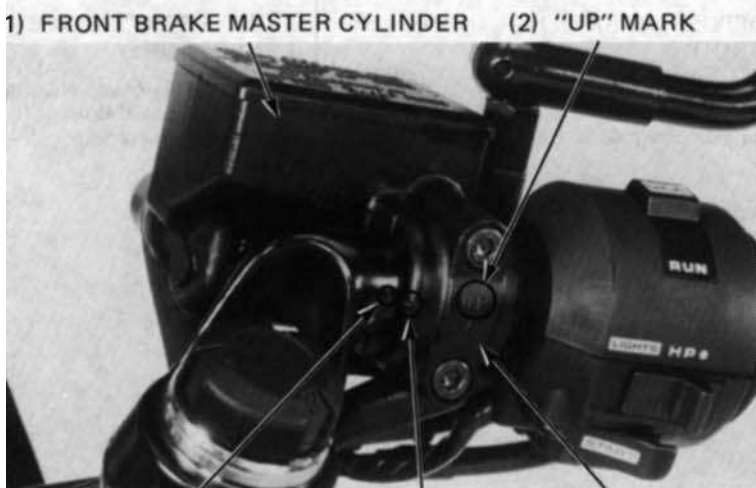


1) FRONT BRAKE MASTER CYLINDER (2) "UP" MARK

(3) PUNCH MARK (4) INDEX MARK (5) HOLDER

LEFT HANDLEBAR INSTALLATION

Install the left handlebar onto the fork tube in the same manner as the right handlebar (page 13-9).

Connect the choke cable to the choke lever.

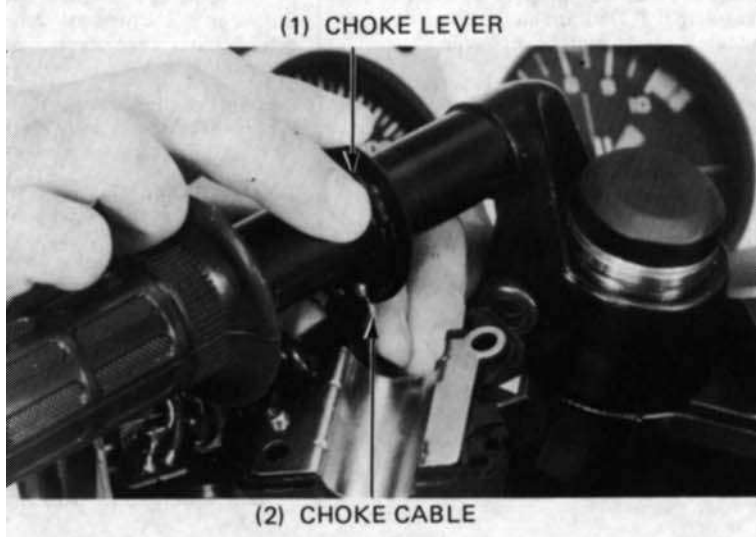

(1) CHOKE LEVER

(2) CHOKE CABLE



HONDA CBX750F

13. Front Wheel, Suspension & Steering

Install the left handlebar switch housing, aligning the locating tab of the housing with the hole in the handlebar.

Tighten the forward screw first, then tighten the rear screw.

Place the clutch master cylinder on the handlebar and install the master cylinder with the "UP" mark facing up. Align the index mark on the holder with the punch mark on the handlebar, and tighten the upper bolt first then tighten the lower bolt.

TORQUE: 10-14 Nm
(1.0-1.4 kg.m, 7-10 ft.lb)

Connect the clutch switch wires.

FRONT WHEEL

REMOVAL

Remove the right front brake calliper with its bracket from the fork leg.
Remove the right axle holder.

NOTE:


If you squeeze the front brake lever after the calliper is removed, the calliper piston will move out and make reassembly difficult.



(1) LOCATING TAB



(1) RIGHT FRONT BRAKE CALIPER

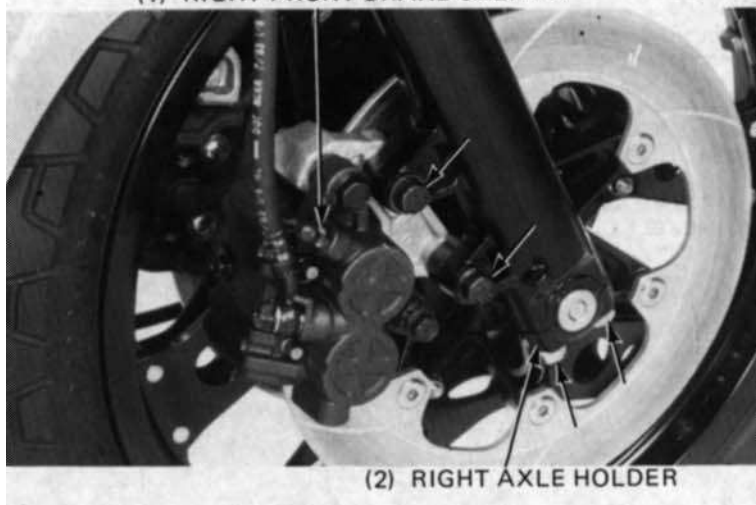

(2) RIGHT AXLE HOLDER




HONDA CBX750F


13. Front Wheel, Suspension & Steering

Remove the speedometer cable set screw and disconnect the speedometer cable.
Remove the left front calliper with its bracket from the front fork and anti dive piston.
Remove the left axle holder.


Jack up the engine until the forks clear the axle and remove the front wheel.

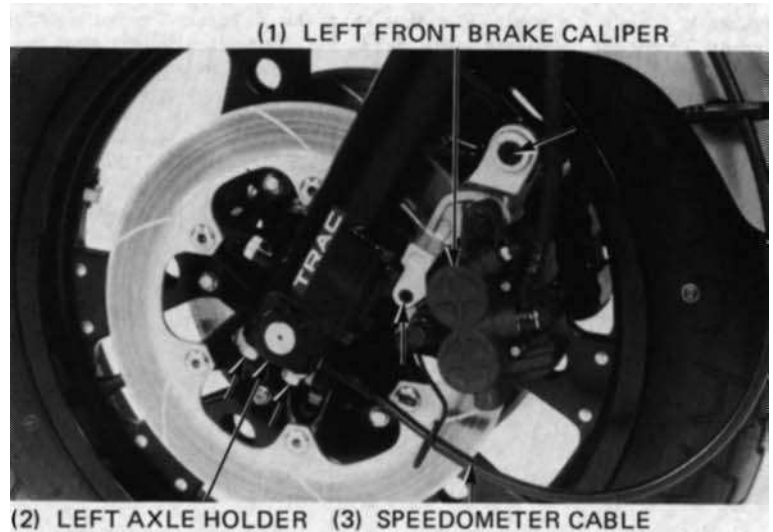

Remove the front axle nut and axle.

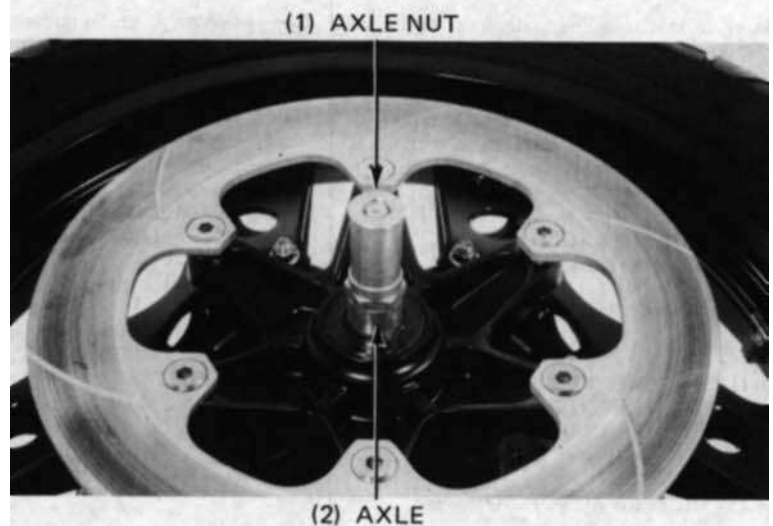

Remove the spacer from the right side.
Remove the speedometer gearbox from the left side.

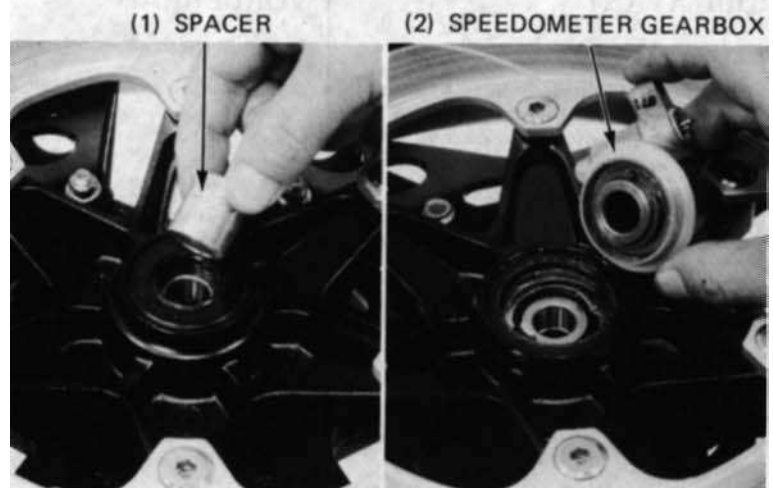



WHEEL BALANCE

CAUTION

*Wheel balance directly affects the stability, handling and overall safety of the motorcycle.
Always check balance when the tyre has been removed from the rim.*

NOTE:



For optimum balance, the tyre balance mark (a paint dot on the side wall) must be located next to the valve stem. Remount the tyre if necessary.

Mount the wheel, tyre and brake assembly in an inspection stand.

Spin the wheel, allow it to stop, and mark the lowest (heaviest) part of the wheel with chalk.

Do this two or three times to verify the heaviest area. If the wheel is balanced, it will not stop consistently in the same position.


To balance the wheel, install wheel weight on the highest side of the rim, the side opposite the chalk marks. Add just enough weight so the wheel will no longer stop in the same position when its spun. Do not add more than 60 grams (rear wheel 70 grams)

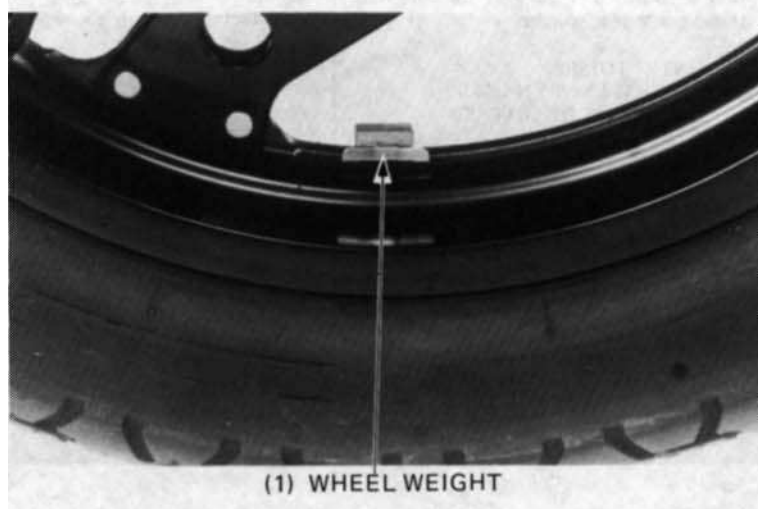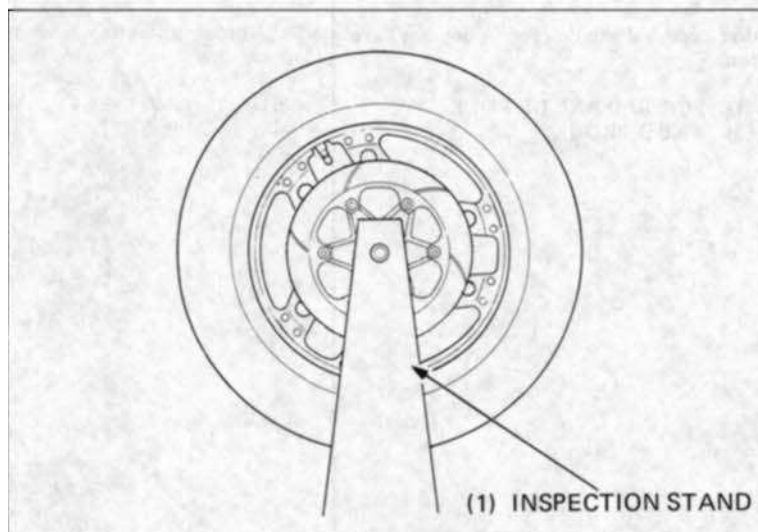



WHEEL BEARING INSPECTION

Check wheel bearing play by placing the wheel in a truing stand and spinning the wheel by hand. Replace the bearings if they are noisy or have excessive play.

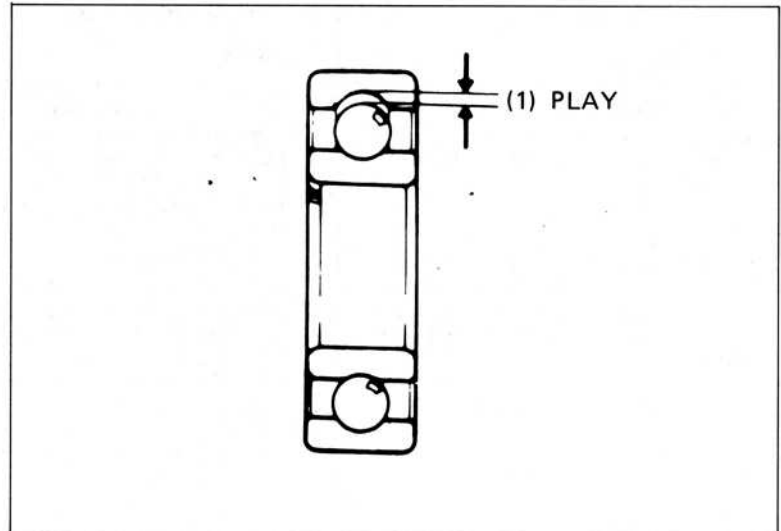

WHEEL INSPECTION


Check the rim runout by placing the wheel in a truing stand. Spin the wheel slowly and read the runout using a dial indicator.

SERVICE LIMITS:

Radial 2.0 mm (0.08 in)

Axial 2.0 mm (0.08 in)


The wheel cannot be repaired and must be replaced with a new one if the service limits are exceeded.

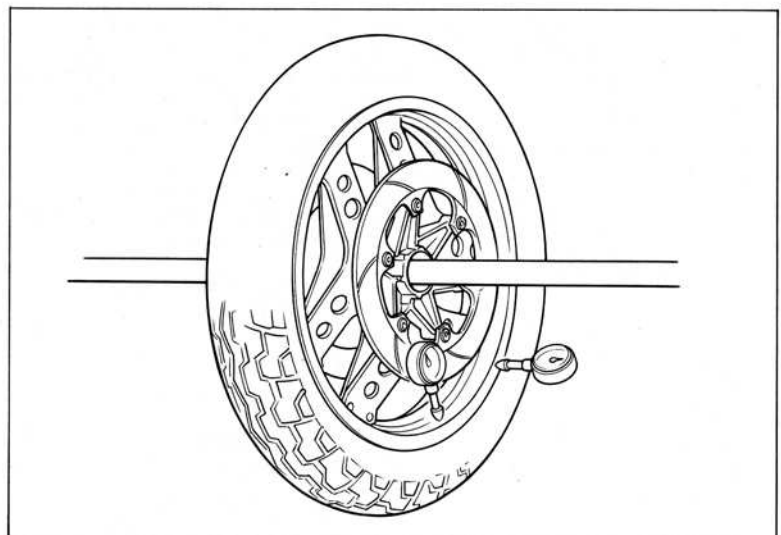

AXLE INSPECTION.

Set the axle in V blocks and measure the runout.

SERVICE LIMIT: 0.2 mm (0.01 in)

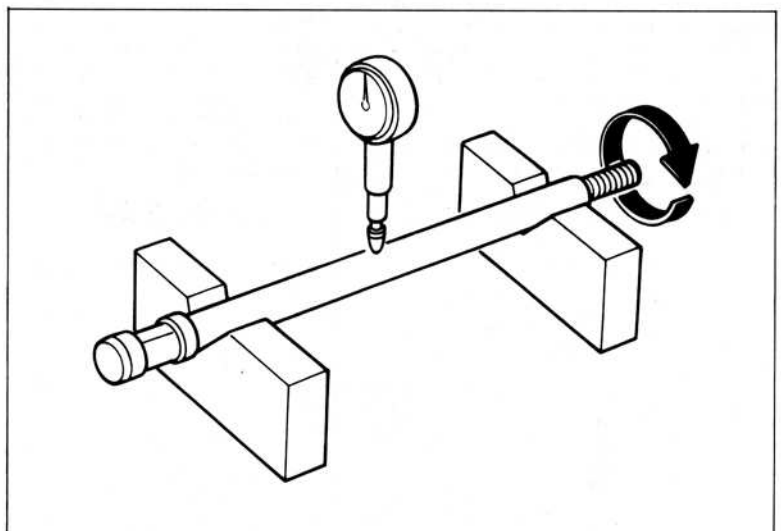




HONDA CBX750F

13. Front Wheel, Suspension & Steering

Remove the left and right brake disc mounting bolts and discs.
Remove the dust seals from both sides.
Remove the speedometer gear retainer from the left side.

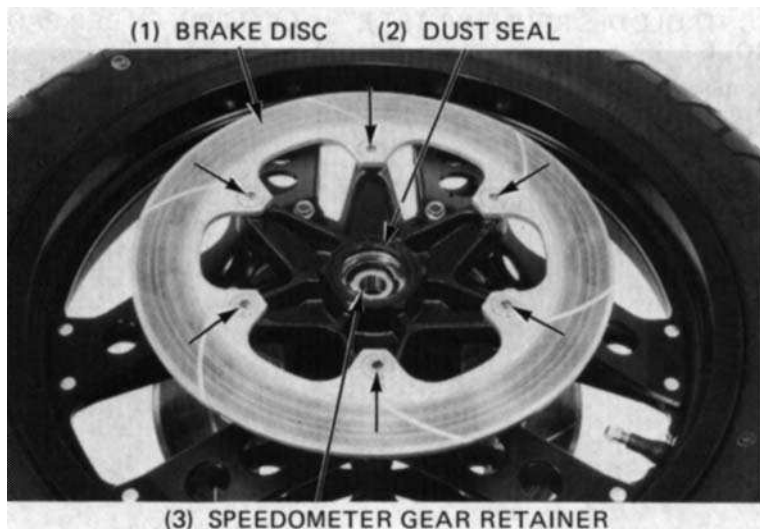

WHEEL BEARING REMOVAL

If the bearings need replacement, remove the bearing with special tool.
Remove the distance collar.

NOTE:

Never reinstall old bearings: once the bearings are removed, they must be replaced with new ones.




ASSEMBLY

WARNING

Do not get grease on the brake disc or stopping power will be reduced.

NOTE:

- the cast wheel has no rim band
- the front wheel uses a tubeless tyre. For tubeless tyre repair, refer to the Honda Tubeless Tyre manual.

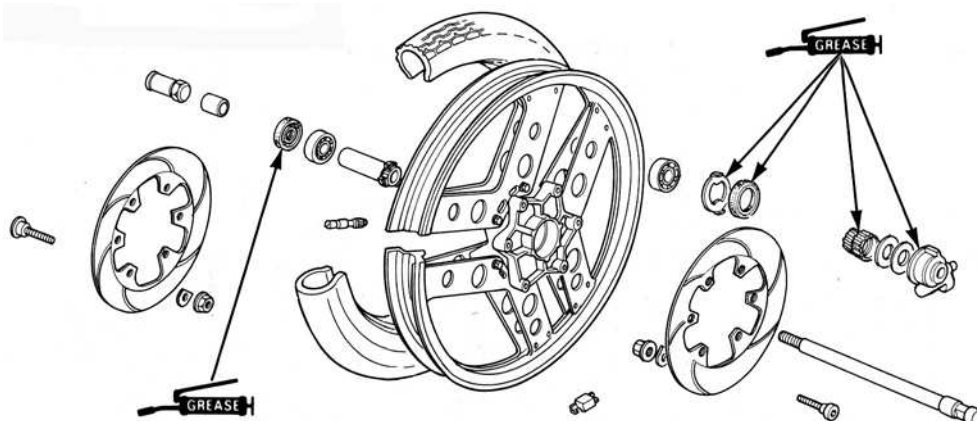



13. Front Wheel, Suspension & Steering

First drive a new right wheel bearing in squarely until it is fully seated, install the distance collar, then drive a new left bearing in squarely.

Install the speedometer gear retainer in the left side of the wheel hub, aligning its tangs with the slots in the hub.

Apply molybdenum disulfide grease to the dust seal lips and install the dust seal. Place new gaskets on the disc mounting flange, then install the left disc with its "L" mark facing out. Tighten the disc mounting bolts.

TORQUE: 35-40 Nm
(3.5-4.0 kg.m, 25-29 ft.lb)






HONDA CBX750F

13. Front Wheel, Suspension & Steering


Apply molybdenum disulfide grease to the dust seal lips and install the dust seal. Place new gaskets on the disc mounting flange, then install the right disc with its "R" mark facing out. Tighten the mounting bolt to the same torque as the left side.

Install the spacer.

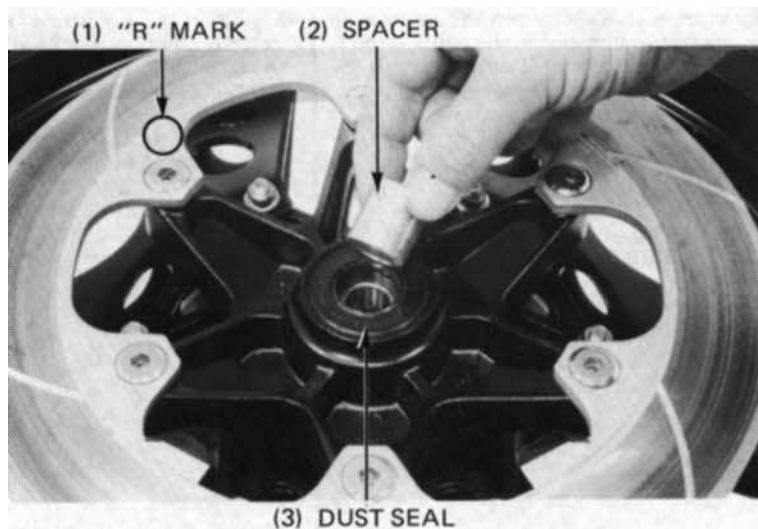

Fill the speedometer gearbox with grease and install the plain washer and drive gear.

Install the speedometer gearbox in the wheel hub, aligning the tangs in the slots.

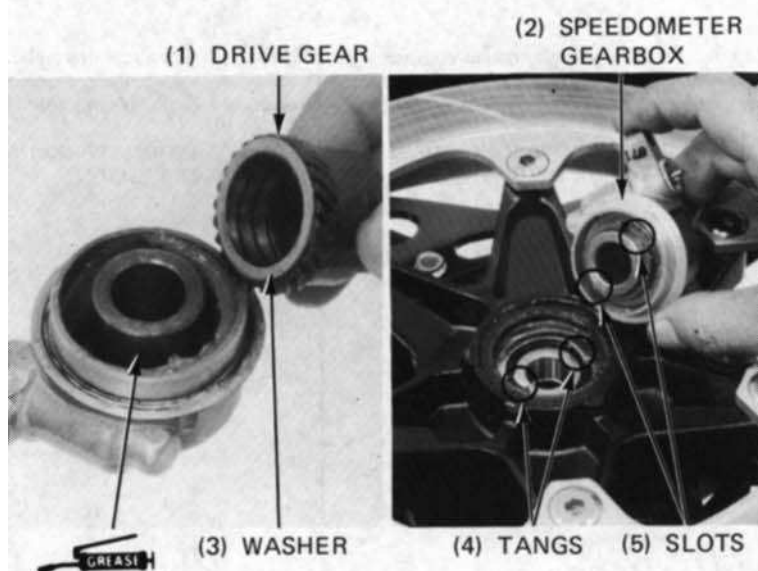


Install the front axle and axle nut. Tighten the axle nut.

TORQUE: 55-65 Nm
(5.5-6.5 kg.m, 40-47 ft.lb)

NOTE:

There are flats on the opposite end of the axle, so you can hold the axle while torquing the axle nut.

Clean the brake discs with a high quality degreasing agent.

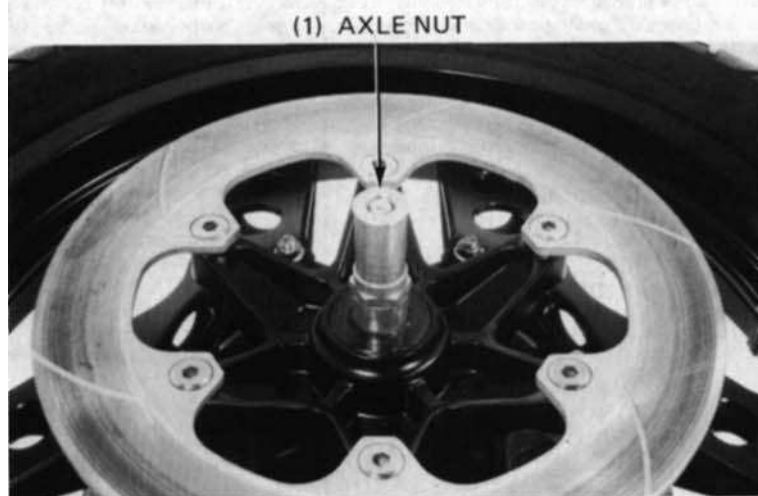



INSTALLATION

Position the wheel between the fork legs.
Lower the engine so the fork legs rest on the top of the axle.
Position the tang on the speedometer gear box against the lug on the left fork leg.
Install the axle holders with the arrow pointing forward.

Install the right front calliper so that the disc is positioned between the pads, being careful not to damage the pads.
Tighten the calliper bracket mount bolts.

TORQUE: 35-45 Nm
(3.5-4.5 kg.m, 25-33 ft.lb)

Tighten the right axle holder nuts, starting with the forward nut.

TORQUE: 18-26 Nm
(1.8-2.6 kg.m, 13-19 ft.lb)


Install the left front calliper so that the disc is positioned between the pads, being careful not to damage the pads.
Tighten the anti dive pivot bolt.

TORQUE: 10-14 Nm
(1.0-1.4 kg.m, 7-10 ft.lb)

Tighten the calliper bracket mount.

TORQUE: 35-45 Nm
(3.5-4.5 kg.m, 25-33 ft.lb)

Connect the speedometer cable and secure it with the set screw.

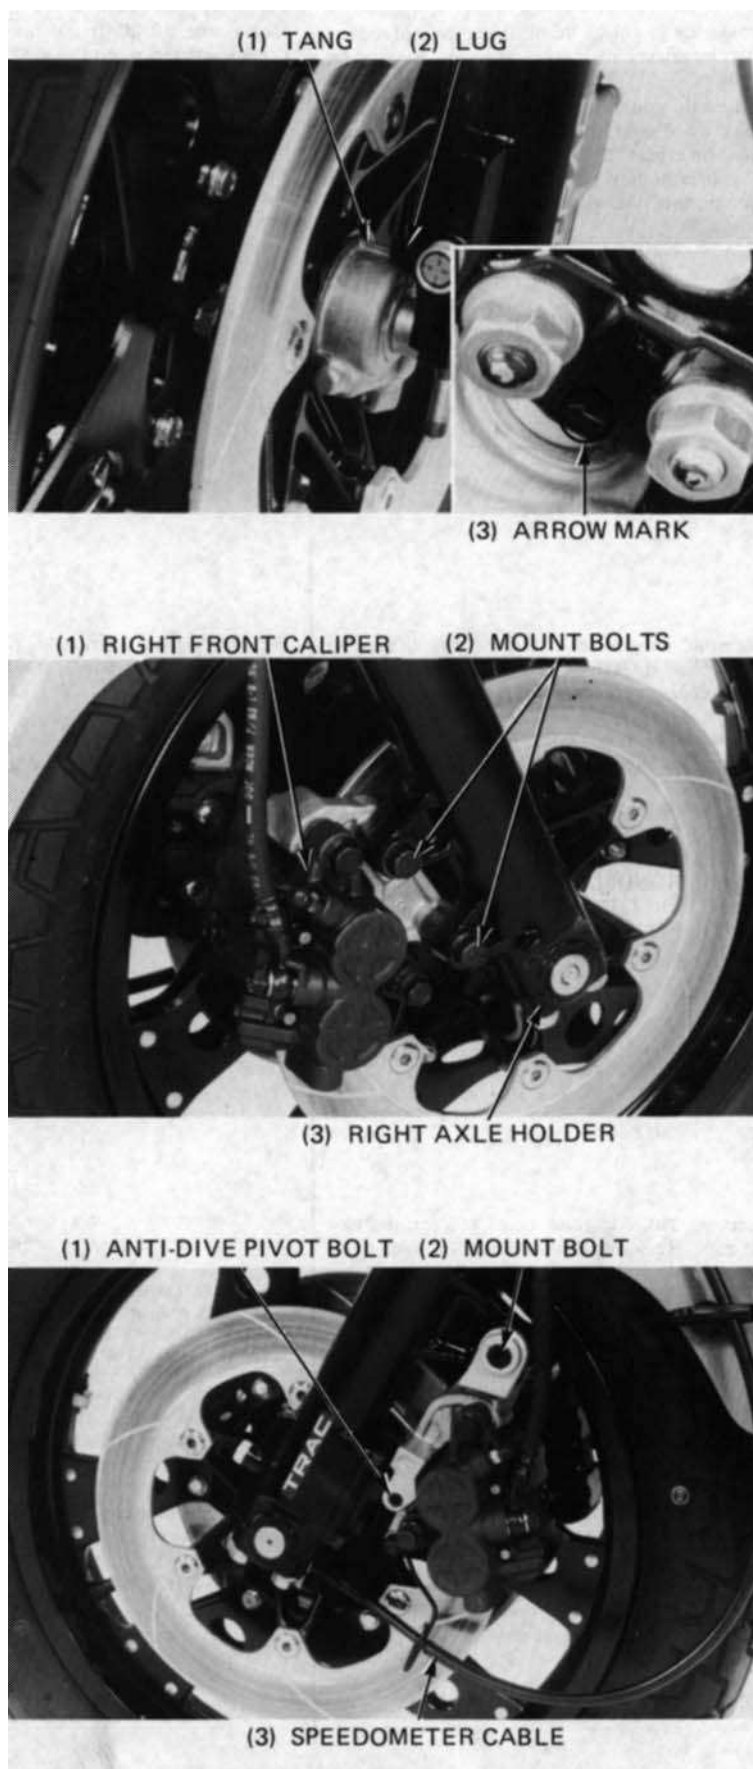




Measure the clearance between each surface of the left brake disc and the left calliper bracket with a 0.7 mm (0.028 in) feeler gauge. If the gauge inserts easily, tighten the forward left axle holder nut to the specified torque, then tighten the rear nut.

If the feeler gauge cannot be inserted easily, pull the left fork out or push it in until the gauge can be inserted.

After inserting the wheel, apply the brake several times, then recheck both discs for calliper bracket to disc clearance.

WARNING

Failure to provide adequate disc to calliper bracket clearance may damage the brake disc and impair brake efficiency.

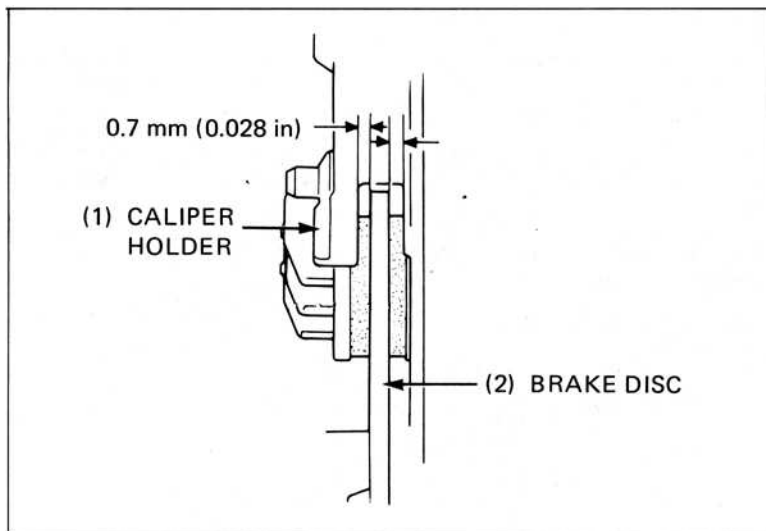


FRONT FORKS

REMOVAL


Remove the following parts:

- fairing (page 13-3)
- front wheel (page 13-11)

Remove the left and right handlebars by removing the retainer rings and loosening the pinch bolts.

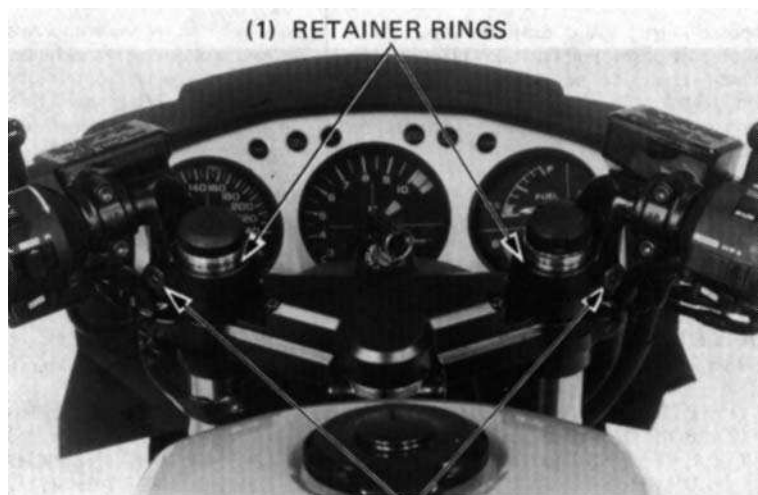

Remove the front fender, then remove the fork brace.

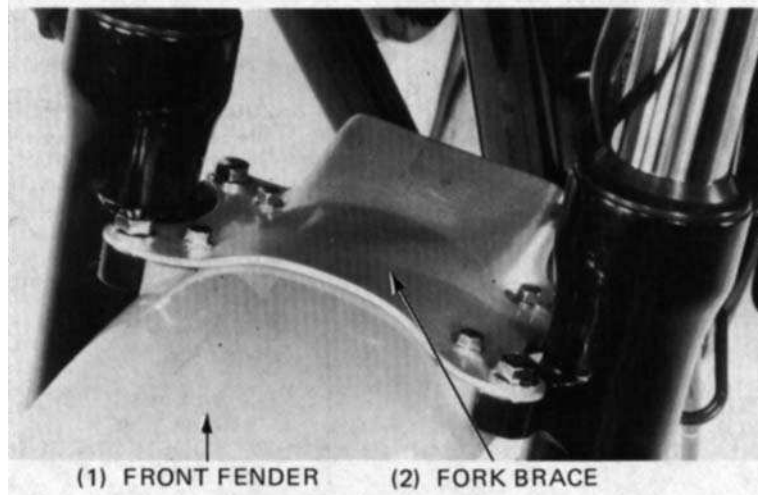




HONDA CBX750F

13. Front Wheel, Suspension & Steering

Loosen the fork top and bottom pinch bolt.

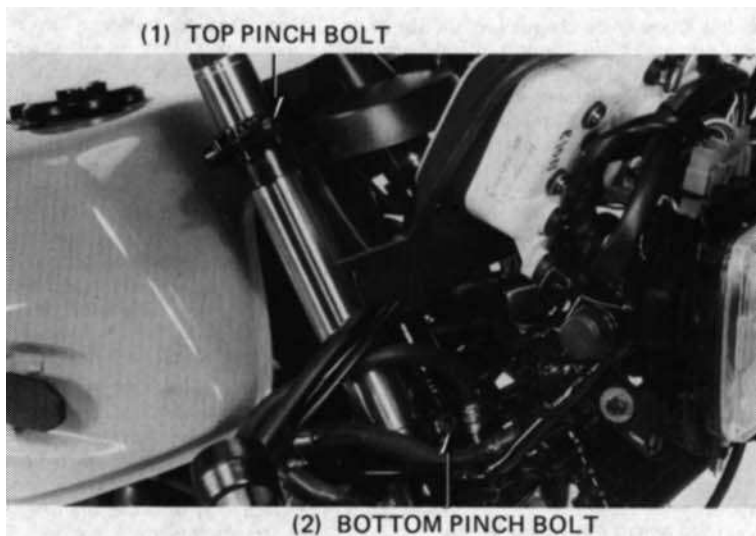

Pull the fork tube down.

NOTE

Because of the friction caused by the air joint O-ring, you'll have to turn the tube while pulling down

Remove the fork stop ring.



Pull the fork tube out of the top and bottom bridges.





13. Front Wheel, Suspension & Steering

DISASSEMBLY

Hold the fork tube in a vise, with soft jaws or a shop towel and remove the fork tube cap.

CAUTION

Do not damage the sliding surface.

Remove the space, spring seat and fork spring.

Drain the fork oil by pumping the fork up and down several times.


Hold the fork slider in a vise with soft jaws or a shop towel.

Remove the socket bolt with a hex wrench.


NOTE:

Temporarily install the spring and fork cap if difficulty is encountered in removing the socket bolt.


The piston and rebound spring can be removed from the right fork.

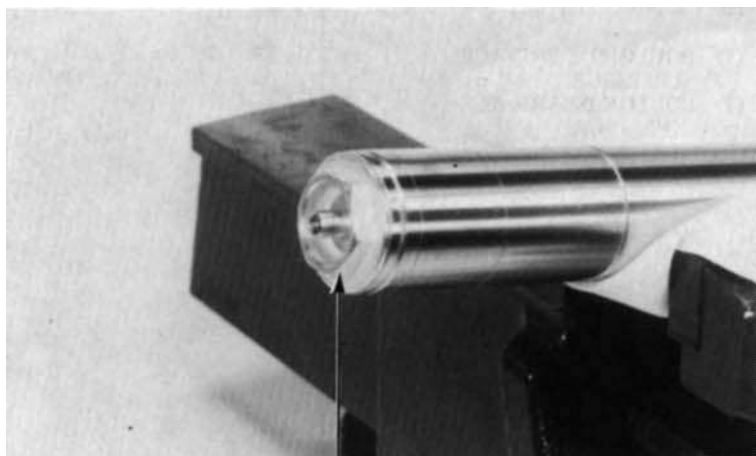

(1) FORK TUBE CAP




(1) FORK SPRING

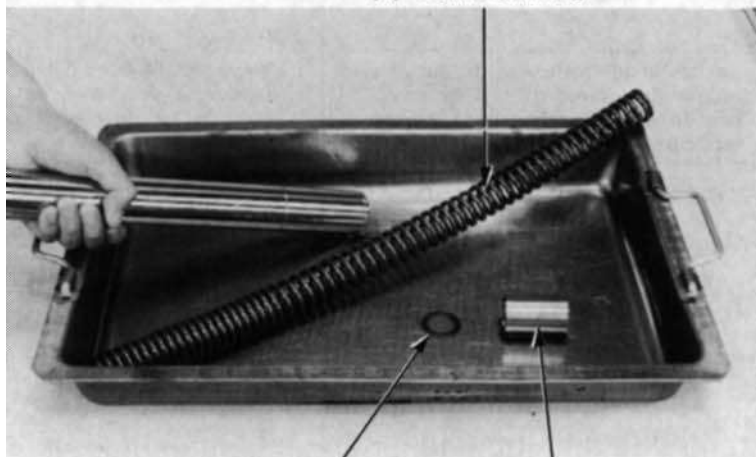

(2) SPRING SEAT (3) SPACER


(1) 6 mm HEX WRENCH
07917-3230000 OR EQUIVALENT

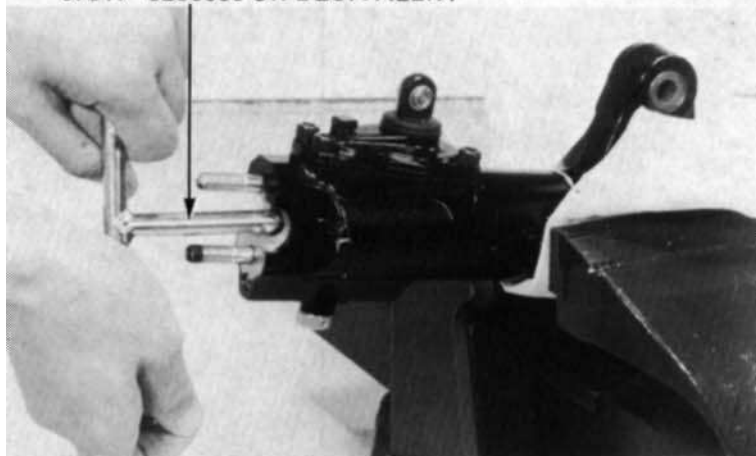




13. Front Wheel, Suspension & Steering

Remove the dust seal.

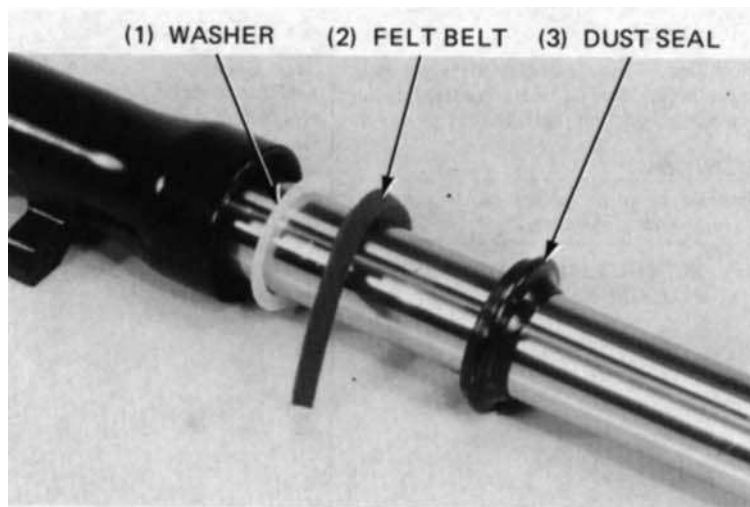


Remove the snap seal.

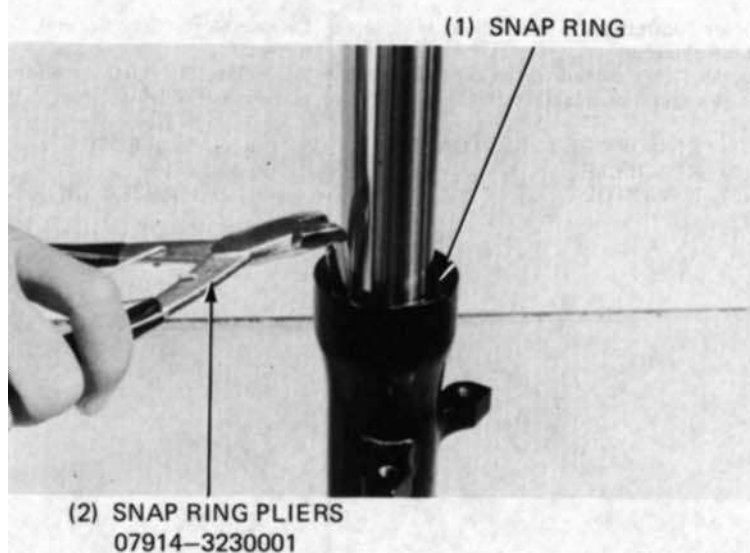

Pull the fork tube out until resistance from the slider bushing is felt. Then move it in and out, tapping the bushing lightly until the fork tube separates from the slider. The slider bushing will be forced out by the fork tube bushing.

Remove the oil lock piece from the right fork slider.

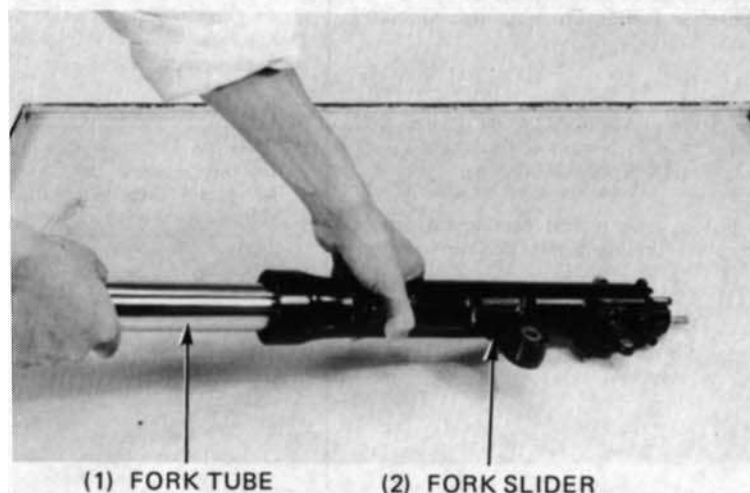



HONDA CBX750F

13. Front Wheel, Suspension & Steering



Remove the oil seal, back up ring and slider bushing from the fork tube.

NOTE:

Do not remove the fork tube bushing unless it is necessary to replace it with a new one.

On the left fork, remove the circlip, oil lock valve, spring and spring seat from the piston.

Remove the piston and rebound spring from the fork tube.

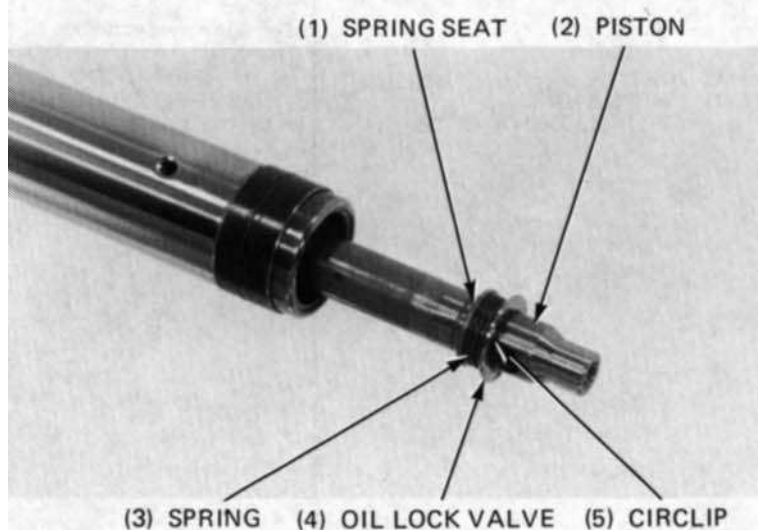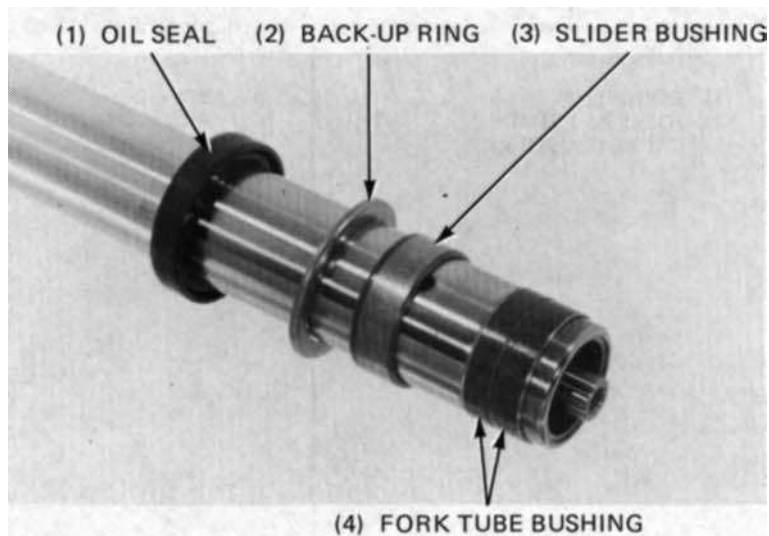


INSPECTION

FORK FREE LENGTH

Measure the fork spring free length.

SERVICE LIMIT: 543 MM (21.4 IN)

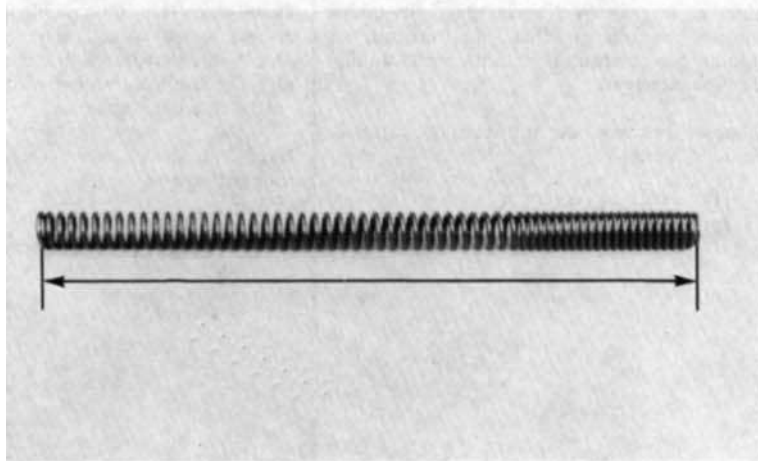




FORK TUBE/FORK SLIDER/PISTON

Check the fork tube, fork slider and piston for score marks, scratches, or excessively or abnormal wear. Replace any components which are worn or damaged.

Check the fork piston for wear or damage.


Check the rebound spring for fatigue or damage.

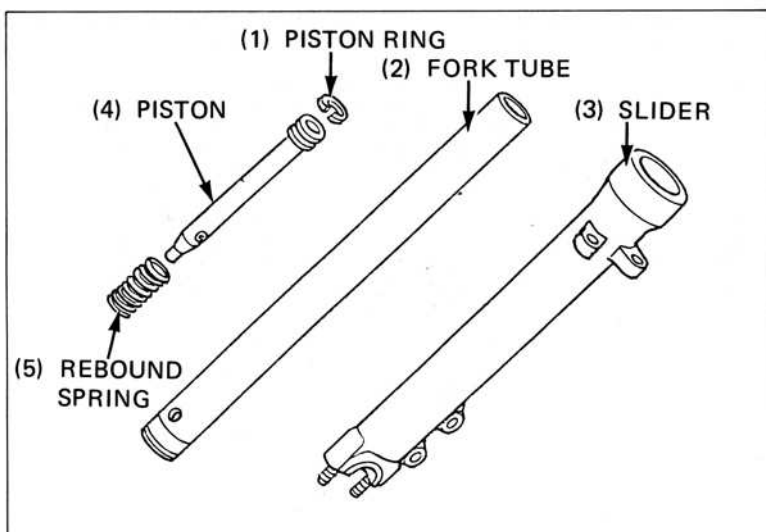

FORK TUBE

Set the fork tube in V blocks and check its run out.

SERVICE LIMIT: 0.20 mm (0.008 in)

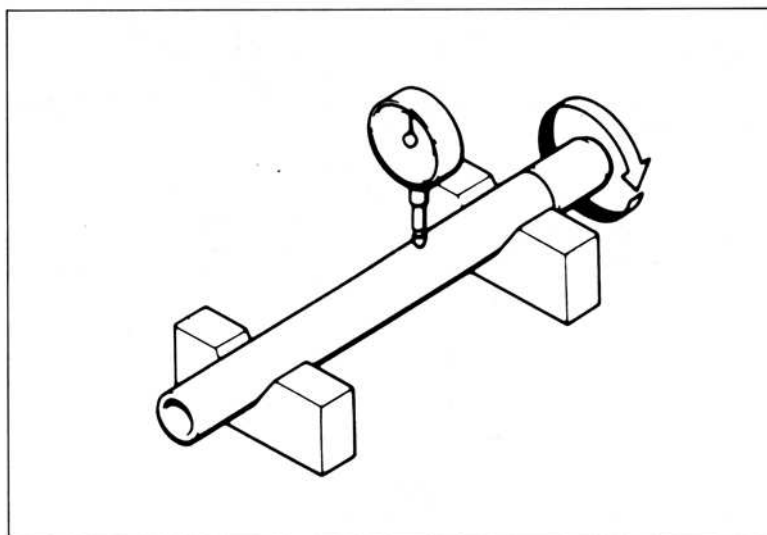


BUSHING/BACK UP RING

Visually inspect the slider and fork tube bushings.

Replace the bushings if there is excessive scoring or scratching, or if the teflon is worn so that the copper surface appears on more than 3/4 of the entire surface.

Check the back up ring: replace it if there is any distortion at the points shown.

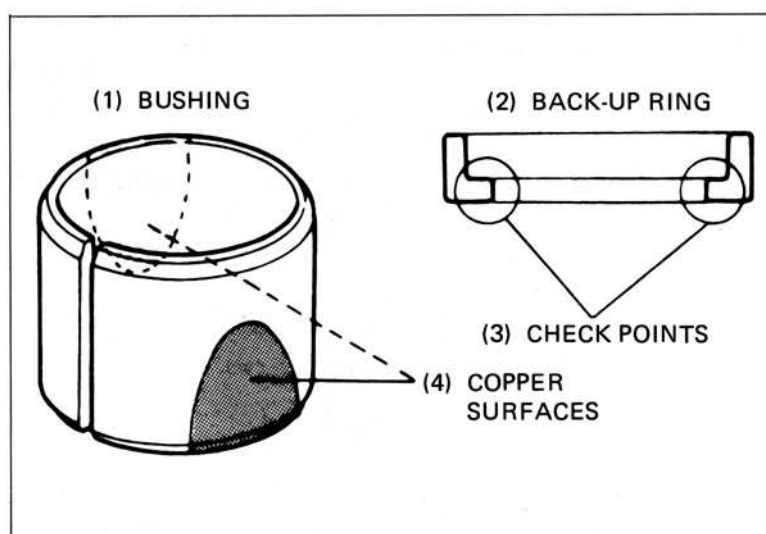






ANTI DIVE CASE

Remove the four socket bolts and remove the anti dive case from the left fork slider.

Remove the pivot collar from the piston and disassemble the anti dive case as shown.
Check each part for wear or damage.


Remove the socket bolt and remove the anti dive adjuster knob.
Remove the socket bolt and remove the valve spring and check ball.
Remove the orifice from the fork slider.

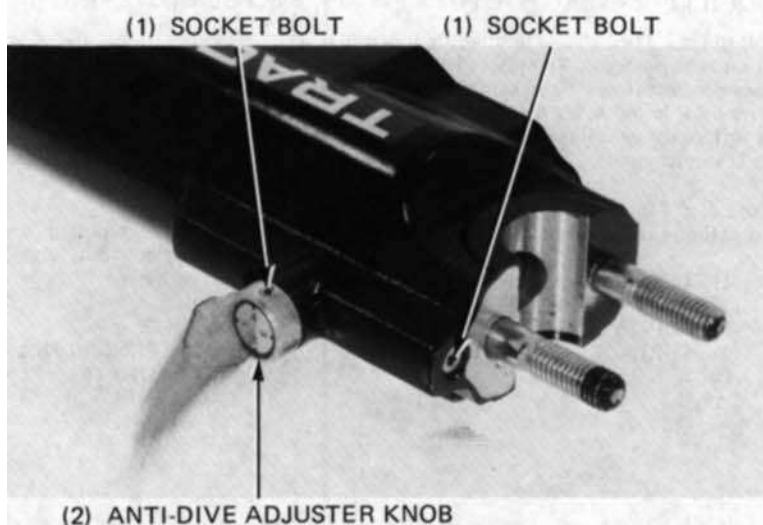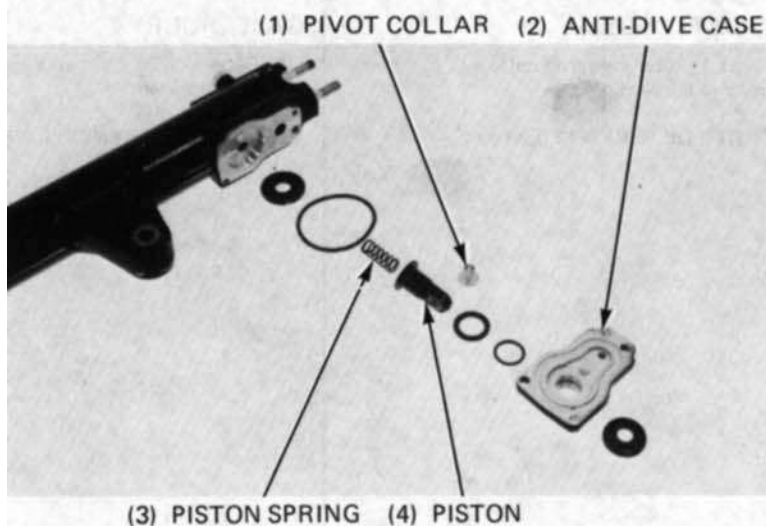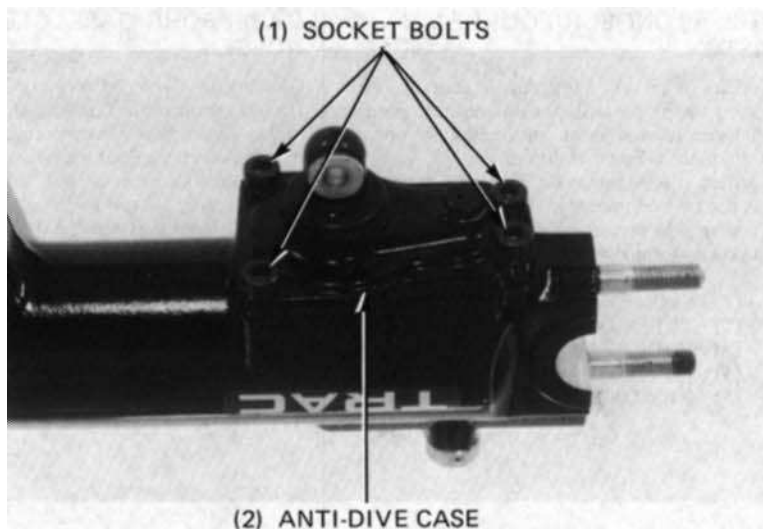



13. Front Wheel, Suspension & Steering

Check the orifice for clogging by applying compressed air. Also check the orifice for damage.
Check the valve spring and check ball for wear or damage.

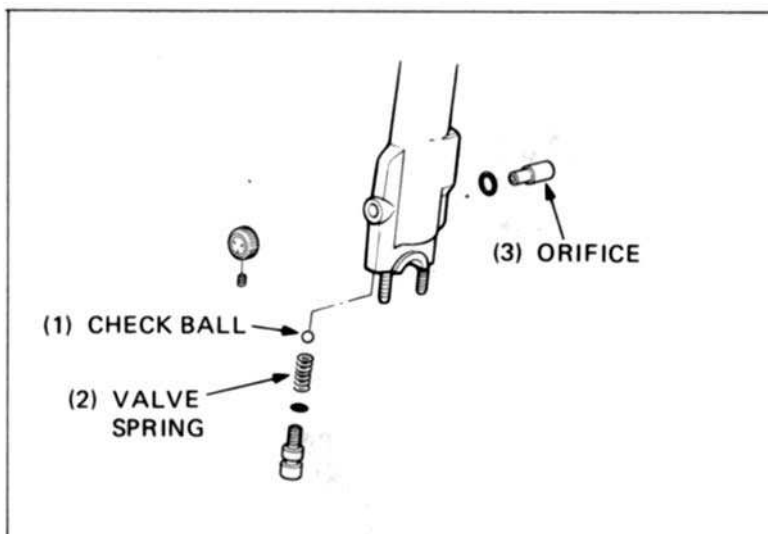



Install the orifice into the left fork slider.
Install the check ball and valve spring, and tighten the socket bolt.
Install the adjuster knob and secure it with the socket bolt.
Assemble the anti dive case.

NOTE:

- Apply a locking agent to the socket bolt threads before assembly.
- Apply ATF to the piston and O-rings.

Install the anti dive case onto the left fork slider and tighten the socket bolts.

TORQUE: 6-9 Nm
(0.6-0.9 kg.m, 4-7 ft.lb)

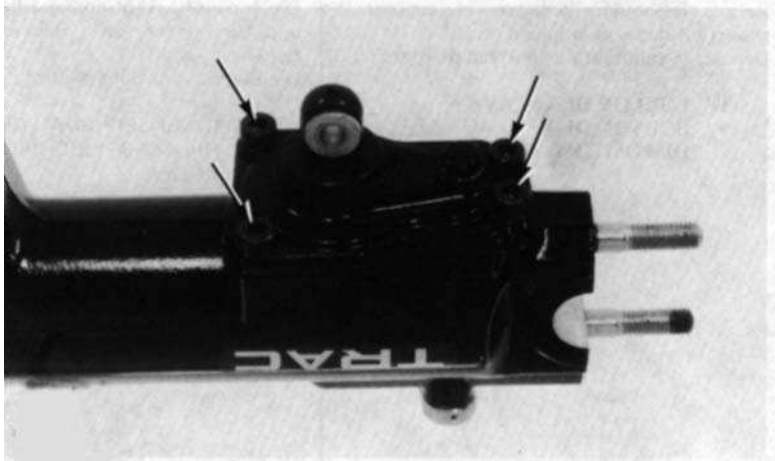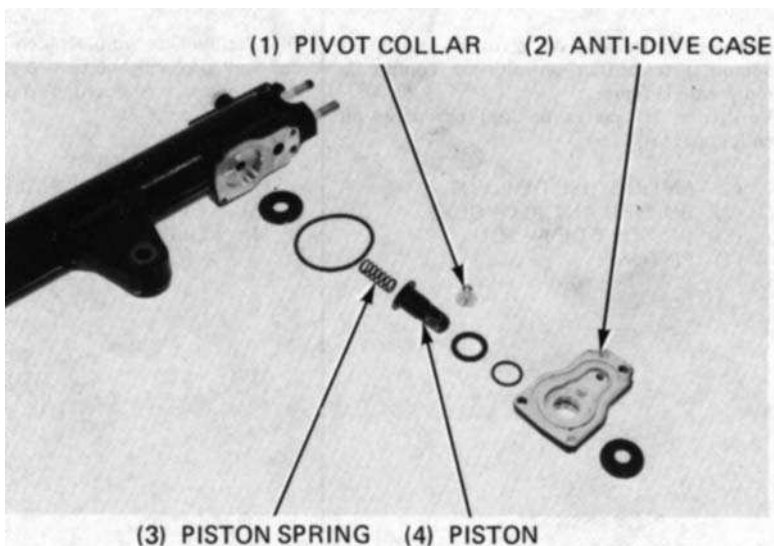




HONDA CBX750F

13. Front Wheel, Suspension & Steering


Before assembly, wash all parts with a high flash point or non flammable solvent and wipe them off completely.

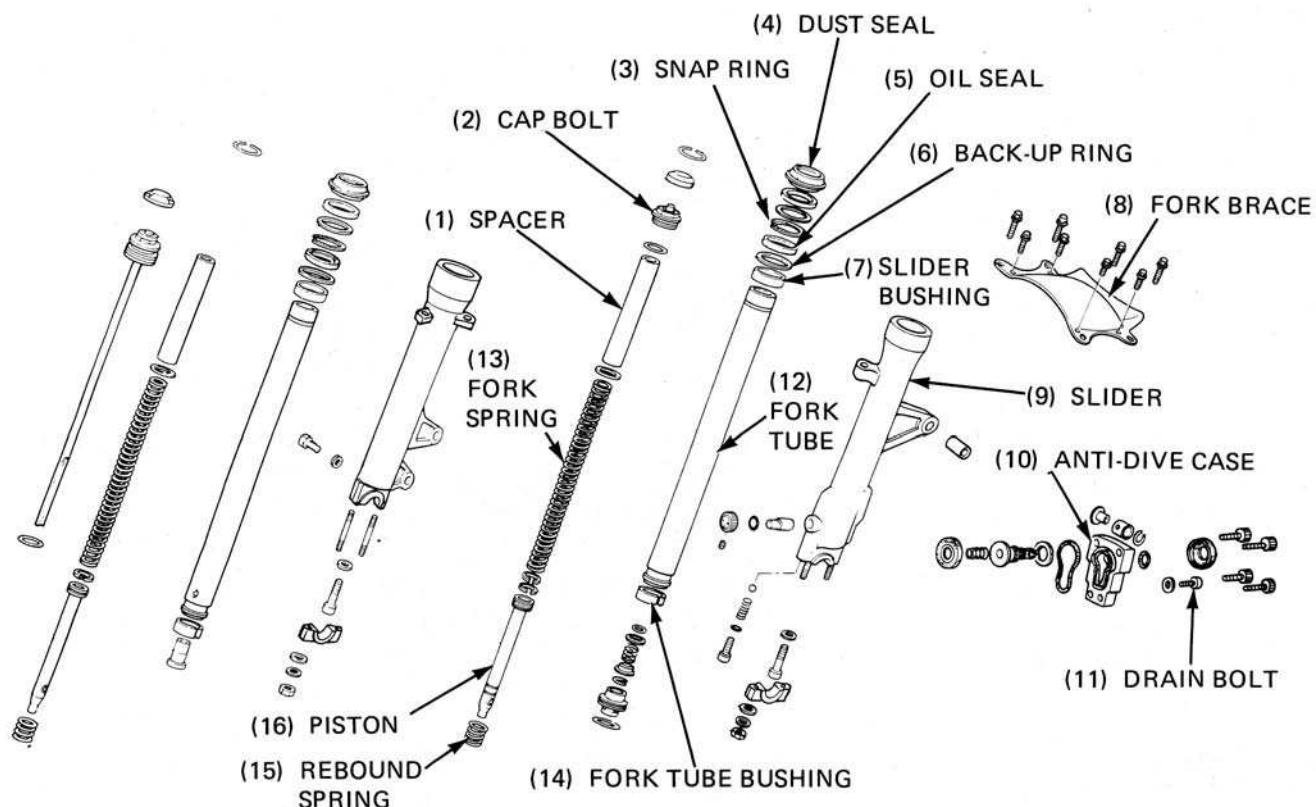

Insert the rebound spring and piston into the fork tube.

Left fork: Install the spring seat, valve piston, oil lock valve and circlip on the piston.

Right fork: Place the oil lock piece on the end of the piston, aligning the flat sides of the oil lock piece and piston end.

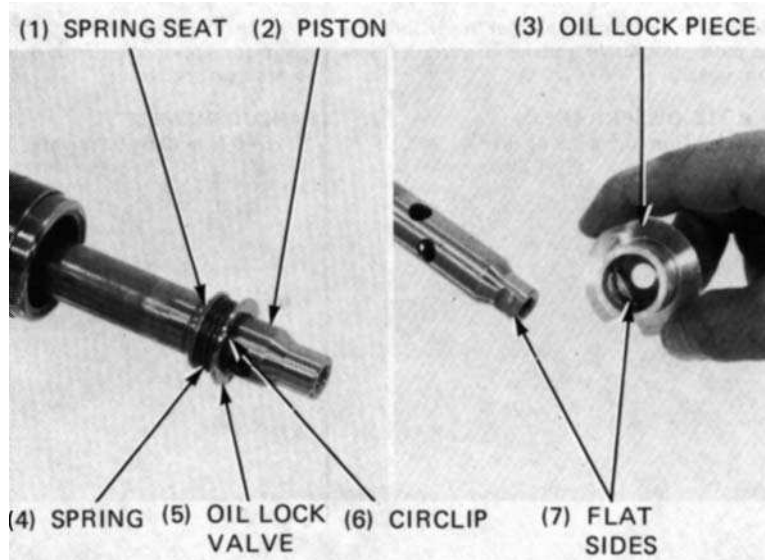



13. Front Wheel, Suspension & Steering

Insert the fork tube into the slider.

NOTE:

On the right fork, align the cutout of the oil lock piece with the drain bolt in the slider.




Place the fork slider in a vise with soft jaws or a shop towel. Apply a locking agent to the socket bolt and thread it into position. Tighten with a 6 mm hex wrench.

NOTE:

Temporarily install the fork spring and fork cap bolt to tighten the socket bolt.

TORQUE: 15-25 Nm
(1.5-2.5 kg.m, 11-18 ft.lb)

Place the slider bushing over the fork tube and rest it on the slider. Put the back up ring and an old bushing or equivalent tool on top. Drive the bushing into place with the seal driver and remove the old bushing or equivalent tool. Coat a new oil seal with ATF and install it with the seal markings face up. Drive the seal in with the seal driver.

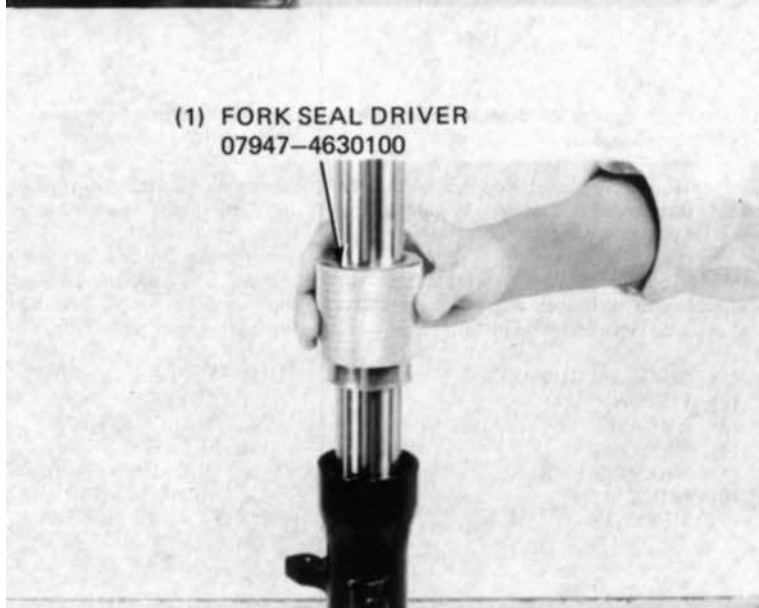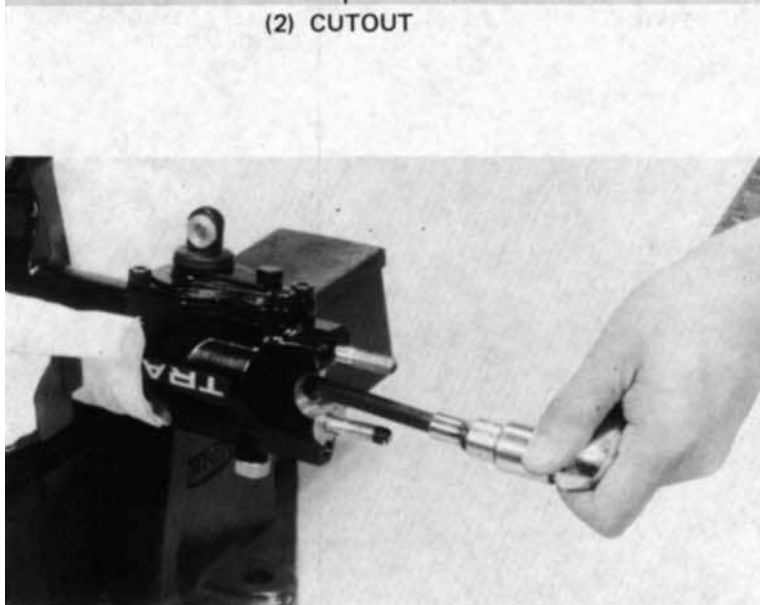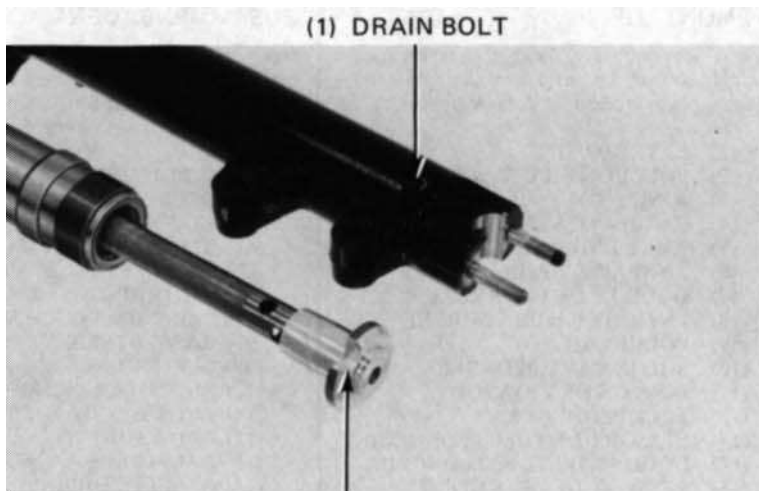




HONDA CBX750F

13. Front Wheel, Suspension & Steering

Install the snap ring with its radiused edge facing down and install the washer, oil felt and dust cover.

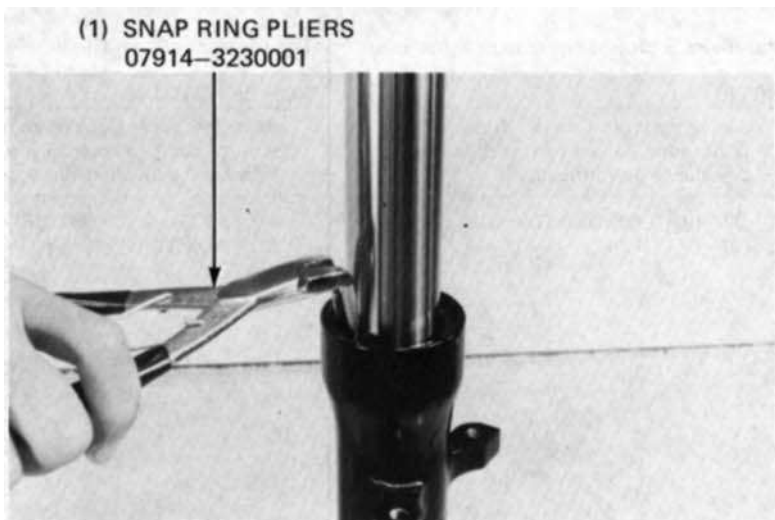


Pour the specified amount of ATF into the fork tube.

CAPACITY:

Right fork: 375 cc (13.2 oz)


Left fork: 400 cc (14.1 oz)

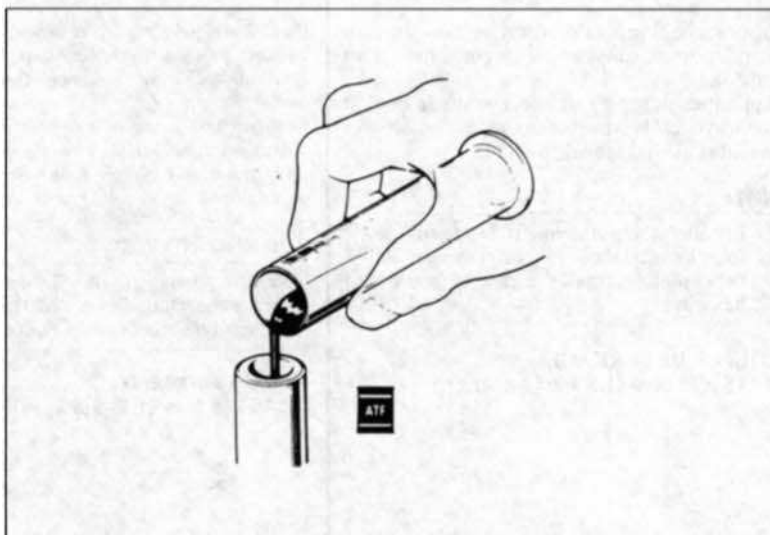

Install the fork spring, spring seat and spacer in the fork tube.

NOTE:

Note the spring direction: the closely wound coils must face toward the bottom.

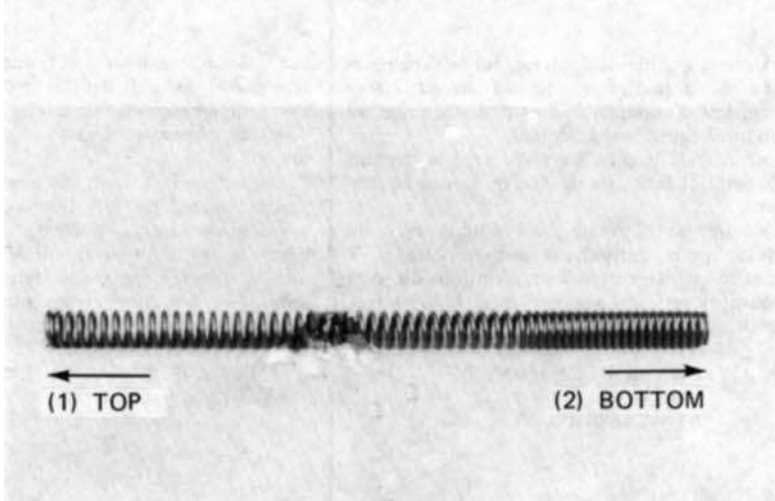



HONDA CBX750F


13. Front Wheel, Suspension & Steering

Hold the fork tube in a vise with soft jaws or a shop towel, and install and tighten the fork tube cap.

TORQUE: 15-30 Nm
(1.5-3.0 kg.m, 11-22 ft.lb)


NOTE:

On the right fork, align the cavity on the damping adjuster rod with the flat side of the piston.

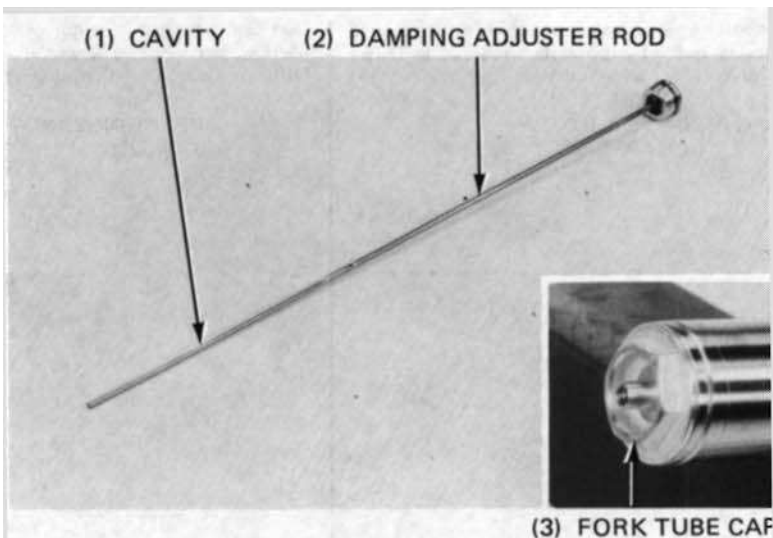

INSTALLATION

Install the fork and temporarily tighten the bottom pinch bolt.

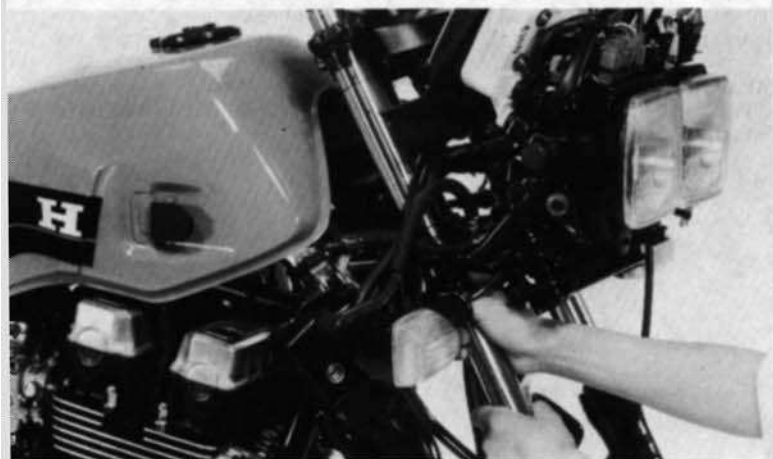

Install the fork stop ring in the groove in the fork tube.
Push the fork tube up until the stop ring contacts the air joint.





Tighten the bottom pinch bolt.

TORQUE: 45-55 Nm
4.5-5.5 kg.m, 33-40 ft.lb)

Tighten the top pinch bolt.

TORQUE: 9-15 Nm
(0.9-1.5 kg.m, 7-11 ft.lb)

Loosely install the fork brace.

Install the removed parts in the reverse order of removal.

- front fender.
- Handlebars.
- front wheel.
- fairing.

With the front brake applied, pump the forks up and down several times.
Tighten the front fork brace mounting bolts.

TORQUE: 10-15 Nm
1.0-1.5 kg.n, 7-11 ft.lb)



Fill the fork tubes with air.

RECOMMENDED PRESSURE
0-40 kPa (0-0.4 kg/cm³, 0-6 psi)

CAUTION

- **Use only a hand-operated air pump to fill the fork tubes. Do not use compressed air.**
- **Maximum pressure is 300 kPa (3 kg/cm³, 43 psi). Do not exceed this or fork tube component damage may occur.**

With the front brake applied, pump the forks up and down several times. Place the motorcycle on its centre stand.
Check the air pressure and adjust if necessary.

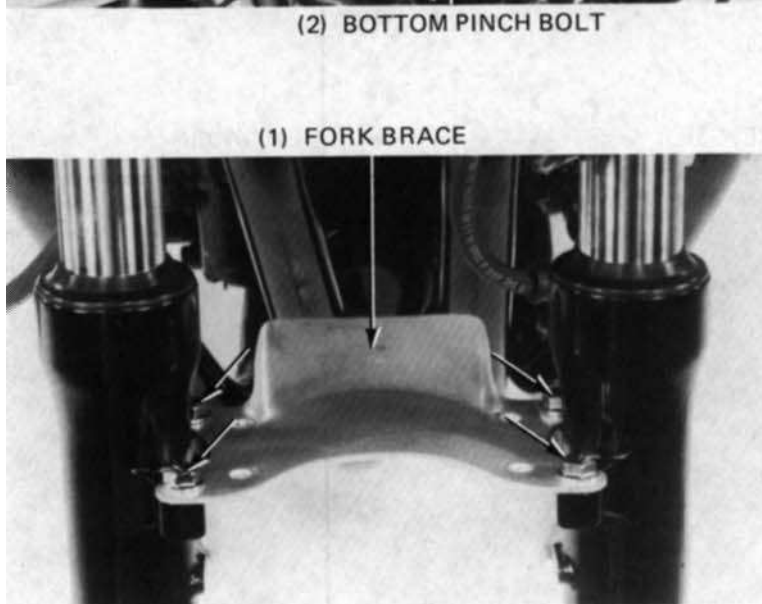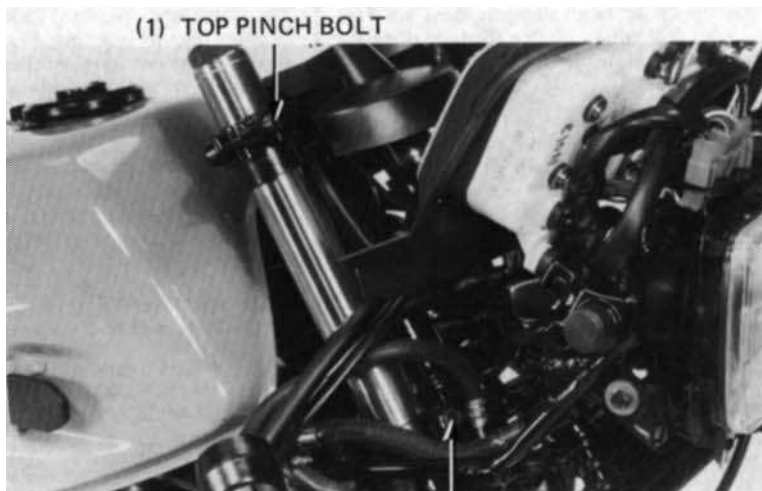



STEERING STEM

REMOVAL

Remove the following parts:

- fairing (page 13-3).
- handlebars.
- fuse holder cover.


Loosen and remove the steering stem nut.

Remove the front forks (13-19).


Remove the brake 3 way joint.

Disconnect the ignition switch and fuse holder wire couplers.


Loosen the top bridge pinch bolt and remove the top bridge with the air joint from the stem.

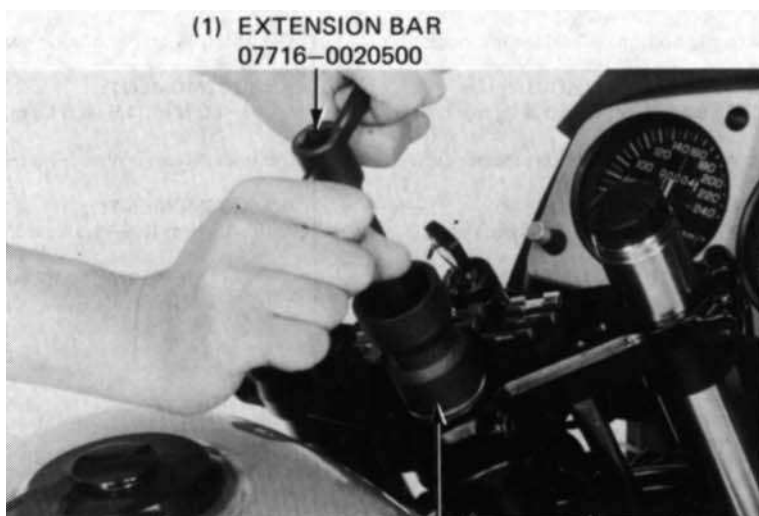

(2) LOCK NUT WRENCH, 30 x 32 mm
07716-0020400

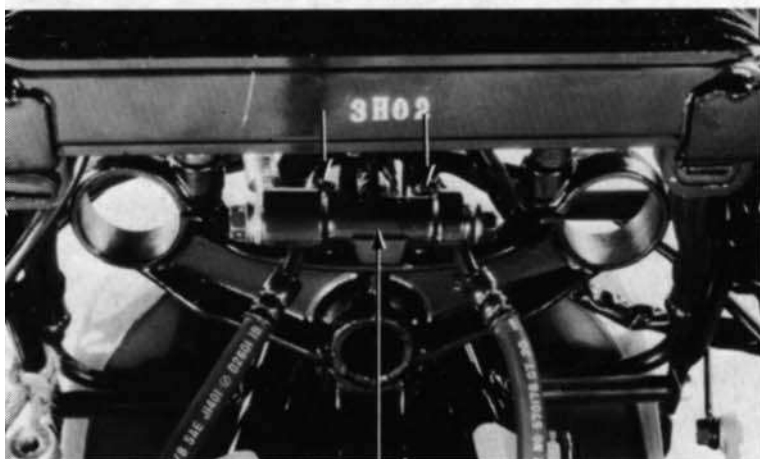

(1) BRAKE 3-WAY JOINT

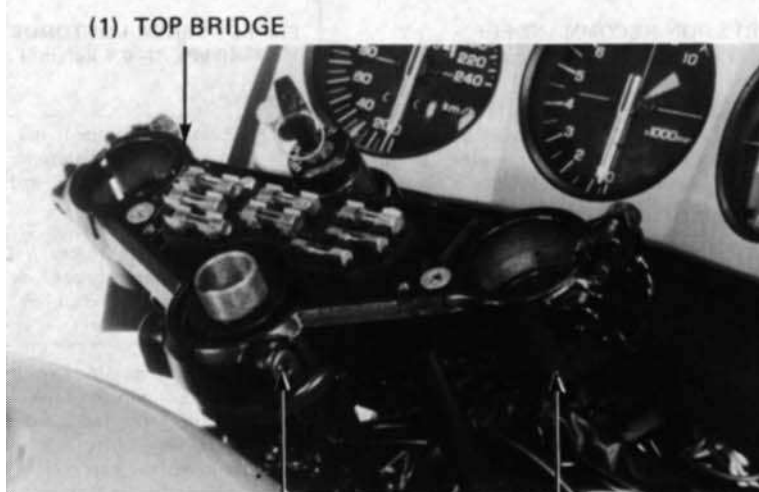


(2) PINCH BOLT

(3) AIR JOINT




13. Front Wheel, Suspension & Steering

Straighten the lock washer tabs and remove the lock nut and lock washer.

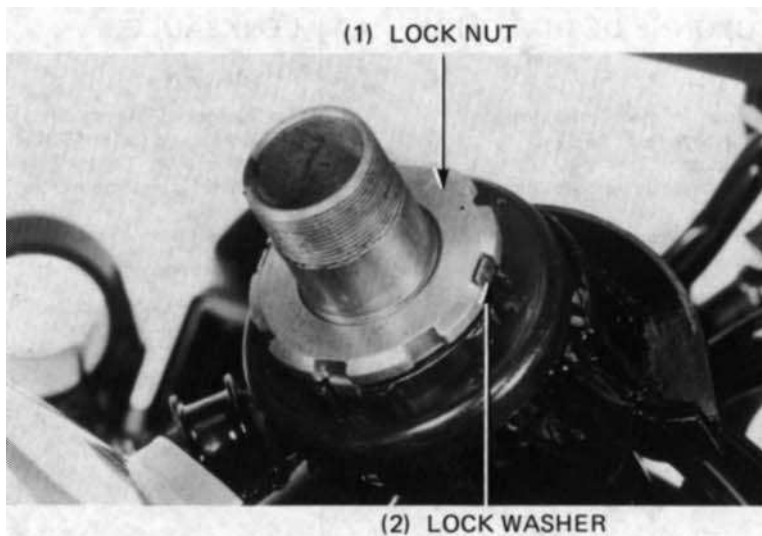

Loosen the bearing adjustment nut and remove the nut, dust seal and upper bearing inner race. Then remove the steering stem. Remove the grease retainer from the stem.

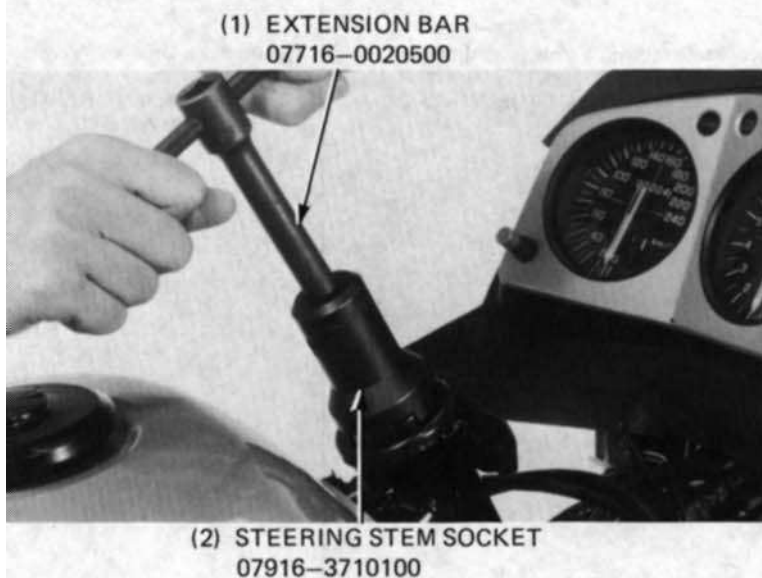


Check the steering stem bearing for wear or damage.

BEARING REPLACEMENT

NOTE:

Replace the bearing and bearing races as a set.

Remove the lower bearing inner race and dust seal.

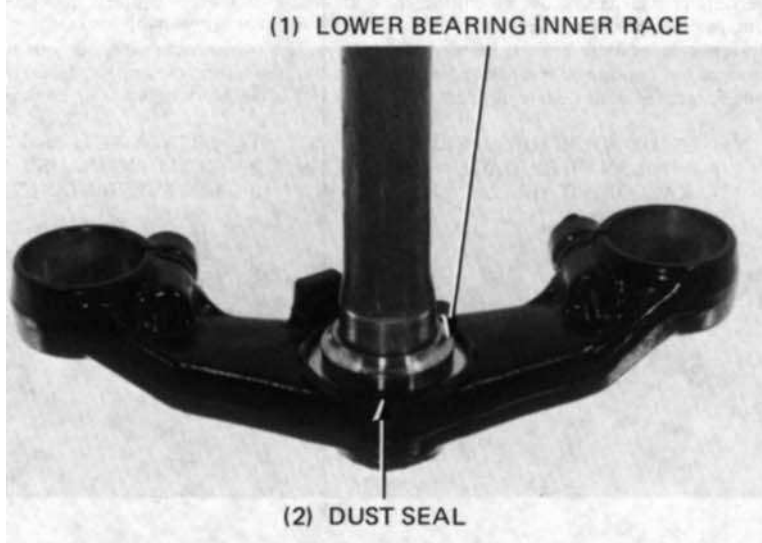



HONDA CBX750F

13. Front Wheel, Suspension & Steering

Remove the lower bearing outer race with special tools.





(2) BEARING RACE REMOVER
07946-3710500

Remove the upper bearing outer race with a special tool.

NOTE:

If the motorcycle has been involved in an accident, examine the area around the steering head for cracks.

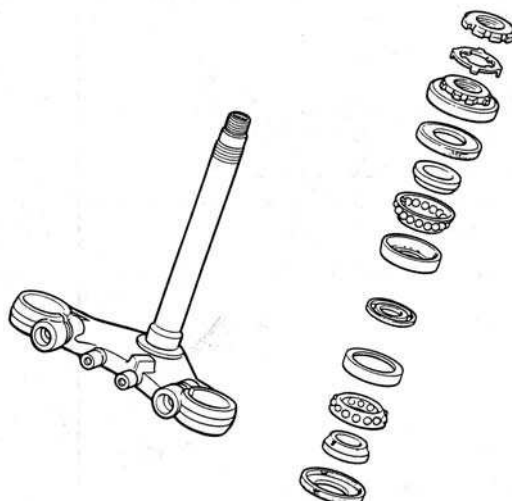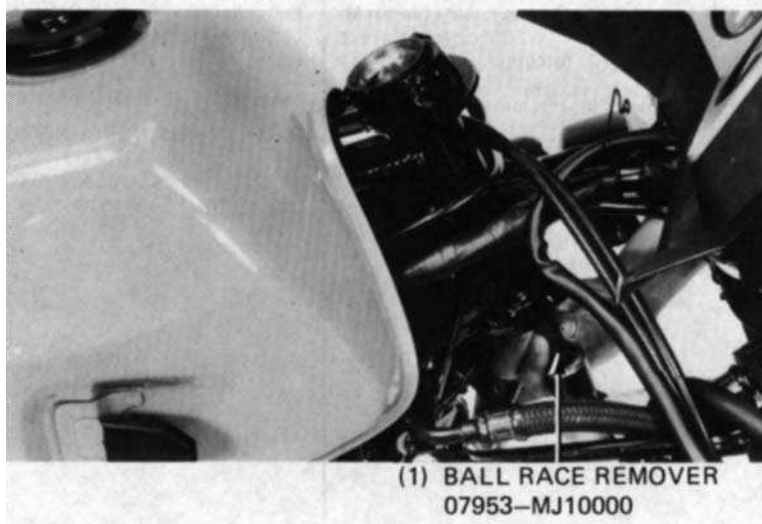



HONDA CBX750F

13. Front Wheel, Suspension & Steering

Drive a new upper bearing outer race into the steering head.




(2) ATTACHMENT, 42 x 47 mm
07746-0010300

(1) ATTACHMENT, 52 x 55 mm
07746-0010400



(1) STEERING STEM DRIVER
07946-MB00000

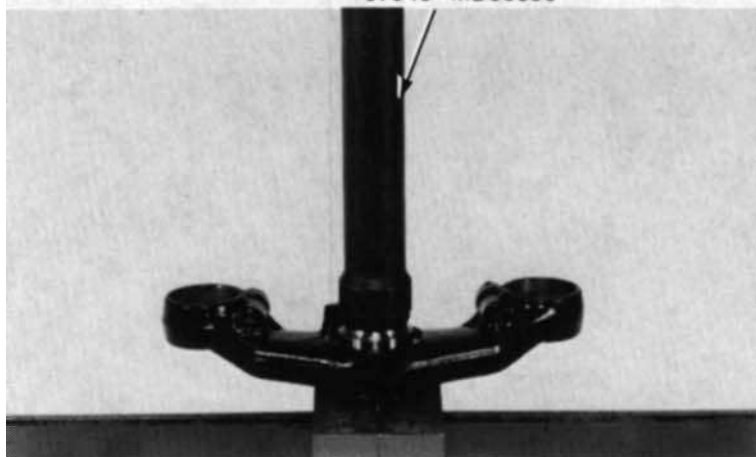

Drive a new lower bearing outer race into the steering head.

Install a dust seal onto the steering stem and press a new lower bearing inner race over the stem with a special tool.



INSTALLATION

Pack the bearing cavities with bearing grease.

Install the lower bearing onto the steering stem.

Install the grease retainer on the steering stem, then insert the steering stem into the steering head.

Install the upper bearing in the steering head.

Install the upper bearing inner race and dust seal.


Install the bearing adjustment nut and tighten it to the specified torque.

TORQUE: 23-27 Nm
(2.3-2.7 kg.m, 17-20 ft.lb)

Turn the steering stem all the way to right and left five times to seat the bearings.

Retighten the adjustment nut to the same torque.

Turn the steering stem to seat the bearings.

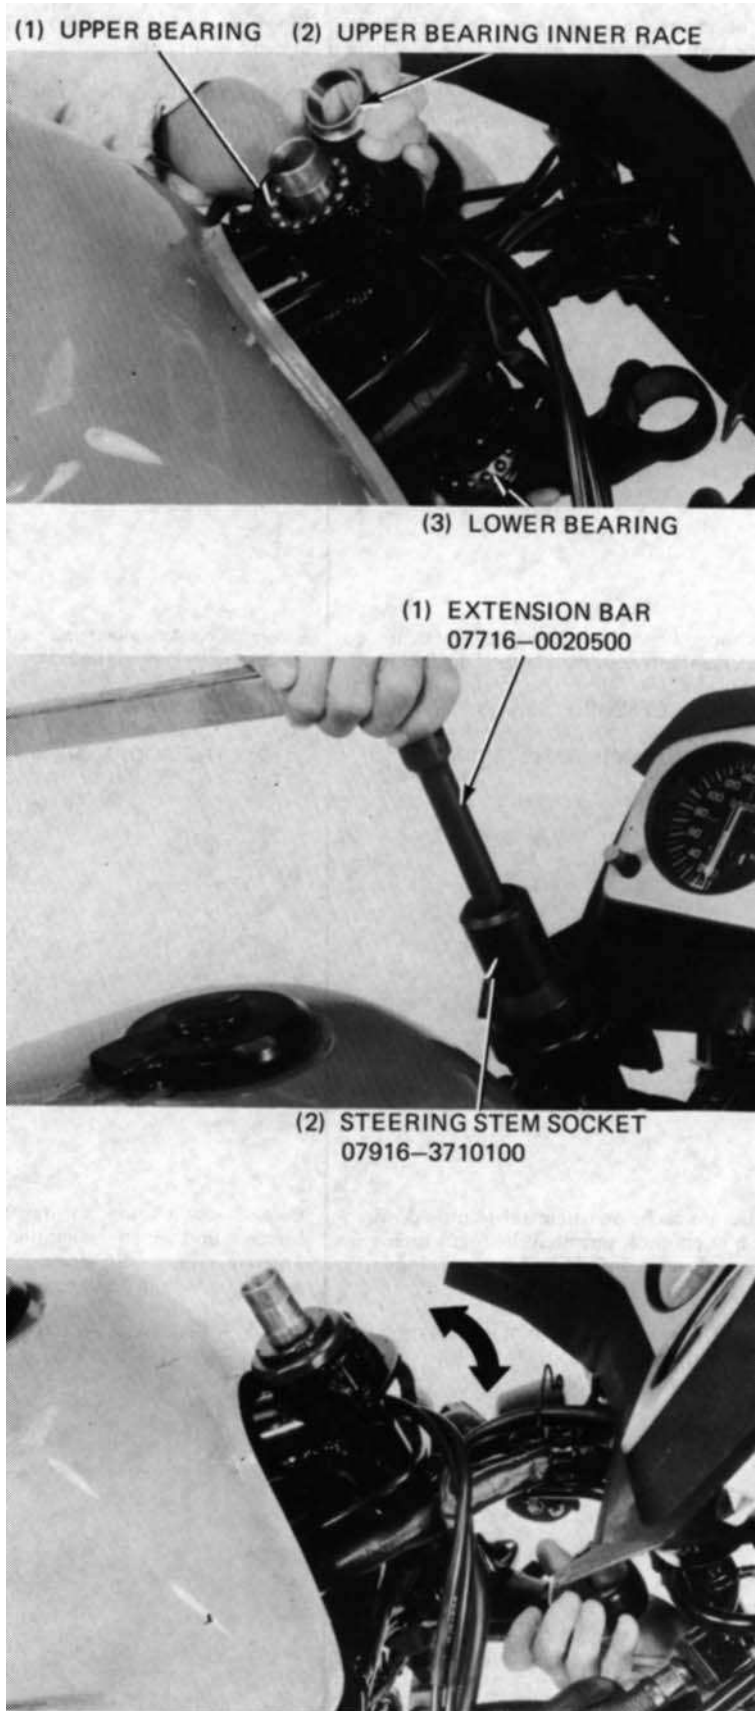



HONDA CBX750F

13. Front Wheel, Suspension & Steering

Install a new bearing adjustment nut lock washer aligning the tabs with the grooves in the lock nut. Bend two opposite tabs down into the grooves.

NOTE:

DO NOT install a used bearing adjustment nut lock washer.


Finger tighten the lock nut all the way. Hold the adjustment nut and further tighten the lock nut within 90 degrees enough to align its grooves with the lock washer tabs. Bend the lock washer tabs up into the lock nut grooves.

Install the fork top bridge with the fork air joint and install the steering stem nut. Temporarily install the front forks. Tighten the steering stem nut.


TORQUE: 90-120 Nm
(9.0-12.0 kg.m, 65-87 ft.lb)

Tighten the steering stem pinch bolt.

TORQUE: 20-30 Nm
(2.0-3.0 kg.m, 14-22 ft.lb)

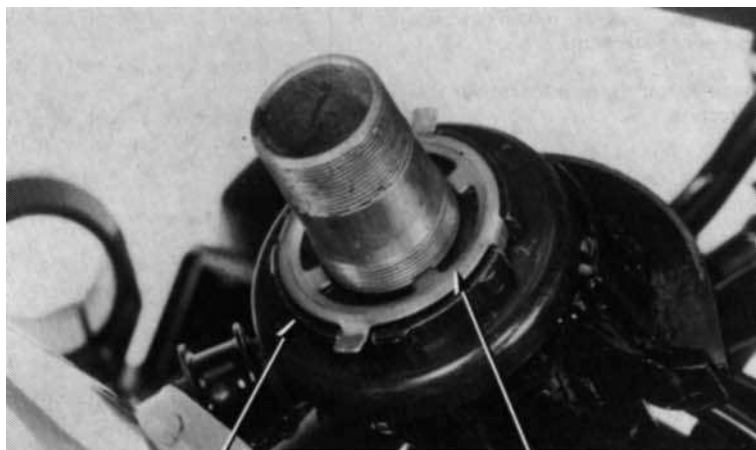


(1) BEARING ADJUSTMENT NUT (2) LOCK WASHER

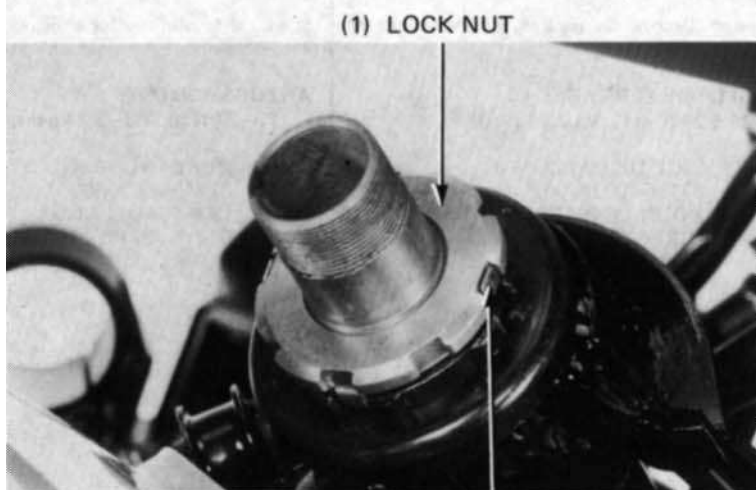

(1) LOCK NUT

(2) LOCK WASHER TAB

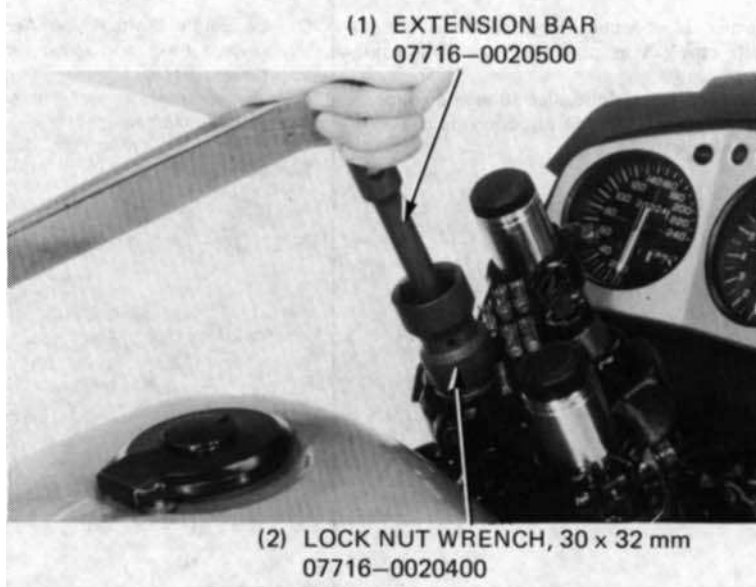

(1) EXTENSION BAR
07716-0020500

(2) LOCK NUT WRENCH, 30 x 32 mm
07716-0020400




STEERING HEAD BEARING PRELOAD

Install the front forks (page 13-30)
Install the front wheel (page 13-18)
Raise the front wheel off the ground and place a stand under the engine. Position the steering stem straight ahead position.
Hook a spring balancer to the fork tube and measure the steering head bearing preload.

NOTE:

Make sure there is no cable and wire harness interference

The preload should be within 1.1-1.7 kg (2.4-3.7 lbs) for right and left turns.
If the readings do not fall within the limits, lower the front wheel on to the ground and adjust the bearing adjustment nut.
After making sure the bearing preload, install the removed parts in the reverse order of removal.


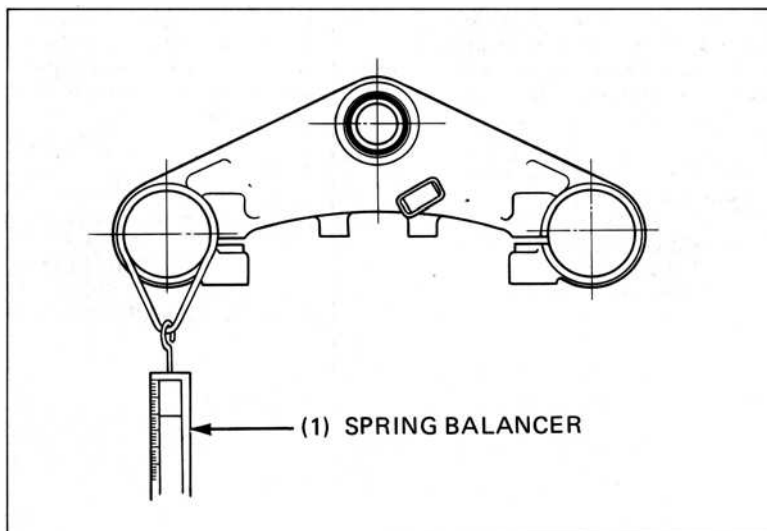


IGNITION SWITCH

CONTACT BASE REPLACEMENT

Remove the fairing (page 13-3)
Disconnect the ignition wire coupler.

Remove the fuse holder cover and fuse holder from the fork top bridge.
Remove the handlebars by removing the retainer rings and loosening the pinch bolts.
Remove the fork air joint attaching screws.
Remove the steering stem nut and washer.
Loosen the fork top pinch bolts and bridge pinch bolt.
Remove the top bridge from the forks and steering stem.

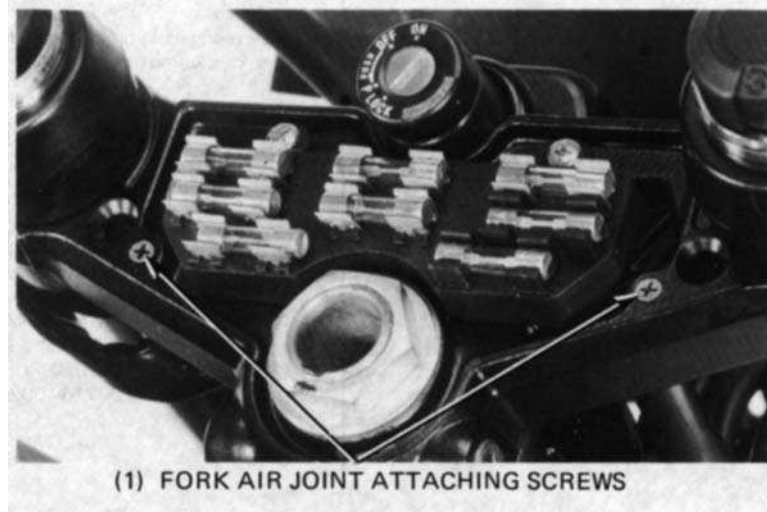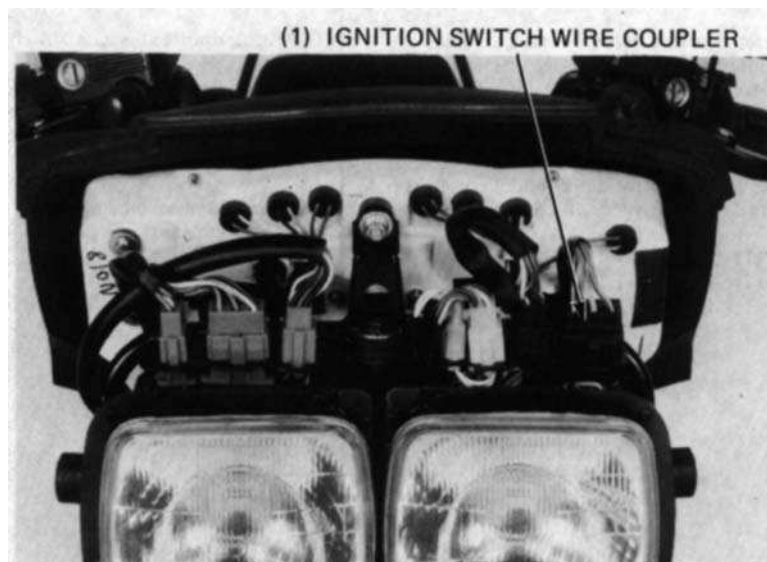



Pry open the retainer.

Turn the ignition key so that it is partway between the ON and OFF detent positions.

Push the lugs that are locked in the slots, then pull the contact base from the switch.

NOTE:

On G and ND models, if the ignition switch lock cylinder must be replaced, remove the shear bolts that are attaching the cylinder to the top bridge, using a drill. Install a new cylinder and tighten the shear bolts until the bolt head twists off.

Install the contact base and top bridge in the reverse order of removal.

TORQUE:

STEERING STEM NUT:

90-12 Nm (9.0-12.0 kg.m, 65-87 ft.lb)

STEERING STEM PINCH BOLT:

20-30 Nm (2.0-3.0 kg.m, 17-20 ft.lb)

FORK TOP PINCH BOLT:

9-15 Nm (0.9-1.5 kg.m, 7-11 ft.lb)

HANDLEBAR PINCH BOLTS:

35-45 Nm (3.5-4.5 kg.m, 25-33 ft.lb)

