




HONDA CBX750F

14. Rear Wheel & Suspension

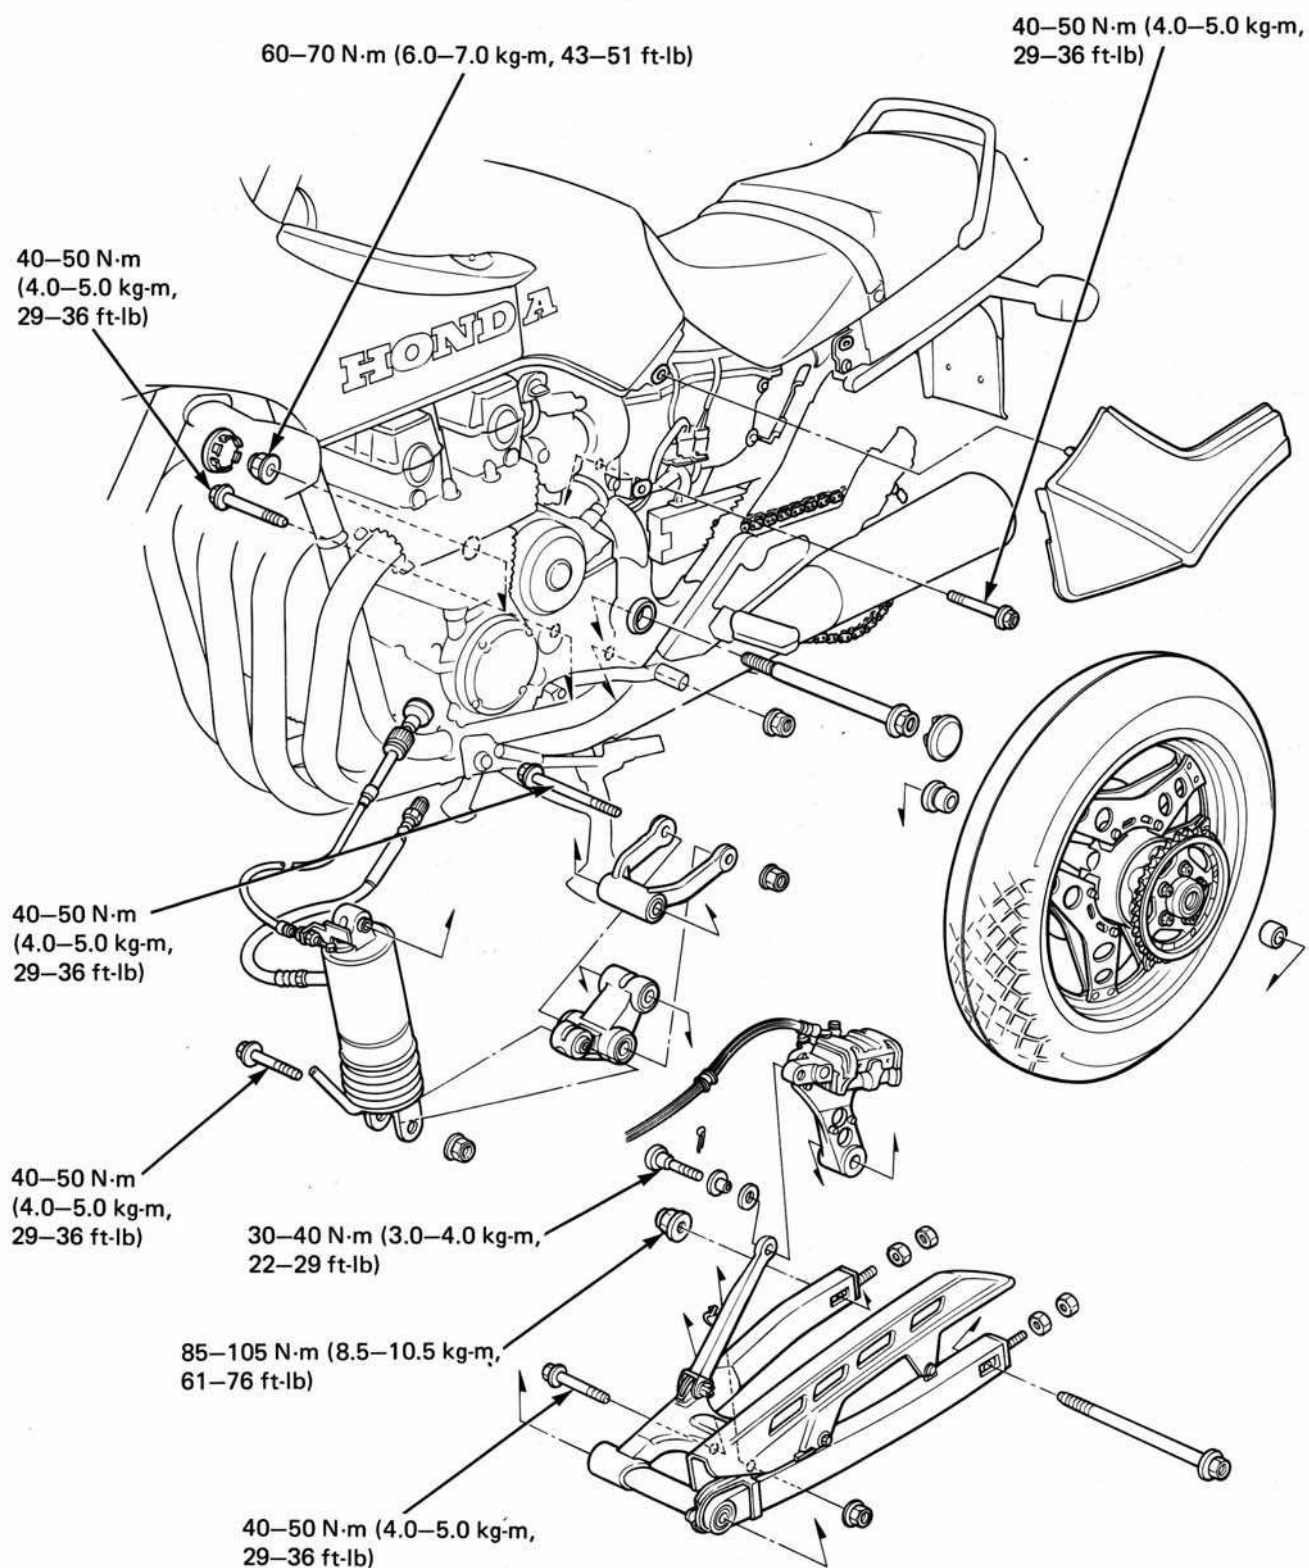



SERVICE INFORMATION	14-1	SHOCK ABSORBER	14-9
TROUBLESHOOTING	14-2	SWINGARM	14-16
REAR WHEEL	14-3		

SERVICE INFORMATION

GENERAL

- The rear wheel uses a tubeless tyre. For tubeless tyre repairs, refer to the TUBELESS TYRE MANUAL.

SPECIFICATIONS

		STANDARD	SERVICE LIMIT
Axle runout		-	0.2 mm (0.01 in)
Rear wheel rim runout	Radial	-	2.0 mm (0.08 in)
	Axial	-	2.0 mm (0.08in)
Shock absorber air pressure		0-400 kPa (0-4.0 kg/cm ² , 0-57 psi)	-

TORQUE VALUES

Rear brake disc	35-40 Nm (3.5-4.0 kg.m, 25-29 ft.lb)
Final driven sprocket	80-100 Nm (8.0-10.0 kg.m, 58-72 ft.lb)
Rear axle nut	85-105 Nm (8.0-10.5 kg.m, 61-76 ft.lb)
Shock absorber mounting bolts	40-50 Nm (4.0-5.0 kg.m, 29-36 ft.lb)
Shock link-to-arm bolt	40-50 Nm (4.0-5.0 kg.m, 29-36 ft.lb)
Shock arm-to-frame bolt	40-50 Nm (4.0-5.0 kg.m, 29-36 ft.lb)
Shock link-to-swingarm bolt	40-50 Nm (4.0-5.0 kg.m, 29-36 ft.lb)
Exhaust chamber-to-engine bolts	45-60 Nm (4.5-6.0 kg.m, 33-43 ft.lb)
Rear brake caliper-to-torque link bolt	30-40 Nm (3.0-4.0 kg.m, 22-29 ft.lb)
Swingarm pivot bolt	60-70 Nm (6.0-7.0 kg.m, 43-51 ft.lb)

TOOLS

Special

Bearing remover set	07946-MJ00000
(Driver shaft)	07946-MJ00100
(Driver head)	07946-MJ00200
Oil seal driver attachment	07965-MA10201
Oil seal driver attachment	07965-MB00100
Oil seal driver adapter	07965-ME70100
Oil seal driver	07965-MC70100

Common

Driver	07749-0010000
Attachment, 32 x 35 mm	07746-0010100
Attachment, 52 x 55 mm	07746-0010400
Attachment, 62 x 68 mm	07746-0010500
Pilot, 15 mm	07746-0040300
Pilot, 20 mm	07746-0040500



HONDA
CBX750F

14. Rear Wheel & Suspension

Pilot, 22 mm	07746-0041000
Pilot, 25 mm	07746-0040600
Bearing remover shaft	07746-0050100
Bearing remover head, 20 mm	07746-0050600

TROUBLE SHOOTING

Oscillation

1. Bent rim
2. Loose wheel bearings
3. Faulty tyre
4. Loose axle
5. Tyre pressure incorrect
6. Swingarm bearings worn
7. Worn tires

Soft suspension

1. Weak spring
2. Insufficient fluid in shock absorber
3. Shock absorber air pressure incorrect

Hard suspension

1. Incorrect fluid weight in shock absorber
2. Bent shock absorber
3. Shock absorber air pressure incorrect

Suspension noise

1. Shock case binding
2. Loose fasteners




REAR WHEEL

REMOVAL

Place the motorcycle on its centre stand. Loosen the drive chain adjuster lock nuts and adjusting nuts. Remove the axle nut and axle. Push the wheel forward, remove the drive chain from the driven sprocket and remove the rear wheel.

NOTE:

If you depress the brake pedal after the rear wheel is removed, the caliper piston will move out and make reassembly difficult.

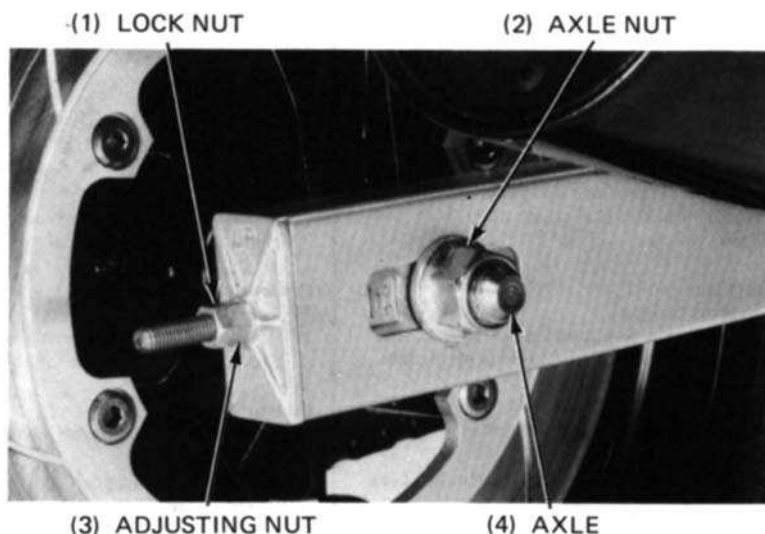


INSPECTION

AXLE

Set the axle in V blocks and read the axle runout with a dial indicator.

SERVICE LIMIT: 0.2 mm (0.01 in)

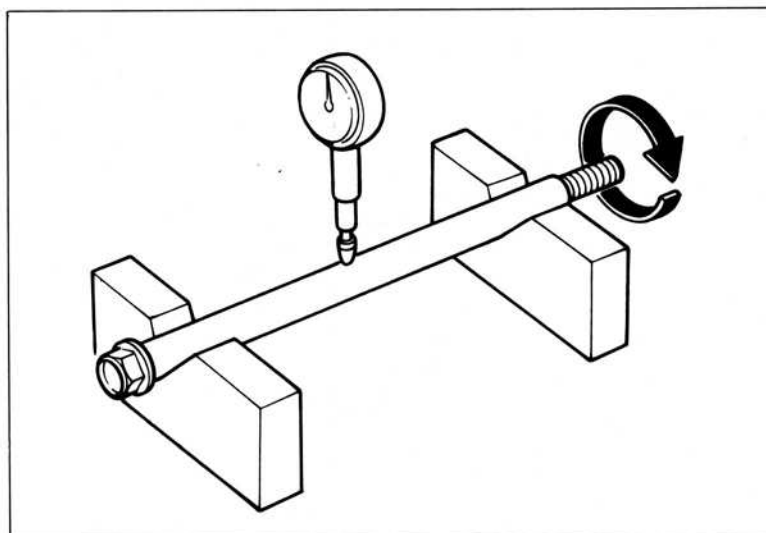

REAR WHEEL RIM RUNOUT

Check the rim for runout by placing the wheel in a truing stand. Spin the wheel slowly, and read the runout using a dial indicator.


SERVICE LIMITS:

RADIAL RUNOUT: 2.0 mm (0.08 in)

AXIAL RUNOUT: 2.0 mm (0.08 in)

NOTE:

The wheel cannot be serviced and must be replaced if the above limits are exceeded.

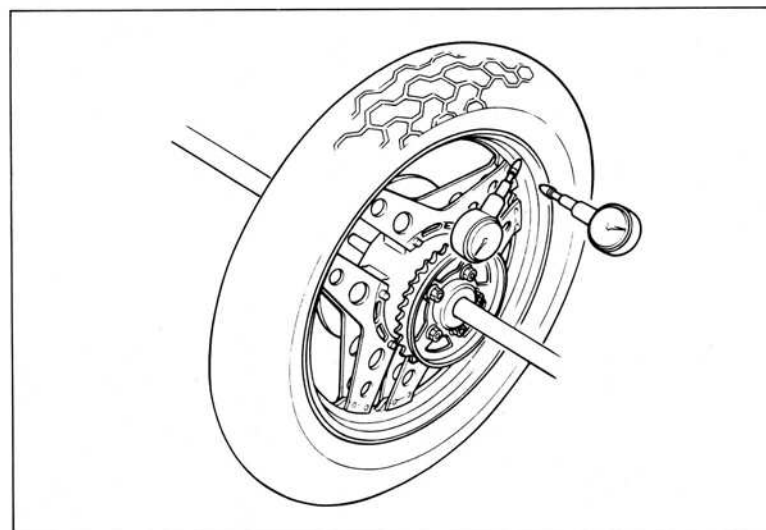




FINAL DRIVEN SPROCKET

Check the condition of the final driven sprocket teeth. Replace the sprocket if worn or distorted.

NOTE:

If the final driven sprocket requires replacement, inspect the drive chain and drive sprocket.

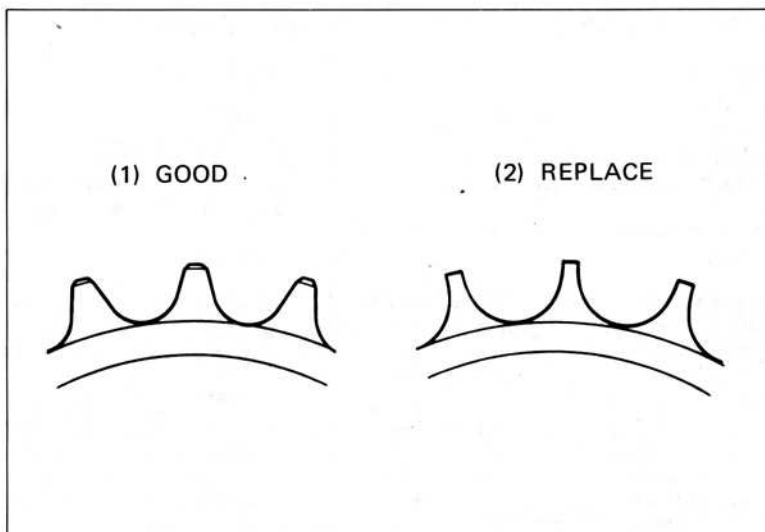


DAMPER RUBBERS

Remove the final driven sprocket and driven flange together.

NOTE:

Do not separate the driven sprocket and flange, unless replacement of the driven sprocket or flange is necessary.

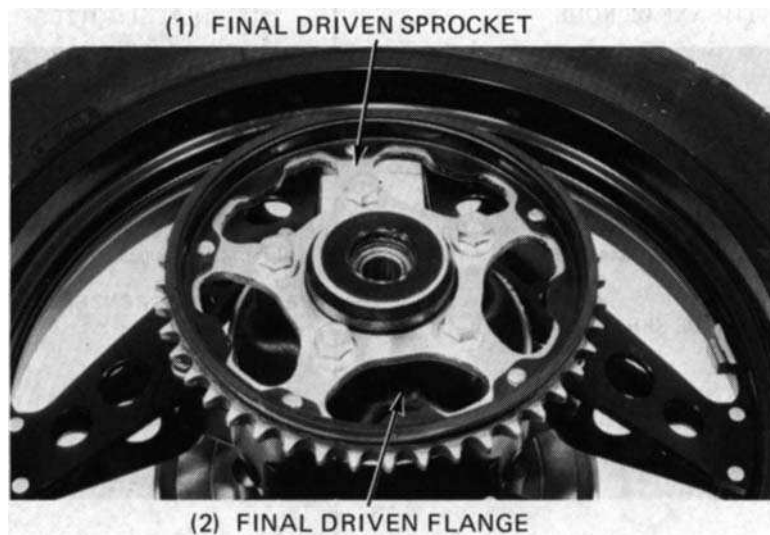


Replace the damper rubbers if they are damaged or deteriorated.






WHEEL BEARING

Place the wheel in a truing stand and check the wheel bearing play by rotating the wheel by hand. Replace the bearings if they are noisy or have excessive play.

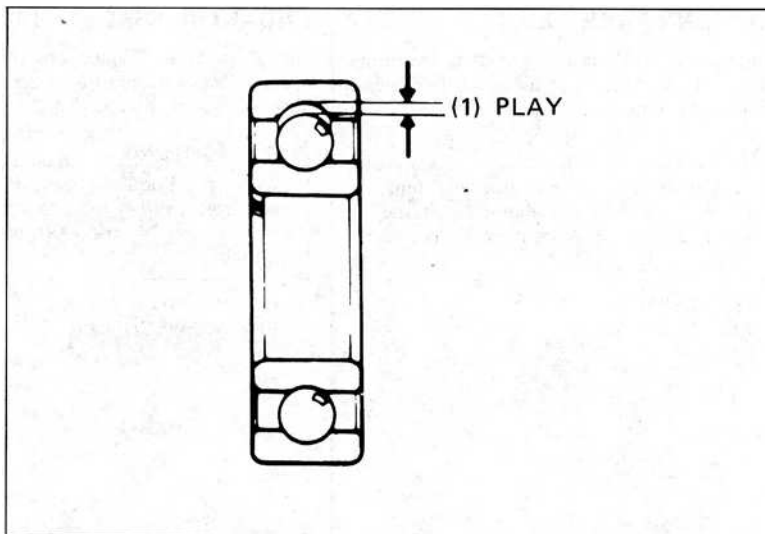

BEARING REPLACEMENT

Remove the rear brake disc.
Remove the dust seal.

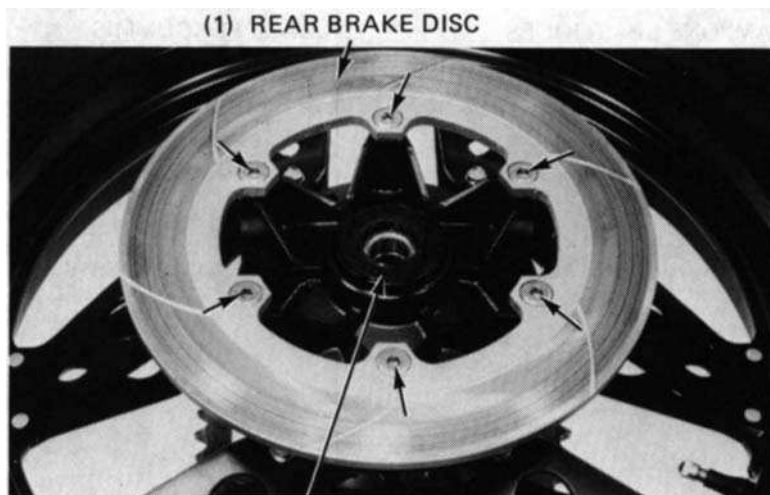

(2) DUST SEAL

(1) BEARING REMOVER SHAFT
07746-0050100



Remove the wheel bearing with bearing remover.

NOTE:

Never reinstall old bearings; once the bearings are removed, they must be replaced with new ones.



HONDA CBX750F




14. Rear Wheel & Suspension

Remove the dust seal from the final driven flange.

Remove the snap ring and drive the final driven flange bearing out of the flange.

First, drive a new right wheel bearing in squarely until it is fully seated, install the distance collar, then drive a new left wheel bearing in squarely.

Drive a new driven flange bearing in the flange squarely.
Install the snap ring.

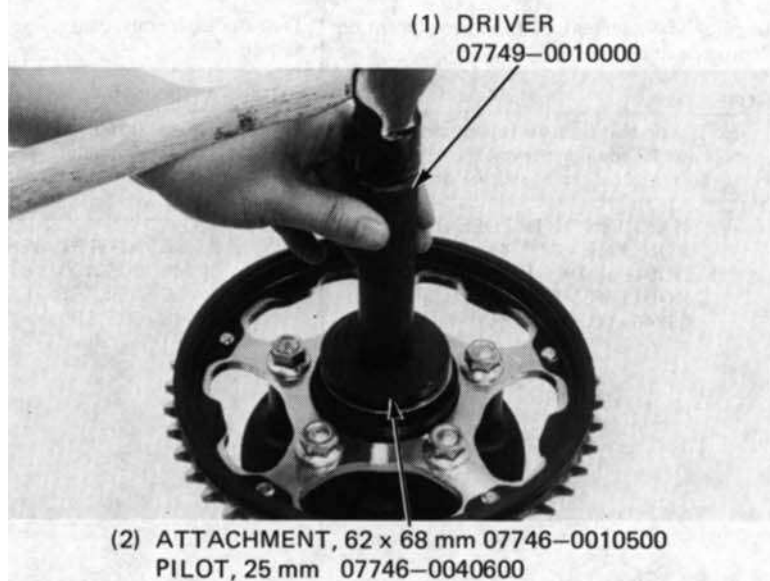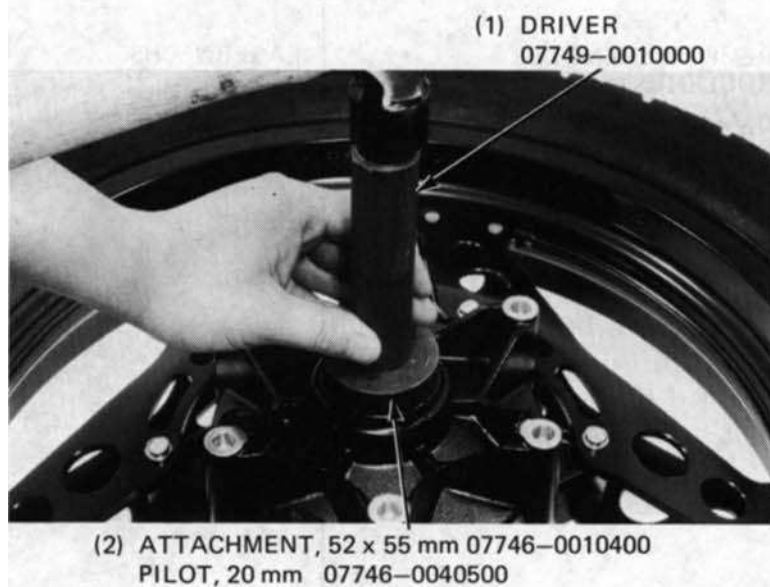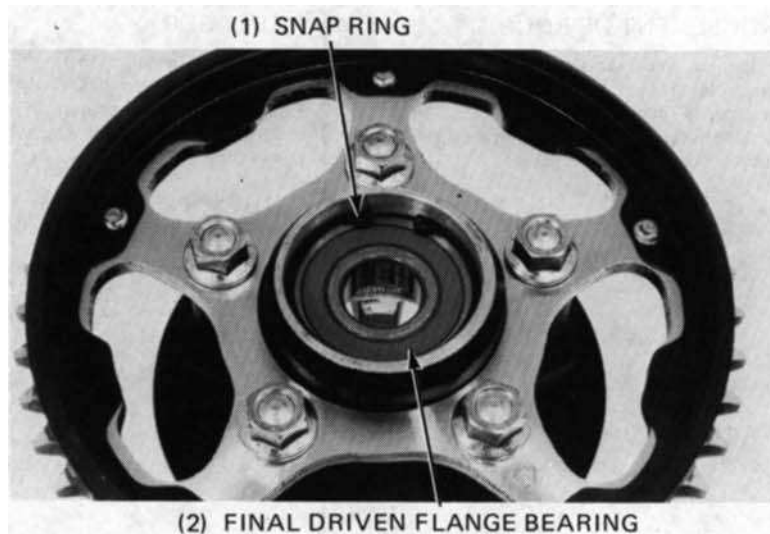




HONDA CBX750F

14. Rear Wheel & Suspension

ASSEMBLY

NOTE:

The rear wheel uses a tubeless tyre. For tubeless tyre repairs, refer to the Tubeless Tyre Manual.

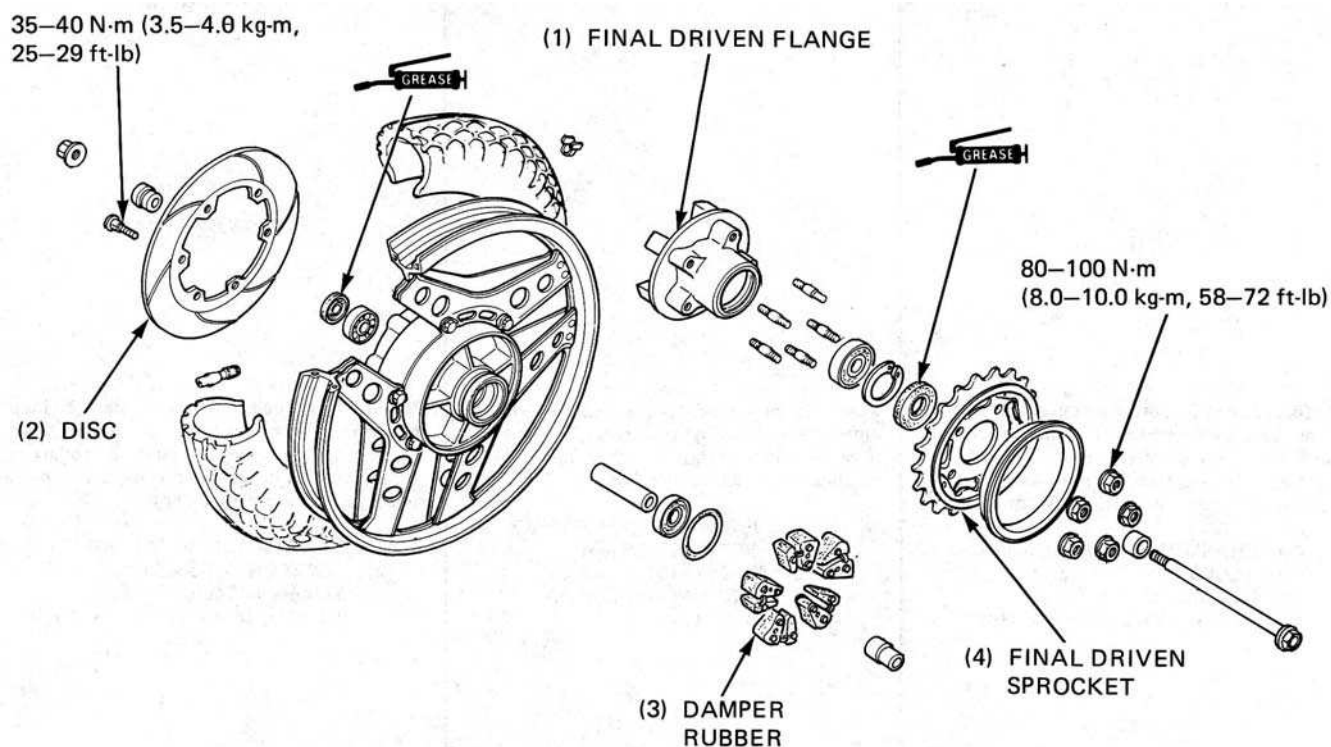


WARNING

Do not get grease on the brake disc or stopping power will be reduced.

Install the brake disc and tighten the bolts.

TORQUE: 35-40 Nm
(3.5-4.0 kg.m, 25-29 ft.lb)

Apply molybdenum disulfide grease to the dust seal lips and install the dust seal.

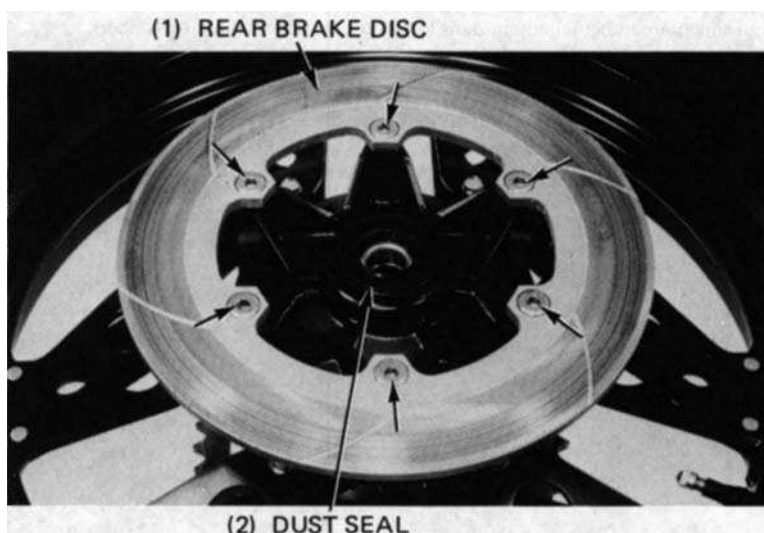



HONDA CBX750F


14. Rear Wheel & Suspension

Install the rear axle sleeve, final driven flange and driven sprocket.


If the driven sprocket was removed from the flange, tighten the driven sprocket nuts to the specified torque.

TORQUE: 80-100 Nm
(8.0-10.0 kg.m, 58-72 ft.lb)

Apply molybdenum disulfide grease to the dust seal lips and install the dust seal.

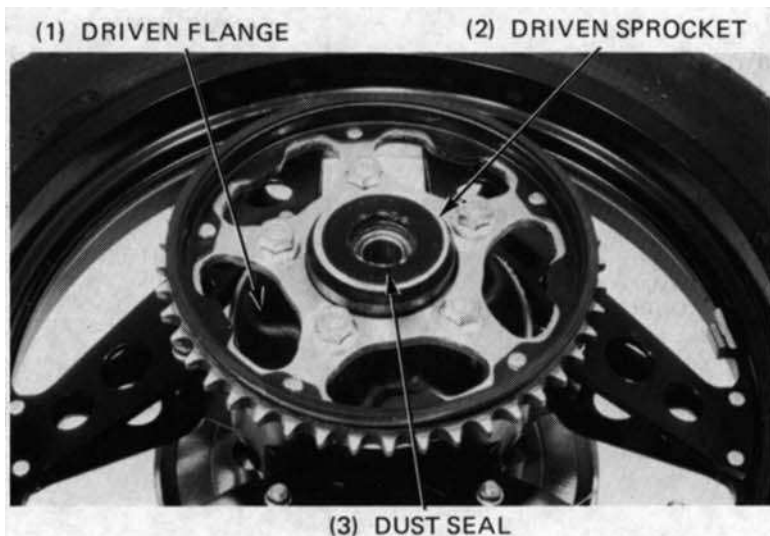

Install the left and right side spacers,

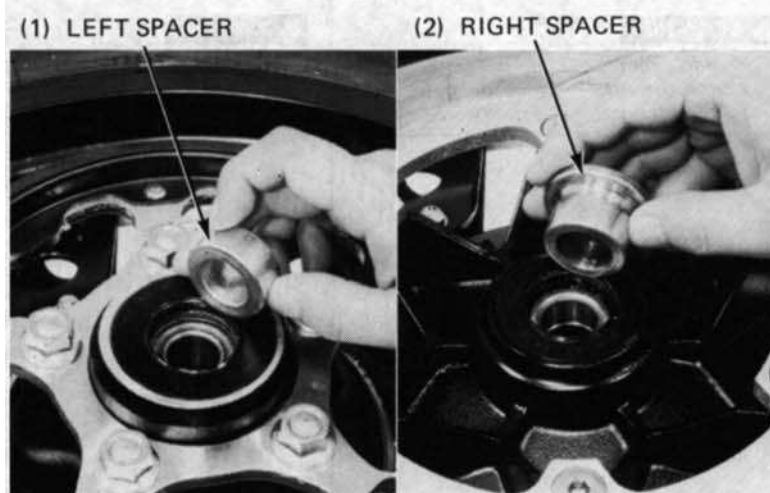

INSTALLATION

Install the rear wheel in the reverse order of removal.


NOTE:

- When installing the wheel, carefully fit the brake disc between the brake pads.
- After installing the wheel, apply the brake several times. Then check that the wheel rotates freely. Recheck wheel installation if the brake drags or if the wheel does not rotate freely.

Tighten the rear axle nut.

TORQUE: 85-105 Nm
(8.5-10.5 kg.m, 61-76 ft.lb)

Adjust the drive chain slack (page 3-10).

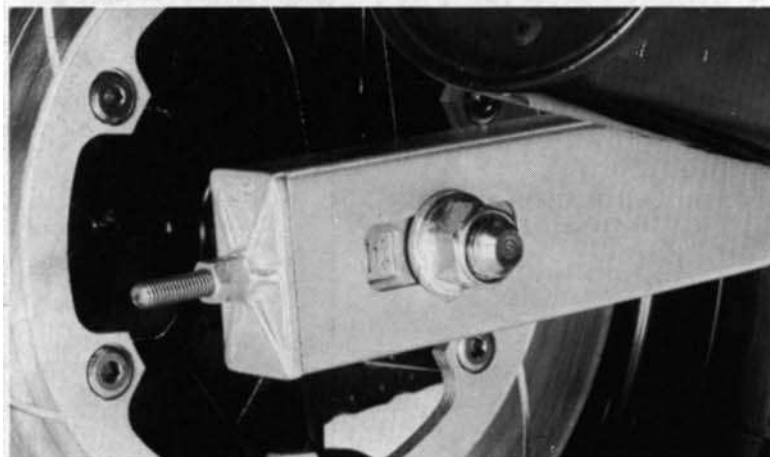



SHOCK ABSORBER


REMOVAL

Place the motorcycle on its centre stand.
Remove the rear wheel (page 14-3).
Remove the left and right frame side covers.
Free the rear shock damping adjuster cable from its clamps.
Remove the shock link-to-arm bolt.
Remove the shock absorber lower mounting bolt.

Remove the shock absorber upper mounting bolt and remove the shock absorber from the frame being careful not to damage the damping adjuster cable and air hose.

OIL SEAL REPLACEMENT

Remove the cotter pin and washer, and disconnect the damping adjuster cable from the adjuster.
Remove the cable bracket from the absorber.

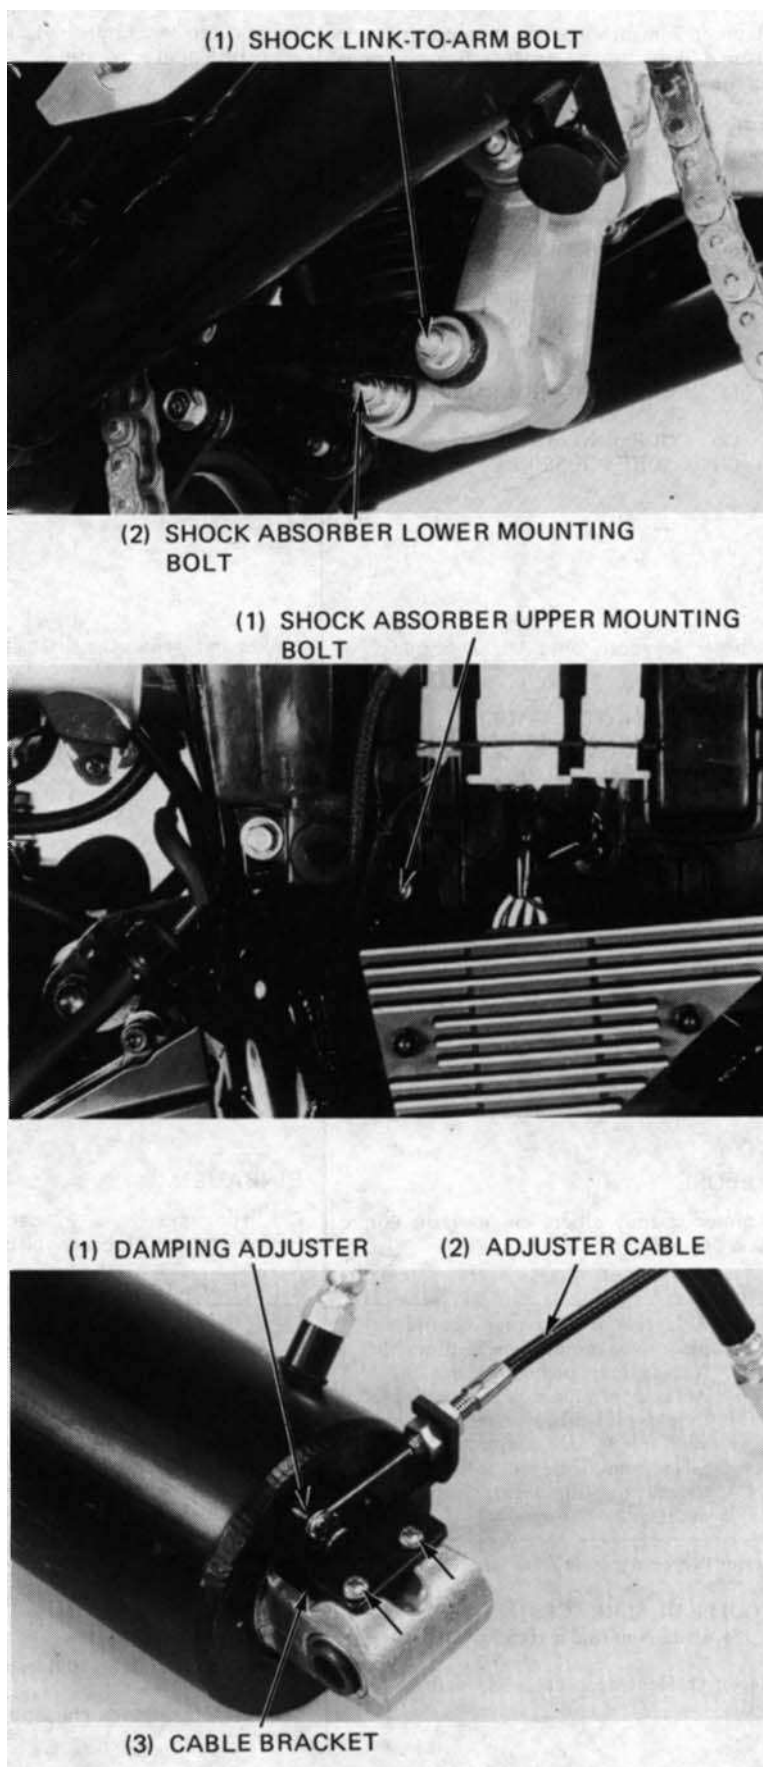





HONDA CBX750F

14. Rear Wheel & Suspension


Remove the boot clip and boot.

To remove the stopper ring, press down on the back-up ring and oil seal.

Remove the stopper ring and back-up plate.

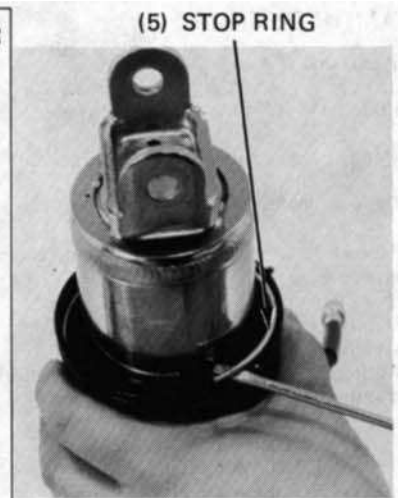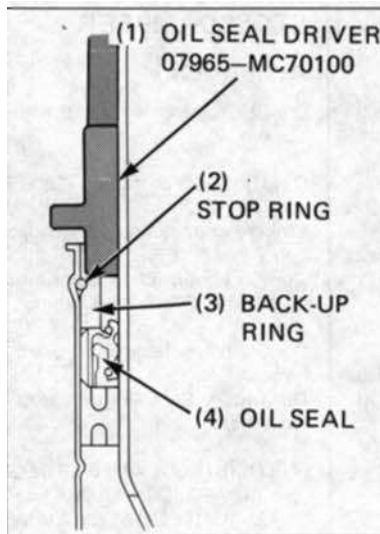

Release air pressure and remove the air valve from the hose.

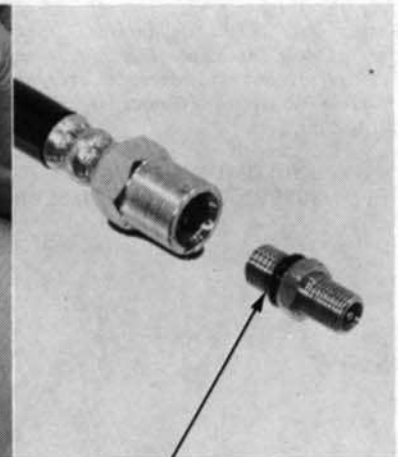

(1) AIR VALVE


Place about 300 cm³ (10.1 oz) of damper oil (ATF or equivalent) in a clean container.

Place the shock absorber in a hydraulic press with an OIL SEAL DRIVER ATTACHMENT positioned as shown. Place the air hose in the oil and press the shock absorber several times until the damper is filled with the oil.

NOTE:

- Do not over-press the shock.
- This shock absorber's stroke is 42.5 mm (1.67 in).

(1) DAMPER OIL (ATF OR EQUIVALENT)

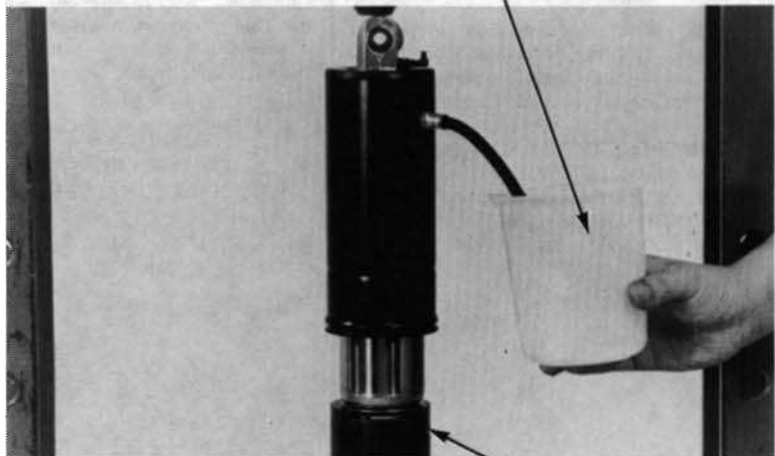

(2) OIL SEAL DRIVER ATTACHMENT
07965-MA10200



HONDA CBX750F

14. Rear Wheel & Suspension


Place the shock absorber up right in an oil drain pan. Let the shock stand for 5 minutes to allow air to escape.

Reinstall the air valve in the air hose.
Place the shock absorber in the hydraulic press using the oil seal driver attachment. Wrap a shop towel around the shock absorber.
Press the oil seal out by compressing the shock absorber.


Leave the shock absorber for another 5 minutes to let any remaining ATF drain out.

NOTE:


Do not tilt the shock absorber or ATF will flow out of the damper case.

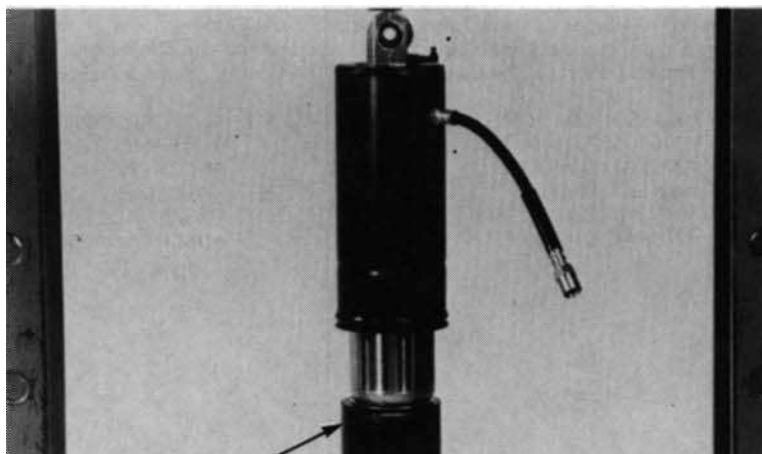

(1) OIL SEAL DRIVER ATTACHMENT
07965-MA10200

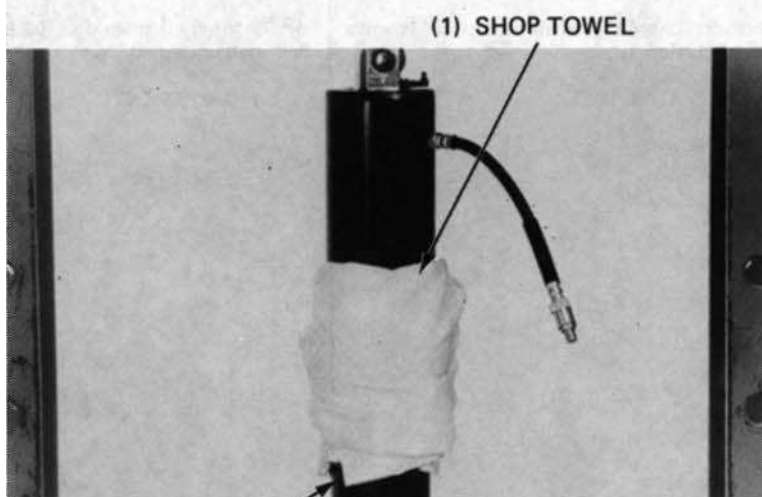

(2) OIL SEAL DRIVER ATTACHMENT
07965-MA10200

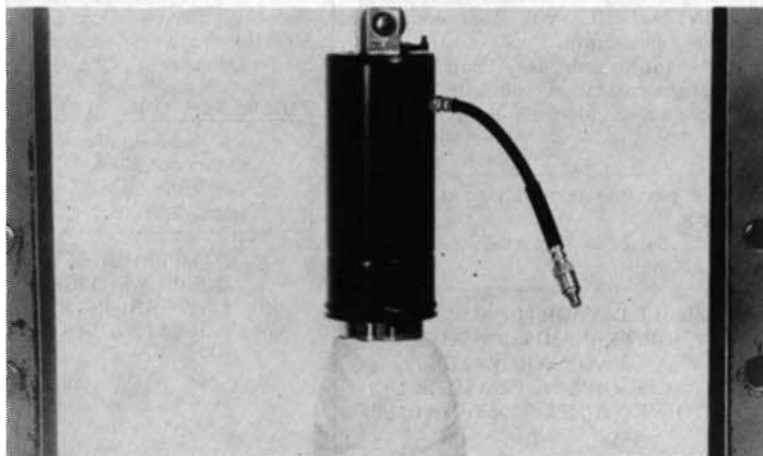



HONDA CBX750F


14. Rear Wheel & Suspension

Turn the shock absorber upside down as soon as all the ATF has drained from the outer case.

Fill the damper case with the specified amount of ATF.

SPECIFIED AMOUNT:

142 cc (4.80 U.S. oz., 5.00 Imp. oz.)

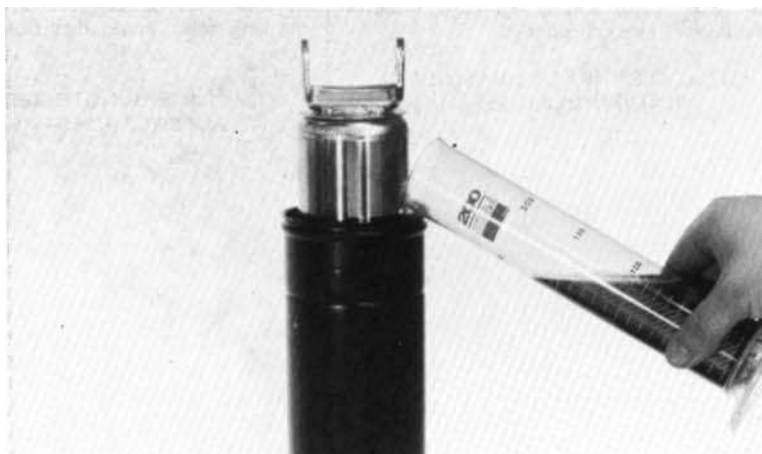


Install the guide bushing into the damper case.

Wrap a piece of tape around the groove at the end of the shock absorber.

Dip the oil seal in damper oil and install it on the damper.


CAUTION

Be careful not to damage the oil seal during installation.

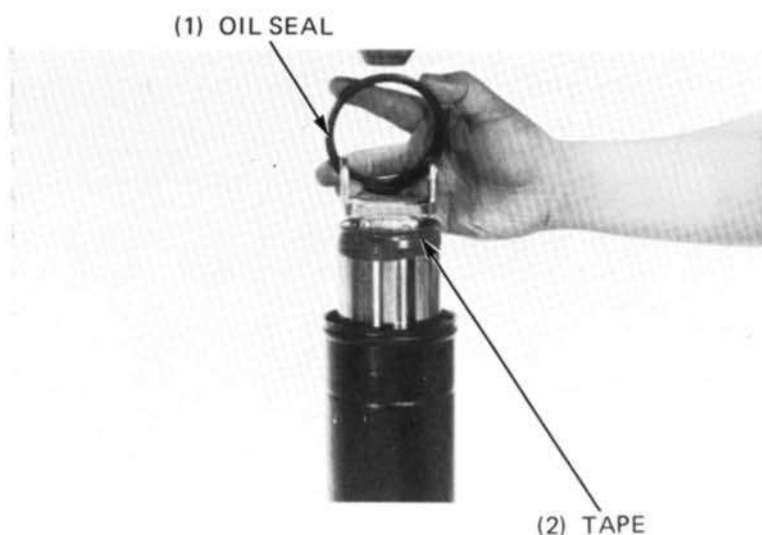


Press the oil seal into the shock absorber with a hydraulic press until the oil seal driver and oil seal driver ring stops at the edge of the outer case.

(1) ATTACHMENT
07965-MB00100

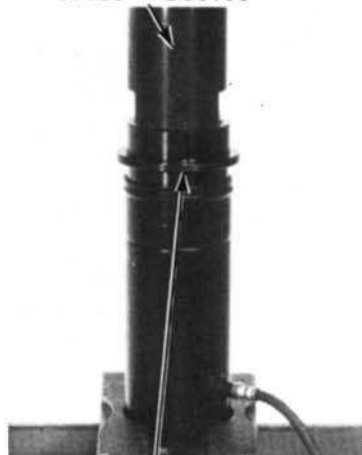

(2) OIL SEAL DRIVER
07965-MC70100

(2) OIL SEAL DRIVER
07965-MC70100

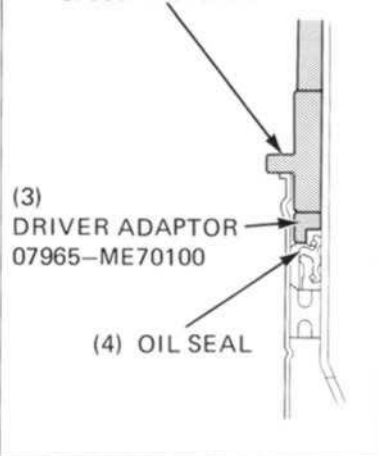



Install the back-up ring.


Install the stop ring, being certain that it is seated in the ring groove in the outer case.

NOTE:

Be sure stop ring is seated in the ring groove all the way around.

Install the boot.


Install the boot clip with the edge facing down.

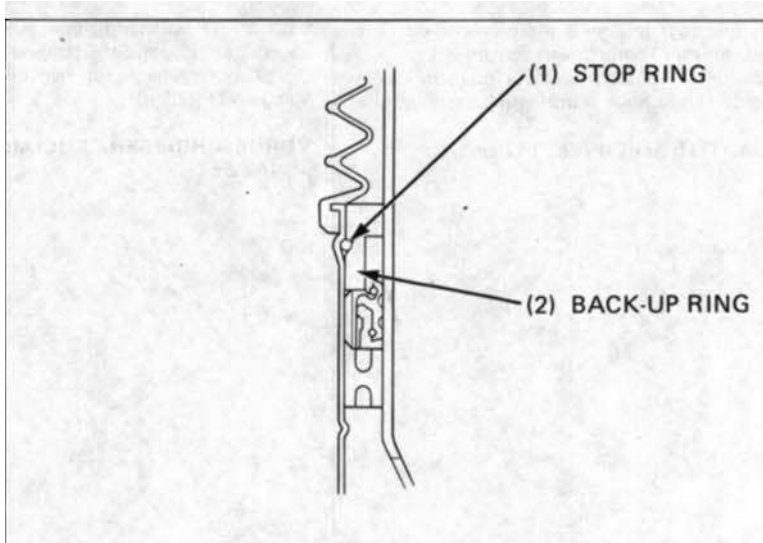

Install the damping adjuster cable bracket onto the absorber.

Apply locking agent to the threads of the attaching screws and secure the bracket with the screws.

Connect the adjuster cable to the adjuster and secure it with the washer and new cotter pin.

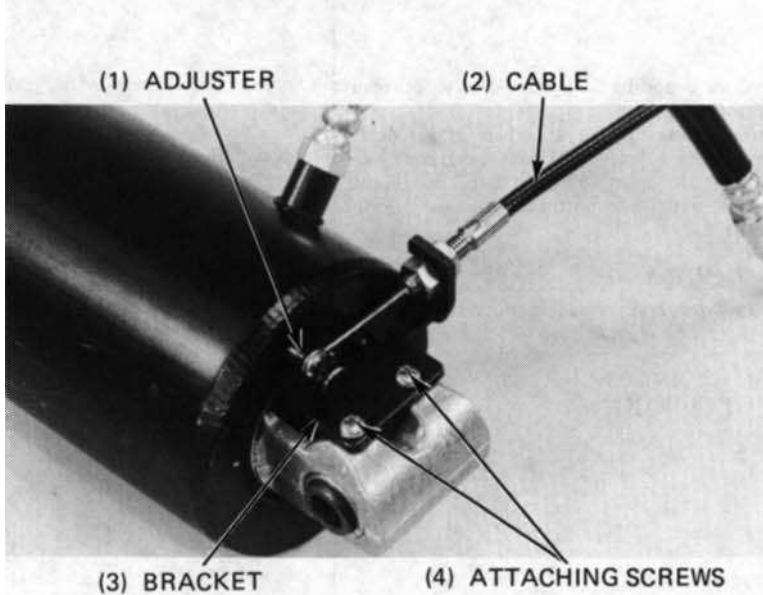

INSTALLATION


Apply paste grease (containing more than 45% of molybdenum) to the upper and lower mounting bushings.

NOTE:

Use paste grease (containing more than 45% of molybdenum) as follows:

- **MOLYKOTE G-n PASTE** manufactured by Dow Corning, U.S.A.
- **Locol Paste** manufactured by Sumico Lubricant, Japan.
- **Other lubricants of equivalent quality.**

Install the shock absorber in the frame and tighten the upper and lower mounting bolts.

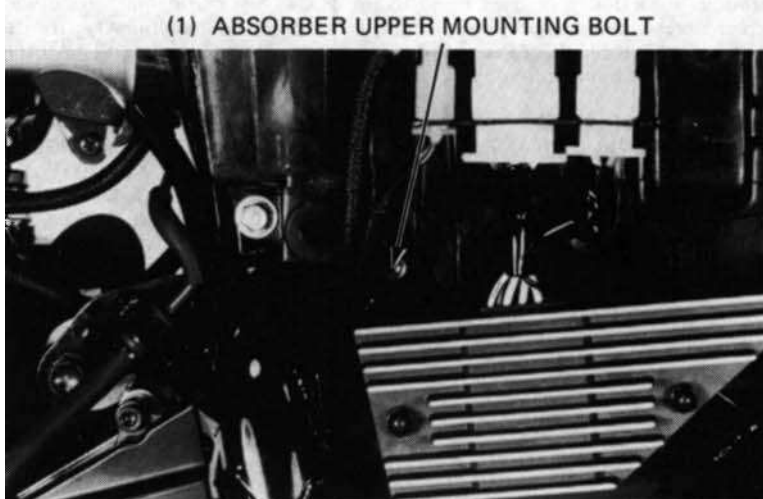

TORQUE: 40-50 Nm
(4.0-5.0 kg.m, 29-36 ft.lb)



Connect the shock arm and link, and tighten the nut.

TORQUE: 40-50 Nm
(4.0-5.0 kg.m, 29-36 ft.lb)

Clamp the damping adjuster cable properly (page 1-8).

Install the left and right side covers.

Install the rear wheel (page 14-8).

Adjust the shock absorber air pressure (page 3-15).




SHOCK ABSORBER LINKAGE

REMOVAL

Remove the muffler by removing the exhaust pipe attaching nuts, muffler-to-footpeg bracket bolts and exhaust chamber-to-engine bolts.

Remove the shock link by removing the shock link-to-arm bolt, shock absorber lower mounting bolt and shock link-to-swingarm bolt.

Remove the shock arm from the frame,

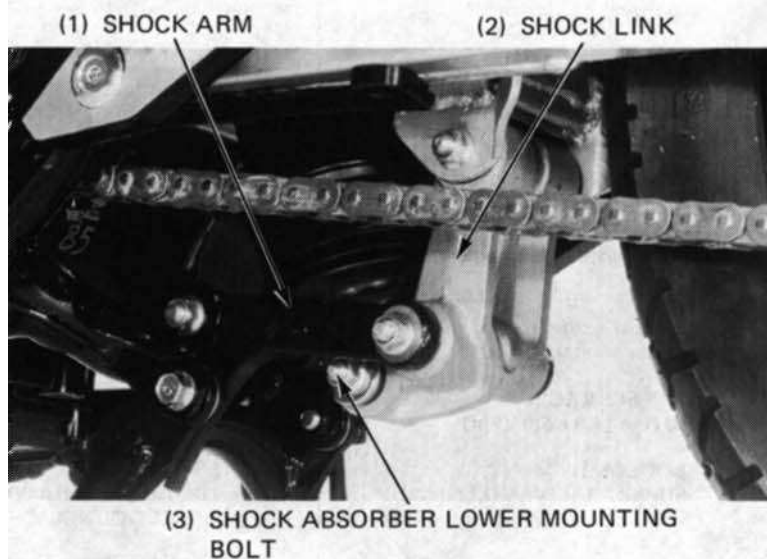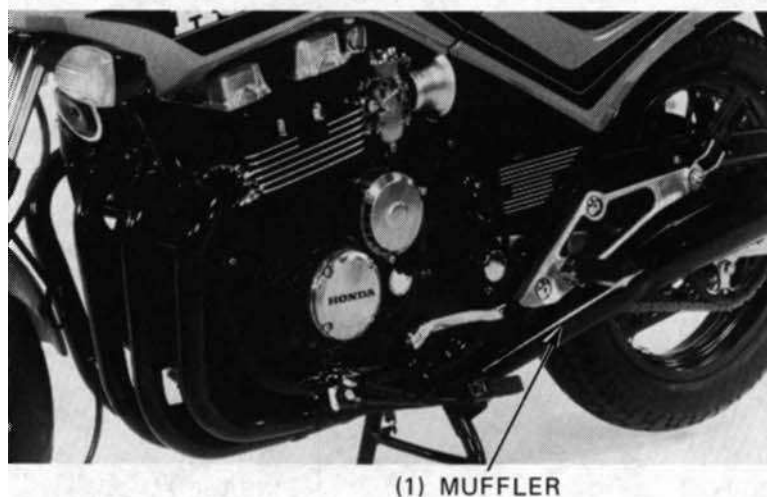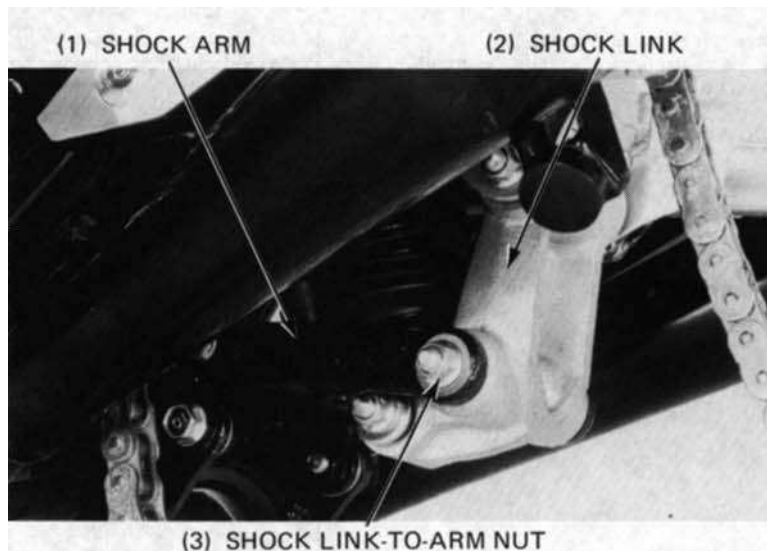



INSPECTION

Remove the collars.
Check the bushing and needle bearings for wear or damage.
Check the dust seals for damage.
Replace the dust seal if necessary.

NOTE:

The bushing and needle bearings cannot be replaced. If they are damaged or worn, replace the shock link and/or shock arm.

INSTALLATION

Apply molybdenum disulfide grease to the needle bearings and dust seal lips.

Install the shock arm to the frame and tighten the mounting nut.

TORQUE: 40-50 Nm
(4.0-5.0 kg.m, 29-36 ft.lb)

Install the shock link to the swingarm and tighten the mount nut.

TORQUE: 40-50 Nm
(4.0-5.0 kg.m, 29-36 ft.lb)

Connect the shock link to the shock absorber and tighten the lower mounting nut.




TORQUE: 40-50 Nm
(4.0-5.0 kg.m, 29-36 ft.lb)

Connect the shock arm to the shock link and tighten the nut.

TORQUE: 40-50 Nm
(4.0-5.0 kg.m, 29-36 ft.lb)

Install the muffler.
Tighten the exhaust chamber-to-engine bolts.

TORQUE: 45-60 Nm
(4.5-6.0 kg.m, 33-43 ft.lb)

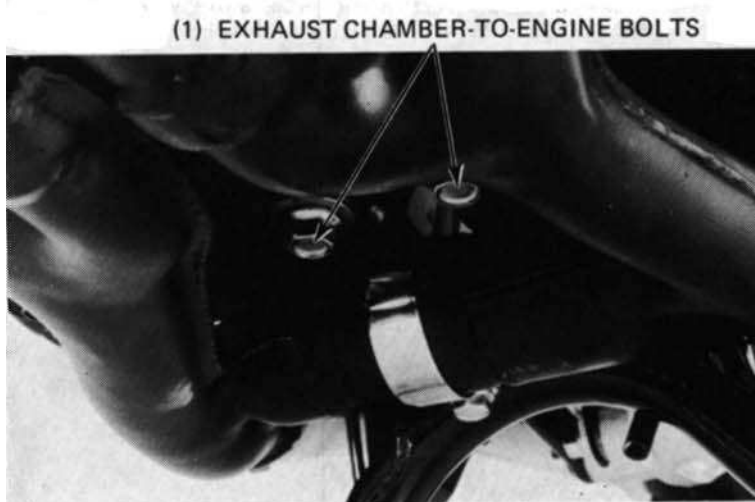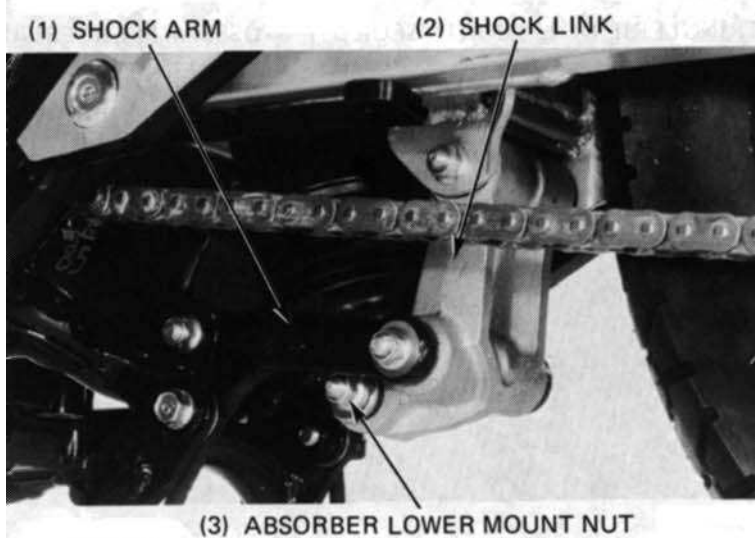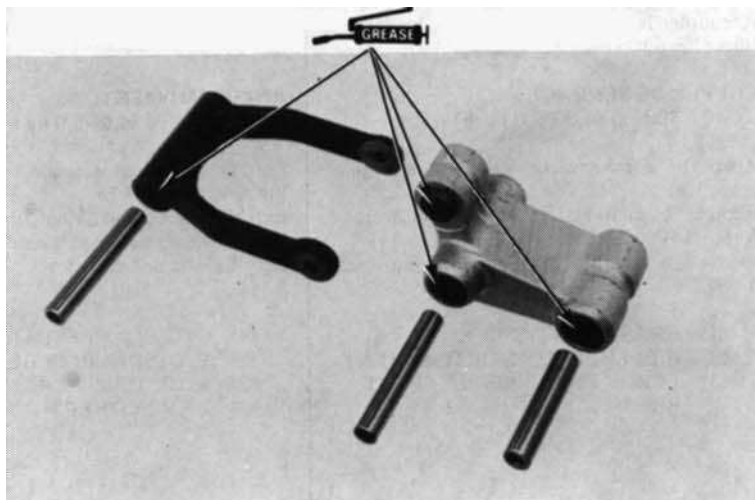




SWINGARM

REMOVAL

Remove the rear shock absorber (page 14-9).


Remove the cotter pin from the rear brake torque link bolt and remove the bolt.

Remove the rear brake hose from the clamp on the swingarm.

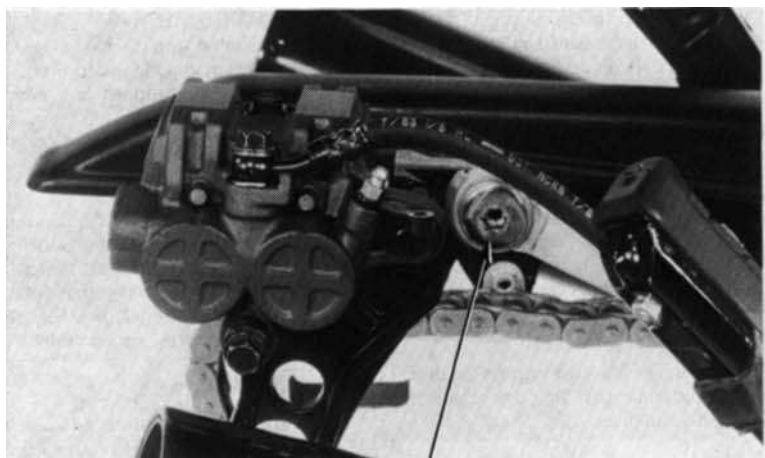


(1) REAR BRAKE TORQUE LINK BOLT

Remove the drive chain case.

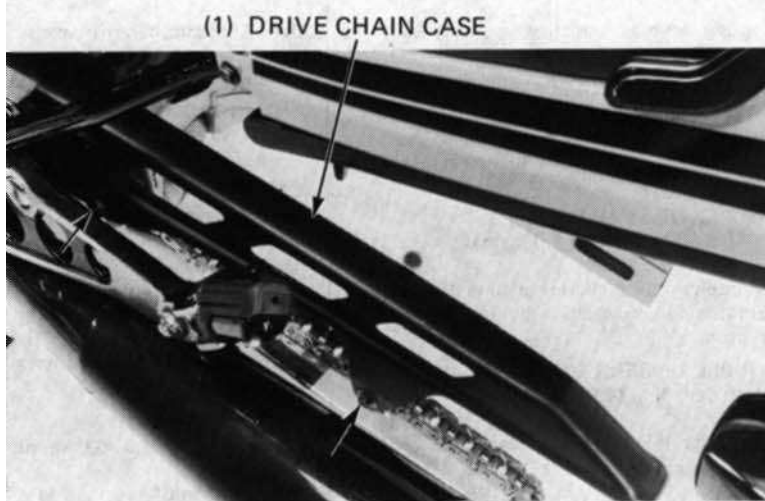

(1) DRIVE CHAIN CASE

Remove the swingarm pivot caps.
Loosen the swingarm pivot bolt nut and remove the nut and bolt.
Remove the swingarm from the frame.

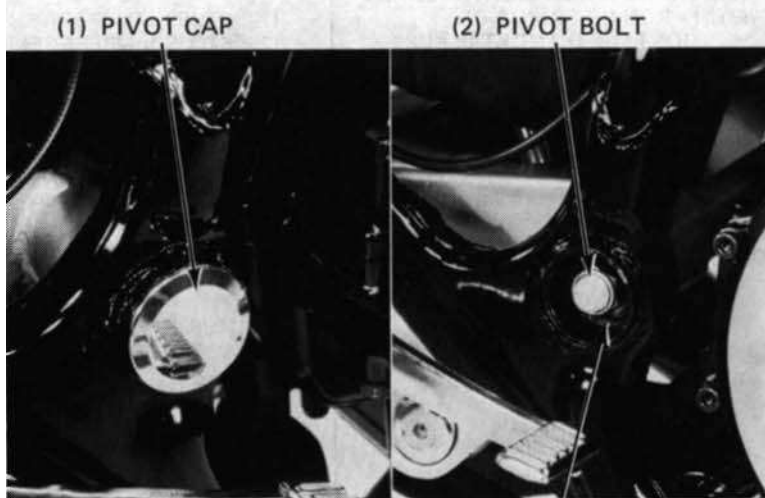

(1) PIVOT CAP

(2) PIVOT BOLT


(3) PIVOT BOLT NUT




HONDA CBX750F

14. Rear Wheel & Suspension


Remove the cotter pin, nut, washer and bolt, and, remove the torque link from the swingarm.

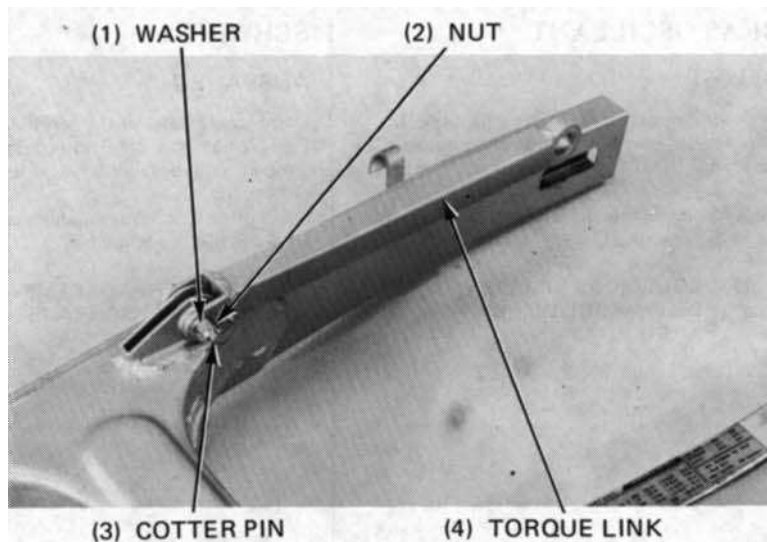

Remove the chain slider from the swingarm.

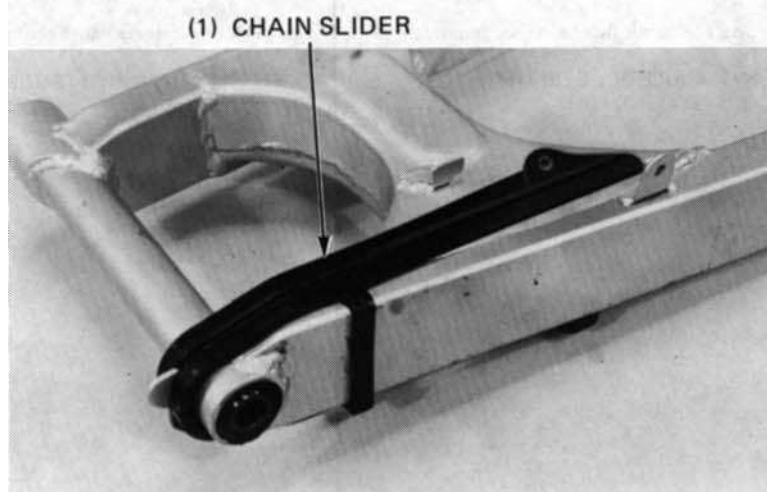


Remove the side spacer, dust seals and pivot collar from the swingarm pivot.

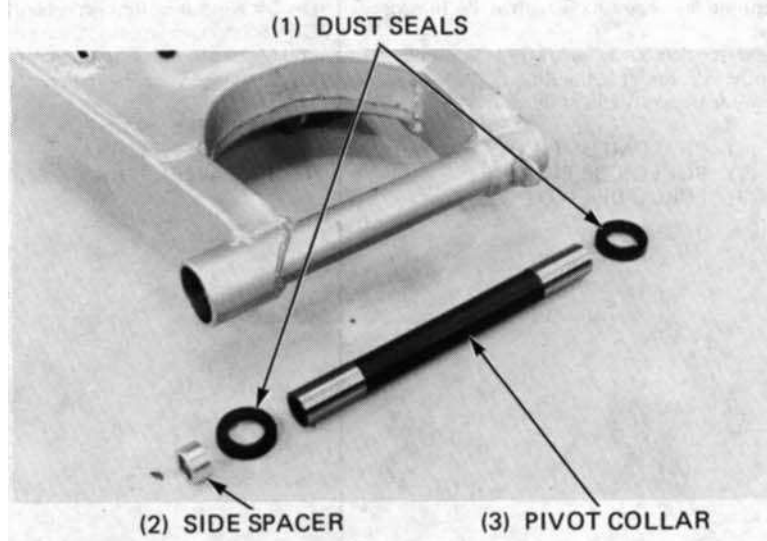




PIVOT BEARING REPLACEMENT


Remove the snap ring from the swingarm right pivot.
Drive the ball bearings out of the swingarm with driver shaft.

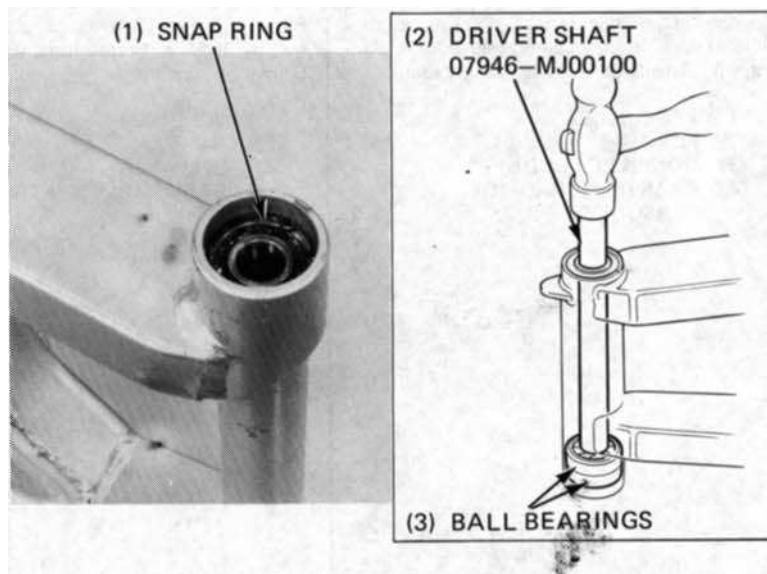

Using a hydraulic press, press the needle bearing out of the swingarm with driver shaft and driver head.

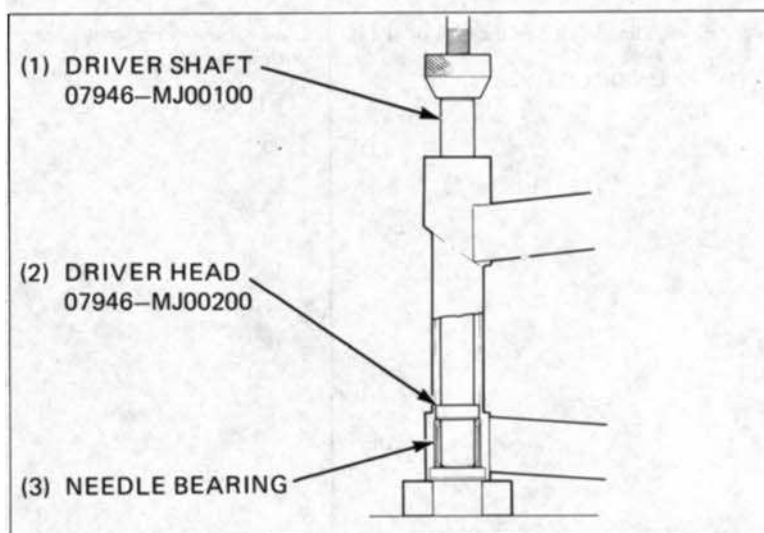

Apply molybdenum disulfide grease to the ball bearing cavities and inside of the needle bearing.
Drive new ball bearings in the swingarm right pivot squarely with the maker mark facing out until they are fully seated.
Install the snap ring,

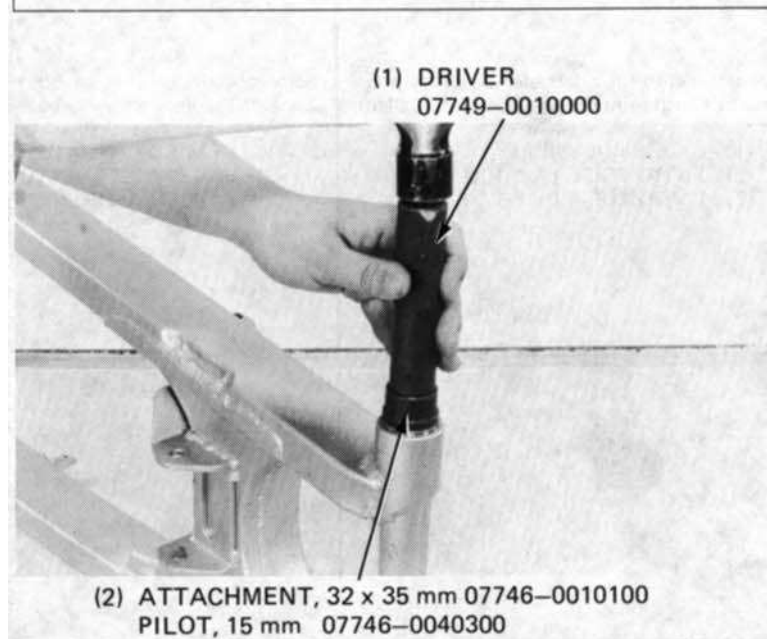



HONDA CBX750F

14. Rear Wheel & Suspension




Press a new needle bearing in the left pivot of the swingarm, using a hydraulic press.

INSTALLATION

Apply molybdenum disulfide grease to the dust seal lips.
Install the dust seals, pivot collar and side spacer into the swingarm pivot.

Install the drive chain slider.

NOTE:
Check the slider for wear or damage
and replace it if necessary.

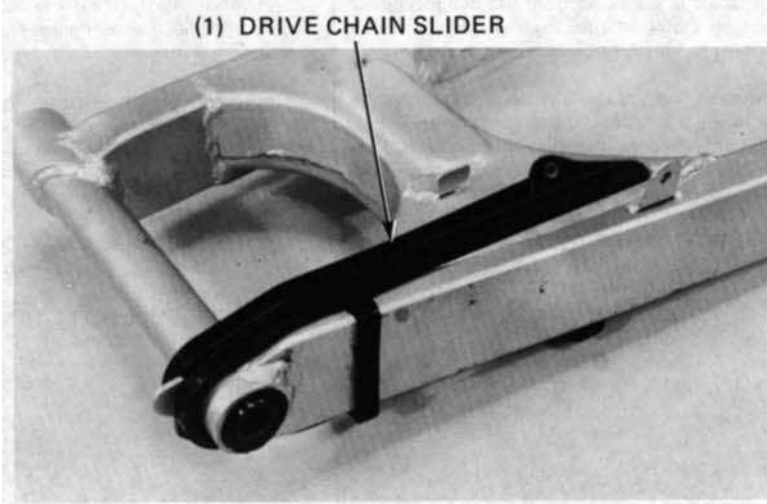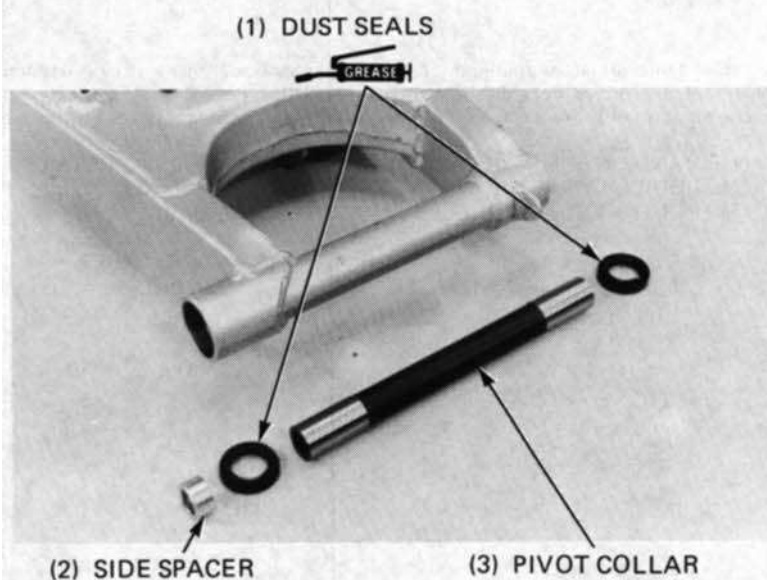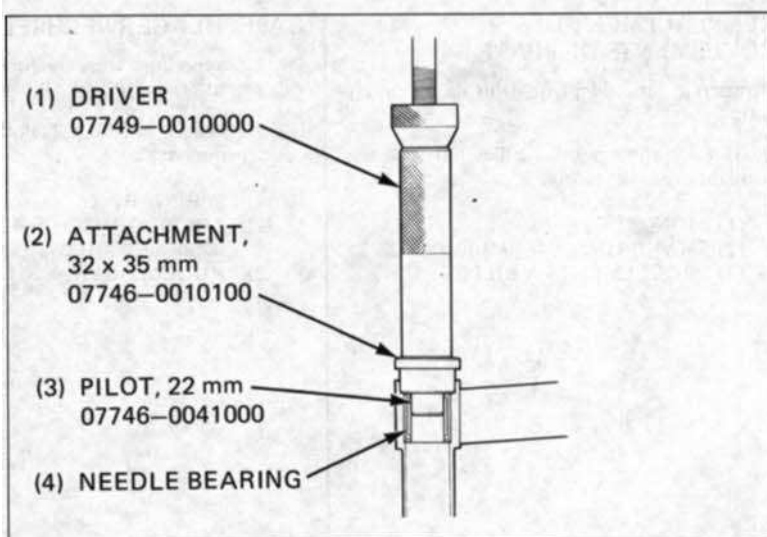




HONDA CBX750F

14. Rear Wheel & Suspension

Make sure that the flange collar is installed in the torque link pivot of the swingarm and install the torque link with the bolt, washer and nut.


Tighten the nut and secure it with a new cotter pin.

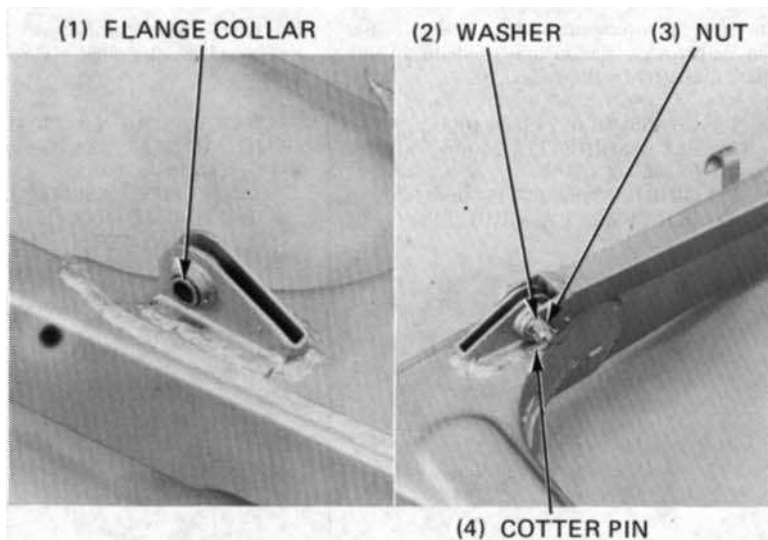

Install the swingarm in the frame.
Install the pivot bolt and nut, and tighten the nut.


TORQUE: 60-70 Nm
(6.0-7.0 kg.m, 43-51 ft-lb)

Install the swingarm pivot caps.

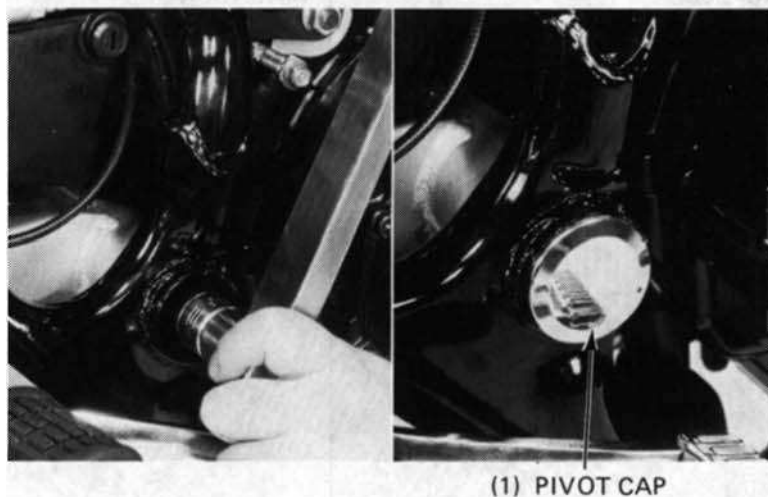

(1) DRIVE CHAIN CASE

Install the drive chain case.

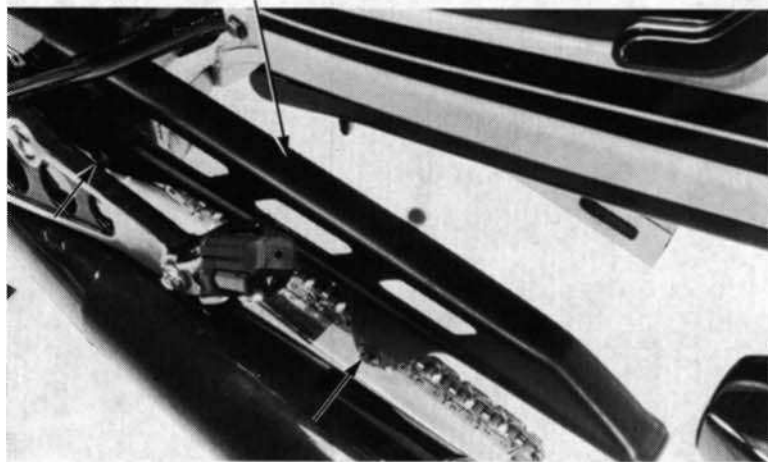



HONDA CBX750F

14. Rear Wheel & Suspension

Connect the torque link and rear brake caliper, and temporarily tighten the torque link bolt.

Install the rear shock absorber
(page 14-13).

Install the rear wheel (page 14-8).

Tighten the rear brake torque link bolt and
secure it with a new cotter pin.

TORQUE: **30-40 Nm**
 (3.0-4.0 kg.m, 22-29 ft.lb)

