





HONDA CBX750F

16. Battery & Charging System

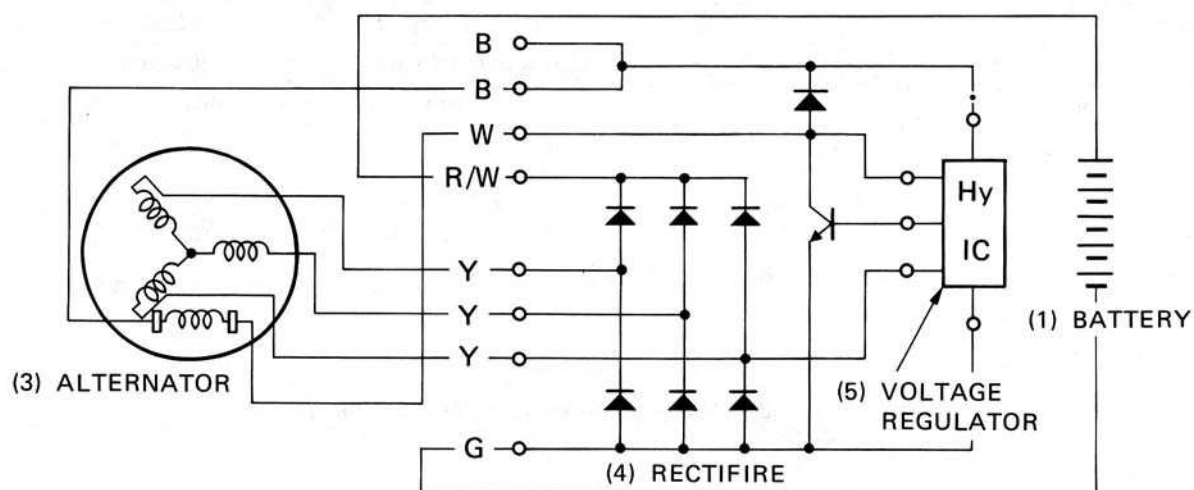

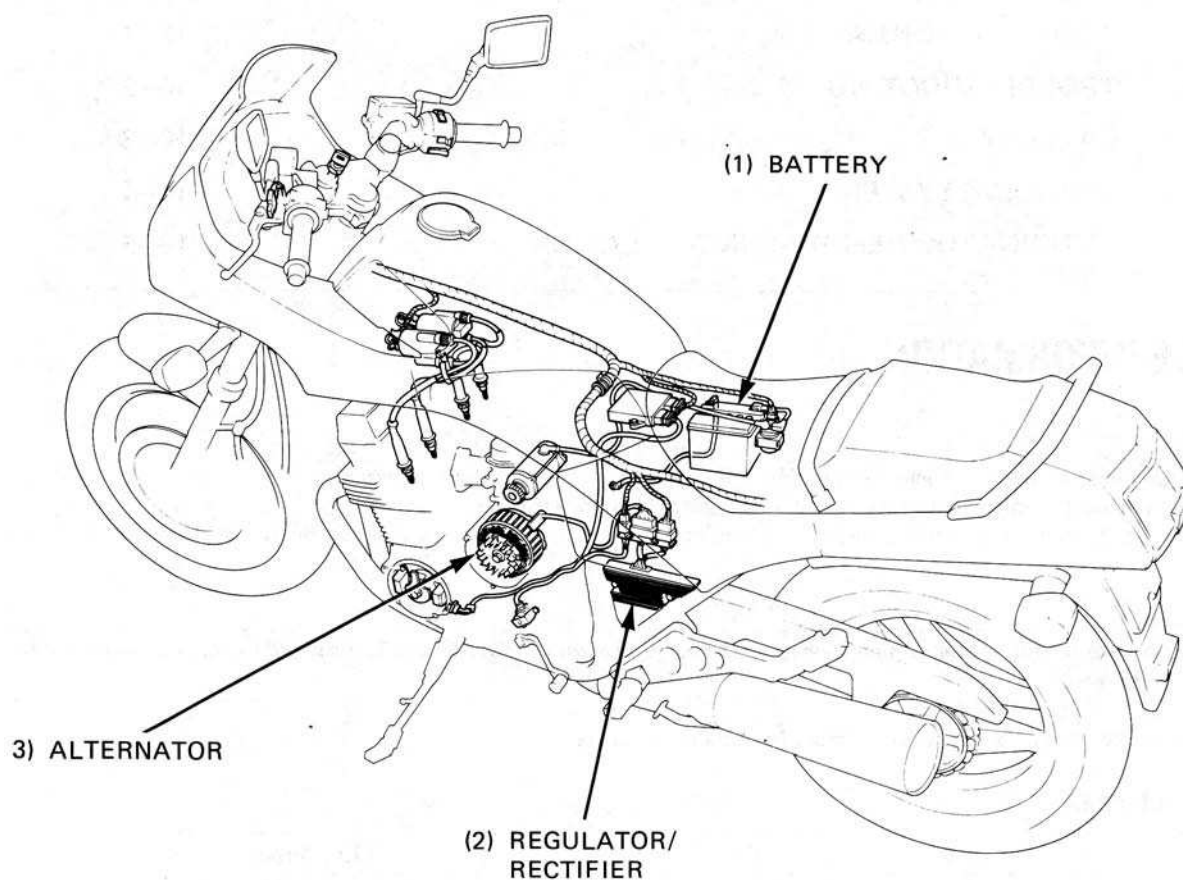

SERVICE INFORMATION	16-1
TROUBLESHOOTING	16-2
BATTERY	16-3
CHARGING SYSTEM	16-4
ALTERNATOR REMOVAL/INSTALLATION	16-5

SERVICE INFORMATION

GENERAL

- Battery fluid level should be checked regularly. Fill with distilled water when necessary.
- Quick charge a battery only in an emergency; slow-charging is preferred.
- Remove the battery from the motorcycle for charging. If the battery must be charged on the motorcycle, disconnect the battery cables.

WARNING

Do not smoke or allow flames near a charging battery. The gas produced by a battery will explode if flames or sparks are brought near.

- All charging system components can be tested on the motorcycle.

SPECIFICATIONS

Battery	Capacity	12V 14AH	
	Specific gravity	1.280/20° C (68° F)	
	Charging rate	1.4 amperes maximum	
Alternator	Engine speed	1,750 min ⁻¹ (rpm)	4,350 min ⁻¹ (rpm)
	Capacity	12.5 A min. (No load)	20 A min. (No load)
Voltage regulator		Transistorized non-adjustable regulator	

TOOL

Special

Rotor puller 07933-2160000

TORQUE VALUE

Alternator rotor bolt 30-38 Nm (3.0-3.8 kg.m, 22-27 ft.lb)



TROUBLESHOOTING

No power - key turned on:

1. Dead battery
 - Low fluid level
 - Low specific gravity
 - Charging system failure
2. Disconnected battery cable
3. Main fuse burned out
4. Faulty ignition switch

Low power - key turned on:

1. Weak battery
 - Low fluid level
 - Low specific gravity
 - Charging system failure
2. Loose battery connection

Low power - engine running:

1. Battery undercharged
 - Low fluid level
 - One or more dead cells
2. Charging system failure

Intermittent power:

1. Loose battery connection
2. Loose charging system connection
3. Loose starting system connection
4. Loose connection or short circuit in ignition system

Charging system failure:

1. Loose, broken or shorted wire or connection
2. Faulty voltage regulator/rectifier
3. Faulty alternator



BATTERY

REMOVAL

Remove the right frame side cover.
Remove the battery holder bolts and the holder.

Pull the battery out.
Disconnect the negative cable from the battery, then positive cable.
Disconnect the battery breather hose from the battery and remove the battery.

TESTING SPECIFIC GRAVITY

Test each cell with a hydrometer.

SPECIFIC GRAVITY: 1.270-1.290 (20° C, 68° F)

1.270-1.290	Fully charged
Below 1.260	Undercharged

NOTE:



- The battery must be recharged if the specific gravity is below 1.230.
- The specific gravity varies with the

temperature as shown in the accompanying table.


- Replace the battery if sulfation is evident or if the space below the cell plates is filled with sediment.

WARNING

The battery contains sulphuric acid. Avoid contact with skin, eyes, or clothing. Antidote: Flush with water and get prompt medical attention.

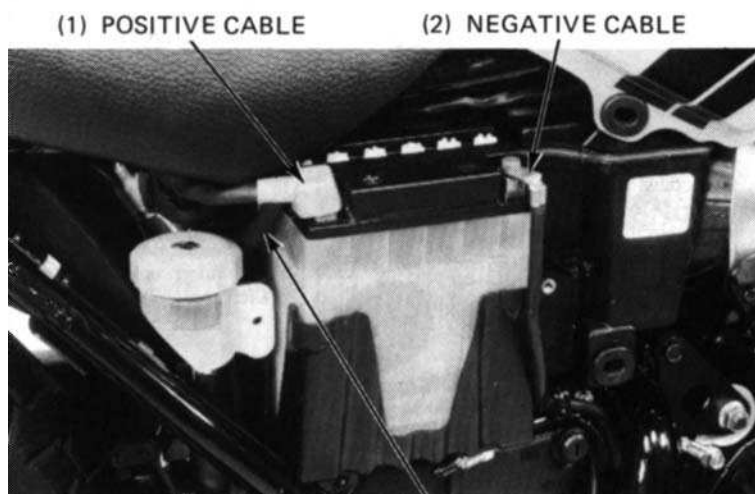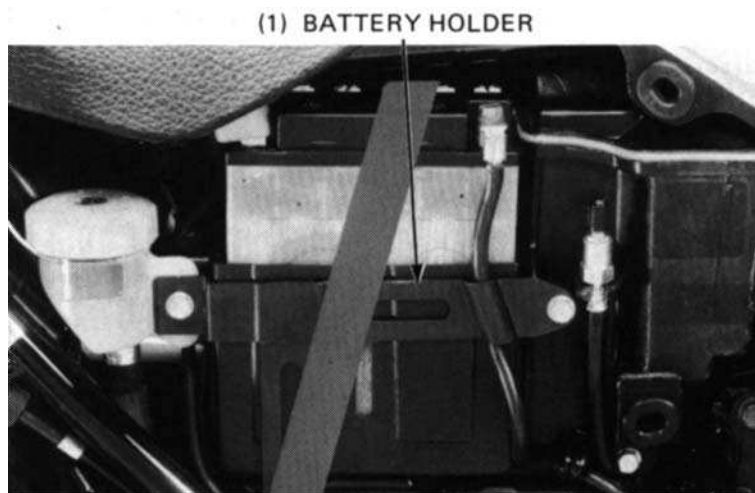

(3) BREATHER HOSE

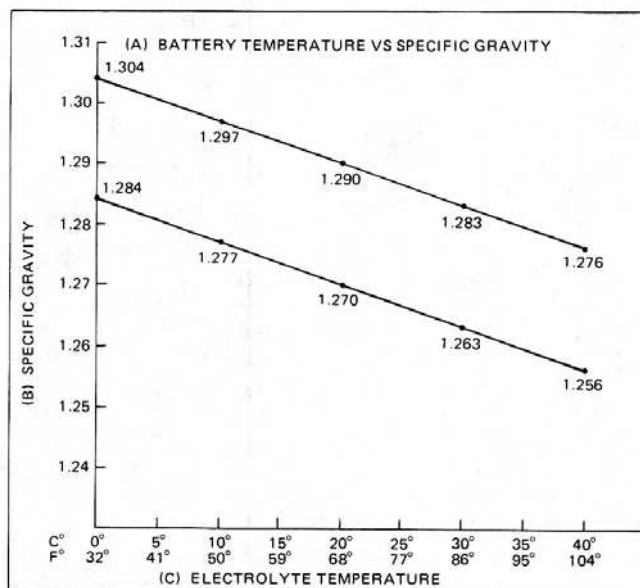

(D) Specific gravity changes by 0.007 for every 10° C.



CHARGING

Remove the battery cell caps.
Fill the battery cells with distilled water to the upper level line, if necessary.
Connect the charger positive (+) cable to the battery positive (+) terminal.
Connect the charger negative (-) cable to the battery negative (-) terminal.

Charging current: 1.4 amperes max.

Charge the battery until specific gravity is 1.270-1.290 at 20° C (68° F).

WARNING

- **Before charging a battery, remove the cap from each cell.**
- **Keep flames and sparks a way from a charging battery.**
- **Turn power ON/OFF at the charger, not at the battery terminals to prevent sparks.**
- **Discontinue charging if the electrolyte temperature exceeds 45° C (113 °F).**

CAUTION

- **Quick-charging should only, be done in an emergency; slow charging is preferred.**
- **Route the breather tube as shown on the battery caution label.**

After installing the battery, coat the terminals with clean grease.

CHARGING SYSTEM

CURRENT TEST

NOTE:

Be sure the battery is in good condition before performing this test.




Warm up the engine.

Remove the right frame side cover.

Remove the main fuse and connect the ammeter positive wire to the fuse holder negative terminal and ammeter negative wire to the fuse holder positive terminal.

Connect a voltmeter across the battery negative and starter relay positive terminals.

Start the engine, gradually increase the engine speed and read the ammeter and voltmeter.

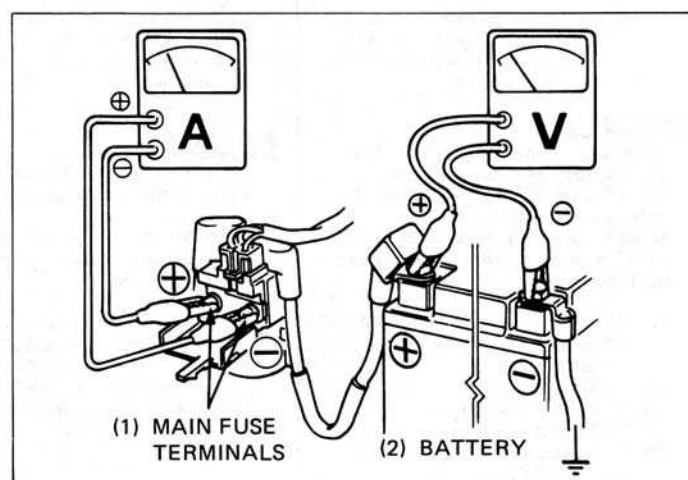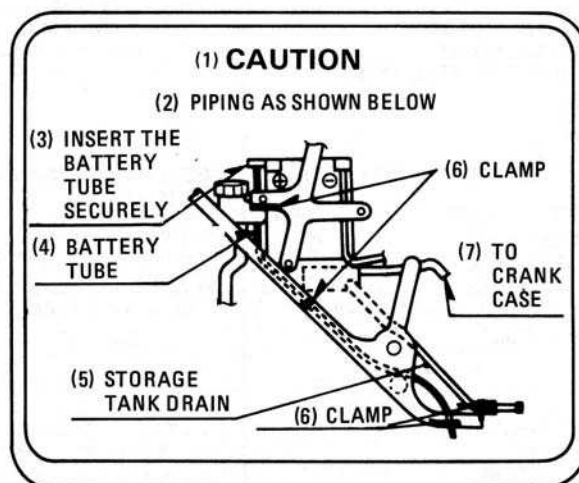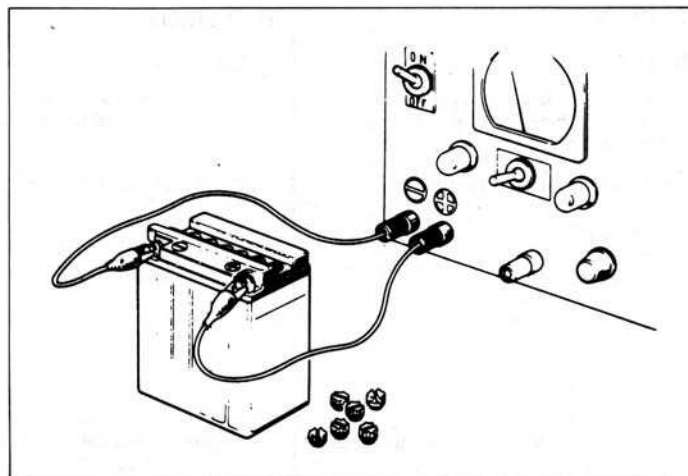



Ampere and voltage should be controlled to 0 A and 14-15 V.

If the readings do not meet the specifications, check the wires for loose connections and repair as necessary.

If the wires are in good condition, replace the regulator/rectifier with a new one and re-test.

If the readings still do not meet the specifications, perform the alternator output test.

ALTERNATOR OUTPUT TEST

Disconnect the white wire from the alternator wire coupler and ground it.

Connect an ammeter and voltmeter as same as the current test (page 16-4).

Charging amperage should be a minimum of 12.5 A at 1,750 min⁻¹ (rpm) and should be a minimum of 20 A at 4,350 min⁻¹ (rpm).

STATOR CONTINUITY TEST

Remove the left frame side cover.

Disconnect the alternator wire coupler from the regulator/rectifier.



Charging coil

Check for continuity between the yellow wire terminals, and between the yellow wire terminals and ground.

Replace the stator if there is no continuity between the yellow wire terminals, or if there is continuity between the yellow wire terminals and ground.

Field coil

Check for continuity between the black and white wire terminals. Replace the stator if there is no continuity.

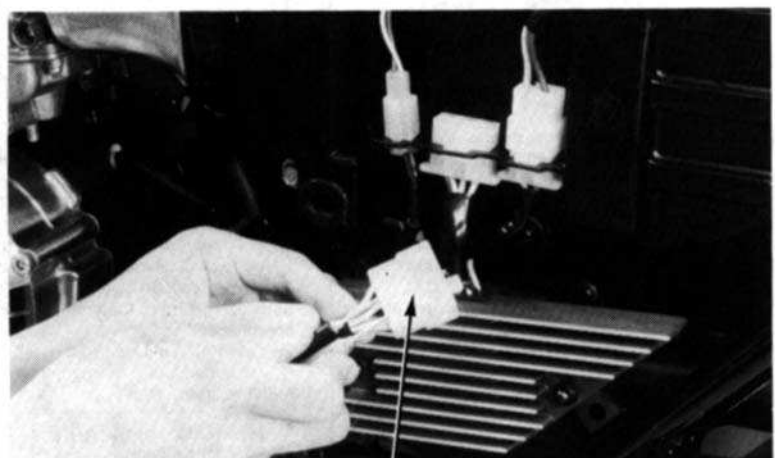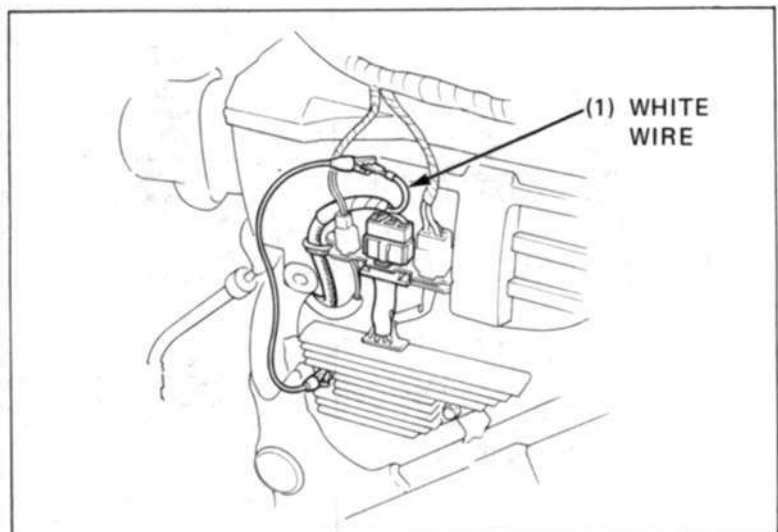

(1) ALTERNATOR WIRE COUPLER




VOLTAGE REGULATOR/RECTIFIER TEST

Remove the left side cover.
Disconnect the regulator/rectifier couplers.
Check for continuity between the leads with an ohmmeter.

NOTE:

The test results shown are for a positive ground ohmmeter and the opposite results will be obtained when a negative ground ohmmeter is used.

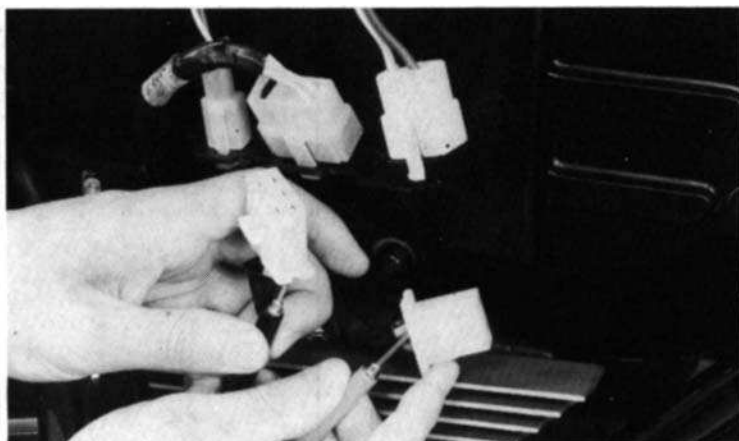


NORMAL DIRECTION: CONTINUITY

	+ probe	- probe
1	YELLOW	GREEN
11	RED/WHITE	YELLOW

REVERSE DIRECTION: NO CONTINUITY


	+ probe	- probe
1	GREEN	YELLOW
11	YELLOW	RED/WHITE

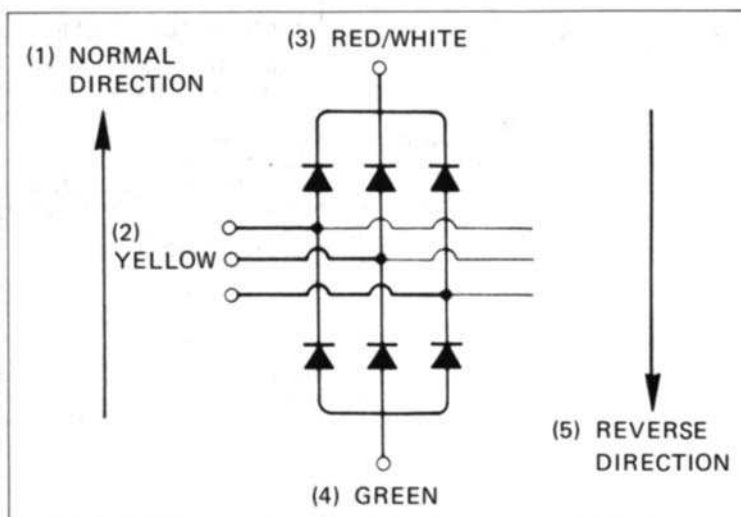

ALTERNATOR REMOVAL / INSTALLATION

REMOVAL

Remove the frame left side cover.
Disconnect the alternator coupler.

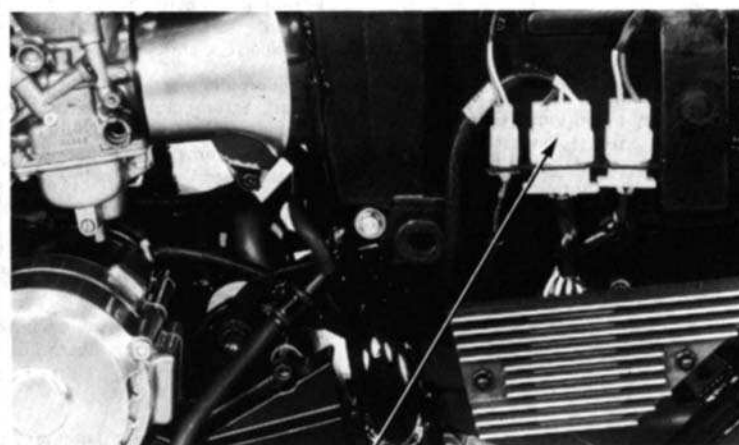


(1) ALTERNATOR COUPLER



HONDA CBX750F


16. Battery & Charging System

Remove the alternator cover by loosening three bolts.

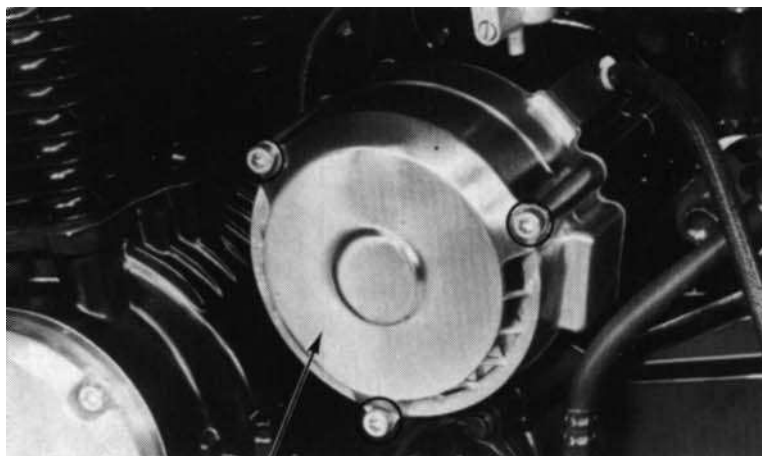


(1) ALTERNATOR COVER

Shift the transmission into gear and apply the rear brake.
Remove the alternator rotor bolt, fan, rotor B and stator.

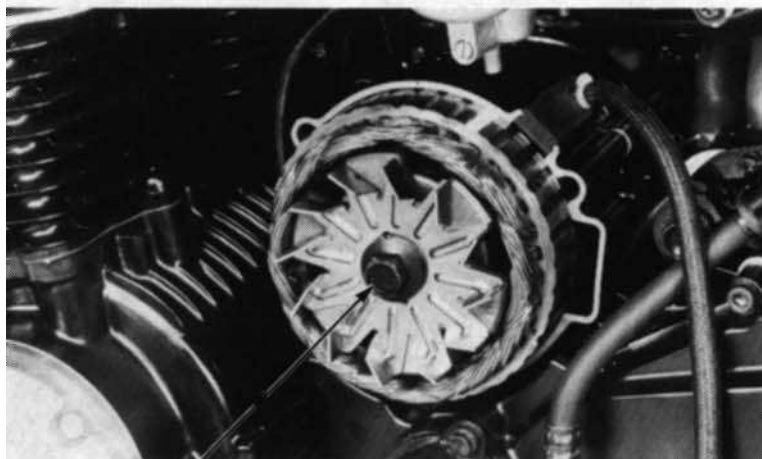


(1) ROTOR BOLT

Remove alternator rotor A while applying the rear brake.

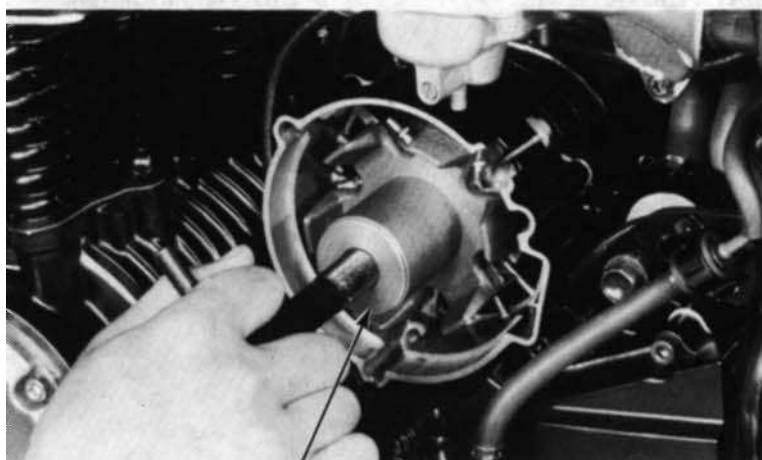


(1) ROTOR PULLER
07933-2160000

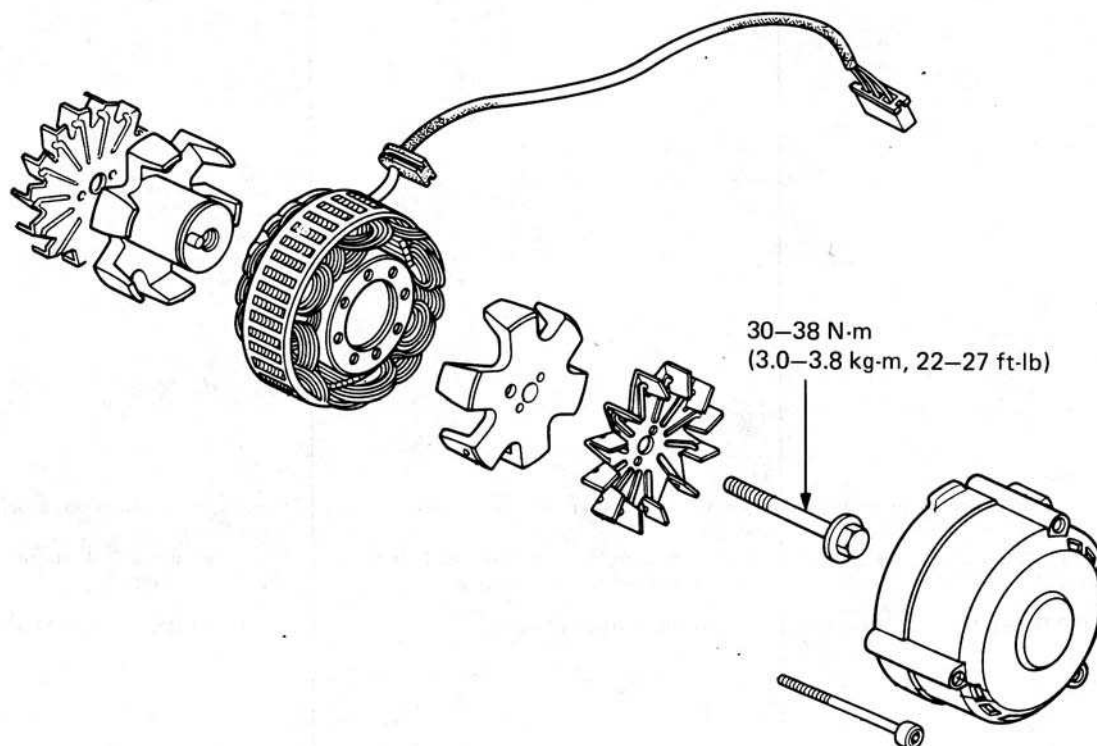

Install alternator rotor A.

Install the alternator stator with the painted groove on the stator coil aligned with upper right groove for the alternator cover mounting bolts.

Install rotor B with its hole aligned with the boss on rotor A.

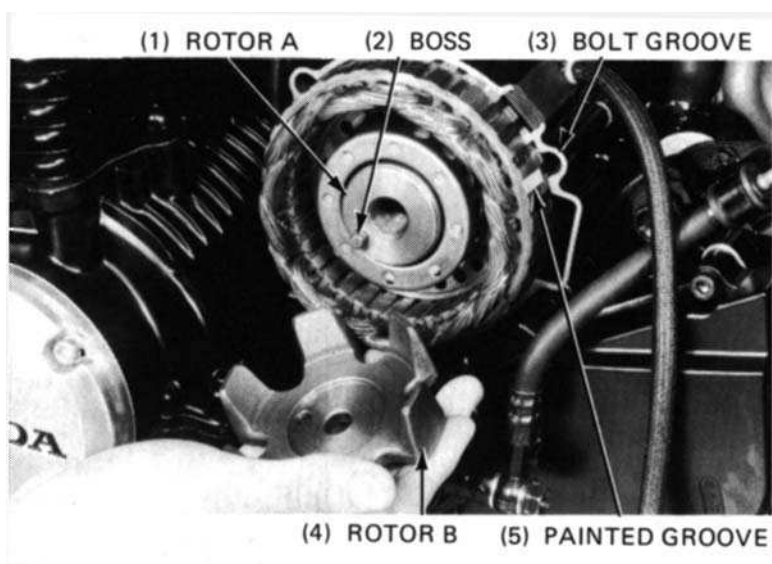




HONDA CBX750F

16. Battery & Charging System

Install the alternator fan with its holes aligned with the holes in rotor B.

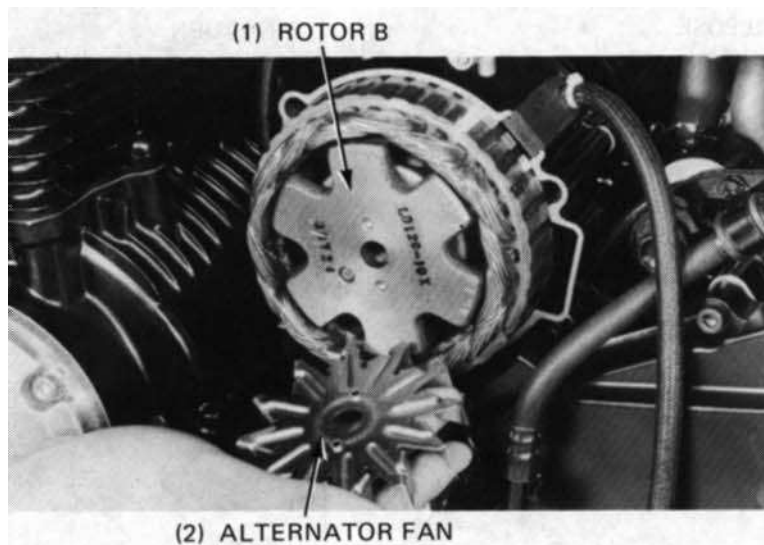

Install and tighten the alternator bolt to the specified torque.

TORQUE: 30-38 N.m
(3.0-3.8 kg.m, 22-27 ft.lb)



Install the alternator cover.

