



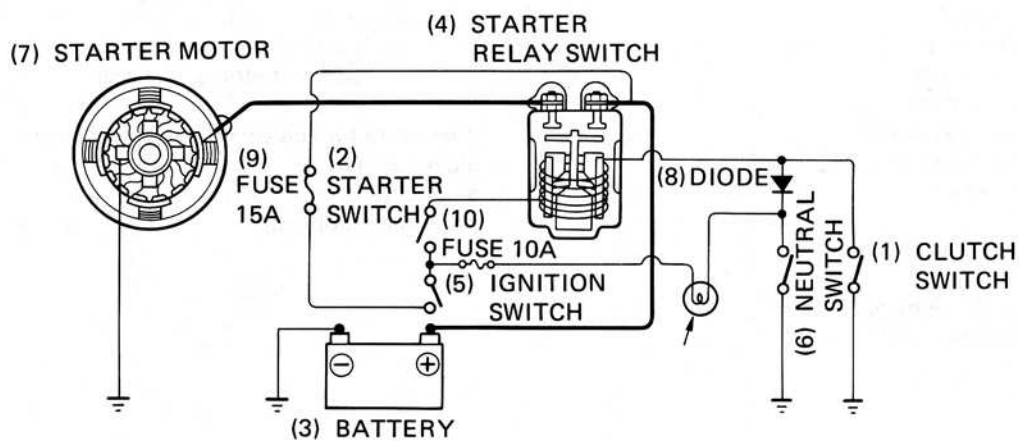

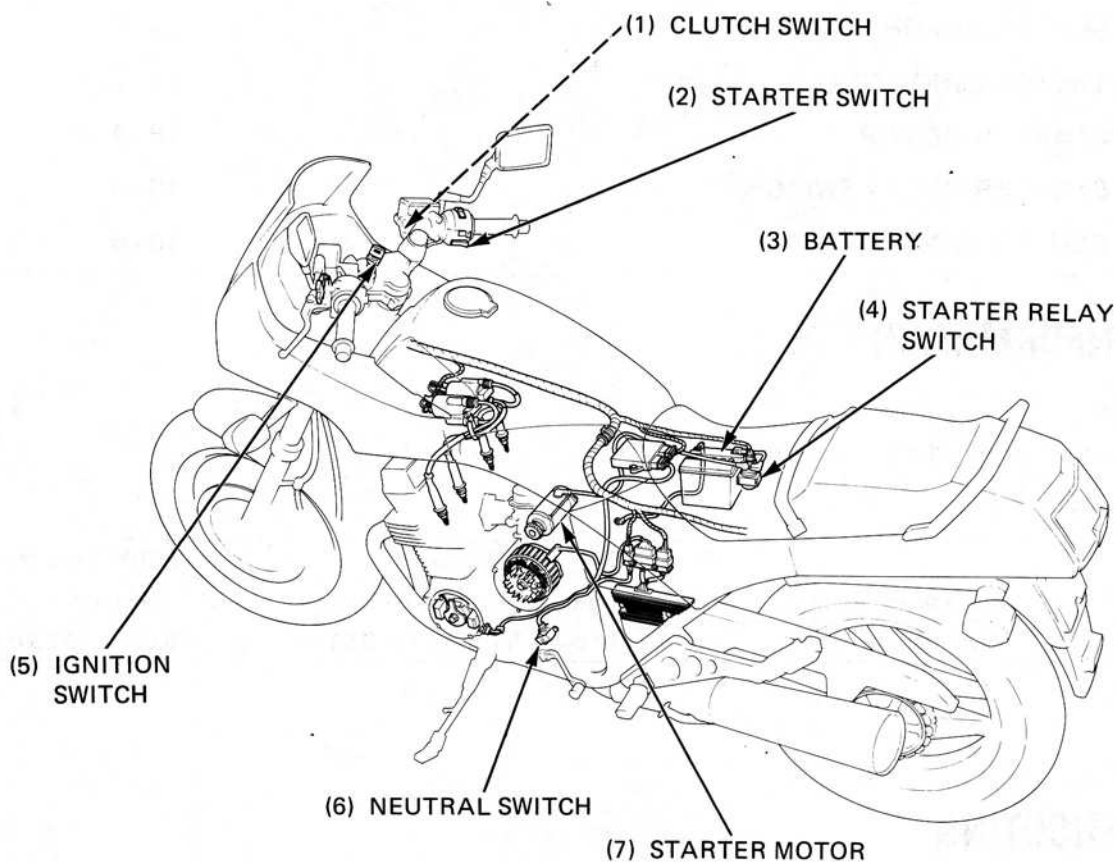

SERVICE INFORMATION	18-1
TROUBLESHOOTING	18-1
STARTER MOTOR	18-2
STARTER RELAY SWITCH	18-5
CLUTCH DIODE	18-6

SERVICE INFORMATION

GENERAL

The starter motor can be removed with the engine in the frame.

SPECIFICATIONS

		STANDARD	SERVICE LIMIT
Starter motor	Brush spring tension	680-920 g (24.0-32.5 oz)	545 g (19.2 oz)
	Brush length	12.0-13.0 mm (0.47-0.51 in)	6.5 mm (0.26 in)

TROUBLESHOOTING

Starter motor will not turn

- Battery discharged
- Faulty ignition switch
- Faulty starter switch
- Faulty neutral switch
- Faulty starter relay switch
- Loose or disconnected wire or cable
- Neutral diode open

Starter motor turns engine slowly

- Low specific gravity
- Excessive resistance in circuit
- Binding in starter motor

Starter motor turns, but engine does not turn

- Faulty starter clutch
- Faulty starter motor gears
- Faulty starter motor or idle gear

Starter motor and engine turns, but engine does not start

- Faulty ignition system
- Engine problems



STARTER MOTOR



REMOVAL

WARNING

With the ignition switch OFF, remove the negative cable at the battery before servicing the starter motor.

Remove the starter cable from the starter motor.

Remove the bolts and starter motor.

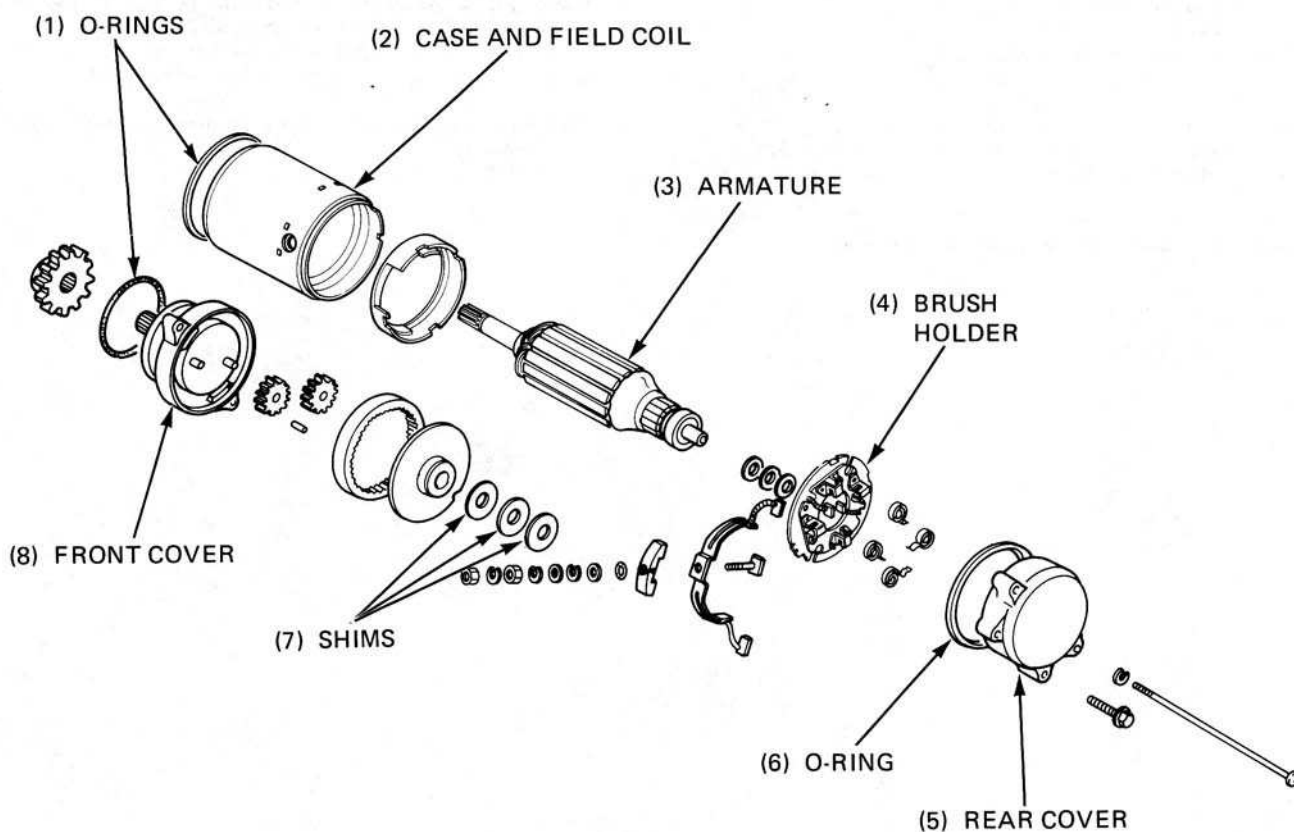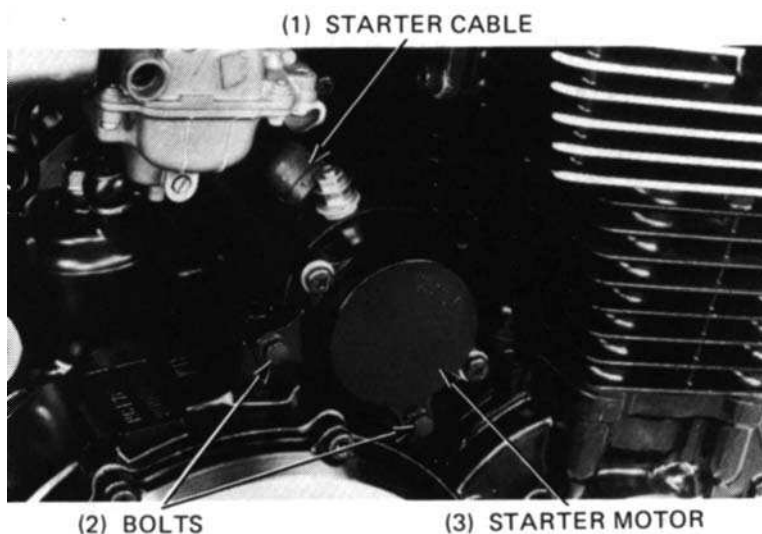




BRUSH INSPECTION

Remove the starter motor case screws.
Inspect the brushes and measure the brush length.
Measure brush spring tension with a spring scale.

SERVICE LIMITS:

Brush length: 6.5 mm (0.26 in)
Brush spring tension: 680 g (24.0 oz)

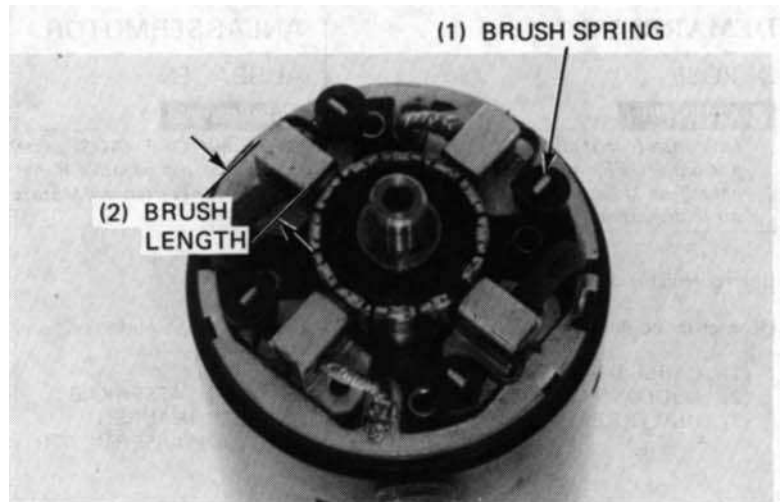

COMMUTATOR INSPECTION

Remove the starter motor case.


NOTE:

Record the location and number of thrust washers for correct reassembly.

Inspect the commutator bars for discoloration.
Bars discolored in pairs indicate grounded armature coils.


NOTE:

Do not use emery or sand paper on the commutator.

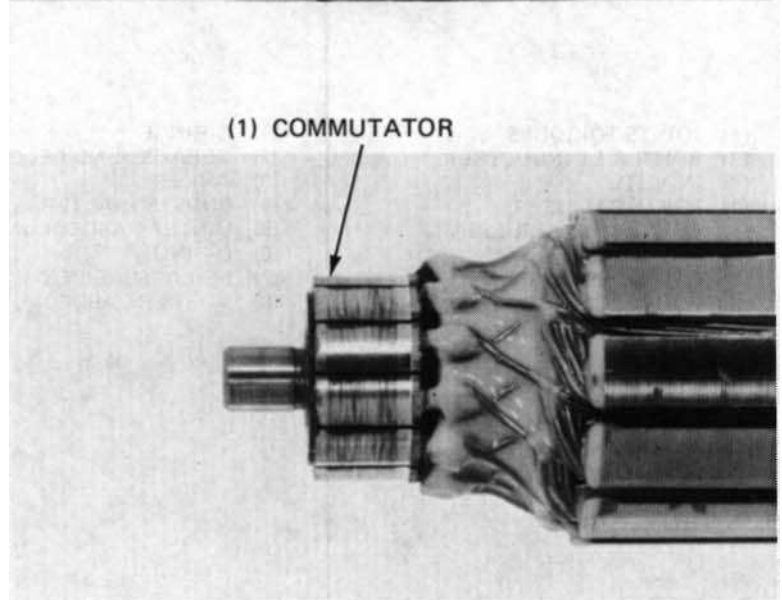

(1) CONTINUITY BETWEEN COMMUTATOR BAR PAIRS: NORMAL
(2) NO CONTINUITY BETWEEN COMMUTATOR BAR AND ARMATURE SHAFT: NORMAL

Check for continuity between pairs of commutator bars, and also between individual commutator bars and armature shaft.

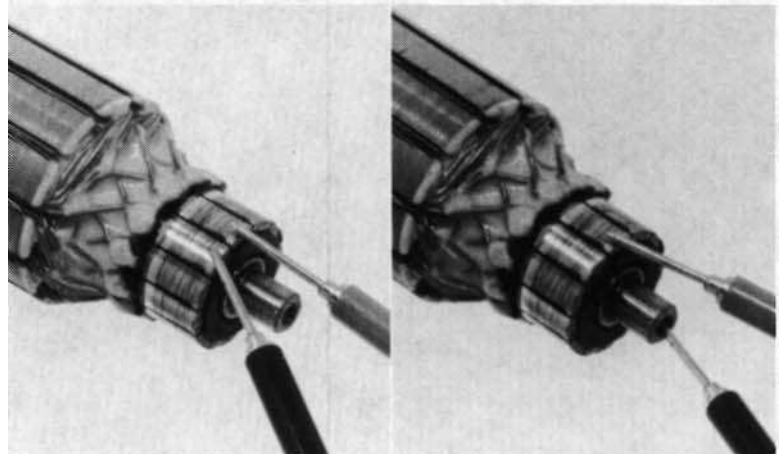




HONDA CBX750F

18. Electric Starter


FIELD COIL INSPECTION

check for continuity from the cable terminal to the motor case and from the cable terminal to the brush wire. Replace the starter motor if the field coil is not continuous or if it is shorted to the motor case.

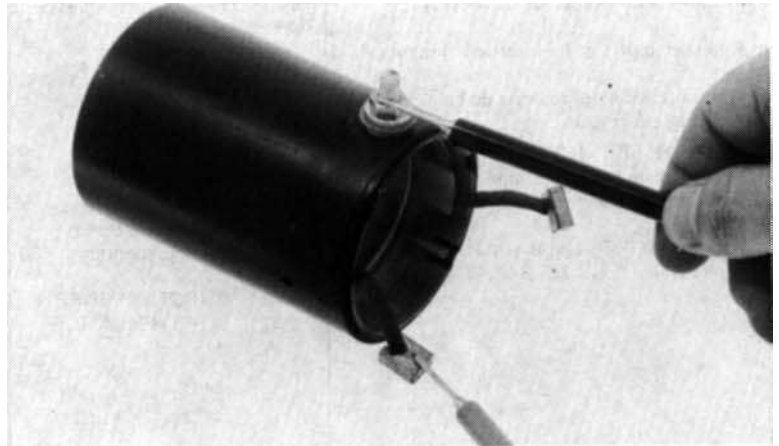


ASSEMBLY / INSTALLATION

Assemble the starter motor.
Align the case notch with the brush holder pin.

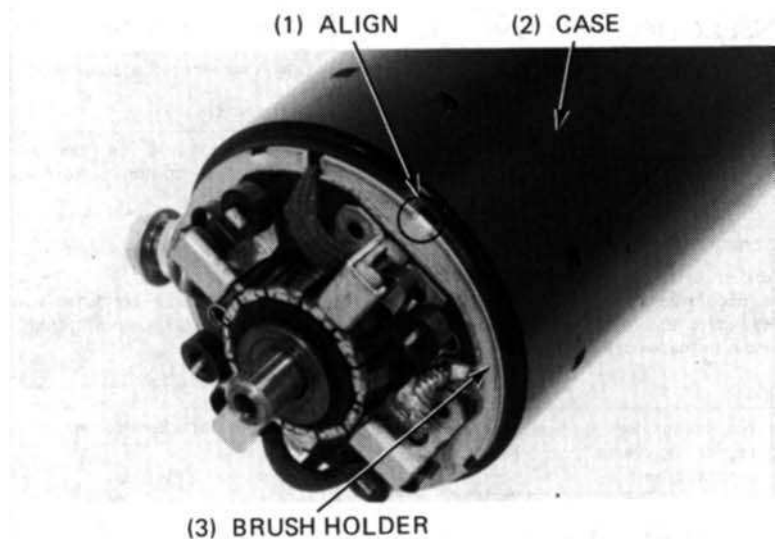

Install the rear cover aligning its slot with the brush holder pin.

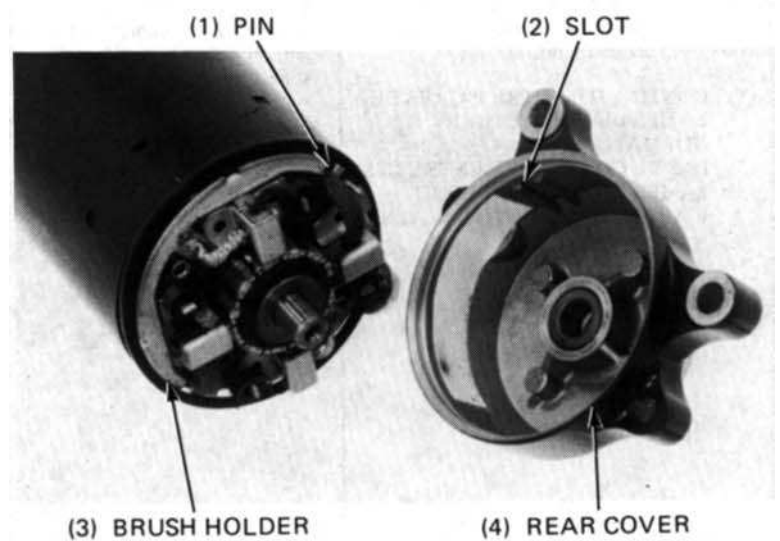





HONDA CBX750F

18. Electric Starter

Install the rear cover with its index mark aligned with the index mark on the case.

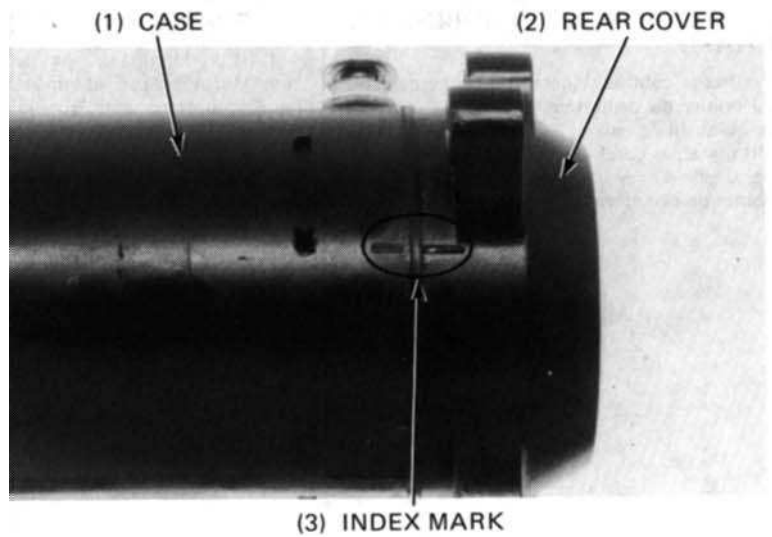


Install the starter motor.
Connect the starter cable and battery ground cable.

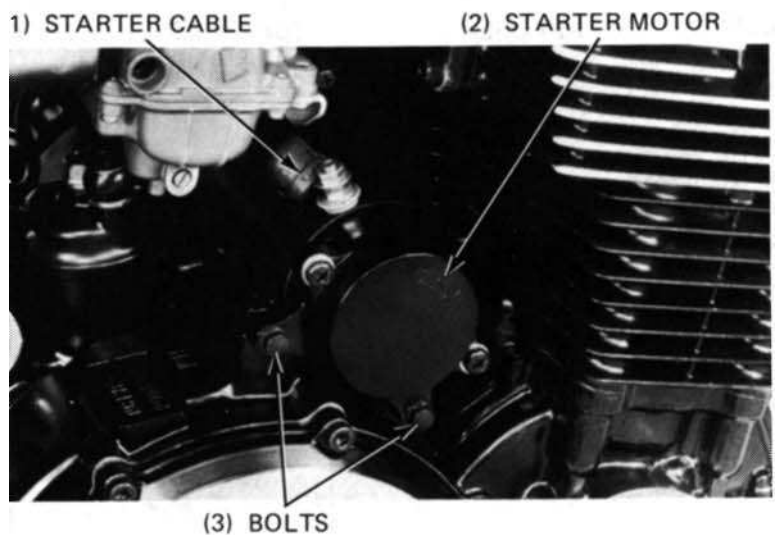

STARTER RELAY SWITCH

INSPECTION

Depress the starter switch button with the ignition ON.
The coil is normal if the starter relay switch clicks.
Connect an ohmmeter to the starter relay switch terminals.
Connect a 12V battery to the switch cable terminals.
The switch normal if there is continuity.

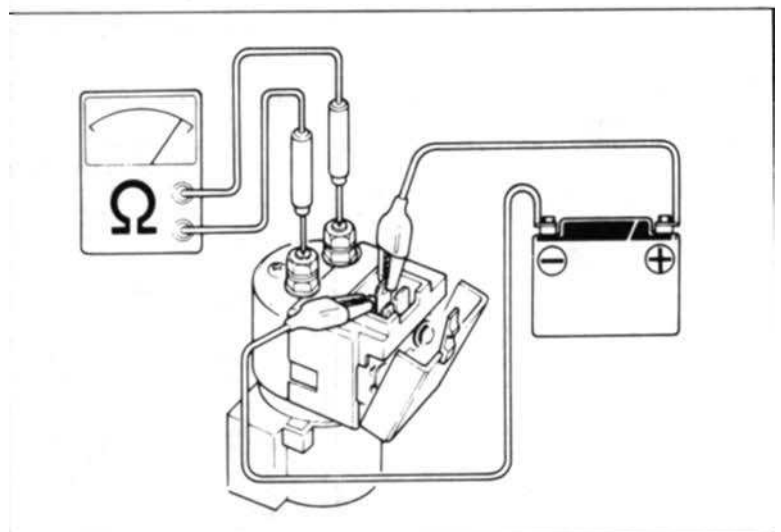



HONDA CBX750F

18. Electric Starter

CLUTCH DIODE

REMOVAL

Remove the fuel tank.
Remove the clutch diode from the wire harness.



(1) CLUTCH DIODE

INSPECTION

Check for continuity with an ohmmeter.

NORMAL DIRECTION: CONTINUITY
REVERSE DIRECTION: NO CONTINUITY

Replace the diode if it does not meet specifications.

