

The handset controls shown below are used when programming your TV and to adjust the sound and picture features.

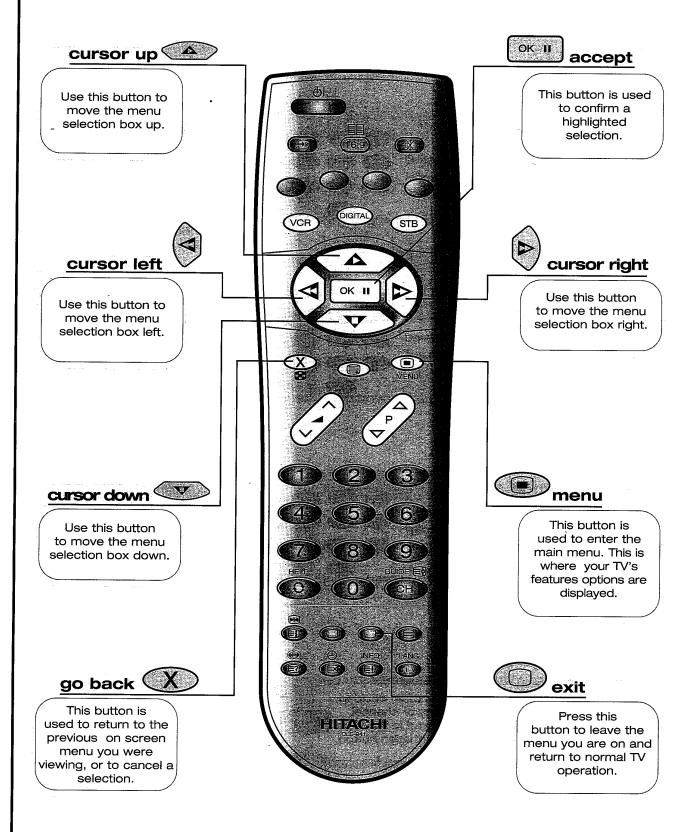

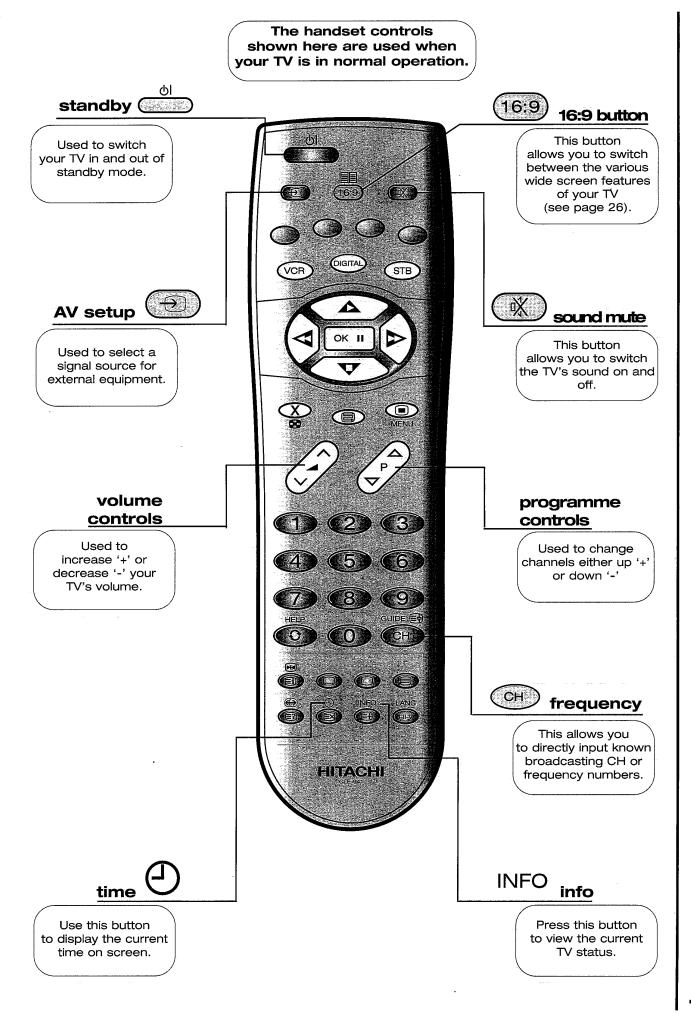

dual page



When in
Teletext mode, press
once to display dual
page mode, press
again to view current
page and TV picture.

The handset controls shown here are used when you are operating Teletext.

OK II

(i)

STB

)F



colours

(red, green, yellow, blue)
On certain pages in teletext, these will have coded instructions i.e. a shortcut to a teletext page or title.

swap



In Teletext mode
views the previous
magazine page
entered. (in TV mode
returns from your
current viewing channel
to the previous one).



hold

Use this to 'freeze' the teletext page on display to prevent the page changing (press again to continue).

index



Pressing this button will take you to the index.



television

Press this button to return to normal TV operations when in the teletext mode.

reveal



Used in Teletext mode to show hidden information eg. quiz pages answers.



teletext

Press this button to use the Teletext services.

update



Restores TV
picture whilst the TV is
looking for the entered
Teletext page.



expand

Use this button to expand the size of the teletext page on view.



subtitles

Use this to access a subtitle service directly rather than through a teletext service (subject to subtitle service broadcasting).



Teletext features start on page 28

3



For picture and sound values, moving the cursor left will decrease values, whilst moving the cursor right will increase values.

Press the MENU button to obtain MAIN MENU.



The MAIN MENU highlights the PICTURE option automatically - press OK to select.



Select the picture control to be adjusted by using the up / down cursor buttons.



Once highlighted, adjust the chosen controls by pressing the right / left cursor buttons.



To select MORE options use the up/down 🗮 buttons to highlight selection and then 🏻 ഉட் 💵 press OK to confirm.



Select the picture control to be adjusted by using the up/down cursor buttons.




Once highlighted, adjust the chosen controls by pressing the right/left cursor buttons (for explanation see below)



The values changed will remain until they are next altered. Press the TV button on your handset to return to normal TV operation.





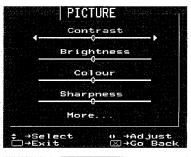





Noise Reduction

Helps reduce the noise interference visible on your television, especially in weaker signal reception areas. AUTO is recommended for normal viewing as this automatically compensates for the amount of noise in the picture.

CTI

Colour Transient Improvement - This control lets you improve the clarity of your televisions colour edges.

Velocity Modulator - this increases or decreases the sharpness of your televisions picture so it appears less blurred especially in left and right edges of the screen.

White Point

NORMAL - gives an equally balanced spectrum of colour. COOL - exaggerates the blue tones of your television picture. WARM - this exaggerates the red tones of your television picture.

Black Stretch

This control turns all dark grey pixels black.