Merrymaker

Let's get your bells ringing.


About five minutes, and you only do it once.

Your caroling bells	This Merrymaker	Your phone	Your Wi-Fi password
With the song cartridge slot	And its power adapter	iPhone or Android, no app	For a 2.4 GHz network

1 Swap the cartridge

Unplug your bells. Slide the old song cartridge out of the control box and keep it somewhere safe.

Slide the Merrymaker into the same slot, the way it sits in the photo, until it's snug.

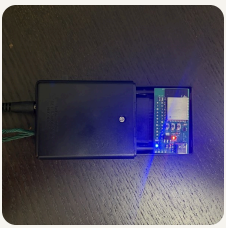

2 Plug in the new adapter

Use the adapter that came with Merrymaker, not the original one: it needs a little more power. After a few seconds the **NET** light starts blinking.

3 Join the Merrymaker network

In your phone's Wi-Fi settings, tap the network called **Merrymaker-** followed by four letters or numbers. There's no password.

A Merrymaker page opens by itself. If it doesn't, go to **`192.168.4.1`** in your browser. Read the terms of use and tap **Agree**. If your phone warns there's no internet, stay connected.

4 Choose your home Wi-Fi

Pick your network, type its password and tap **Join network**. The NET light stays on and the page says **All set**.

Tap **Copy address**, then **Finish**. Back on your home Wi-Fi, paste the address into Safari or Chrome. It looks like **`merrymaker-4f2a.local`**.

Tip: add the page to your home screen to open your bells in one tap.

5 Pick a song

Tap a collection, tap a song, and let them ring. More than one set? Set each one up on the same Wi-Fi, and they all ring together.

Lights, buttons and help on the back

merrymakerbells.com/setup

Lights and buttons

NET light

Wi-Fi

Blinking

The Merrymaker network is open for your phone to join.

On

On your home Wi-Fi and ready to play.

STS light

Status

Flickering

Ringing the bells. It flashes with every note.

WIFI button

For finding or moving your set

Press

Opens the Merrymaker network again, keeping your Wi-Fi. Join it to see your set's address or move it to another network. Closes after 5 minutes.

Hold 5 seconds

Forgets your Wi-Fi and starts setup again.

USER button

For playing without your phone

Press

Plays or stops a song.

Hold 5 seconds, then let go

Forgets your Wi-Fi.

Hold 10 seconds

Resets everything. Start again at step 3.

If something's not right

- **No Merrymaker network?** If NET is on steadily, you're already set up: press WIFI to open the network again. No lights at all? Check the adapter and push the Merrymaker fully into its slot.
- **Home network not listed?** Merrymaker uses 2.4 GHz Wi-Fi. Choose the network that doesn't end in "5G", or move the bells closer to the router.
- **Couldn't join?** The password was probably mistyped. The Merrymaker network comes back after about 20 seconds; join it and try again.
- **Address won't open?** Make sure your phone is on home Wi-Fi, not mobile data. Try the number address shown under All set, like **`192.168.1.42`**.
- **Bells quiet or missing notes?** Use the included adapter. Open **Bells** on the page to test each one.

More at our website

Scan the code for the full setup guide, with photos.

- ♪ Step-by-step setup and more fixes
- ♪ The songbook: every carol on your set
- ♪ Playing several sets together
- ♪ Writing your own songs

merrymakerbells.com

SCAN FOR SETUP

Still stuck? Message us through eBay and we'll help you get ringing. Keep your old song cartridge: you can swap it back any time.

Merrymaker is an independent product, not made by or affiliated with the makers of Ye Merrie Minstrel. "Ye Merrie Minstrel" is used only to describe compatibility. Bells not included.