



Line 5 Self-Rescue

Job Aid



LRT8503-0825

Operations Training Centre, TTC
LRT8503-0825

Table of Contents

Electrical Towing.....	1
Electrical Pushing.....	4

Electrical Towing

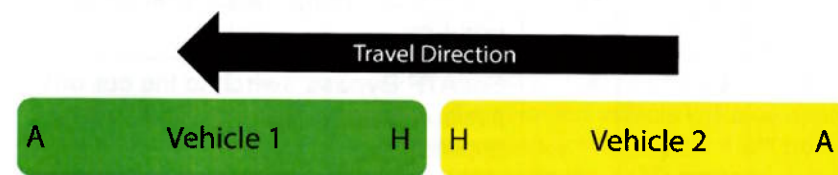


Figure 1: A two-vehicle train– the green vehicle is the rescue vehicle, the yellow vehicle is the defective vehicle being towed.

Step	Vehicle	Cab	Action
1.	1	A	Confirm Master Controller (MC) is in Full Service Brake
2.	1	A	Confirm 4 Ways are on.
3.	1	A	Call Transit Control to get permission to perform train Self Rescue.
4.	1	A	Place MSS in UTO .
5.	1	H	Exit through rear crew door (B Module).
6.	2	H	Enter disabled vehicle (through crew door in B module).
7.	2	A	Confirm MSS is in UTO .
8.	2	A	Set ATP Bypass Switch in cut out position
9.	2	H	Place the Rescuer/Towing Mode switch in Towing position.
10.	2	H	Confirm Coupling Switch in Normal position.
11.	2	H	Ensure crew door is fully shut and secure.
12.	1	H	Place the Rescuer/Towing Mode switch in Rescuer position

Step	Vehicle	Cab	Action
13.	1	H	Confirm Coupling switch is in Normal position .
14.	1	A	Set ATP Bypass switch to the cut out position (if not, a Security Brake will be applied).
15.	1	A	Place the Mode Selector Switch in EMERGENCY mode (MAN) .
16.	1	A	Check the following items are functioning before getting permission to move off: • Auxiliary Camera System (AVCS). • PA INT. • PA EXT. • INTCOM. • Horn. • Gong. • Windshield heating. • Windshield wiper.
17.	1	A	Contact Transit Control for permission to activate the Train Disc Brake Release switch to perform brake checks.

Step	Vehicle	Cab	Action
18.	1	A	Perform the following brake checks: 1. While Stationary, place the MC Handle into emergency and see the track brakes apply on the brakes screen • The disabled vehicle will also apply emergency brakes, but it will not display on the DDD screen. 2. While Stationary, press the Emergency Stop button and see the track brakes apply on the brakes screen. • The disabled vehicle will also apply security brake, but it will not display on the DDD screen. • The disk brakes will not release from the disabled vehicle so the disk brake release switch will need to be used again. 3. Perform a push test of 1 meter to ensure the brakes released and bring the vehicle to a stop using Max Brake.
19.	1	A	Contact Transit Control to confirm routing.



Note: If a change is made to the mode selector switch (MSS), the disc brakes on the defective car will apply.



Warning: Due to reduced braking capability, braking distance will be increased.

Electrical Pushing

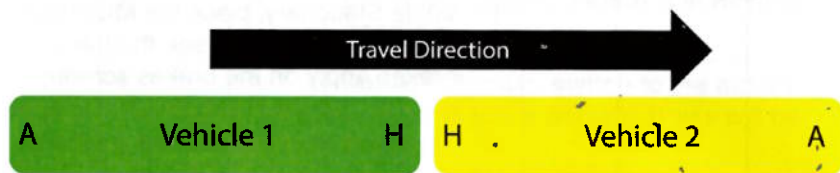


Figure 1: Two-vehicle pushing – Green is the rescue vehicle, yellow is the defective vehicle being pushed.

Step	Vehicle	Cab	Action
1.	1	A	Confirm Master Controller (MC) is in Full Service Brake.
2.	1	A	Confirm 4-Ways are on.
3.	1	A	Call Transit Control to get permission to perform train Self Rescue.
4.	1	A	Place MSS in UTO .
5.	1	H	Exit through rear crew door (B Module).
6.	2	H	Enter disabled vehicle (through crew door in B module).
7.	2	A	Confirm MSS is in UTO .
8.	2	A	Set ATP Bypass Switch in cut out position.
9.	2	H	Place the Rescuer/Towing Mode switch in Towing position.
10.	2	H	Confirm Coupling Switch is in Normal position.
11.	2	H	Ensure crew door is fully shut and secure.
12.	1	H	Place the Rescuer/Towing Mode switch in Rescuer position.

Step	Vehicle	Cab	Action
13.	1	H	Confirm Coupling switch is in Normal position.
14.	1	A	Set ATP Bypass switch to the cut out position (if not, a Security Brake will be applied).
15.	1	A	Place Mode Selector Switch in REV
16.	1	A	Check the following items are functioning before getting permission to move off: • Auxiliary Camera System (AVCS). • PA INT. • PA EXT. • INTCOM. • Horn. • Gong. • Windshield heating. • Windshield wiper.
17.	1	A	Contact Transit Control for permission to activate the Train Disc Brake Release switch to perform brake checks.

Step	Vehicle	Cab	Action
18.	1	A	Perform the following brake checks: - While stationary, place the MC Handle into emergency and see the track brakes apply on the brakes screen (The disabled vehicle will also apply emergency brakes, but it will not display on the DDD screen). - While stationary, press the Emergency Stop button and see the track brakes apply on the brakes screen (the disabled vehicle will also apply security brake, but it will not display on the DDD screen). - The disk brakes will not release from the disabled vehicle so the disk brake release switch will need to be used again. - Perform a push test of 1 meter to ensure the brakes released and bring the vehicle to a stop using Max Brake.
19.	2	A	Perform the following cab checks to ensure they are functioning before getting permission from control to move the train: - PA INT. - PA EXT. - INTCOM. - Horn. - Gong. - Windshield Wiper.

Step	Vehicle	Cab	Action
20.	2	A	Perform the following brake check: - While stationary, press the Emergency Stop pushbutton and see if the track brakes applied on the brakes screen of Vehicle 1. - The disabled vehicle will also apply a security brake, but it will not be displayed on the DDD screen of the disabled vehicle. - The disk brakes will not be released on the disabled vehicle. Use the Train Disk Brake Release switch on the rescue vehicle to release the disk brakes.
21.	1	A	Contact Transit Control to confirm routing
22.	2	A	While a vehicle is being towed, a second operator in vehicle 2 Cab A must remain vigilant in the vehicle being towed. The second operator must remain in communication with the operator in Vehicle 1 Cab A using the communication system IntCom (intercom) function and be prepared to activate an Emergency Stop using the Emergency Stop pushbutton.



Note: If a change is made to the mode selector switch (MSS), the disc brakes on the defective car will apply.



Warning: Due to reduced braking capability, braking distance will be increased.

Drive control unit booster

During the self rescue procedure the operator will have access to the Drive Control Unit (DCU) Booster. The booster provides more initial torque to help move the train when under heavy load or on a grade.

Activating the DCU Booster

1. Contact Transit Control to request permission to use the DCU Booster.
2. On the DDD screen, press the MISCELLANEOUS OPERATOR CONTROL soft key.
 - The Miscellaneous Operator Control screen will appear with the **DCU BOOSTER MODE** soft key illuminated.
3. Press the **DCU BOOSTER MODE** soft key to activate the booster mode feature.
 - The soft key will turn blue.
 - The ECLRT will have increased acceleration until the mode selector switch changes positions.



Warning: With the DCU Booster engaged, the ECLRT can accelerate at a higher rate than normal.