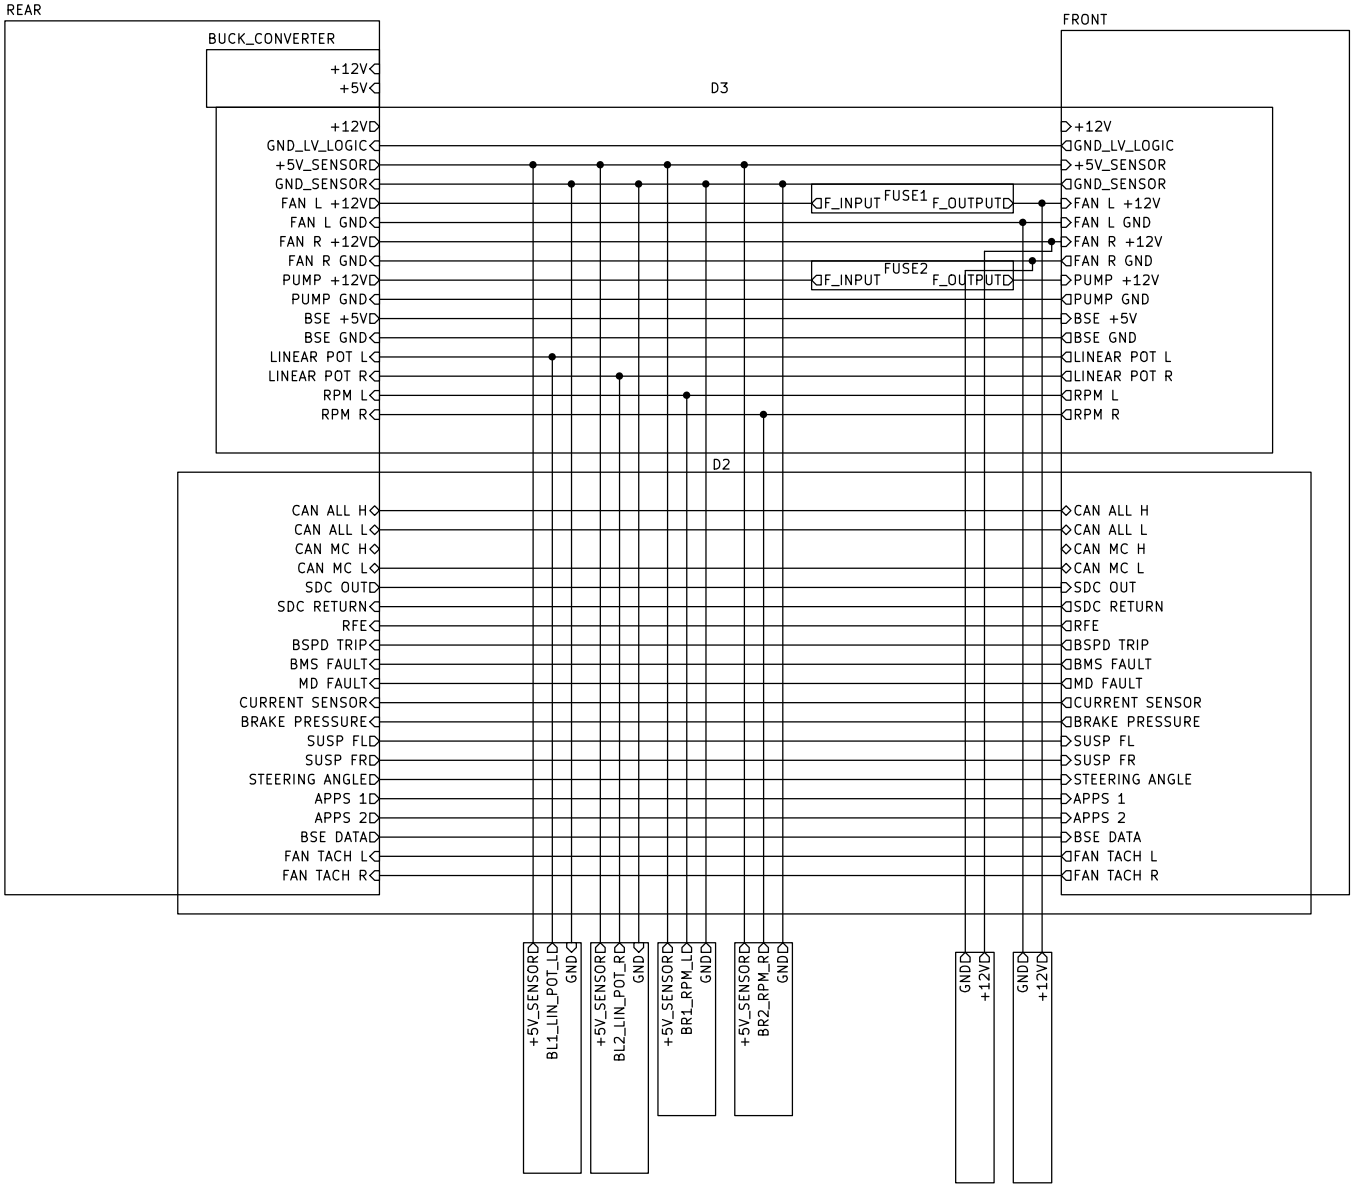
REAR
BUCK_CONVERTER
+12V
+5V
FRONT
D3
+12VD
GND_LV_LOGIC
+5V_SENSORD
GND_SENSOR
FAN L +12VD
FAN L GND
FAN R +12VD
FAN R GND
PUMP +12VD
PUMP GND
BSE +5VD
BSE GND
LINEAR POT L
LINEAR POT R
RPM L
RPM R
FUSE1
F_INPUT
F_OUTPUTD
FUSE2
F_INPUT
F_OUTPUTD
+12V
GND_LV_LOGIC
+5V_SENSOR
GND_SENSOR
FAN L +12V
FAN L GND
FAN R +12V
FAN R GND
PUMP +12V
PUMP GND
BSE +5V
BSE GND
LINEAR POT L
LINEAR POT R
RPM L
RPM R
D2
CAN ALL H
CAN ALL L
CAN MC H
CAN MC L
SDC OUT
SDC RETURN
RFE
BSPD TRIP
BMS FAULT
MD FAULT
CURRENT SENSOR
BRAKE PRESSURE
SUSP FL
SUSP FR
STEERING ANGLE
APPS 1D
APPS 2D
BSE DATA
FAN TACH L
FAN TACH R
CAN ALL H
CAN ALL L
CAN MC H
CAN MC L
SDC OUT
SDC RETURN
RFE
BSPD TRIP
BMS FAULT
MD FAULT
CURRENT SENSOR
BRAKE PRESSURE
SUSP FL
SUSP FR
STEERING ANGLE
APPS 1
APPS 2
BSE DATA
FAN TACH L
FAN TACH R
+5V_SENSORD
BL1_LIN_POT_LD
GNDD
+5V_SENSORD
BL2_LIN_POT_RD
GNDD
+5V_SENSORD
BR1_RPM_LD
GNDD
+5V_SENSORD
BR2_RPM_RD
GNDD
GNDD
+12VD
GNDD
+12VD