


HOST AND FIELD CONNECTORS







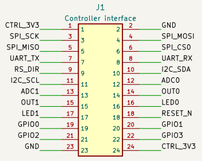













RS-485 INTERFACE














Enable JP1 at a cable end only. JP2 connects the I2C pull-ups.

POWER SOURCE AND BYPASS











Fit one shunt on JP3. Centre pin feeds the carrier rail.





TEST ACCESS























All net labels with the same name are connected on this sheet.


Nominal 3.3 V logic. Review grounding and power limits before connecting external equipment.

I2C PULL-UPS




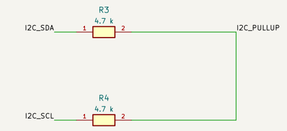


ANALOG INPUTS

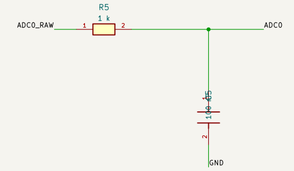


LOW-SIDE OUTPUTS AND INDICATORS



















3.3 V bench integration

Sheet: /
File: meridian-carrier.kicad_sch

Title: Meridian industrial sensor carrier

Size: A2 | Date: | **Rev: B**
KiCad E.D.A. 10.0.8 | Id: 1/1