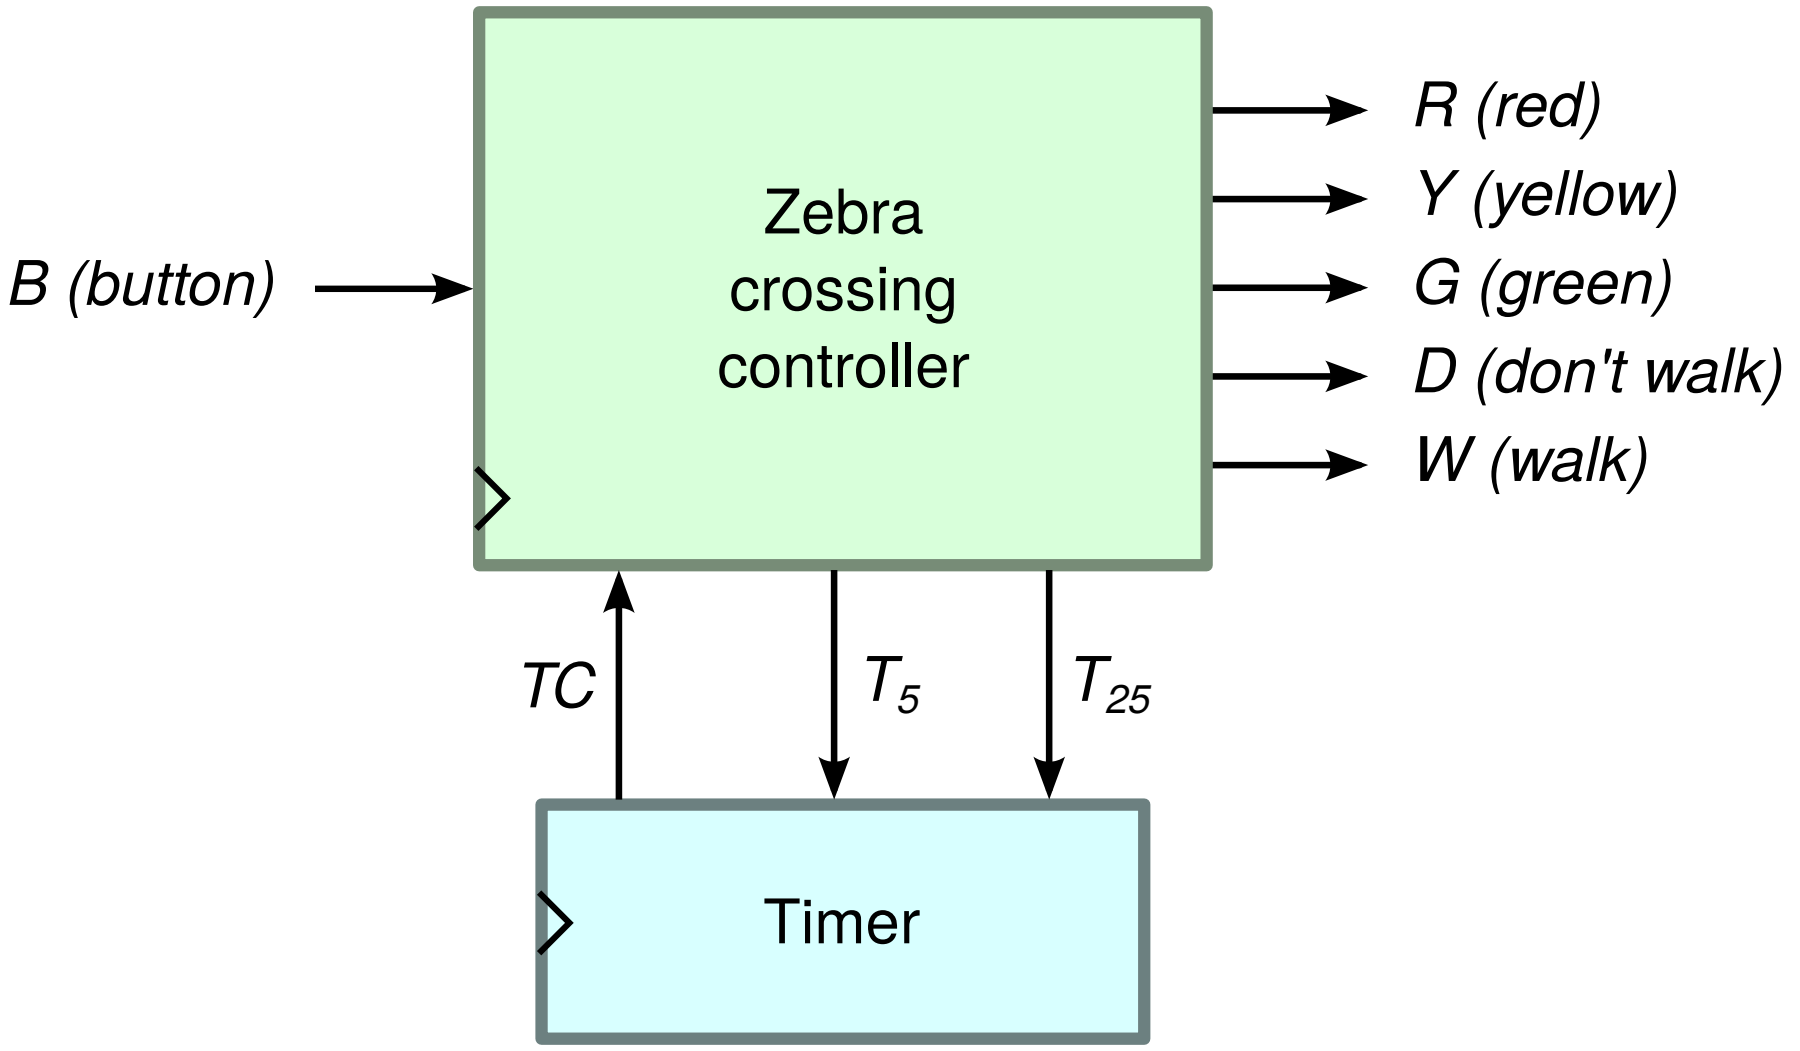
Zebra
crossing
controller
B (button)
R (red)
Y (yellow)
G (green)
D (don't walk)
W (walk)
TC
T_5
T_{25}
Timer