




FADING COLORS

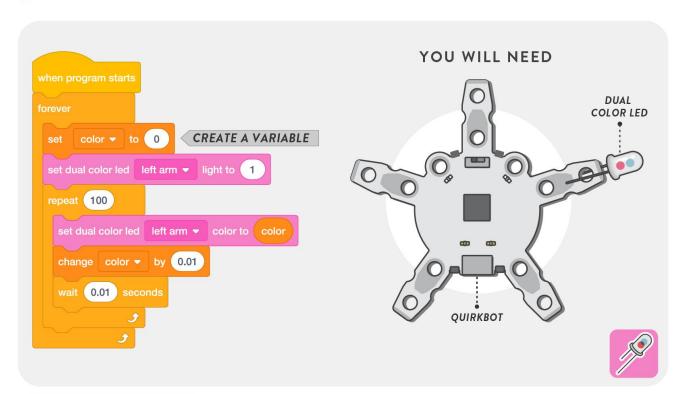


BACK AND FORTH

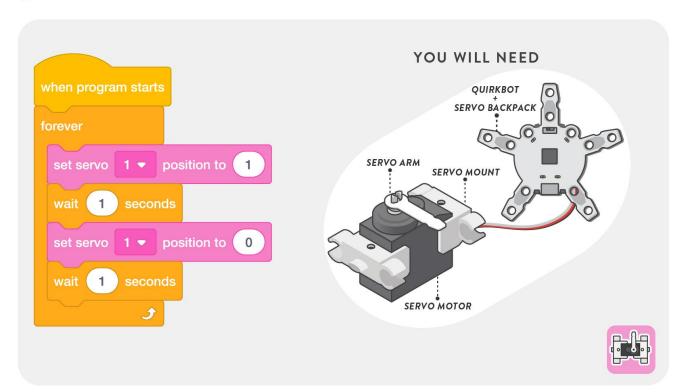




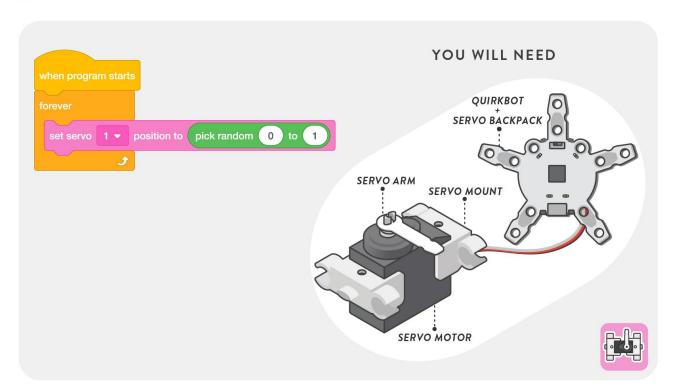




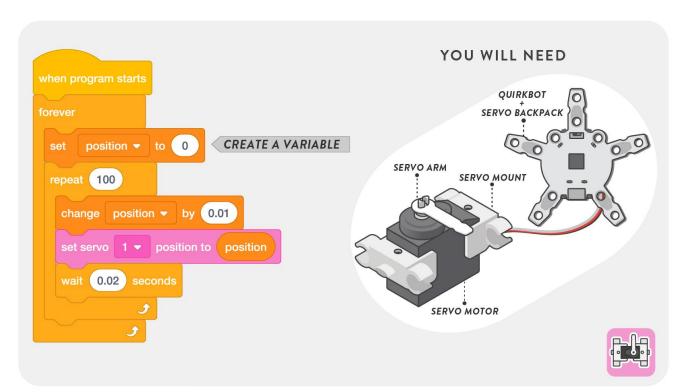


SWITCHING COLORS

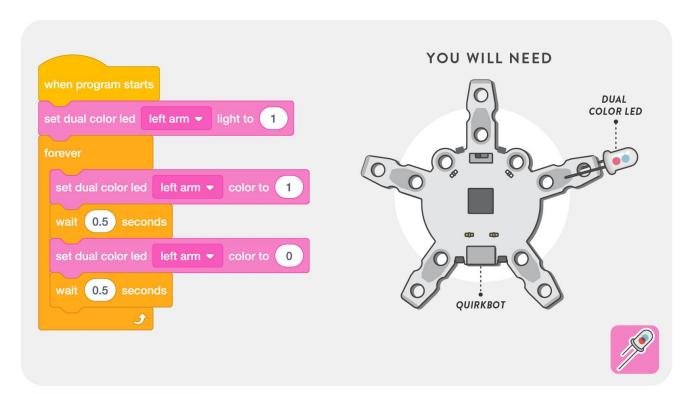


TOUCH AND WINK

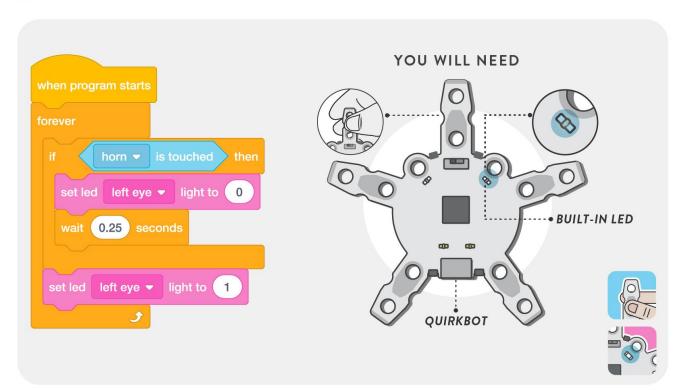




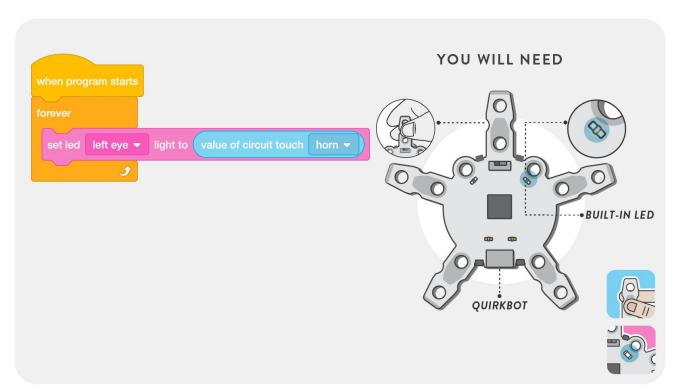


E LIGHT SWITCH

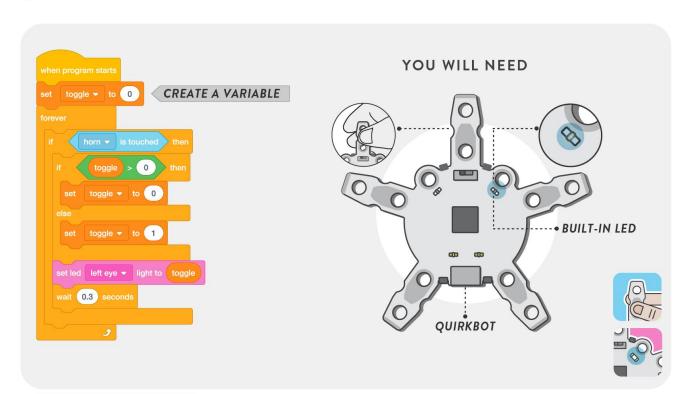




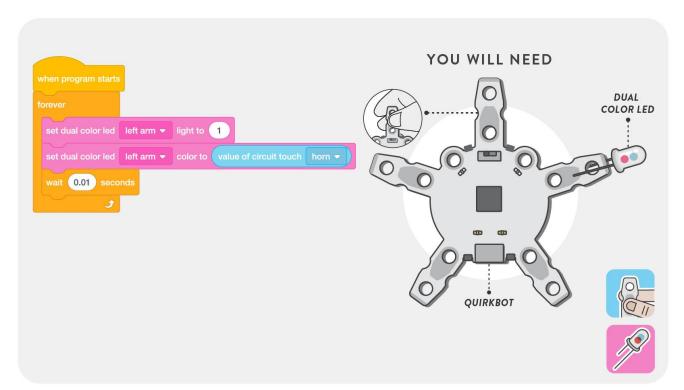




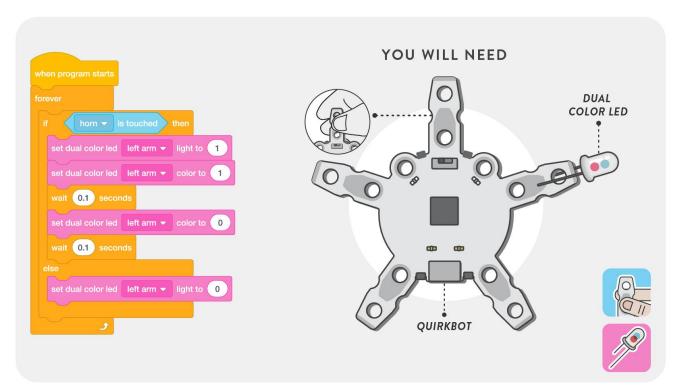


MOOD LIGHT SWITCH

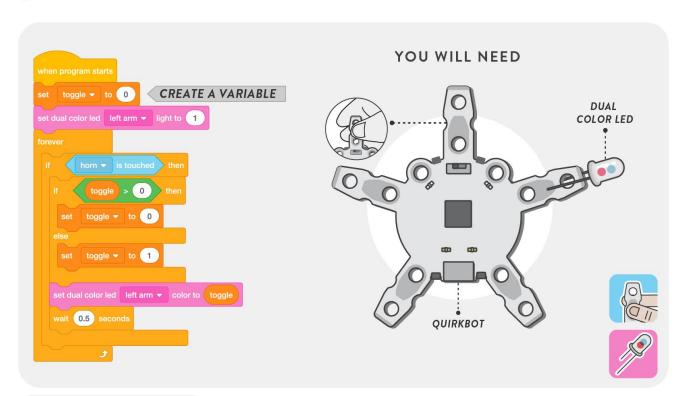




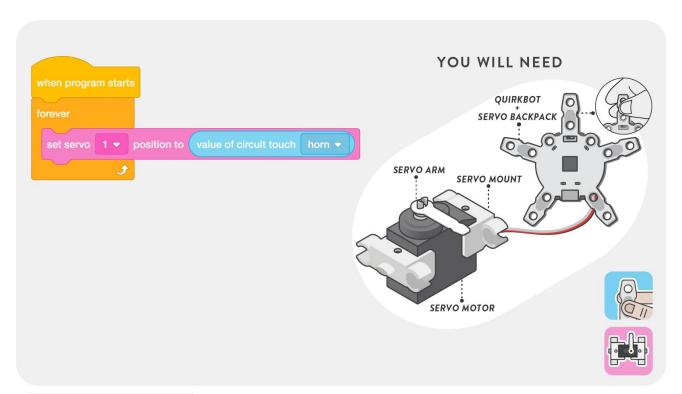


TOUCH AND TRAP

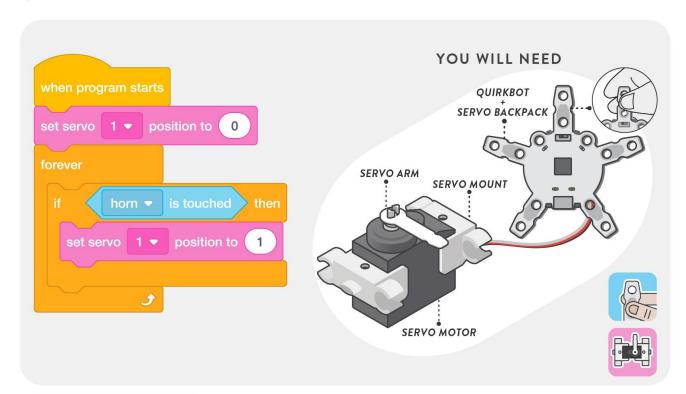

ET TOUCH TO SWITCH POSITION

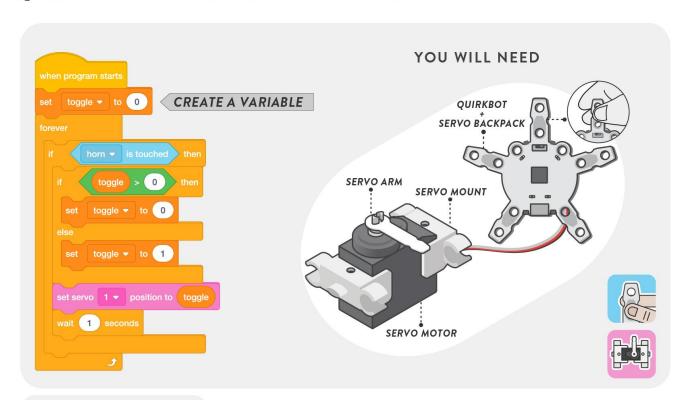

SHINE IN THE DARK

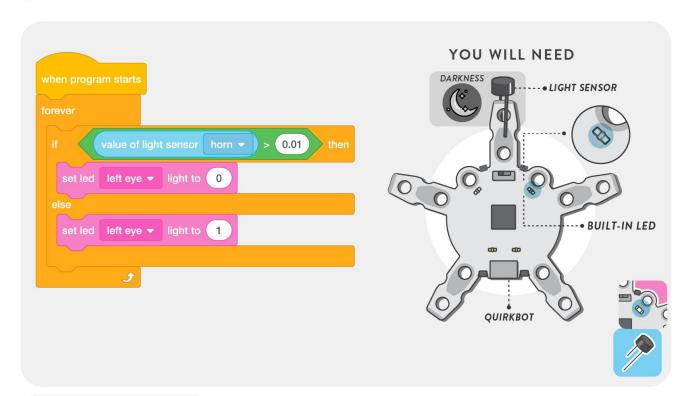



when program starts	DARKNESS LIGHT SENSOR
set dual color led left arm ▼ light to 1	DUAL COLOR LED
if value of light sensor horn ▼ > 0.01 then set dual color led left arm ▼ color to 0	
else set dual color led left arm ▼ color to 1	
3	QUIRKBOT

SHAKE IN THE DARK

