

TECHNICAL MANUAL

# Document your network the way you see it.

Visual mapping of your network infrastructure: floor plan, 19" rack, L1/L2 topology, SNMP discovery, VLAN management and handover dossier — in a single application, installed on your own premises.

**30**

DEVICE TYPES

**v1·v2c·v3**

NATIVE SNMP DISCOVERY

**16**

THEMATIC CHAPTERS

On-premise · self-hosted

Manual-first

Documentation check (drift)

Label printing · Avery / Dymo

Bilingual IT / EN

---

# Contents

A clear guide to InfraNet Pro's features — written for network engineers, system integrators and MSPs.

## PART I · GETTING STARTED

---

|   |                                   |   |
|---|-----------------------------------|---|
| 1 | Requirements & installation ..... | 3 |
| 2 | InfraNet Pro at a glance .....    | 7 |
| 3 | The interface .....               | 8 |

## PART II · DRAWING THE INFRASTRUCTURE

---

|   |                                        |    |
|---|----------------------------------------|----|
| 4 | Device types .....                     | 11 |
| 5 | The floor plan .....                   | 13 |
| 6 | The rack .....                         | 16 |
| 7 | Cables, connections and wireless ..... | 18 |
| 8 | VLANs and colours .....                | 21 |
| 9 | Port states and presence .....         | 23 |

## PART III · MAKING THE NETWORK TALK

---

|    |                                           |    |
|----|-------------------------------------------|----|
| 10 | SNMP: discovery and synchronisation ..... | 24 |
| 11 | Automatic topology .....                  | 27 |
| 12 | The workflow .....                        | 28 |

## PART IV · MAINTAINING AND HANDING OVER

---

|    |                                           |    |
|----|-------------------------------------------|----|
| 13 | AI assistant (advisory) .....             | 30 |
| 14 | Documentation check (Drift) .....         | 33 |
| 15 | Overview (summary view) .....             | 36 |
| 16 | REST API and automation (Ansible) .....   | 42 |
| 17 | Change history .....                      | 44 |
| 18 | Export, labels and Handover dossier ..... | 45 |
| 19 | Bilingual IT / EN .....                   | 48 |

# 01 Requirements & installation

What you need to run InfraNet Pro and how to get it up and running in a few minutes.

InfraNet Pro is an **on-premise** application: it runs entirely on your own server or computer, with no cloud services, no external databases and no mandatory containers. Your data stays in-house.

## What you need

| Component  | Requirement                                                                                                             |
|------------|-------------------------------------------------------------------------------------------------------------------------|
| System     | Windows, Linux or macOS — any computer/server that stays on                                                             |
| Runtime    | <b>Node.js 16 or later</b> (LTS recommended)                                                                            |
| Browser    | A modern browser: up-to-date Chrome, Edge or Firefox                                                                    |
| Network    | Reachability to the devices you want to document via <b>SNMP</b> (UDP 161) — only needed if you use automatic discovery |
| Disk space | Minimal: projects are lightweight files saved locally                                                                   |


### Where to get Node.js

Download it for free from the official site **nodejs.org**: choose the **LTS** version (the most stable) for your operating system and install it with the guided package. On Linux you can also use your distribution's package manager ( `apt` , `dnf` ) or `nvm` . To check it is present: open a terminal and type `node -v` (it should respond with v16 or higher).

### No heavy infrastructure

No database (SQL/NoSQL), no cloud service, no Docker required. The app saves each project as a local file, with atomic writes and automatic backup copies: a power cut mid-save will not corrupt your work. *If you prefer containers, a ready-made Docker image is available too — see below.*

## Installation in 4 steps

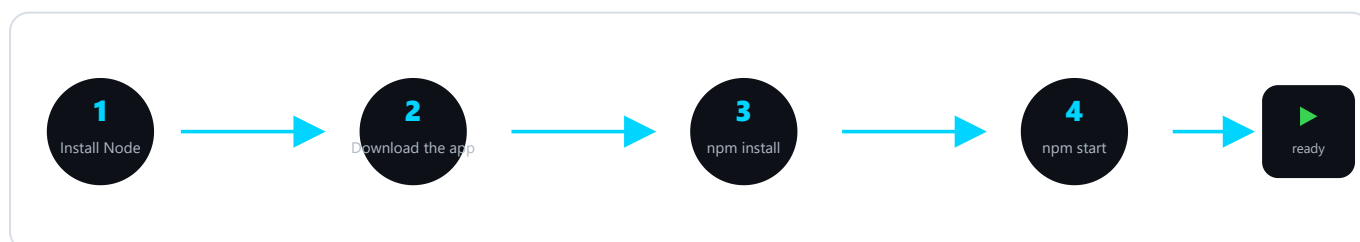

**Fig. 1** — From package to first launch: four commands and the app is online.

Get the app in one of the two ways below: the first is handy if you'll update often, the second is the most immediate. Then — in **both cases** — install the dependencies and start.

**Option A — with Git** (recommended: updates become a single command). Requires Git installed; it downloads the project and tracks the version:

```
git clone https://github.com/muttley1973/infranetpro.git
cd infranetpro
```

**Option B — download the ZIP** (no Git needed). On the project page on GitHub press **Code** → **Download ZIP**, extract the folder and open it in a terminal. More immediate, but to update you'll have to download the ZIP again (see *Updating the app*).

Then, **in both cases**, install the dependencies (once only) and start. The app opens in your browser at the local address:

```
# install dependencies (once only)
npm install

# start the server
npm start

# open your browser at:
http://localhost:8421
```

### Quick start on Windows

The folder contains `avvia.bat`: a double-click starts the server without opening a terminal. Handy for leaving the app running on a service workstation.

## Alternatively: run with Docker

If you already use containers — Docker on your computer, or a NAS/server managed with **Portainer** — the project ships a ready-made `Dockerfile` and `docker-compose.yml`: the app builds and starts with a single command, and your data lives in a persistent volume that survives upgrades.

```
# set a fixed session key (once)
cp .env.example .env

# build and start in the background
docker compose up -d --build

# open your browser at:
http://<host-ip>:8421
```

The administrator password generated on first launch appears in the container log ( `docker compose logs infranetpro` ).

### Network discovery & access

The `docker-compose.yml` uses **host networking** by default, so the container behaves like a native install — automatic **discovery sees the whole network** (MAC, vendor, SNMP) and the app is reachable at `http://<host-ip>:8421`. Since it is published on the host's interfaces (but login-protected), keep it on a trusted network; for outside access use a VPN or a reverse proxy. For an **isolated** instance (behind a reverse proxy, or on Docker Desktop where host networking is limited) use `docker-compose.bridge.yml` .

## First login and configuration

- **Login.** On first launch you sign in with the default administrator account. The first thing to do is **change the password** from the user menu.
- **Configurable port.** The default port is `8421` ; it can be changed via the `PORT` environment variable if already in use.
- **Access from other PCs.** Being a web server, once started it is reachable from other computers on the LAN by pointing to the server's IP (e.g. `http://192.168.1.10:8421`).
- **Where data lives.** Projects and floor plan background images are saved as files in the app's projects folder: a backup is simply a copy of that folder.

## Updating the app

Your data — **projects, users and settings** — is stored in files separate from the application code: an update **does not touch it**. How you update depends on how you installed the app.

**If you used Git (Option A)** — just two commands in the app folder:

```
git pull
npm install
```

**If you downloaded the ZIP (Option B)** — download the new version from GitHub (**Code** → **Download ZIP**), extract it into a **new folder** and **bring your data back in**, copying it from the old folder:

| Keep       | What it holds                             |
|------------|-------------------------------------------|
| projects/  | Your saved networks and floor-plan images |
| users.json | User accounts and passwords               |
| skins/     | Uploaded panel skins (if you use them)    |

Then run `npm install` in the new folder and restart. Do **not** copy the `node_modules` folder from the old one: it is regenerated by `npm install` .

**Tip**

Before updating, make a copy of the app folder: if anything goes wrong you can roll back in seconds. The **Git** method stays the most convenient if you update often.

## 02 InfraNet Pro at a glance

What it is, who it is for, and the principle that holds everything together: *manual-first*.

InfraNet Pro is designed to **draw and keep up to date** the documentation of a network: where devices physically are (the floor plan), how they are mounted in racks, how they are cabled and which VLANs they carry. It is built for people who know the network — engineers, system integrators, MSPs — and need documentation that is always accurate, not a drawing gathering dust in a drawer.

### Two views of the same project

#### Map (physical)

Where devices are **physically** located: floor plan with rooms, positioned racks, wall sockets, access points.  
The reality you can touch with your hands.

#### Topology (logical)

How devices are **logically connected**: lines between devices derived from LLDP/CDP and switch forwarding tables, with filters for VLAN, trunk and wireless.

These are not two separate drawings: they are the **same graph** read from a physical or logical perspective. You switch between them with the **1** and **2** keys.

### The principle: manual-first

#### The network suggests, the human decides

Data you enter manually is **never overwritten automatically**. SNMP discovery and consistency checking are *advisors*: they propose, flag, highlight — but the racks and cables you draw remain the authority. This is what makes the output trustworthy for a handover.

Many of the app's design choices follow from this: automatic discovery *fills in the gaps* but does not overwrite fields you have filled in; consistency checking shows you the differences but does not delete anything on its own; every alignment with reality is always your explicit decision, with a single click.

#### The lock: manual-first made visible


Next to **IP**, **hostname** and a **port's VLAN** there is a small lock. It is not a new feature: it simply makes the protection described above **visible and one-click**. **Lock open** = the field follows the network (the Sync updates it). **Lock closed** = the value is your decision: the Sync leaves it alone and *Verify documentation* warns you if reality diverges. Close it where the value *must* stay fixed (e.g. a static IP, a port's VLAN); leave it open where you want it to follow the network.

**IPv6 address.** Alongside IPv4, the device panel has an **IPv6** field with the **same padlock** as IPv4. On an SNMP device the **Sync auto-populates** it by reading the device's *own* address (routable IPv6, global/ULA — link-local fe80::... is not a management address). Close the padlock to fix it by hand: the Sync leaves it alone and **Verify warns you** if the device reports a different one. A *neighbouring* device's IPv6 can also surface from the deep scan (neighbour discovery).

## 03 The interface

The toolbar, the three work areas and the shortcuts that speed everything up.

The screen is divided into three areas: on the left the element **library** to drag from, in the centre the **floor plan** and **rack** views, on the right the **properties** panel for whatever you select.

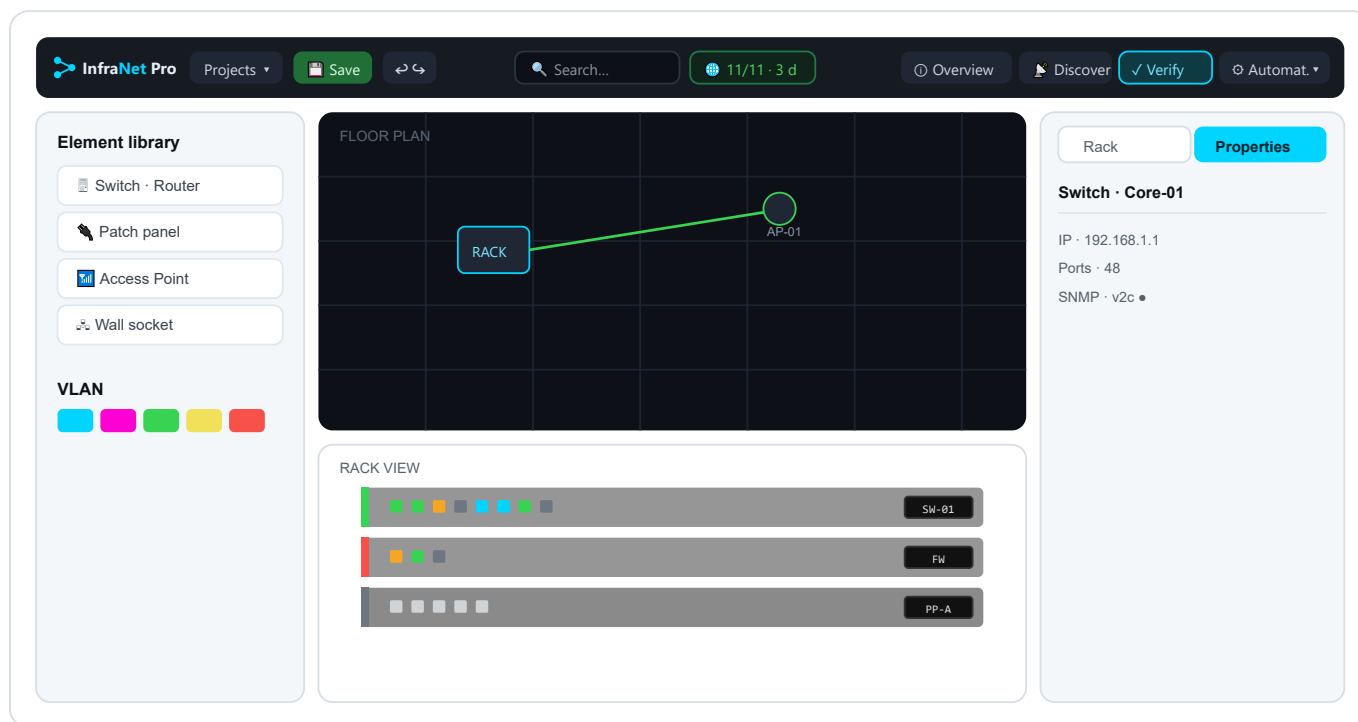

**Fig. 2** — The three areas: library (left), dark floor plan + rack on white background (centre), properties panel (right). All **device data** (IP, ports, SNMP...) lives in the properties panel. In the toolbar: **Verify** is the single primary action, a **freshness chip** (🌐 11/11 · 3 d) sits next to the search box, and **Overview** opens the summary view. The old *Sync* button is gone: it lives inside **Automation** (and Verify includes it).

### The status bar

Just under the toolbar runs a thin **status bar**, split into three parts that tell you at a glance where you are, what's worth doing next and how the network is doing.

- **Left: the path.** A trail like *InfraNet Pro / Project name / Floor plan*: it reminds you which project you have open.
- **Centre: the recommended step.** InfraNet reads the project's state and suggests the next useful move — *Discover now* if the network is still empty, *Verify now* if it is documented but not yet compared against reality, and so on. It's only a hint: the button opens the right feature, but you decide.
- **Right: three health numbers.** *Docs* (the share of addressable devices you have already given an IP), *Devices* (how many pieces of equipment you have documented — rooms don't count) and *SNMP* (a coloured dot: green if all respond, amber if some are missing or not polled yet, red only when something is genuinely down).

**Numbers are computed, never estimated**



The three stats come from the very same data you see in the Properties panel: they are a count, not a forecast. A project you have just opened and not yet synced shows the SNMP dot **amber** (not red): "not verified yet" is not "broken".

## The Properties panel

It's the right-hand column: the place where **everything you know** about the element you selected lives. It doesn't always show the same things — it's **contextual**. Click an appliance and you get IP, model, ports and SNMP; click a port and you set state, speed and VLAN; click a cable and you set type, length and label; click an empty spot on the floor plan and the background's scale, opacity and grid appear. One column that changes face depending on what you're looking at.

The reason is the heart of InfraNet: objects on the map and in the rack stay **clean and readable** (icon, ports, LEDs, nameplate) while the **data** — addresses, make and model, notes, SNMP credentials — is gathered here. Separating the scene from the data is what turns a drawing into real documentation: what you type in the panel is your **documentary truth** (the *manual-first* principle).

- **Accordion layout.** Properties are split into collapsible sections (identity, **Network & Access**, the options specific to the device type...). They remember whether you leave them open or closed, so the panel comes back the way you had it.
- **It works with automation.** *Discovery* and *SNMP Sync* fill these same fields and add read-only *live cards* (toner, CPU, UPS runtime...), but they **do not overwrite** the values you entered by hand: automation enriches, it doesn't command.
- **It's what the check compares.** *Documentation check* compares exactly these fields against what's found on the network; the VLAN filter and colours also read what you set here.

### Rack or Properties

Top-right you switch between the **Properties** panel and the **Rack** view with the **P** and **R** keys: they're two faces of the same right-hand column.

## Essential shortcuts

| Key         | Action                           | Key             | Action                          |
|-------------|----------------------------------|-----------------|---------------------------------|
| 1 / 2       | Map / Topology view              | Ctrl+S          | Save project                    |
| R / P       | Rack / Properties panel          | Ctrl+Z / Ctrl+Y | Undo / Redo                     |
| Space +drag | Pan the map                      | Del             | Delete selected element         |
| right-click | Start / finish a port connection | Esc             | Cancel connection / close panel |

**Connecting two ports — use the right mouse button**

Cables are drawn with the **right mouse button**: right-click on the source port, then right-click on the destination port → the cable is created. **Esc** (or a click on empty space) cancels. For a *cross-rack* connection, a banner advises you: navigate to the other rack and right-click the destination port.

### Tip

After clicking a port, press **R** to jump to the connected rack without touching the mouse. And **Space** +drag is the quickest way to navigate large floor plans.

## 04 Device types

Over 30 ready-made types, split between rack appliances and floor plan endpoints.

Every element is dragged from the left-hand library. Types come pre-configured with an icon, port count and sensible attributes: a patch panel starts with 24 ports, a switch with 24, a server with a 2U height. Everything remains customisable.

### Rack appliances

| Type                              | Default                | Type                        | Default                            |
|-----------------------------------|------------------------|-----------------------------|------------------------------------|
| Switch                            | 1U · 24 ports          | Server                      | 2U · 4 ports                       |
| Router                            | 1U · 8 ports           | Storage / NAS<br>(SAN/RAID) | 2U · 4 ports                       |
| Firewall                          | 1U · 4 ports           | UPS · PDU                   | power continuity /<br>distribution |
| Patch panel                       | 2U · 24 ports          | KVM · Console server        | out-of-band access                 |
| WLAN Controller                   | AP management          | PBX / Phone system          | telephony                          |
| Blank panel · Cable<br>management | structural<br>elements | Media converter             | copper ↔ fibre                     |

### Floor plan endpoints

| Type            | Use                                       | Type                    | Use                                          |
|-----------------|-------------------------------------------|-------------------------|----------------------------------------------|
| Wall socket     | termination point (auto-named A-01...)    | PC / Workstation        | user workstation                             |
| Access Point    | Wi-Fi coverage (auto-named AP-01...)      | VoIP phone              | telephony, often with cascaded PC            |
| Network printer | endpoint with IP                          | Smartphone / Tablet     | mobile endpoint (Wi-Fi / cellular, BYOD/MDM) |
| Webcam / CCTV   | video surveillance (auto-named CAM-01...) | Desktop NAS             | Synology/QNAP, SMB/NFS/iSCSI                 |
| IoT device      | sensors, embedded controllers             | Smart TV / Media player | AV / signage                                 |

|           |                              |                 |                 |
|-----------|------------------------------|-----------------|-----------------|
| Projector | meeting room                 | Badge reader    | access control  |
| Room/Area | resizable structural element | Custom endpoint | uncovered cases |

**Auto-naming**

Wall sockets, access points and cameras number themselves as you drag them in: no need to rename fifty sockets one by one.

## 05 The floor plan

Set the physical scene: import the building plan, position devices, create rooms.

---

The floor plan is your physical canvas. You load the building plan as a background image, scale it to the real dimensions and place devices and rooms on top of it.

### Importing and scaling the background

- You load an image (**PNG, JPG, GIF, WebP, SVG**) from the toolbar. PDF is not supported as a background: convert it to an image first.
- You adjust **scale** and **opacity** of the map from the properties panel, then press **Lock scale** to avoid accidentally moving it while you work.
- The **grid** aids alignment: devices snap every 20px (snap-to-grid). You can hide it — and with it hidden snap becomes free to the pixel.

### Positioning and connecting

Drag devices from the library onto the correct areas of the building plan. A **click** selects, a **double-click** opens the full properties. Double-clicking a wall socket or an AP takes you directly to the rack of the connected cable, with the path highlighted.

#### Import a VM into its host

Sometimes a virtual machine shows up on the network as its own device. Open the properties of a *hypervisor* or a *home-lab*: the whole **Virtual machines** section is the drop area (the dashed invite sits above the list). **Drag the device onto it** and the VM is absorbed into the host, inheriting its name, IP and MAC (when known — a MAC or an IP is enough, so it also works for devices monitored via SNMP on another subnet), and disappearing from the undocumented list. The absorb fires **only if you release inside the section**: anywhere else the device stays on the floor plan (or snaps back to where it started), and it's undoable with **Ctrl+Z**.

#### The virtual machine card

In the host panel the VMs are **a list**: one row per machine, with the state dot (green running, red stopped), the name and, in the space beside it, what tells one VM from another — role, **resources** and address. Resources show the *measured* figures when the VM has been read over SNMP (with the dish icon), otherwise the ones you declared. The row is there to *find*, not to fill in: click it and the **full VM card** opens, with the identity (name, role or service provided, guest OS — pick one from the list or choose «Custom...» and type your own), the **state at the top next to the title** (one click to start or stop it), the **allocated resources** (vCPU, RAM, disk), its **network cards** (see below) and the **handover** data: who owns it, how critical it is, how the backup protects it, plus notes. The arrow at the top takes you back to the host. All of this is information **you declare**: no network discovery can deduce it, and what you leave empty stays empty in the documents too. «Network & access» holds the name the machine answers to plus the **Management** row (protocol + address + open) exactly like a PC: leave the URL empty and it is built from the protocol and the VM's address.

### vNIC ports: when a VM has more than one network card

A virtual machine can have **several cards**: a virtual firewall has the leg towards the Internet, the one towards the LAN and possibly a DMZ; a server often has a production card and a backup one. In the **vNIC ports** accordion you add as many as you need, and for each you declare a name, IP address, VLAN, MAC, IPv6 and the **port group / vSwitch** it sits on. The first row is already there: typing into it is what creates the card. The last one cannot be deleted (you empty its fields instead): a VM must always have somewhere to write an address.

Why it pays to fill them all in: **each card's VLAN** joins the trunk that the host uplink carries, **each MAC** makes that leg recognisable to the Verify pass (with a single card documented, the others would keep showing up among the undocumented devices at every check) and **each IP address** joins the duplicate audit. In the handover dossier the machine stays a single row, with all its addresses and all its VLANs listed.

One thing you will *not* find: the cable. A virtual card has none — it plugs into a vSwitch port group and rides the host's physical uplink, which is already a documented, already cabled device. For the same reason you are not asked which physical port it leaves from: if the host has two uplinks in teaming, which of the two carries that VM's traffic is decided by the balancing policy, and that is not something anyone can know — InfraNet never writes down what it cannot verify.

### Reading a VM over SNMP

Many virtual machines (Windows Server, Linux, appliances) expose an **SNMP agent on their own address**: from the *Integration* section of the card you query them like any other host, with the **very same fields as a device** (driver, host override, port, timeout, community or the full SNMPv3 block with user, protocols, passphrases, security level and context) and the **Read over SNMP** button. Leave the host override empty and the VM's IP is used. What comes back — system name, the cards' MACs, how long it has been up, cores, RAM, disks — appears in a «**measured**» **box stamped with the date and time of the reading**, kept separate from what you declared: it does not overwrite your fields, a dedicated button copies it across (undoable with **Ctrl+Z**).

The **MAC** deserves a note: it is what makes the VM «documented» for the Verify pass, and it matters most for machines imported from another subnet, which never carry one (ARP does not cross the router). It is written in automatically **only in the case with no ambiguity**: one card measured, one card declared. With several cards the query *lists all* the MACs it measured but does not assign them, because it cannot tell which belongs to which — interfaces read over SNMP do not carry their IP address, so the pairing is yours to make by copying them onto the right card. And a MAC you already typed is never overwritten.

Two honesty rules, the same as the presence colours: if the VM **answers**, that is proof it is running and the state records it as a measurement; if it **does not answer** nothing is concluded — the outcome is noted in amber and explained, but the VM is *never* declared stopped, because it may simply have no agent, use a different community, or be filtered.

### Rooms and areas


A *Room/Area* is a resizable coloured rectangle (with an anti-move lock) that you use to draw offices, server rooms and departments. It always sits beneath other elements, like a background.

| Navigation                   | How                                                                                                                                                                                                                                |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pan the view                 | Click+drag on empty area, or  +drag anywhere                                                                                                      |
| Zoom                         | Scroll wheel (centred on cursor) or  /  buttons · range 5%–500% |
| Deselect / clear VLAN filter | Click on empty area                                                                                                                                                                                                                |

## 06 The rack

The realistic 19" cabinet front: units, ports, available capacity, gateway.

Every project can have multiple racks (from 6 to 60U, default 42U). The front panel is drawn realistically — grey chassis on a white viewport, faceplates with ports and LEDs — so the rack page looks like a real photo of the cabinet.

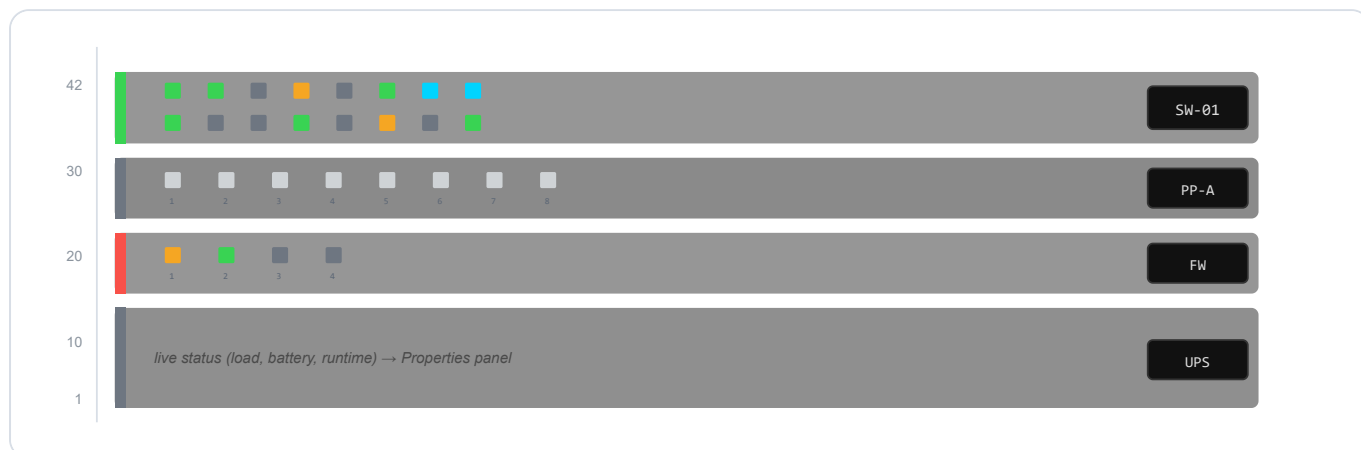

**Fig. 3** — Rack front on white viewport. The **vertical stripe** on the left is the SNMP status (green ok · red error · grey not configured). Port LEDs are **small squares** (green active · amber idle · grey off · red error · blue LAG) with the **port number** below. Device data (IP, status, UPS runtime...) is read in the **Properties panel**.

### Creating a rack and placing it on the floor plan

Every project can have several cabinets. Open the rack panel (the **R** key): from its ... menu use **New rack** to create one — give it a name and it starts at **42U**. When you have more than one, the dropdown at the top of the panel switches between them: each rack is its own page.

- **Height in units.** The *U* field sets capacity from **6 to 60U** (default 42). If you shrink it, the app checks that the appliances already mounted still fit and warns you instead of cutting them out.
- **U numbering.** *U numbering from top / bottom* only changes how units are **labelled** (1 at the top as in telco/ETSI racks, or 1 at the bottom): handy to match the numbers on the real cabinet. It moves nothing.
- **Rename rack** and **Delete rack** are in the same menu; deleting a rack also removes the appliances it contains.

The **“Place on floor plan”** command drops the cabinet onto the map as a **marker** — a server icon with the number of appliances inside — centred on the current view and snapped to the grid. **Drag** it where it actually stands in the room; a **click** on the marker opens that rack's inside view. **“Remove from floor plan”** takes it off the map: the appliances stay in the rack, only the marker disappears.

#### Why place it on the floor

With racks on the floor plan the map tells you *where* the cabinets are in the building, and the cables running **rack to rack** become visible runs on the floor — no longer just abstract links between two pages.



## Populating and configuring

- Drag appliances into the rack: they position themselves in the lowest free unit. Alternatively **import a CSV** and populate 50 appliances in a few seconds.
- The **port layout** (count, rows, separate SFP block) is adjusted from the properties panel; the front adapts from 8 to 48 ports while remaining readable.
- **Apply model.** In *Port layout*, search a real switch/router model and apply it in one click to set **ports, SFP/QSFP and MGMT exactly**: the front is redrawn by the same renderer as native devices, so it's identical. The catalog is generated from public (CC0) device-model data — only the data; the artwork stays yours and live. Up to **24 SFP per block**.
- **Click** on a port = configure it; **right-click** = start a cable to another port (even on a different rack).

## Free ports and L3 gateway

### Free ports

Answers the everyday question: "*where do I plug in the new device?*". Highlights free ports **directly in the rack** (green = free, yellow = free on paper but seen active via SNMP) and produces a report with totals, exportable as CSV.

### L3 map / Gateway

Promotes a VLAN's gateway from a mere IP to a **"VLAN → routing device" relationship**. An **L3** badge marks devices acting as gateways; a report lists VLANs, subnets, gateways and flags suspicious cases.

## 07 Cables, connections and wireless

Clear connections at a glance, the cable editor, the complete physical path and Wi-Fi "wave" associations.

A cable is created with the **right mouse button**: right-click on the source port, right-click on the destination port. The colour follows the VLAN; the **style** indicates how reliable that connection is.

### The visual language of cables

| Appearance           | Meaning                                                                           |
|----------------------|-----------------------------------------------------------------------------------|
| Solid coloured line  | <b>Manual</b> or <b>discovered</b> via LLDP/CDP — reliable                        |
| Animated dashed line | <b>Inferred</b> from MAC/ARP/FDB tables — to be confirmed (may be a transit link) |
| Sine wave            | <b>Wireless connection</b> (radio association)                                    |

#### Deduced uplink to a “blind” switch

When Sync finds a *documented* switch's MAC learned on another switch's port, it attaches the uplink cable even if the downstream switch does not answer SNMP (e.g. a Zyxel GS1200): we know *that* it sits behind that port, not *which* of its ports the cable enters. The cable is therefore born **“Inferred · to verify”** — even when the local port is a **LAG member** — and only **one** cable is attached: confirm it and fix the real downstream port by hand (plus any other LAG members). It is never shown as a confirmed “LAG”, because the downstream aggregation was never observed.

### The cable panel: what you can set

Selecting a cable turns the right-hand panel into its **editor**. Here you declare what it is made of and what it carries — always following the *manual-first* principle: what you write by hand is authoritative.


- Access or Trunk with one click — the right field appears
- The VLAN you enter here is authoritative (manual-first)
- Override: force a colour on the cable
- Physical specs with validation that explains why
- Double-click the cable → physical path (Fig. 5)

**Fig. 4** — The cable editor in the Properties panel: endpoints (read-only), **Access/Trunk** mode, access VLAN and native VLAN, colour override, physical specs with the ⚠ warning badge, and (for radio links) the wireless toggle.

- **From / To** — the two endpoints (node and port), read-only.
- **Access or Trunk mode** — *Access* = a single VLAN (untagged); *Trunk* = multiple tagged VLANs (e.g. 10,20,100-200). The right field appears depending on the choice.
- **VLAN** — the access VLAN (or the list of VLANs carried on the trunk) plus the editable **native VLAN** (PVID).
- **Colour override** — forces a colour for that cable, overriding the automatic VLAN colour.
- **Physical specs** — Medium, Category, Connector, Speed, PoE, Length, with the consistency validation described below.
- **Wireless connection** — the  toggle turns the cable into a radio association (wave); with wireless enabled, the physical specs disappear.

## The physical cable path

A real connection is often a **chain**: the switch reaches the patch panel, the patch panel reaches the wall socket, the socket reaches the endpoint. With a **double-click on a cable in topology** the app highlights *the entire physical path*, not just the clicked segment, and shows every segment in a single panel where you can select and edit each one individually.

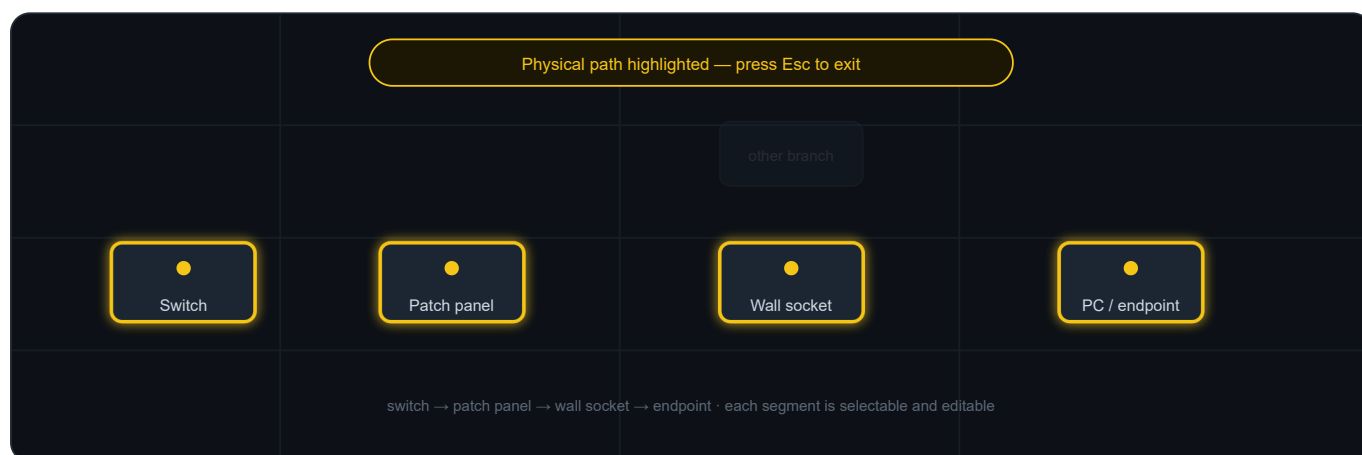

**Fig. 5 — Physical path** highlighting (routing mode): endpoints in yellow, trace in cyan, unrelated branches dimmed. Press **Esc** to exit.

## Smart validation (warnings, not blocks)

In the cable's physical specs the app checks that medium, category, connector, speed, PoE and length are consistent — and **explains why** when something does not add up:

- 10G on Cat5e → Cat6A required (Cat6 supports 10G only up to 55 m);
- copper run over 100 m → outside TIA-568 standard, use fibre;
- PoE on fibre → fibre does not carry power;
- medium↔connector inconsistencies (RJ45 on fibre, LC on copper).

These remain **warnings**: documentation stays free (manual-first), but you know immediately what and why.

## Wireless: the radio port

### "Wave" associations

Wi-Fi devices (APs, routers, firewalls) expose a  **antenna badge** : it is the *radio port*, a virtual connector that hosts many clients without occupying physical ports. Drag a connection from the client to the radio badge and it is created as wireless, drawn as a wave. An AP can broadcast multiple SSIDs, each on a different VLAN: clients land automatically on the VLAN of their SSID, and the AP's wired uplink becomes a trunk carrying all those VLANs.

### AP mode — capability, not role

SSID fields appear only on devices that *are* access points by type (AP, router, firewall). A Wi-Fi-capable device that isn't one — a PC or server used as a **hotspot** — can turn on "**AP mode**" in *Network & Access* (next to "Wi-Fi capable", on the same row) and broadcast an SSID **without changing its type**: it stays a PC, but with the SSID editor unlocked. It's opt-in (off by default) and reversible — turning it off removes any orphaned BSS.

## 08 VLANs and colours

One colour per VLAN: cables colour themselves automatically and the network is readable at a glance.

You assign each VLAN a number, a name and a colour. Cables colour themselves automatically based on the VLAN they carry: a well-structured network becomes readable at a glance.

### Default palette



Fig. 6 — The five default VLAN colours. New VLANs receive a distinct colour automatically; every colour can be changed.

### Access and Trunk

| Mode   | Meaning                                                                                                                     |
|--------|-----------------------------------------------------------------------------------------------------------------------------|
| Access | The port belongs to a single VLAN (untagged traffic). Typical for a PC, printer or camera.                                  |
| Trunk  | The port carries multiple VLANs (802.1Q-tagged): e.g. 10, 20, 100-200. Typical for inter-switch uplinks and multi-SSID APs. |

The app **propagates** VLANs automatically along cables and through pass-through elements (patch panels, wall sockets, media converters), so a run *switch* → *patch* → *socket* → *device* reflects the same trunk. The mode is a property of the active interface (the switchport), as in reality.

### The VLAN filter

In topology, clicking a VLAN badge in the legend **isolates** that VLAN: everything else dims or disappears, and you see only where it goes. A double-click opens the member list. This is the quick way to verify that every VLAN is cabled where it should be.

### Address occupancy (IPAM)

For each VLAN you can declare its **subnet** (e.g. 10.0.10.0/24), gateway and DNS. If you've loaded the **DHCP leases** (see *Documentation check*), the card shows the **real address occupancy**: how many addresses are used out of the total capacity, with a bar that turns **amber** when the subnet is nearly full, and the split between **documented**, **DHCP-only** and **free** addresses.

#### From leases to the map in one click


When there are addresses *seen by DHCP but not yet documented*, the card shows "**N undocumented** → **Adopt**": one click takes those devices (with MAC, IP and hostname) straight into the Adopt window, so they enter the

map already documented.

## 09 Port states and presence

LEDs, the SNMP stripe and the dimming of devices that have disappeared from the network.

Status is read from colours, everywhere: on port LEDs in the rack, on device borders in the floor plan and in exports. They are the same four colours as the app.

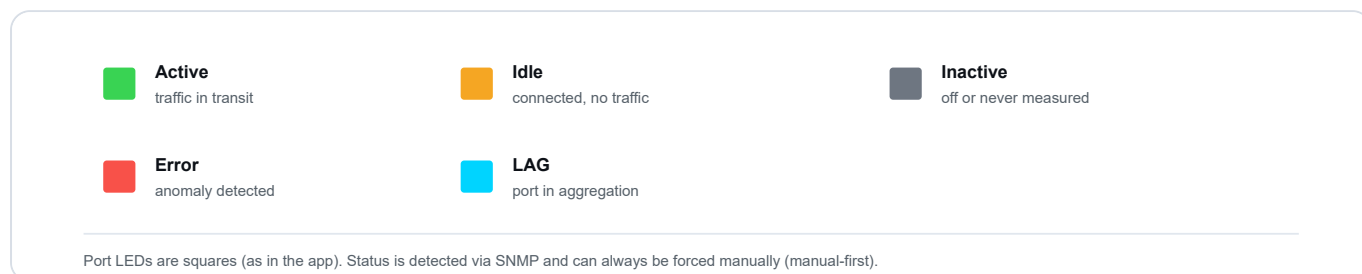

**Fig. 7** — Port colour legend, identical in rack, floor plan and export.

### The SNMP stripe ≠ presence

#### Two different signals

The **vertical stripe** on the left of the device indicates whether the last SNMP poll succeeded (green) or not (red/grey). This is different from *network presence*: an endpoint that does not speak SNMP (a PC, a camera) is always "grey" on the SNMP side, even if it is powered on and working.

### Absent devices, dimmed on the map

When **Verify documentation** finds **no signal** from a device (no SNMP, no ping, no ARP, no trace in switch tables), that device is **greyed out** on the floor plan and in the rack: it remains clickable, but at a glance you understand that "it is on paper, but not on the network". When it comes back online, it lights up again automatically. Devices that are **Not verifiable** (on a subnet the check could not reach) are **not** greyed out: since their absence was never confirmed, they stay normal.

#### This is a Verify documentation feature

The dimming is based on the **full multi-signal sweep** (ping/ARP/TCP in addition to SNMP and forwarding tables) performed by **Verify documentation**: it is that process which determines absence and applies the greying.

# 10 SNMP: discovery and synchronisation

Letting the network speak for itself — with SNMP v1, v2c and v3, even without credentials on the first pass.

InfraNet Pro speaks **SNMP v1, v2c and v3** natively. Configure a device with a driver and address, and the app reads interfaces, VLANs, port status, MACs, and — on devices that expose them — printer toner levels, CPU/RAM, UPS and power continuity status.

## Three actions that look similar but answer different questions

|                           |  <b>Discover</b> |  <b>Sync</b> |  <b>Verify</b> |
|---------------------------|---------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| <b>Question</b>           | "What is on the network that I have not yet drawn?"                                               | "How are the devices I have drawn doing right now?"                                           | "Does my drawing match reality?"                                                                  |
| <b>Starts from</b>        | a range/subnet                                                                                    | already configured IPs                                                                        | already configured IPs                                                                            |
| <b>Finds new devices?</b> | <b>Yes</b> (that is its purpose)                                                                  | No (at most adds cables)                                                                      | No (flags them, does not create them)                                                             |
| <b>When</b>               | first mapping / new devices                                                                       | quick refresh of status and topology                                                          | audit "is the doc still accurate?"                                                                |

### In the toolbar they are not three equal buttons

The three *questions* stay distinct, but on the toolbar there is only one primary action: **Verify**. One click re-reads the SNMP data (**it includes Sync**), rebuilds the topology and *then* compares against reality. The **bare Sync** — just a status and cable refresh, without the comparison — lives in the [Automation](#) menu (handy for a light refresh); **Discover** keeps its own button. A **freshness chip** next to the search box always reminds you how recent the last read is.

### The most common confusion: Discover ≠ Sync

**Discover** starts from a *range* and looks for new hosts (active scan). **Sync** starts from the *IPs you already have* and refreshes them, also deriving cables from forwarding tables (FDB) and LLDP/CDP: you do not need "Discover" to get connections, **Sync already collects the FDB** and builds the topology on the fly, in one shot.

## Discovery: scanning a subnet

1. You specify the subnet (e.g. 192.168.1.0/24) and the SNMP credentials.
2. The app scans IP by IP, **classifies vendor and type** from the device profile (firewall, UPS, NAS, server, router, switch) and presents the candidates.
3. You select which ones to import: they enter the rack already with basic data filled in.



**Scan options.** Under the fields you set the **Speed** and a “**Search deeper**” box of four options (all *opt-in*): they find more at the cost of time, and stay separate because some add “noise” on the network.

- **Speed** — the probe pace toward *unknown* hosts: **Fast** (parallel), **Balanced** (gentle pace, the default) or **Careful (monitored networks)** (serialised sweep with **random order** and random pauses/*jitter* — nmap's *polite/T2* profile: documenting the network **does not trip its IDS/IPS**, but is slower). Polling of already-known devices stays parallel (it is not a scan signature). **Fast and Balanced** also resolve the **NetBIOS names** of Windows PCs (one `nbtstat` query per alive, nameless host); **Careful** does not, to add no NetBIOS footprint.
- **Recognise devices better** — probes the most common TCP ports on candidates (HTTP banner, Google Cast, RTSP) to refine type and vendor.
- **Also find quiet devices** — listens to the local segment's mDNS/Bonjour and SSDP/UPnP announcements: it recognises phones, TVs, printers, smart appliances and IP cameras (via ONVIF) that **ignore ping/SNMP** — a *measured*, vendor-neutral type and model. Same subnet only (link-local multicast).
- **Include hosts that ignore ping** — SNMP-probes *every* address in the range, even those silent to ICMP: useful behind firewalls or CoPP that block ping but let SNMP through (an SNMP responder is marked alive — *measured* proof, not invented). Slower.
- **Follow the links between switches** — from the reached devices it follows the announced *neighbours* (LLDP/CDP), widening discovery beyond the given range.

When the scan finishes the panel switches to the **results phase**: the form disappears and only the **table** of found devices remains; the “◀ **New search**” button takes you back to the form (range already filled in) to refine and re-scan.

SNMP v3 detection works even **without credentials** on the first pass (it recognises the device and indicates that authentication is needed), and handles mixed-version environments in the same scan.

**Vendor recognition.** Each device's manufacturer is resolved from two local, refreshable datasets: **IEEE OUI** (from the MAC) and **IANA PEN** (from the SNMP `sysobjectID`). Together they cover tens of thousands of vendors, so a new model is recognised *without* updating the app. To refresh them from the latest official registries: `npm run update-oui` and `npm run update-pen`.

## Automatic polling (data only)

From the **Network automations** popover, enable a background refresh at set intervals (1–30 min): it refreshes *only* the data (ports, VLANs, status) of SNMP devices, **without** touching the topology. This is the “lightweight” path; the manual *Sync* (in the same `Automation` menu) remains the way to get updated connections in one shot as well, while **Verify** includes it and adds the comparison against reality.

### UPS and power continuity units

UPS and ATS units have no interfaces to map: Sync queries them for dedicated parameters and populates a “Live status” block — mains/battery power feed, percentage and remaining runtime, load, voltages. UPS OIDs are standard (vendor-neutral); ATS OIDs are APC-specific and should be verified on your own hardware.

### Sync finds wireless clients too


Beyond cables, Sync recognises **wireless associations** and draws them as **waves** (radio↔radio), not cables. It derives them from two *vendor-neutral* SNMP signals: the **FDB** (a MAC learned on a device's radio interface) and the **L3 neighbour table** (ARP/ND) — the latter universal, covering devices that don't expose the FDB over SNMP (PC/hotspots, L3 APs). It works on the **all-in-one** box (router+AP+switch): its FDB already holds the wireless clients. The discovered client gets a station radio and attaches to the AP's radio; the **BSS/SSID** is chosen by *VLAN match* (ambiguous → you pick it, no guessing). The L3 signal fires only for devices that **broadcast an SSID**, so a station is never mistaken for an AP. As always *manual-first*: a hand-drawn wave is never touched. The client must already be a node (import it from "Discover"): Sync *links*, it doesn't invent the device.

**Honest note.** A device that exposes SNMP on the LAN is required: the typical **ISP all-in-one** boxes (SNMP closed, Wi-Fi and LAN in a single bridge) are out of reach. Works on enterprise AP/WLC, MikroTik, UniFi, OpenWrt and PC hotspots (Windows/Linux).

# 11 Automatic topology

The L1/L2 cross-check: the app draws discovered neighbours and proposes cables to create.

The Topology view reads the neighbours declared by devices (LLDP/CDP) and forwarding tables, and draws them as lines on the map. It is the **mirror** between the cabling you have documented and what the network reports about itself.

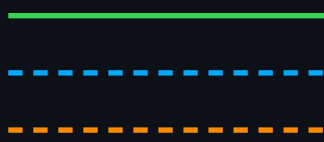

|                                                  |
|--------------------------------------------------|
| Solid green — link already cabled in the project |
| Cyan dashes — LLDP neighbour not yet cabled      |
| Orange dashes — CDP neighbour not yet cabled     |

**Fig. 8** — Topology lines. Clicking a dashed line opens the detail and the **"Create cable"** command, which matches ports by interface name.

## Filters active only here

- **TRUNK** — highlights connections carrying multiple VLANs, dimming the rest.
- **ENDPOINT** — hides the last segment towards terminals: the view stops at wall sockets and the backbone (useful for reading the structure without the noise of PCs).
- **WLAN** — hides all wireless associations (waves), leaving only cables.


### Create cable from suggestion

Let LLDP find the neighbours, then click "Create cable" on the dashed line: cable the network on the map without drawing every connection by hand.

## 12 The workflow

Not a straight line, but a *maintenance loop*: discover, document, verify.

You import the floor plan once. Then the *discover* → *document* → *verify* cycle runs over time: that is what keeps the documentation alive instead of letting it age.

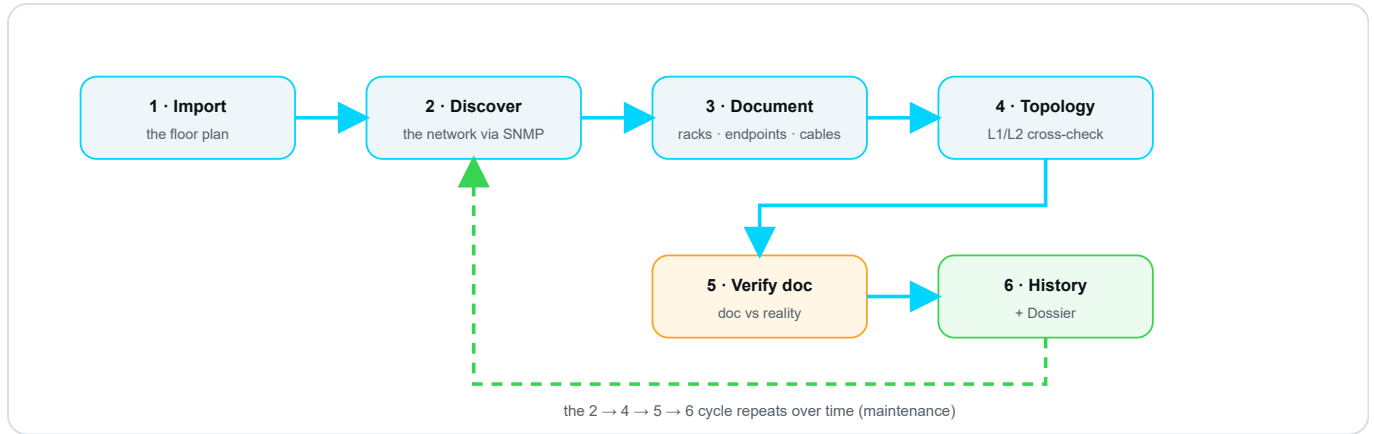

**Fig. 9** — The maintenance loop. Phases 1–3 are the initial setup; **2** → **4** → **5** → **6** is the recurring cycle: after History/Dossier you return to **Discover** for the next round.

## Two ways to start — and a principle that ties them together

The cycle above is the **maintenance** one. At the very start, though, there are **two paths**, both valid, depending on how the project is born:

- **Planned network (*declare-first*)** — you know your addressing plan. Then: *new project* → *import the floor plan* → **declare all the networks** (VLANs and subnets in the panel) → *scan the assigned subnets*. The plan first, then the check against reality. This is the clean path.
- **Inherited network (*discover-first*)** — you don't know the subnets up front: discover what's on the network first, and **declare afterwards** based on what you find.

## The principle: what's declared is law

What you write in the **VLAN/subnet** panel is the **project truth**. If you declare a /16 or a /28, the app measures capacity and compares reality **against that prefix** — the scan *confirms* it, it does not redefine it (it's *manual-first* applied to the addressing plan). And whatever it finds **outside** any declared subnet it doesn't hide: it flags it as **“undeclared”**, so you know what's missing from the plan. Declare-first is **recommended, not mandatory**: with no declarations the app still works (it assumes a /24), but tells you clearly. See the Overview (chapter 15).

## Where manual-first lives

- **In discovery** — fields you fill in manually stay yours: SNMP fills the gaps, it does not overwrite them.
- **In topology** — it is a mirror: it shows where cabling and reality agree or diverge, but it does not touch your cables.
- **In verification** — "Update doc" is an explicit action you take; the tool flags, it does not destroy.

### Where Verify lands

The outcome of a **Verify** is no longer a flash that vanishes: it **lands in the Overview**, in the “**Conformance**” column, and stays there as state — with the differences ready to decide (see chapter 14 and chapter 15). The *loop* never really “ends”: the Overview tells you when it is worth starting again.

# 13 AI assistant (advisory)

Query your documented network in plain language — your data stays yours.

The **AI assistant** is an *advisory* chat (a copilot, not an autopilot): it answers questions about **your documented network** in plain language — presence, VLANs, free IPs, **ports** (status/VLAN/what's connected), **SNMP health** (CPU/RAM/toner/UPS) and **topology**. It lives as a **third «Assistant» tab** in the right panel (next to **Rack** and **Properties**; shortcut **A**) and a toolbar button.

## The principle

**"InfraNet computes, the AI narrates."** The numbers (drift, free IPs, gaps) are computed by InfraNet and passed ready-made; the AI puts them into words and **cites the data**. We never ask the LLM to do network arithmetic — it would get it wrong.

## Bring your own key, your choice of provider

A single hook to an **OpenAI-compatible** endpoint: **local by default** (Ollama, no key, data never leaves the machine) or any cloud model you choose (OpenAI, Anthropic's OpenAI-compatible endpoint, ...). Configure it under **Users and access** → **AI assistant**: enable, endpoint, model, key (write-only). InfraNet **neither hosts nor pays for** inference and **bundles no model** — it stays lightweight.

## How to configure — local or cloud

Go to **Users and access** → **AI assistant**, turn on **Enable**, paste the **endpoint** and **model**, paste the **key** (write-only: after saving you only ever see "configured", never the value) and press **Save**. The header chip shows where inference runs:  **Local** (green) or  **Cloud** (amber).

| Provider                                              | Endpoint                     | Model (example)  | Key        |
|-------------------------------------------------------|------------------------------|------------------|------------|
| <b>Local — Ollama</b> (default, privacy)              | http://localhost:11434/v1    | llama3.2:3b      | empty      |
| <b>Cloud — OpenAI</b>                                 | https://api.openai.com/v1    | gpt-4o-mini      | sk-...     |
| <b>Cloud — Anthropic</b> (OpenAI-compatible endpoint) | https://api.anthropic.com/v1 | claude-haiku-4-5 | sk-ant-... |

**Local:** install **Ollama** and pull a model (`ollama pull llama3.2:3b`) — no key, data never leaves the machine. **Cloud:** create the key in your provider's console and paste it here; quality goes up but **the sanitized data leaves toward the provider** → before enabling, use **Show what leaves** to see exactly what. Any **OpenAI-compatible** endpoint works (Azure OpenAI, OpenRouter, vLLM, LM Studio, ...): only the URL, model and key change.

 **Data security — by construction**

Two guarantees, not promises: **(1) the key lives only on the server** (file data/ai-config.json, outside the repo, or the env var INFRANET\_AI\_KEY) and **never returns to the browser**; **(2) only the "allow list" leaves**: the context is built from the same *allowlist* as the REST API — the **SNMP community and credentials are not in the list**, so they *physically* cannot leave (plus a secret-name *denylist* on the health data). The [Show what leaves](#) button shows the **exact sanitized JSON** *before* you enable anything, and a guard test **fails the build** if a secret ever reached the context. Local = nothing leaves; cloud = only the sanitized data.

### No hallucination

A hard rule in the prompt: **never invent** names, IPs, MACs, VLANs or ports. If a fact isn't there, the assistant answers "*not in the documentation*" and suggests how to find it (Discover / Verify). It is **advisory**: it proposes, **you confirm** (manual-first); any Ansible playbook is a **draft** to review, never applied.

## Choose what leaves and what it does

The settings pane has two groups of toggles (all on by default):

- **Data scope** — what leaves the machine: [Inventory](#) · [Ports](#) · [SNMP health](#) · [Topology](#) · [Drift](#) . Turn some off for **privacy** and to cut **cost** (smaller context).
- **Capabilities** — what it may do: [Q&A](#) · [Diagnostics](#) · [Find gaps](#) · [Suggestions](#) · [Ansible draft](#) . E.g. turn off "Ansible draft" for a purely advisory assistant.

## Clickable citations and anti-invention check

Below each answer you see the **sources it used**: the cited devices and VLANs become **clickable chips that jump to the node on the map**. A downstream check compares the IPs and MACs the model names against the real data: if it cites an address that **isn't in your data**, a warning chip ⚠ **"reference not found"** appears — a possible hallucination is *flagged*, not let through. The assistant is also fed **live facts** (the Verify result and IPAM occupancy computed in the browser and re-sanitized server-side), so it reasons over the current reality, not just the saved file.

## Find gaps, suggest, draft Ansible

For "*what's missing*" the assistant uses the **gaps InfraNet already computed** (VLAN without a gateway or subnet, IPAM near full), and for "*which IP do I use*" the **next free address** of the VLAN. Ask for automation and the playbook arrives as a **draft card** with a **"DRAFT — not applied"** banner and a **Copy** button: InfraNet executes nothing — you review it and apply it yourself (manual-first).

Finally, every [Verify](#) row has an **"Explain"** button (robot icon): it opens the assistant and **seeds a question about that case** (absent device, IP change, undocumented host...), so the *Verify* → *understand* → *act* loop stays inside the app.

## Onboarding: the «next step» and the spotlight

On first run the Assistant doesn't start from a blank page: it shows a **«next step» chip** that, based on your project state, tells you what to do *now* — empty network → [Discover](#) ; documented but unverified →

**verify**; VLANs without a subnet or gateway; undocumented or absent devices; IP changes. The «**Show me**» button lights a **blinking spotlight** on the *real* toolbar button: it stays on **until you click it** (and never moves the page); «**Ask**» seeds a how-to question. The chip appears **even before a model is configured**, so it can guide Discover and Verify at zero cost. Everything stays **manual-first**: it points and explains, it never applies anything.

For «*how do I X in InfraNet*» questions the assistant is grounded on the **real command surface** — the buttons with their tooltips, **derived from the UI itself** — plus a short cheat-sheet of the key flows: it cites the **real button label** (e.g. "click Discover") and never invents menus.

### Try it

"Who's on VLAN 20?" · "Which IPs are free?" · "What's on port 5 of the switch?" · "Why is this device absent?" · "How loaded is the switch / what's the printer's toner level?". Local default: install **Ollama**, pull a model (e.g. llama3.2:3b), endpoint `http://localhost:11434/v1`, leave the key empty.



# 14 Documentation check (Drift)

Stop hoping the doc is right: the app tells you exactly where it is not.

Documentation ages: a port moved during a fault, a VLAN changed on the fly, a cable unplugged and never updated. This divergence is called **drift**. The **Verify** button queries the real devices and **compares what is documented with what is actually there**, showing you only the differences.


## In one sentence

It stops asking you *"I hope the doc is right"* and starts telling you *"here are the 4 points where the doc does not match reality"*.

## The result is STATE, not a flash

Verify used to open an overlay window that vanished at the first click. Now the outcome **lands in the Overview**, in the **"Conformance"** column (chapter 15): after a Verify the view opens on that result by itself, and it **stays there as state** — it survives save/reopen, and every category of difference becomes a **navigable row** with its own actions. The same three actions as always, now *inside* the column. This chapter explains *what* Verify measures; chapter 15, *where* you read it.

## The seven report categories

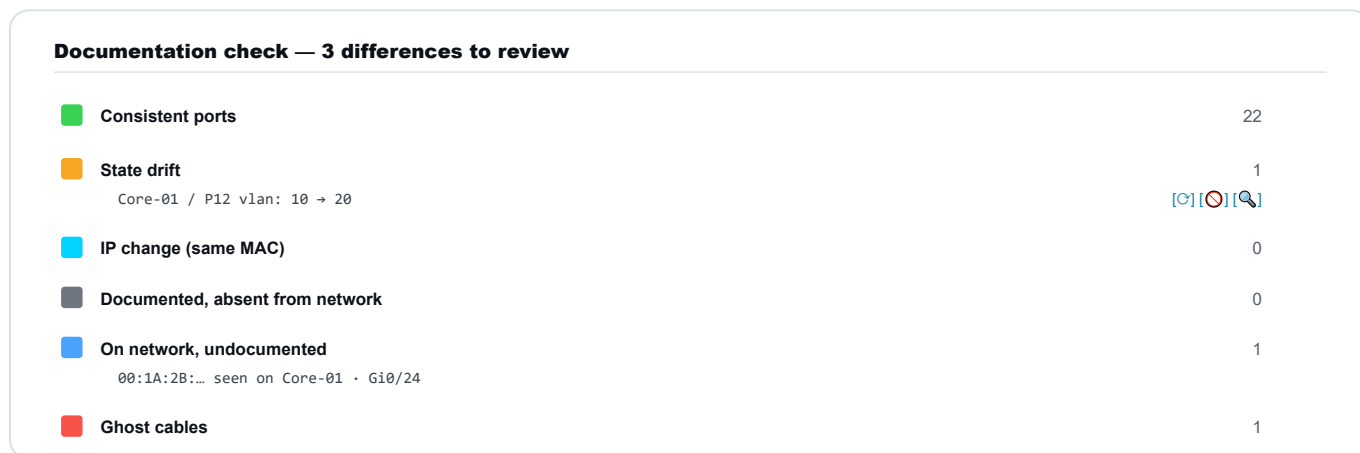

**Fig. 10** — The differences, ordered by category. Each row carries its three actions — **Update doc**, **Ignore**, **Investigate** — and now lives as a **navigable row** in the Overview's "Conformance" column (chapter 15), no longer in a separate window.

| Category                 | Meaning                                                                                                                                                                                                                               |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Consistent ports</b>  | Doc and reality match (count only).                                                                                                                                                                                                   |
| <b>State drift</b>       | Documented port active but down, or different VLAN/speed.                                                                                                                                                                             |
| <b>Hardware identity</b> | The serial number or model reported over SNMP doesn't match the documented one: the device may have been <b>replaced</b> (a different firmware is informational only, not an alarm). Accept the new identity in one click, or ignore. |

|                                                                                                                   |                                                                                                                          |
|-------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
|  <b>IP change (same MAC)</b>     | Device alive at a different IP (DHCP lease changed) → update the IP in one click.                                        |
|  <b>Documented, absent</b>       | No response to any signal (SNMP, ping, ARP, TCP) <i>and</i> its subnet was reached by the check → greyed out on the map. |
|  <b>On network, undocumented</b> | A MAC appears on the switch but is not on the map → you can "add to map".                                                |
|  <b>Ghost cables</b>             | Documented cable with port down across several consecutive checks (threshold: 3).                                        |

### LAN networks — coverage and presence per subnet

Among the rows of the **"Conformance"** column (after a Verify) is **"LAN networks"**: from the documented devices **and the DHCP leases** it derives every /24 in the project and classifies it —  **covered** (a reachable SNMP switch → topology reconstructable by Sync),  **blocked** (the switch is there but does not answer → your action) or  **open** (no reachable SNMP switch → a scan is needed) — each with a **"Discover network"** button that opens *Discover* pre-filled with that subnet. **After a check** each /24 also shows a **presence badge** ( *verified* if the sweep observed the subnet,  *not reached* if it was blind), and the **non-verifiable devices** — documented, silent, on a subnet that was not reached — are **nested under their own network** here (keeping the ignore/investigate/ explain actions), instead of a separate category: they are two readings of the *same fact*. Two distinct axes remain: *topology reconstructable?* (covered/blocked/open) vs *presence confirmed?* (the badge). Each /24 also carries a **plan-provenance** tag: **"declared /N"** if it falls inside a subnet you declared (and those come **first**), or **"undeclared"** if it's just the assumed /24 — a reminder to put it in the plan. The *scan* still runs per /24 (a large subnet is scanned segment by segment, not in one shot).

### Multi-signal presence + BYOD noise

Presence is not judged by SNMP alone: every documented IP is also queried with **ping, ARP and TCP**, so PCs, IoT devices and UPS units do not end up among the "absent". And phones/laptops of users connecting to the guest Wi-Fi are **collected in a collapsed grey row** (identified by endpoint VLAN, busy uplinks or randomised MACs), keeping the list clean. **Expanding the group, each row says why it is hidden** in plain words (Phone or tablet, Uplink to a network device, Guest VLAN), with the technical signal in a tooltip, and a «Show user/BYOD» toggle brings them back inline. Finally, **red «absent» requires proof a live host cannot suppress** — a **local ARP-miss** on the server's own segment or a **switch access port down for several syncs**: mere silence (a mute SNMP agent, filtered ICMP, a MAC aged out of the FDB) or an unreached subnet yields **grey «not verifiable»**, never a false absent, and a plain **Sync** (no sweep) never paints anything red. A device behind a router with SNMP stays **green even across subnets**, because the **router's ARP table** — or its **IPv6 Neighbor Discovery** cache — (read via SNMP) proves it alive on its VLAN, even if it is IPv6-only.

### Presence colours on the floor plan (floor nodes)

After a Sync or a Verify, **floor nodes** are coloured to convey presence (**rack devices** are not: there the status is already the **SNMP LED**).  **Green** = present, from any positive signal (SNMP, a MAC in an FDB, an active lease, ARP — including a **router's ARP** or its **IPv6 Neighbor Discovery** cache seeing it alive on another VLAN: green **across subnets**, without a ping, even if IPv6-only).  **Red** = *proven* absent: only a **local ARP-miss** on the server's segment or a **switch access port down for several syncs** — signals a live host cannot fake.  **Grey** = not verifiable: ambiguous silence (a mute SNMP agent, filtered ICMP, an aged FDB, an unreached subnet) — the

honest "don't know". With the «**Released lease = likely disconnected**» option on (in the DHCP lease import panel), a grey device whose DHCP lease is *released* is annotated "likely disconnected" — it still stays grey, never red (a hint, not a proof). A **Sync** never paints red (no active probe). Documented devices **without a MAC** (IP only) are judged too, per-device.

### Management VLAN: the opposite of a guest VLAN

You can mark a VLAN as a "**management**" VLAN. It's the opposite of a guest VLAN: an *unknown* device showing up there is never hidden as a phone/BYOD, but treated as **infrastructure** and flagged with a red "**On management VLAN**" security badge — because an intruder on the management network is exactly what you want to spot at once. Adopt already proposes it as a network device.

### Automatic IP renewal (opt-in)

You can enable automatic IP renewal from DHCP: the device's identity is its **MAC**, the IP is just an attribute that rotates. IPs set manually are *never* touched, and every renewal is logged in History.

## DHCP leases as a source (cross-VLAN)

Behind a firewall that routes between VLANs, the local ARP table is blind: an IP change on another VLAN is missed. **DHCP leases** instead cover *every* VLAN. From Automations → DHCP section → DHCP leases → Load you **paste or load** the lease table (format auto-detected: ISC dhcpd, dnsmasq, Kea CSV, generic CSV — pfSense / OPNsense / MikroTik / Synology / Windows). Leases feed the same documentation-check engine: **cross-VLAN IP change**, per-MAC presence and **undocumented devices** with their hostname. Multiple servers **accumulate as persisted sources** (merged per MAC, newest lease wins); per source: refresh, clear, remove, "verify now".

### An identity map, not a liveness probe

A lease table says *who has which IP*, not *who is powered on*: a documented device **missing** from the leases lands in **Not verifiable**, never among the absent (absence from a DHCP list does not prove the device is off — it may have a static IP). **Expired** leases are ignored, and a **manually-pinned** IP is never silently overwritten: the row is flagged "Manually pinned IP" and asks for confirmation. Loading from file/paste is built-in; **live** pull via vendor APIs (FortiGate / PAN-OS / OPNsense / MikroTik) is an optional driver pack.

# 15 Overview (summary view)

Three questions, one screen: what's missing, what no longer matches, how much room is left.

The **Overview** is a **read-only** view — a view switch like Topology, that **never touches the document**. It answers three questions in three columns: **LAN** (does it describe everything?), **Conformance** (does it still match reality?), **Expansion** (how much can I still grow?). Each tile carries its **own number** and a **plain-word verdict**: a "25" on its own doesn't say whether it's fine — the word does.

## In one line

It's not a metrics dashboard: it's the answer to "is my document complete, current, and with room to grow?", with — next to every number — **where it came from**.

## Who counts in "Verifiable over SNMP"

**One thing decides it: the driver in Properties → Integration.** An SNMP driver set = "I poll it, it must answer" → it enters the count. No driver = "I don't poll it" → it leaves the count and joins the **"not verifiable"** list. This holds for *any type*: a printer speaks Printer-MIB just as a switch speaks IF-MIB, so what decides is not what the device is but whether you poll it.

## Two counters, and the names

The tile carries **two numbers** — two different populations that never add up: how many **answer** among those you poll ("12 of 13") and, next to it in amber, how many you **don't poll at all** ("20 not verifiable").

With several racks, "2 not responding" forces you to leaf through the pages to find out *which*. So when something is wrong the verdict writes the **names**, right there, without a click — at most three, then "+N".


- **No answer** (red) — it is configured but the last read *failed*: "*no answer: OfficeJet8715*". That is a measurement gone wrong, and no green is painted over it. Fix the credentials, power the device on, or stop polling it.
- **Green** — once everything you poll answers. The second counter keeps saying how many stay out, and one click on the row opens the full **list** of the not-verifiable ones, each with its name and address: that is your list of in-person checks. With *zero* accesses configured the row isn't green at all: it is dashed — polling nothing is not a good result.

The list covers **every** device the panel offers SNMP Integration for — the ones that could have an access: not just switches and routers but printers, NAS, cameras, UPSs. Not being verifiable over SNMP does not mean being unchecked: **Verify** still checks them by *presence* (a MAC in an FDB table, ARP, ping). It means that to know how they are *inside*, you have to go and look.

## What's new: Verify lives here

The middle column, **"Conformance"**, has become **Verify's home**. When you launch a **Verify** (from the toolbar), the Overview opens on this column by itself and drops the result there: no longer a window that disappears, but **state** that stays — how many differences are left to decide, when it was done, and **one row per kind of**


**difference** that opens in place with its actions. The “Conformance” column tells the *health* of the documentation over time.

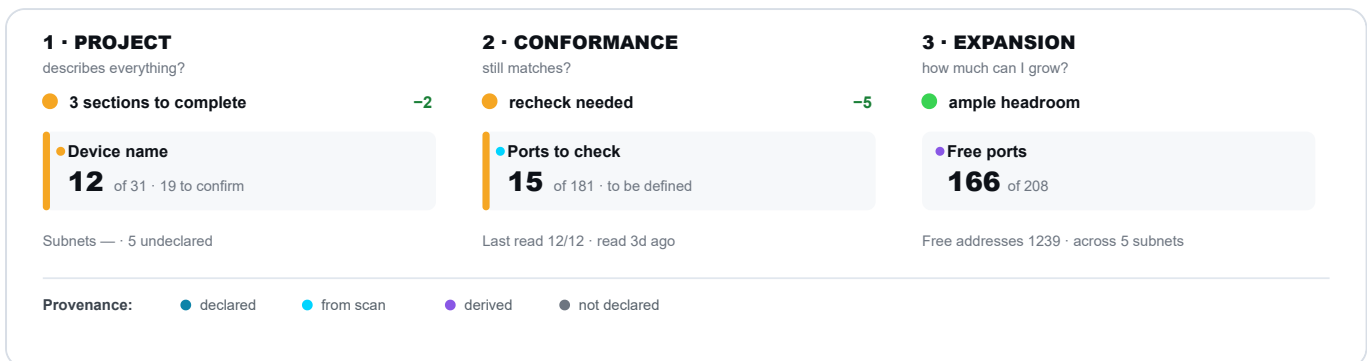

**Fig. 11** — The three columns on *Rete+Lab*. Each opens with a **health-dot verdict** and, when a previous read exists, the **since-last-read delta** (–2, –5). The most urgent tile carries a **coloured left bar**; every number declares its **provenance**. After a Verify, the “Conformance” column fills with the result (**Fig. 12**).

## The “Conformance” column: where Verify lands

After a **Verify**, the middle column no longer shows just “when” the last read was: it fills with **the outcome**. At the top, the “**when**” strip carries two dates — the last *Sync* and the last *Verify* — because they are the date everything below is valid at. Beneath, **one row per kind of difference** found: ports that changed state, devices on the network that aren't documented, ghost cables, hardware identity, changed addresses. Each row opens *in place* and shows the concrete cases with the **three actions** as always — **Update doc**, **Ignore**, **Investigate** — without ever leaving the Overview.

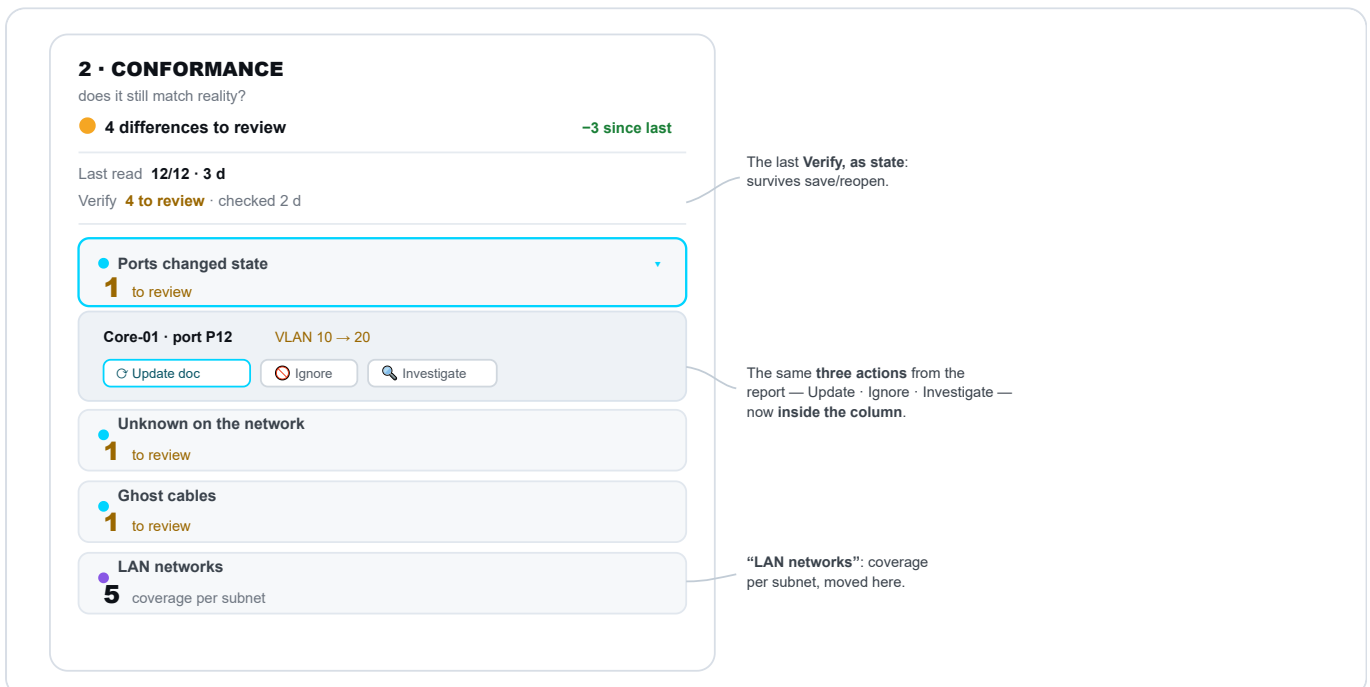

**Fig. 12** — The “Conformance” column after a Verify. The top strip carries the two dates (**last read** and **last Verify**); below, **one row per kind of difference**. The open row shows the concrete case with the three actions — **Update doc**, **Ignore**, **Investigate** — inside the column. The coloured dot declares the **provenance** (measured · derived).

## Where every number comes from

The Overview's hallmark is that it **never presents an estimate as a fact**. Under each number a dot says where it came from, and a **missing datum is shown**: it renders as a **dashed "not declared" tile**, not a zero — because *a zero is an assertion, a dash is a question*.

| Provenance                                                                                            | Meaning                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <b>Declared</b>     | You wrote it in the document.                                                                                                                                  |
|  <b>From scan</b>    | Read from the device at the last SNMP sync/check.                                                                                                              |
|  <b>Derived</b>      | Worked out from other signals (e.g. free addresses, with the  /24 assumed). |
|  <b>Not declared</b> | The value isn't there: a dashed tile, never a zero.                                                                                                            |

**Subnets go on the DECLARED prefix**

The **addressing plan is law** (see chapter 12). If you declare a subnet in the VLAN panel — a /16 as much as a /28 — the Overview uses it **at its real prefix**, not a convenient /24. So **"Free addresses"** (Expansion) counts the true capacity (a /16 is ~65,000 addresses, not 254) and **"Subnets"** (LAN) lists the **declared ones first**. Networks you **use but haven't declared** don't vanish: they show up tagged **"undeclared"** (with the assumed /24 as a fallback) and the verdict becomes **"N to declare"** — a nudge to complete the plan. And if a declared subnet is **smaller** than what you've put in it, the devices that fall **outside** surface there as "undeclared", instead of being hidden or double-counted.

**The glance: one verdict per column**

At the top of each column, the **answer** to its question: a **health dot** ( fine ·  minor gaps ·  serious problem) with a sober phrase. **Red is reserved for "flying blind"** — a network *never read*: a project read recently but with some discrepancy stays **amber**, not alarmist. Beside it, when a previous read exists, a **since-last-read delta** (**-N** problems fewer · **+N** more).

**Where to start**

Within each column, the **most urgent** tile takes a **coloured left bar** — amber or red by severity — so the eye knows where to begin. If the column is fine, no bar: putting the accent on "166 free ports" would say something false.

**Looking never dirties the document — with one deliberate exception**

The Overview is **read-only** for *navigation*: opening it, clicking inside, going back **never marks the project as modified**. The chosen view and the "since last read" comparison live in the **browser** (localStorage), never in the document. The **only exception** are the **three actions** in the "Conformance" drill-down (*Update doc* · *Ignore* · *Investigate*): those **do** touch the document and mark it modified — because *deciding* a difference is, in every sense, an edit, and it is exactly what you want to do from here.

**Every row drills down in place**

A click on a row **lists what's behind it**, *inside the column* — the overview never disappears. **Derived cables** show both ends resolved to names; **LLDP/CDP neighbours** resolve a bare chassis-MAC to the project device's name; **free addresses** give free *of usable* per subnet — on the **declared prefix** when there is one, each row tagged “declared”/“undeclared”; **free ports** split into **In-rack / Outside-rack** tabs (free of total, per device). And in “**Conformance**”, the difference rows open the **cases to decide** directly, each with its three actions: it is the one place in the Overview you *act* from, not just look.

## The six lenses: from the summary to recoverability, security and health

At the top of the Overview a **lens switch** — Summary · Recoverability · Security · Health — changes *what* the view shows you, without ever touching the document (the choice lives in the browser). **Summary** is the three columns above; the other three are **full-width**, opt-in lenses that answer questions other than “is the document complete?”.

### ④ Recoverability (DR) — “if it falls tonight, can you bring it back up?”

The question that matters when something really breaks. The lens counts the **managed devices** and gives an “**X of Y recoverable**” verdict, where *recoverable* means having all three pieces needed to rebuild it:

- **A fresh config backup** — the pointer to *where* the backup lives (never the file), updated within the last **30 days**.
- **Known hardware identity** — you know *what to re-buy*: make/model (declared or read over SNMP) *or* the serial; a missing **firmware** is a light advisory, not a blocker. If the *declared* serial does not match the *measured* one, the device is flagged “replaced?” and does **not** count as recoverable: that is a doubt to settle, not an identity to rely on.
- **Location** — the rack it goes back into.

Alongside, three *advisory* signals that never lower the verdict: **presence** (seen recently vs. stale), **redundancy** (devices with a declared **HA** twin — your single points of failure surface by difference) and **lifecycle**. Every row opens and lists the devices missing that piece — with the IP right next to the name.

#### Lifecycle — “when it dies, can you still replace it?”

In every device's **Properties** panel, next to serial and firmware, there are two dates: **Warranty until** and **End of life (EOL)**. No device reports them over SNMP — there is no OID telling you when a contract expires — so they are **declared and nothing else**: an empty field means “I don't know”, never “unlimited”. The row sums them up worst-first: **end-of-life** (past EOL: you can't buy it again), **out of warranty, expiring within 90 days**. The denominator is *whoever declares a date*, not the fleet: “12 of 12 covered” while counting the twenty that declare nothing would be a green bought with ignorance — which is why the verdict also says how many are left without dates. It is *advisory*: an end-of-life device with a fresh backup is still **recoverable**, because EOL says you can't *re-buy* it, not that you can't bring it back up.

### ⑤ Security & Services — “how exposed is management?”

How open the network's *service door* is. Measured or declared signals only, never invented:

- **Encrypted SNMP access** — how many devices speak **v3** (authenticated) and how many still **v1/v2c** (cleartext community); the drill-down lists the weak ones.



- **Default community** — how many use a *guessable* community (public/private). The community **value** *never* leaves the engine: it is *counted*, never shown.
- **Management VLAN** — how many VLANs you marked as “management” (segmentation of the management plane).

#### The honest verdict

**Red** if a guessable community is reachable (an open door); **amber** for cleartext SNMP or no management VLAN; **green** when management is hardened. And **grey** until you have configured *even one* SNMP access: zero exposure measurements does not mean zero exposure — the app cannot know whether those devices do not speak SNMP or whether nobody has written the access down yet. A green dot there would be reassurance bought with ignorance.

#### ⑥ Health — “what problems are there *right now*?”

The only lens that speaks about the **present**: not the document, but how the devices are doing at this moment. It adds no polling — it **composes the telemetry the devices already returned** during Verify:

- **Resources (RAM · disks)** — memory in use and full volumes, read over HOST-RESOURCES.
- **Power backup (UPS)** — on battery, remaining runtime, charge, output load.
- **Consumables** — toner and ink running out (Printer-MIB).
- **CPU load** — the busiest among those that reported it. It is a *number*, not a verdict: a threshold on an instantaneous reading would be invented, and a spike between two polls is not a fault.

Each row's **denominator is whoever actually answered** with that telemetry: a NAS that doesn't speak Printer-MIB is not “a printer with no alerts”, it is simply not in the count — and the row stays **dashed** instead of showing a zero.

#### Yesterday's health is not today's health

With no reading at all the verdict is **grey** (“I don't know”), never green. And a green one **degrades to amber** once the **oldest** reading passes **6 hours**: the picture is no fresher than its stalest piece — one device re-read just now does not refresh the others. Run **Verify** again to bring it back to the present.

#### “What I'm not looking at” — the declared perimeter

At the foot of the Overview, under every lens, a quiet line names the network dimensions this summary does **not** judge, so the absence of an alarm is never read as “all clear” (each chip's full text sits in its *tooltip*): WAN/circuits, L3 routing, spanning-tree, firewall/ACL, AAA-syslog-NTP, backup-restore proof, temperature and interface errors. The list is **live**: when a dimension gets modelled it drops off on its own — which just happened to *UPS power* and *device health* (now with a lens of their own) and to *warranty/EOL* (the “Lifecycle” row).

#### In “Conformance”: IPAM conflicts and VLAN names from the network

The centre column carries two checks a real IPAM makes and that used to stay in the panels:

- **IPAM conflicts** — the **same IP** on two documented devices (VM IPs included) or two **VLANs whose subnets overlap**. Zero conflicts = green; otherwise the drill-down lists the two devices and the shared



address, or the overlapping subnets.

- **VLAN names** — the names *read over SNMP* compared against what you declared. The Overview fills the gaps (a VLAN in use with no declared name, but the network knows one) and flags the **conflicts** (your name  $\neq$  the network's, or two switches disagreeing). The **declared name is never overwritten**: you decide, from the VLAN panel.

# 16 REST API and automation (Ansible)

Let other tools read your documentation — read-only, with a token.

InfraNet can become a **programmable source of truth**: dashboards, wikis and automation tools read the network inventory straight from the app through a **read-only REST API**. The principle stays *manual-first* — you write the truth in the interface, machines **consume** it without changing it.

## Access tokens

An external tool doesn't have your browser session: it authenticates with a **token**. You create one from the user menu → **Users and access** → **API tokens** tab:

- pick a **label** (e.g. ansible) and press **Generate token**;
- the token is shown **only once**: copy it right away and keep it safe;
- the list keeps only the **prefix** and the last-used date; you can **revoke** it anytime.

### Admins only, read-only

Token management is restricted to admin accounts, and tokens grant **read-only** access: they cannot change your data.

## What the API exposes

Responses are **sanitised**: you get each device's type, IP, MAC, VLAN, rack and brand, but **never** secrets such as SNMP communities. The VLAN is derived automatically from the IP address.

| Endpoint                                | What it returns                           |
|-----------------------------------------|-------------------------------------------|
| /api/v1/projects                        | the list of projects                      |
| /api/v1/projects/{id}                   | the full inventory: VLANs, racks, devices |
| /api/v1/projects/{id}/devices           | just the device list                      |
| /api/v1/projects/{id}/ansible-inventory | the dynamic inventory for Ansible         |
| /api/v1/openapi.json                    | the full API description (OpenAPI)        |

```
# project 8 inventory, passing the token in the header
curl -H "Authorization: Bearer inp_..." http://<host-ip>:8421/api/v1/projects/8
```

## Dynamic inventory for Ansible

This is the main use case: InfraNet is the **source of truth**, Ansible the **executor**. The `integrations/ansible/` folder ships a ready-made script (`infranet_inventory.py`, Python standard library only) that turns a project into a **dynamic inventory**: every device with an IP becomes a host, grouped automatically by `type_*`, `vlan_*`, `rack_*`, `brand_*` and `backup_missing`.

```
# three variables and you're set
export INFRANET_URL=http://<host-ip>:8421
export INFRANET_TOKEN=inp_...
export INFRANET_PROJECT=8

# view the groups, then target a group
ansible-inventory -i infranet_inventory.py --graph
ansible type_switch -i infranet_inventory.py -m ping
```

### No hand-kept inventory

When you update the documentation in InfraNet, the Ansible inventory follows: one source to keep current, not two.

### Configuration backup — the pointer, not the file

For each device you can record, in the Properties panel → `Configuration backup`, **where** its configuration backup lives (a path or a repo) and when the last one was taken: InfraNet notes the *where*, **never the configuration file** — which holds secrets. The Ansible inventory then carries, per host, the **network OS** (so the right module is picked) and that **pointer**, and gathers into the `backup_missing` group the devices **without** a recorded backup: a backup playbook finds them on its own — and the **AI assistant** can draft that playbook for you. The path accepts no credentials.

# 17 Change history

Who changed what, and when. An append-only log that survives Undo.

On a documented network, multiple people work over time. Sooner or later the question comes: "**who changed this, and when?**". **History** is the chronological log of project changes — an *append-only* diary: entries accumulate, they are never deleted.

## In one sentence

It turns the map from a "snapshot of today" into a "film of how we got here".

## What is recorded

Only **structural events**, not every minor tweak: device added/removed/renamed, cable created/removed, port VLAN changed, Sync and Verify run (with outcome), documentation aligned, project renamed. Every entry carries **date and time, user, action, object and detail**.

### Change history

-  **Port VLAN changed «Core-01 / P12» — VLAN 20**  
12/06/2026, 15:42 · mario
-  **Cable created «Core-01 P5 → Sw-Piano2 P1»**  
12/06/2026, 11:08 · laura
-  **Device added «AP-07» — Access Point**  
11/06/2026, 17:20 · mario

**Fig. 13** — The log, most recent at the top. Filter by device/user/action and **export as CSV** for handovers and audits.

- **Cannot be undone.** Unlike everything else, History survives Undo/Redo: a log that can be erased would not be reliable.
- **Export as CSV** to attach documentary proof (handovers, audits, proof of work for MSPs).
- Only meaningful if **each person uses their own credentials**: with a single "admin" account, the "who" column loses its value.

# 18 Export, labels and Dossier

Getting documentation out of the app: SVG floor plan, cable labels, handover dossier.

## Floor plan and backup

- **SVG** — the printable floor plan, with VLAN-coloured cables and device icons. If a VLAN filter is active, the SVG exports only that VLAN.
- **JSON** — the complete project backup, for moving it between installations.
- **CSV** — bulk import of tens of devices from an Excel/CMDB spreadsheet.

### SVG = recommended format for the floor plan

The SVG export keeps the floor plan **vector**: you can enlarge it and print it at any size — even on a plotter or large format — **without losing sharpness**, unlike a raster image (PNG/JPG) that pixelates. It is the preferred format for archiving and delivering the map.

## Export the rack to draw.io

From the **Import/Export** → **Export to draw.io** menu you get a `.drawio` file (the diagrams.net format) with **one page per rack**. It is not a screenshot: the frame, the devices and the ports are **native, editable shapes** inside draw.io's own rack container (each device snaps to its U slot). Open it in diagrams.net and move a server, rename a port, add a note — it all stays editable, with no “pasted-in” images.

- The **device names** sit **outside the rack**, to the side, so the device face is left entirely for the interfaces.
- The **SNMP status stripe** is not exported: it is a *live* indicator, whereas the `.drawio` file is a *static snapshot*.
- If you gave a device a **skin** (a drawn faceplate), its artwork is carried over as a vector image with the real ports overlaid.

### One cable layer per VLAN, with a table

The export includes the **intra-rack cables** as native connectors, split across **separate layers — one per VLAN**, each **named with the VLAN's name**, cables **coloured by VLAN** and routed in dedicated lanes (with a stagger) so they don't overlap. In draw.io open **Edit** → **Layers** and turn on the VLAN you care about: alongside its cables a **table** appears listing the connections — one cable per row (*Device/port* → *Device/port*).

### Isolate a cable: click the row to highlight it

In diagrams.net's **View** (preview/lightbox) mode, **clicking a table row highlights that cable**: the line becomes thick and *stays* highlighted (one at a time) and the view scrolls onto it. **Clicking the table header** clears the highlight. (In the editor a click opens the connector's link instead; the highlight works in View mode.)

### A4 format, or A3 if it doesn't fit


Each page is exported as **A4 portrait**; if the content doesn't fit — a very tall rack or a VLAN with a great many cables — the page switches automatically to **A3**.

### What about Visio?

Visio does not open .drawio files directly. If you need it, open the file in diagrams.net and use **File → Export as → VSDX**: you get a file Visio opens, with a “flattened” result (draw.io's native rack shapes have no native Visio equivalent).

## Printing cable labels

From the **Import/Export → Export labels** menu you generate cable labels ready to print, on standard market media:

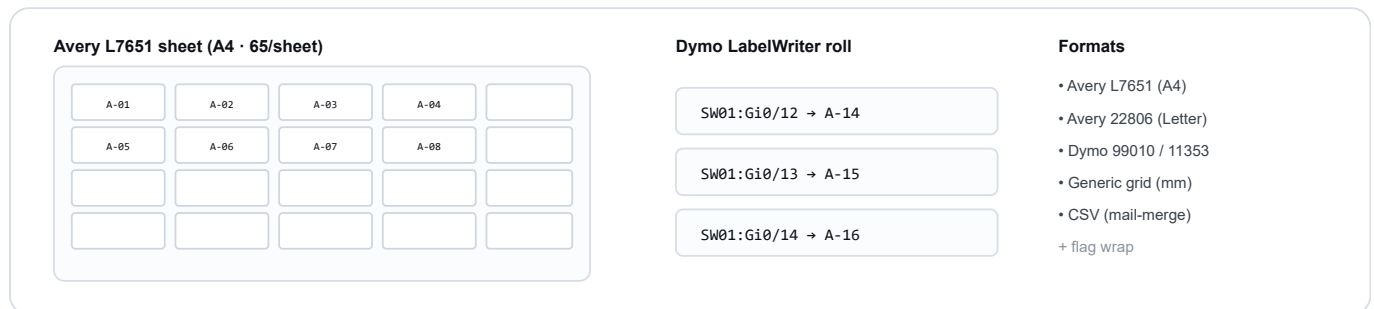

**Fig. 14** — Labels on **Avery** sheets (L7651 A4, 22806 Letter), **Dymo** rolls (99010, 11353), generic grid configurable in mm, or CSV for mail-merge. Preview is live.

- Choose the **fields** to print (by default only the label ID) and the **flag wrap** option, which repeats the ID in both halves → readable from either side when wrapped around the cable.
- Geometries are nominal: do a **test print** and align it against the label sheet to check alignment; any offset can be corrected with the "generic grid".

## Handover dossier

### A single PDF, with one click

The **Handover dossier** collects everything the recipient needs: cover page with key figures, floor plan, **Overview**, rack fronts, cable inventory, as-built path trace, port assignment, VLAN/IPAM, **virtual machines**, notes and change history. For an MSP it is a *billable deliverable*; for a company it is *insurance against staff turnover*. Generated from the Import/Export menu.

### The Overview up front

Right after the floor plan, one page with the **three questions** and their verdicts — the same ones you see on screen, with the same **provenance dot** next to every number and its legend. It is the *executive summary*: whoever opens the dossier reads the judgement first, and only then the data backing it in the pages that follow. It lists no devices (that's the **Asset register**): it fits on **one page**, so it actually gets read. At the bottom, the **“What I'm not looking at”** line travels with the dossier — putting in writing what was *not* assessed protects whoever hands it over as much as it is honest towards whoever receives it. It can be switched off in the export options like any other section.

### Virtual machines in the dossier

VMs get a **chapter of their own**: one row per machine, grouped by host, with the role or service provided, state, VLAN, IP address, allocated resources, owner and criticality. On the cover they have **their own counter**, next to devices, cables and VLANs: they are *never* added to the device count, because a host with ten VMs is still one installed appliance and inflating that figure would mislead the reader. Whatever you left blank is printed as «-»: the dossier invents nothing.

### The “Recoverability (DR)” section — the runbook to rebuild from

An optional page, **one row per managed device**, built for the day of the disaster: **where** each device's config backup lives (the pointer and method, *never* the file or the credentials), the **date and time** of the last backup, the **serial and firmware** to procure and reflash, the **lifecycle** (the declared warranty and end-of-life dates, summed up by the worst state: *EOL · out of warranty · expiring* — “can you re-buy it?” comes right after “what do you re-buy?”) and the **rack** it goes back into — under a header verdict “**X/Y recoverable · N without a backup · N without a location · N with an unresolved identity · N end-of-life**” (the last four appear only when greater than zero). The thresholds are the *same* as lens ④ (backup fresh within 30 days, expiring within 90): the dossier you hand over cannot say something different from the app. Kept *off-site*, this page lets you rebuild the LAN even with InfraNet down. Same secret-free allowlist as the asset register: no community, no password, never the configuration file.

For a partial PDF (floor plan only, rack only...) there is the classic **Export PDF** with checkboxes to choose individual sections. Tip: run a *Sync* just before exporting, so ports, VLANs and status in the dossier are up to date.

## 19 Bilingual IT / EN

Interface in Italian or English, with networking terms always kept in their original form.

---

The interface is **bilingual Italian/English**. The selector is in the user menu; the choice is remembered between sessions. You switch between languages without reloading and without losing your work.

### The technical glossary is not translated

Networking terms — **VLAN, SNMP, LLDP/CDP, SFP, trunk, uplink** — and vendor names remain unchanged in both languages: translating them would only cause confusion. What is translated is the interface (menus, panels, messages), not the language of the trade.

Bilingual coverage is verified automatically: a check flags any string translated on only one side, so both languages stay aligned as the app grows.

## Support the project

InfraNet Pro is **free and open source**. If it saves you time, you can buy the development a coffee: every contribution helps fund new features, fixes and support.



**Buy me a coffee**

Support page: [ko-fi.com/infranetpro](https://ko-fi.com/infranetpro)