


Assura DRC UserGuide - RSF File


- 1. Use TSMC released DRC.rsf file (suggested) :

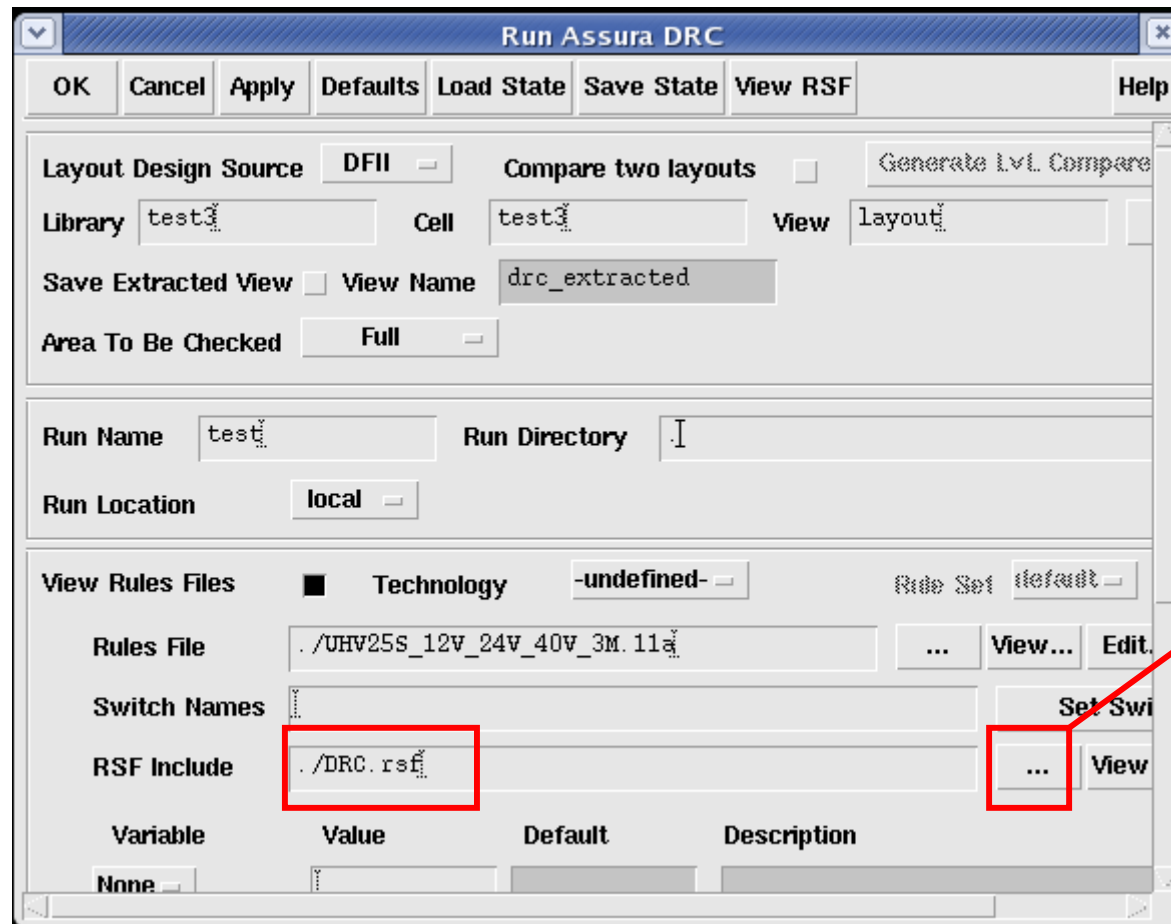

Use Browser to
pick up DRC.rsf

Assura DRC UserGuide - RSF File

1. Use TSMC released DRC.rsf file (suggested) :

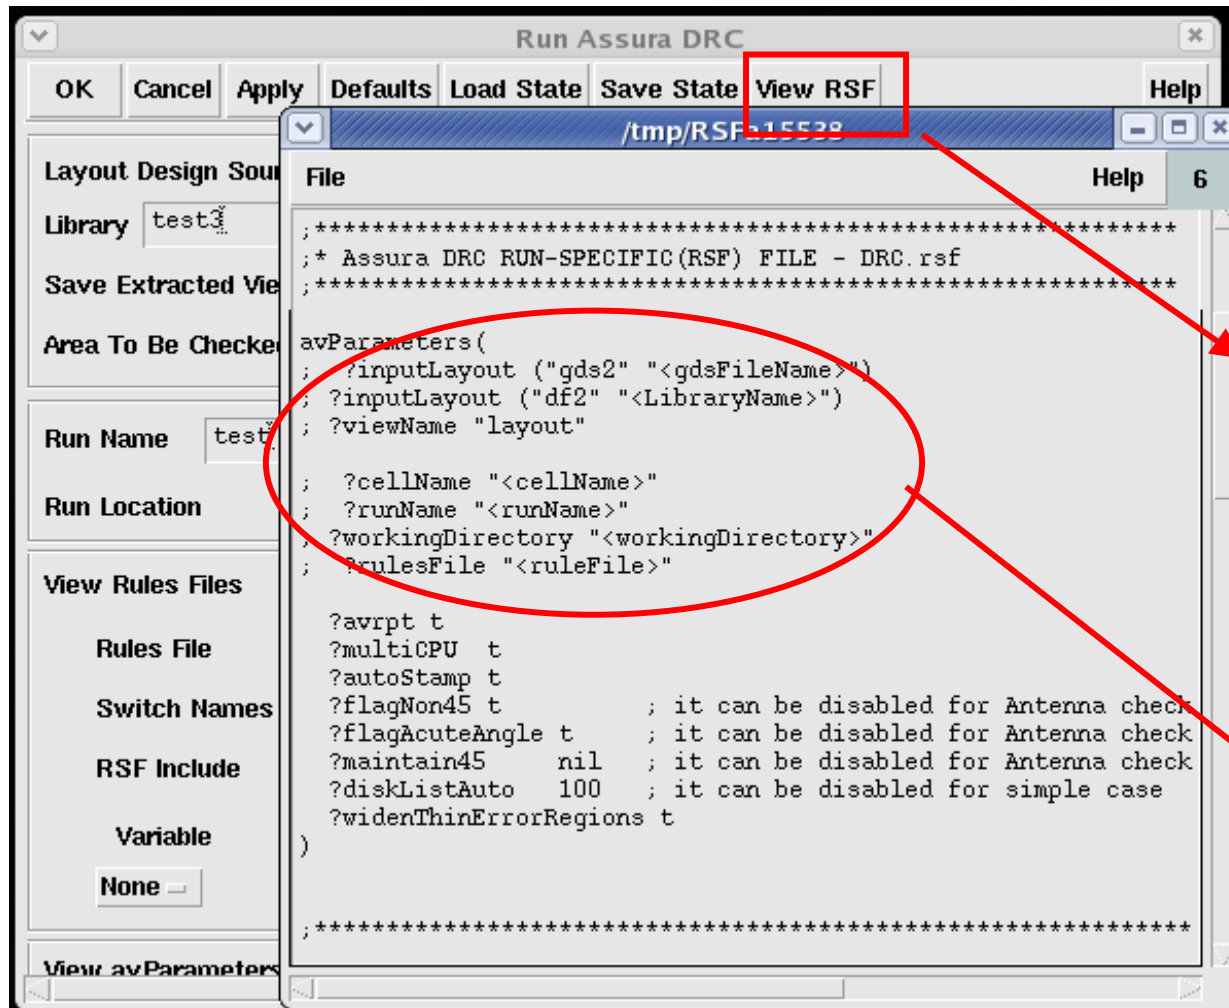


**View RSF file
setting**

**Disable these
options if used
default RSF**


Assura DRC UserGuide - RSF File

1. Use TSMC released DRC.rsf file (suggested) :

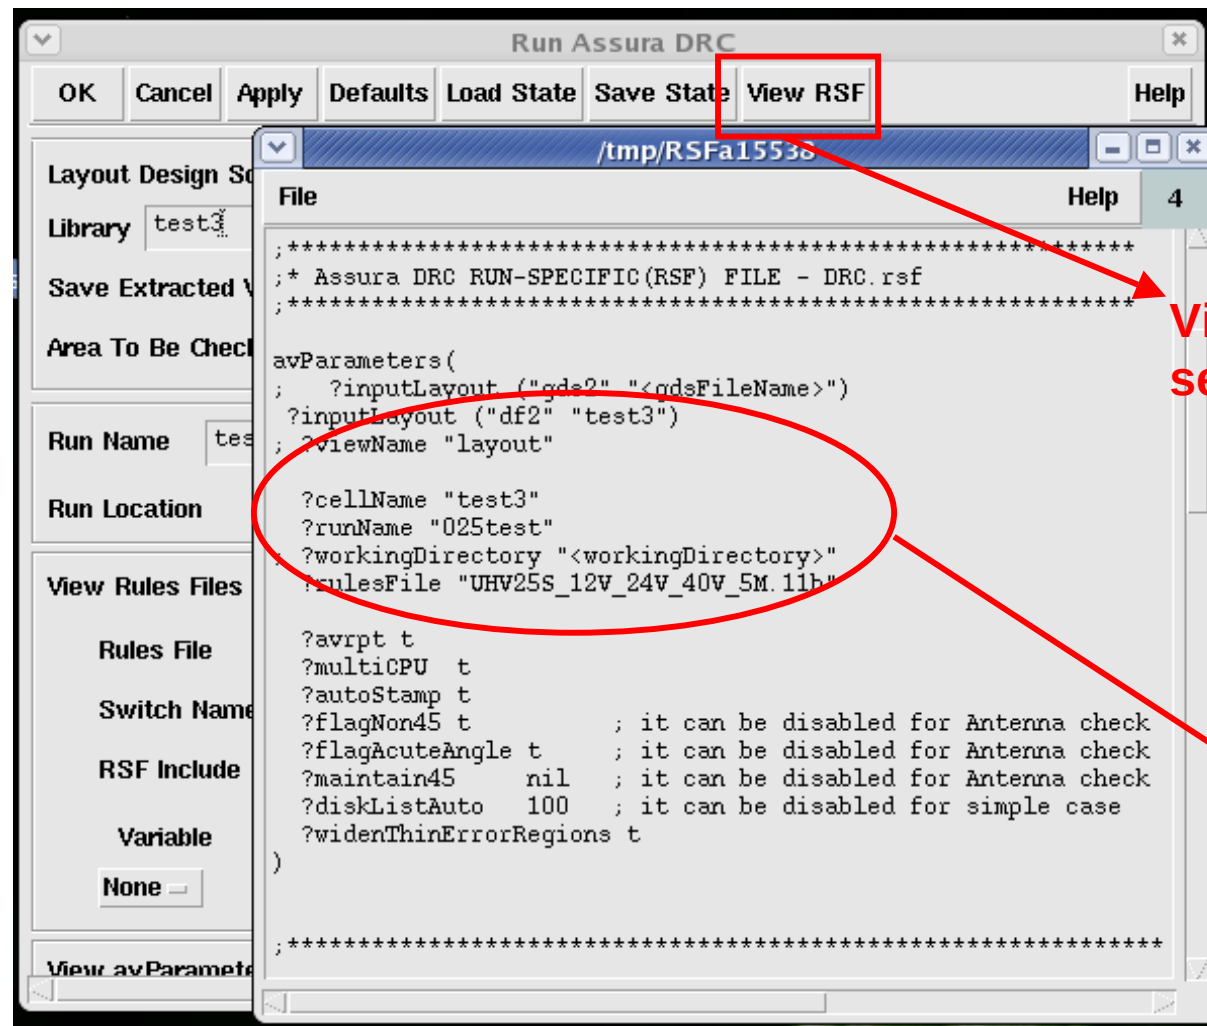


Assura DRC UserGuide - RSF File

❑ 2. Create DRC.rsf file from GUI Mode :

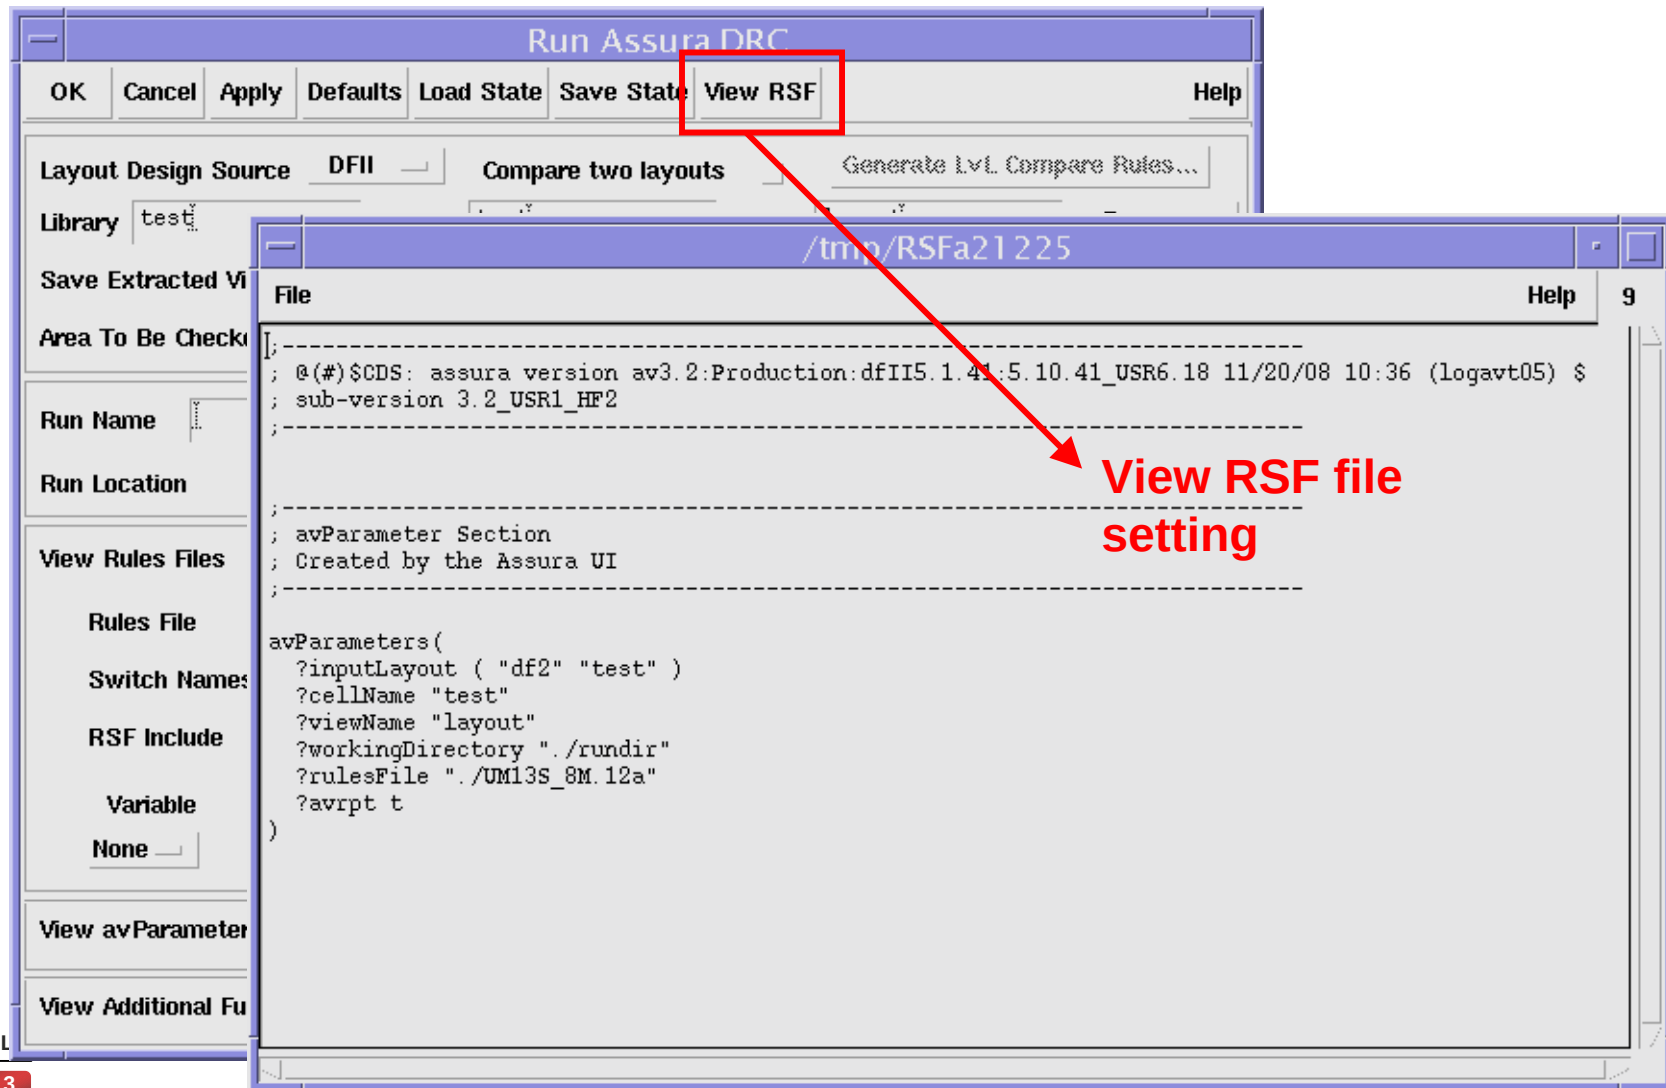

Assura DRC UserGuide - RSF File

❑ 2. Create DRC.rsfl file from GUI Mode :

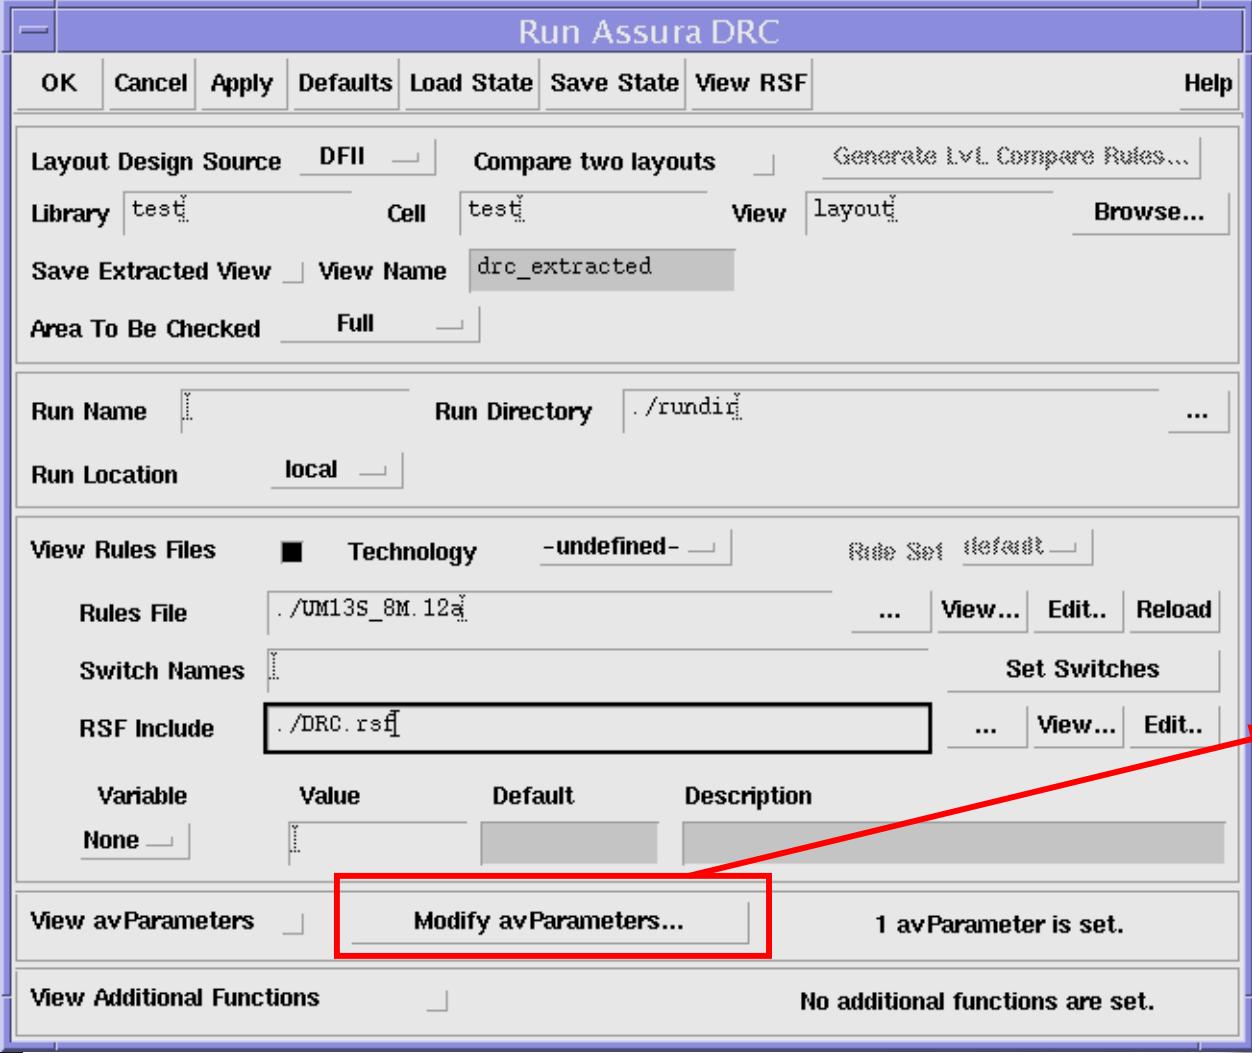

Run Assura DRC

OK Cancel Apply Defaults Load State Save State View RSF Help

Layout Design Source Compare two layouts ☐ Generate LVL Compare Rules...

Library Cell View Browse...

Save Extracted View ☐ View Name

Area To Be Checked

Run Name Run Directory ...

Run Location

View Rules Files ☒ Technology Rule Set

Rules File ... View... Edit.. Reload

Switch Names Set Switches

RSF Include ... View... Edit..

Variable	Value	Default	Description
None			


View avParameters ☐ **Modify avParameters...** 1 avParameter is set.

View Additional Functions ☐ No additional functions are set.

Click to modify the parameters


Assura DRC UserGuide - RSF File

❑ 2. Create DRC.rsf file from GUI Mode :

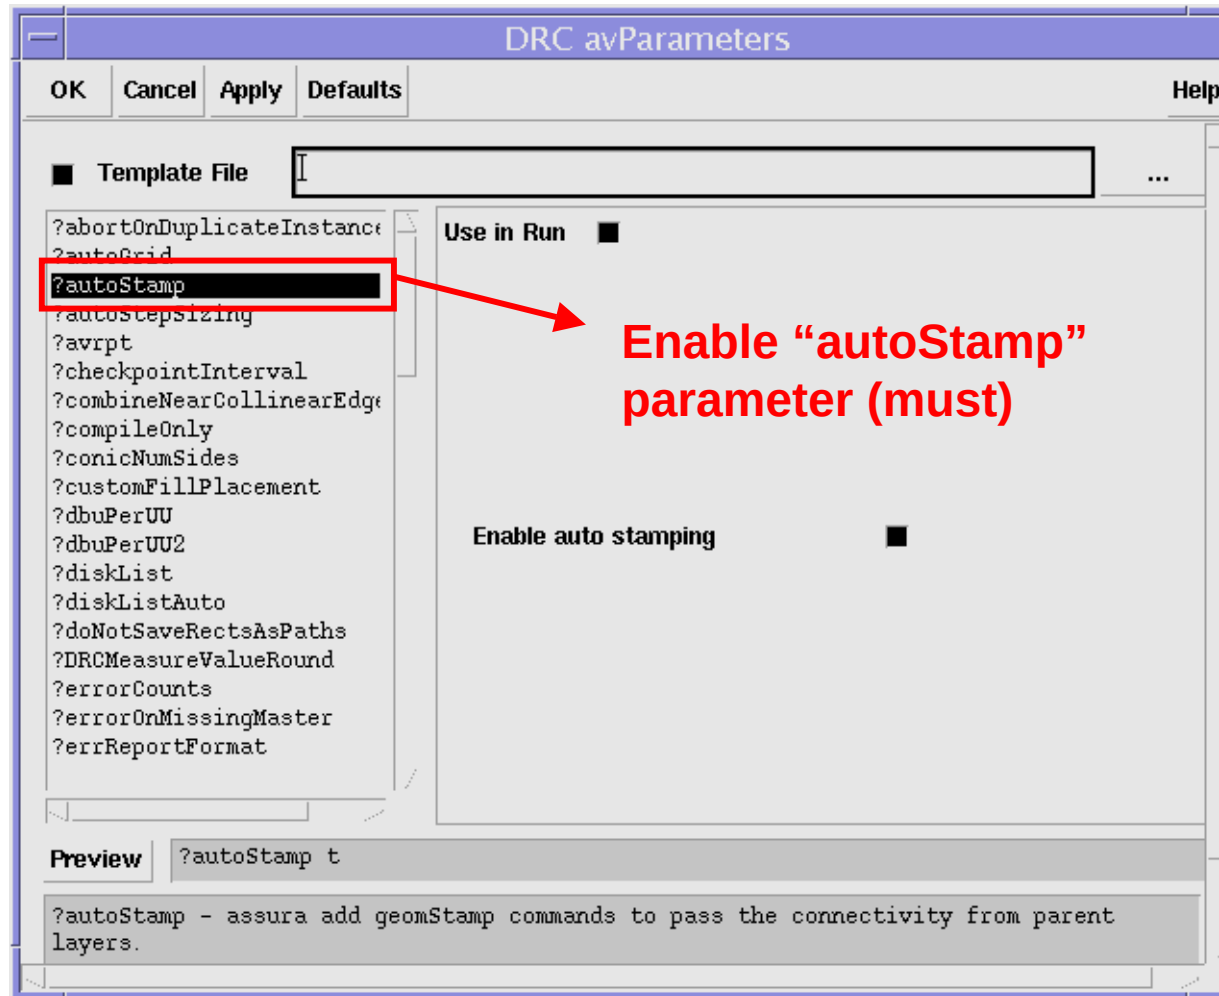

Assura DRC UserGuide - RSF File

❑ 2. Create DRC.rsfc file from GUI Mode :

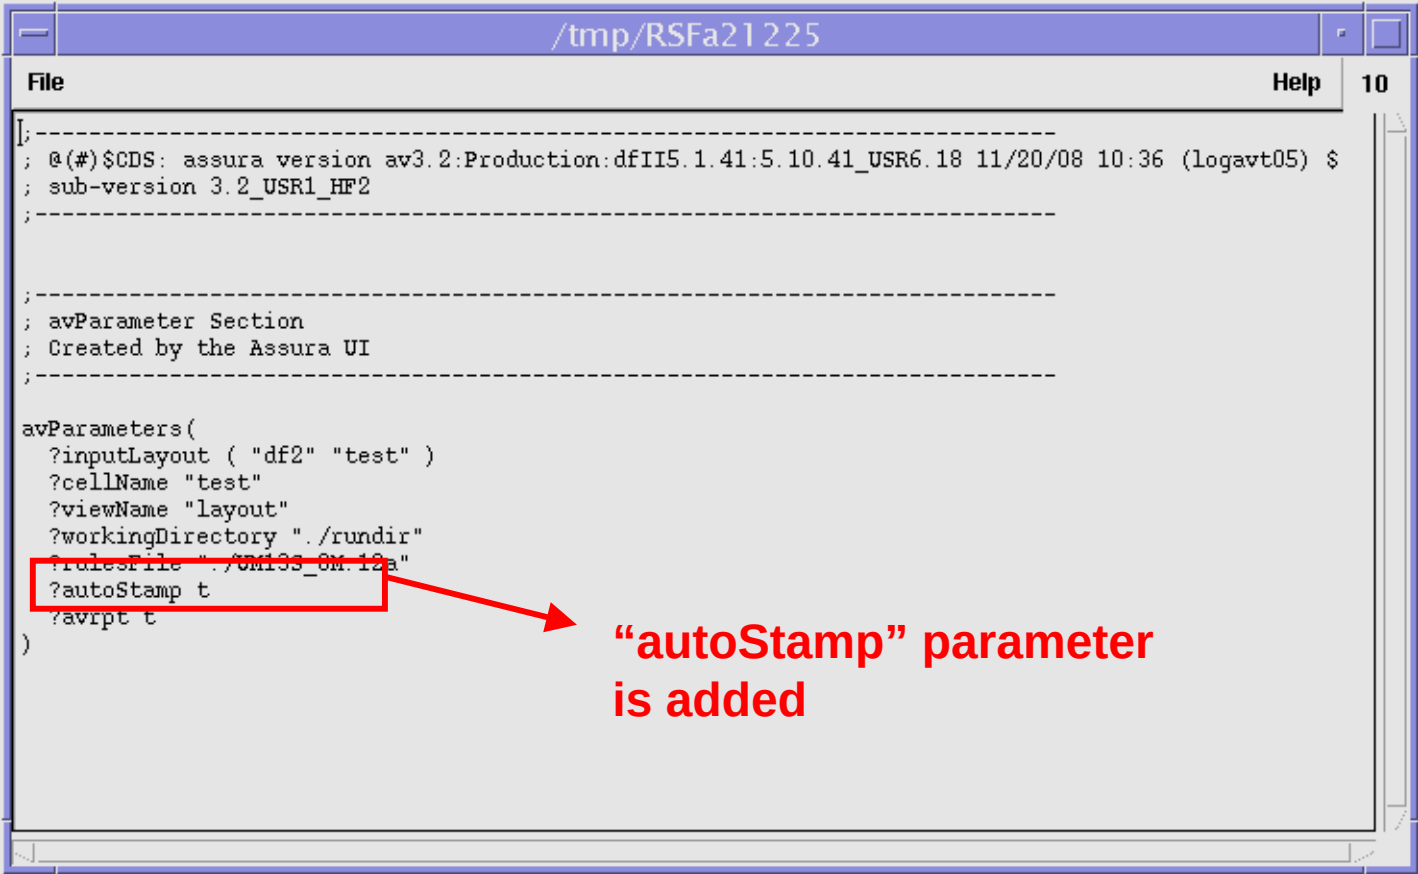

```
[
; @(#) $CD$ : assura version av3.2:Production:dfII5.1.41:5.10.41_USR6.18 11/20/08 10:36 (logavt05) $
; sub-version 3.2_USR1_HF2
;
;
; -----
; avParameter Section
; Created by the Assura UI
; -----
;
avParameters(
  ?inputLayout ( "df2" "test" )
  ?cellName "test"
  ?viewName "layout"
  ?workingDirectory ". /rundir"
  ?rulesFile ". /UMI33_6M.12a"
  ?autoStamp t
  ?avtpt t
)
```

“autoStamp” parameter is added

Other parameters can be enabled (or disabled) as well according to user’s requirement.