

Network Devices:

- * Hub Layer-1
- * Switch Layer-2
- * Router Layer-3 → Different N/w

Router configuration

Would you like to enter the initial configuration dialog? [yes/no]: ✓

Router> UEM -----Testing CMD


Router# Privilege mode -----View The Configuration

Show ip interface brief

Router(config)# Global Configuration Mode

Router(config-if)# ip address 10.0.0.1 255.0.0.0

Router(config-if)# no shutdown

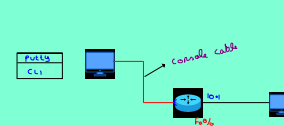


Types of console

- + DB95
- + USB

Routing table:

10.10.10.0/8 - Fa 0/0

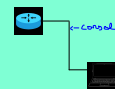

Console 0

Data base

Username: cisco
Password: 1234

Types of management

Direct console

Network login → Remote