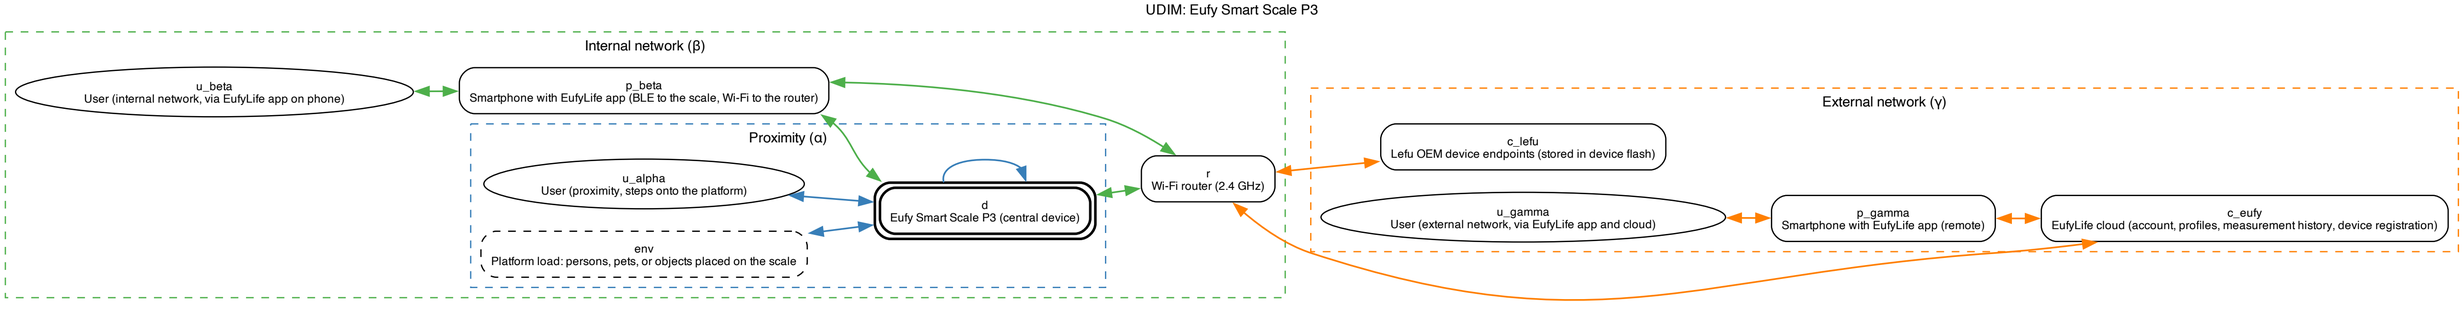
UDIM: Eufy Smart Scale P3
Internal network (β)
u_beta
User (internal network, via EufyLife app on phone)
p_beta
Smartphone with EufyLife app (BLE to the scale, Wi-Fi to the router)
Proximity (α)
u_alpha
User (proximity, steps onto the platform)
d
Eufy Smart Scale P3 (central device)
env
Platform load: persons, pets, or objects placed on the scale
r
Wi-Fi router (2.4 GHz)
External network (γ)
c_lefu
Lefu OEM device endpoints (stored in device flash)
u_gamma
User (external network, via EufyLife app and cloud)
p_gamma
Smartphone with EufyLife app (remote)
c_eufy
EufyLife cloud (account, profiles, measurement history, device registration)