


Contenu de la boîte



Elite 100 mini



Câble de charge CA



Câble de charge de
la voiture



Vis de mise à la terre




Documentation

Lier l'appareil



Remarque: Pour obtenir des instructions détaillées, reportez-vous au manuel d'utilisation dans l'application. Utilisation de la mise à niveau du modèle Elite200V2 comme exemple.

Mettre à jour le micrologiciel

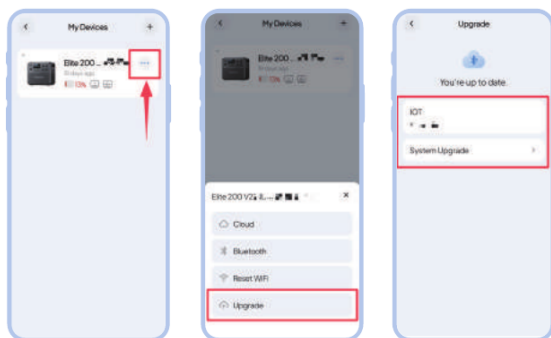

Need help? We're here for you!

+1 909-570-0909

Mon-Sat, 06:00-17:00 (PDT)

service@bluettipower.com



Community



@BLUETTI Official



@bluetti_inc



@bluetti.inc



@bluetti.inc


BLUETTI Power Inc.

3037 E. Warm Springs Rd. Suite 200 - Office #9 Las Vegas, NV 89120


P/N: 17.0303.1120-00A0

Charge

CA

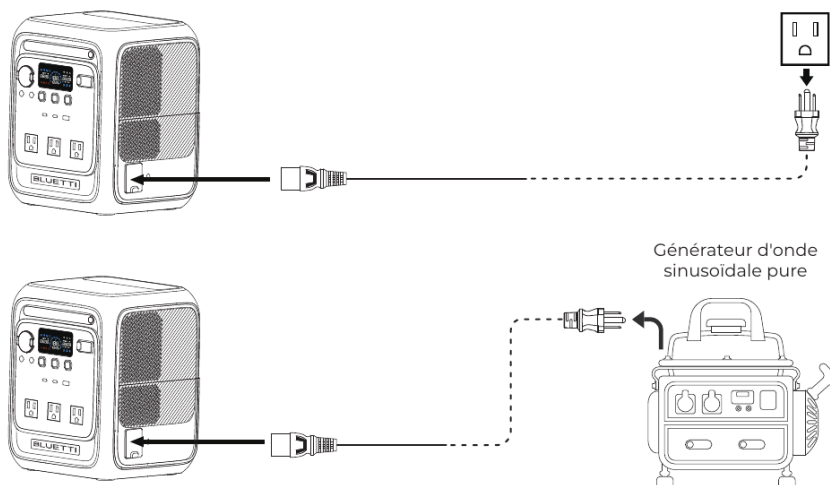


CC

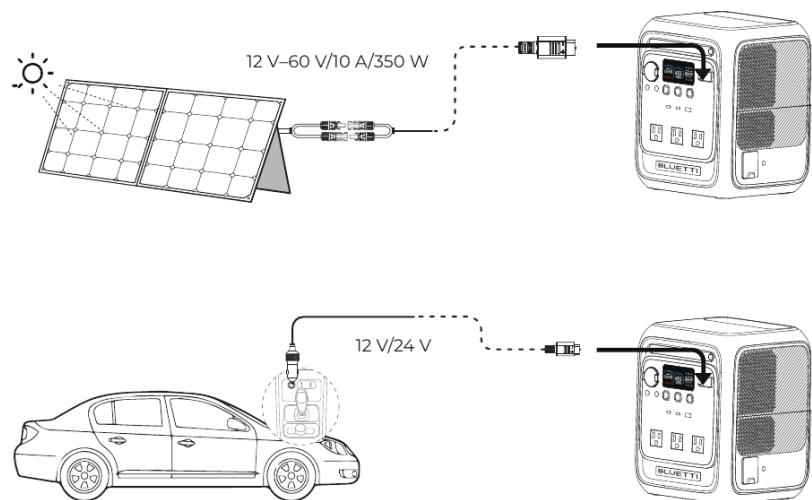


What's in the Box



Elite 100 mini



AC Charging Cable



Car Charging Cable



Grounding Screw



User Manual &
Warranty Card

Binding




Note: This guide uses the Elite 200 V2 as an example. The app interface may change with updates. Images are for reference only.

Firmware Update



Mettre sous tension/hors tension

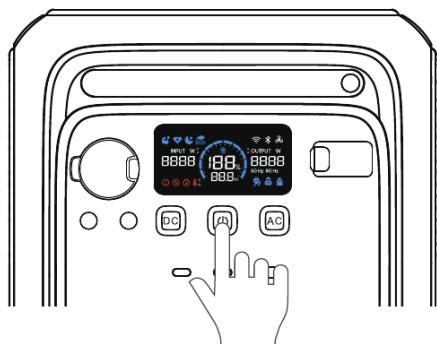


ON 1s
OFF 2s

AC ON 1s
AC OFF 2s


DC ON 1s
DC OFF 2s

Décharge

CA

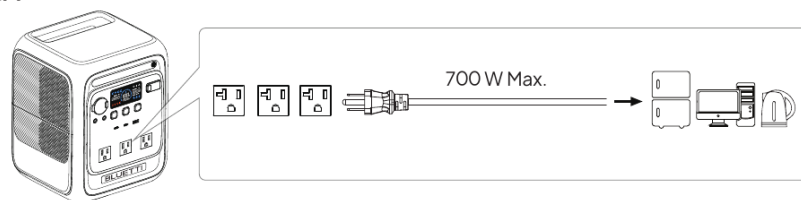


CC

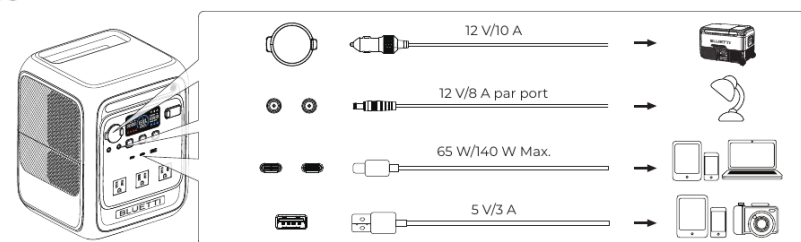


Charging


AC

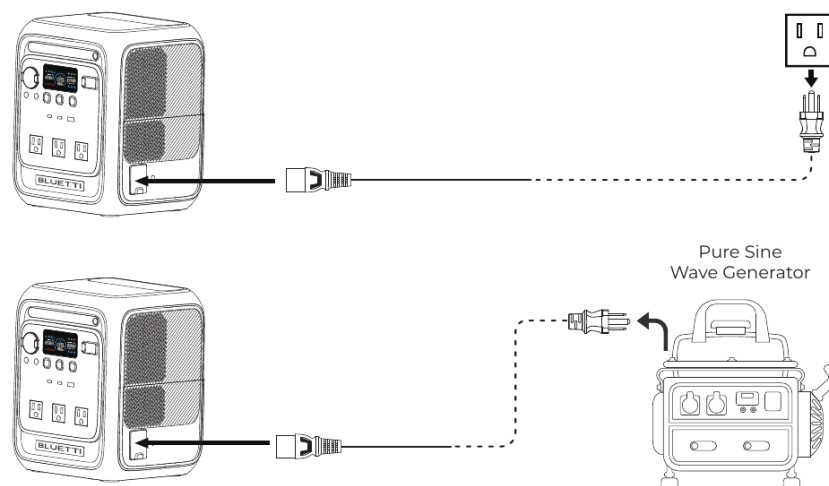

DC

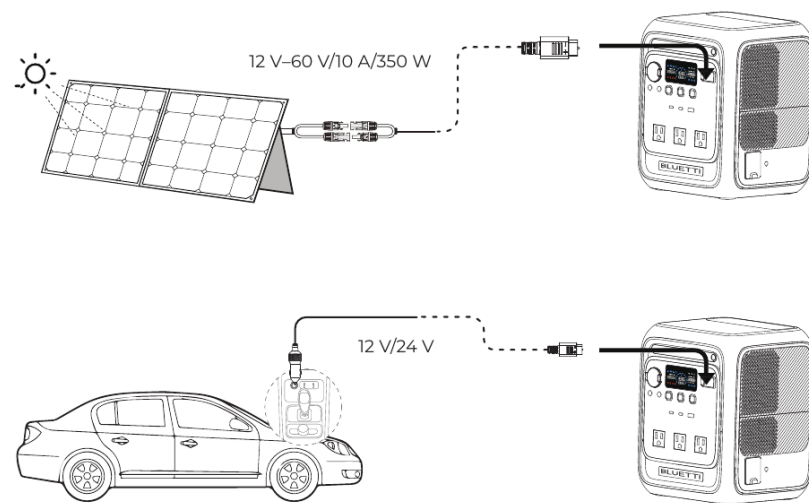


Écran LCD

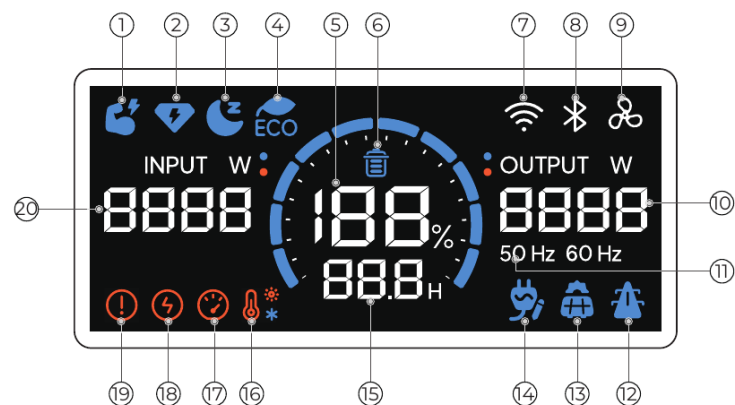

- | | | |
|----------------------------------|---|-----------------------------|
| ① Mode Augmentation de puissance | ⑧ Bluetooth | ⑮ Temps restant |
| ② Charge Turbo | ⑨ Ventilateur | ⑯ Alerte de température |
| ③ Charge Silencieux | ⑩ Puissance de sortie totale | ⑰ Surcharge |
| ④ Mode ÉCO | ⑪ Fréquence de sortie CA | ⑱ Court-circuit |
| ⑤ État de charge (SoC) | ⑫ Entrée CA | ⑲ Défaut du système |
| ⑥ Mode UPS | ⑬ Entrée CC | ⑳ Puissance d'entrée totale |
| ⑦ Wi-Fi | ⑭ Enregistrer le statut de l'interrupteur principal | |

Power On/Off

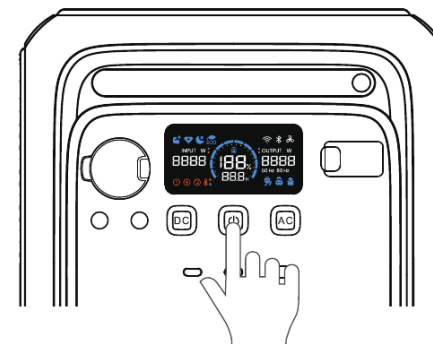



- | | | |
|---------|---------|---------|
| ON 1 s | ON 1 s | ON 1 s |
| OFF 2 s | OFF 2 s | OFF 2 s |

Discharging

AC



DC

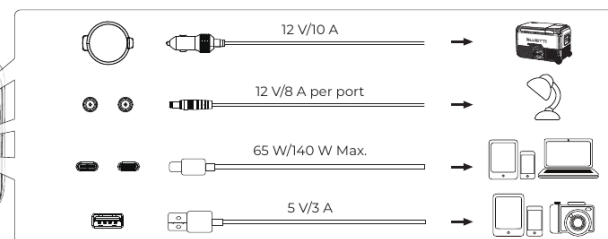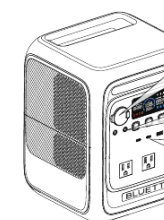



Elite 100 mini

Portable Power Station

V1.0



⚠ Tips

- Fully charge the unit and update to the latest firmware before first use.
- Do not use solar panels with an open circuit voltage higher than 60 V. The solar input voltage range for the unit is 12 V–60 V.
- If the unit's SoC falls below 5%, please recharge the unit promptly. If the SoC drops to 0%, power off the unit and charge it for at least 30 minutes before restarting.
- Do not connect the unit's AC output to the grid.
- If not used for more than 3 months, charge the unit to 40%–60% SoC and store it with the power off. For optimum battery life, discharge and charge the unit every 3 months.

Content is subject to change without notice. For the latest information, visit: <https://support.bluettipower.com>




BLUETTI App



Guides & Tutorials

LCD Display

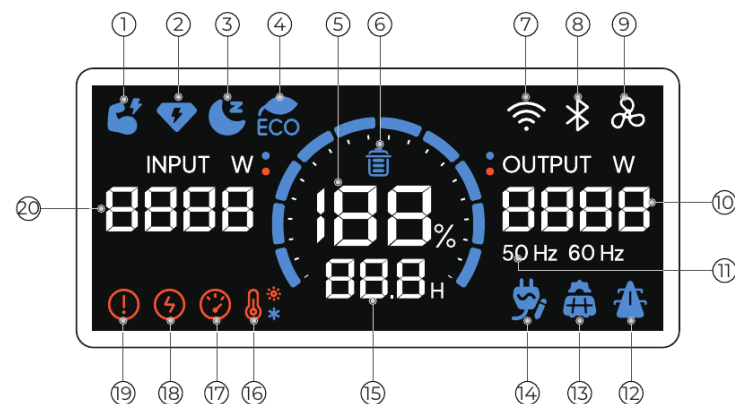

- | | | |
|-------------------------|--------------------------|-----------------------------------|
| ① Power Lifting Mode | ⑧ Bluetooth Connection | ⑮ Remaining Charge/Discharge Time |
| ② Turbo Charging | ⑨ Fan | ⑯ Temp Alarm |
| ③ Silent Charging | ⑩ Total Output Power | ⑰ Overload |
| ④ ECO Mode | ⑪ AC Output Frequency | ⑱ Overcurrent/Short-circuit |
| ⑤ State of Charge (SoC) | ⑫ AC Input | ⑲ System Fault |
| ⑥ UPS Modes | ⑬ DC Input | ⑳ Total Input Power |
| ⑦ Wi-Fi Connection | ⑭ System Switch Recovery | |