



# Elite 100 mini

## Portable Power Station

V1.0



### ⚠ Tips

- Fully charge the unit and update to the latest firmware before first use.
- Do not use solar panels with an open circuit voltage higher than 60 V.  
The solar input voltage range for the unit is 12 V–60 V.
- If the unit's SoC falls below 5%, please recharge the unit promptly. If the SoC drops to 0%, power off the unit and charge it for at least 30 minutes before restarting.
- Do not connect the unit's AC output to the grid.
- If not used for more than 3 months, charge the unit to 40%–60% SoC and store it with the power off. For optimum battery life, discharge and charge the unit every 3 months.

Content is subject to change without notice. For the latest information, visit: <https://support.bluettipower.com>



BLUETTI App




Guides & Tutorials

## What's in the Box



Elite 100 mini



AC Charging Cable



Car Charging Cable





Grounding Screw





User Manual &  
Warranty Card

## Binding

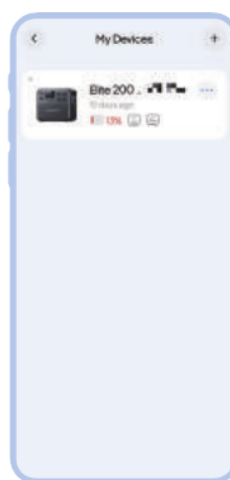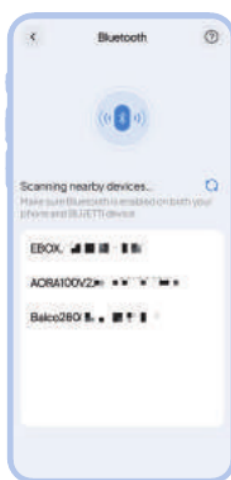


*Note:* This guide uses the Elite 200 V2 as an example. The app interface may change with updates. Images are for reference only.

## Firmware Update

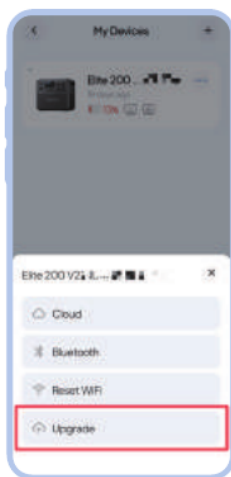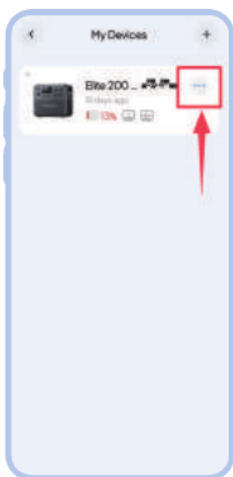


## Charging


### AC

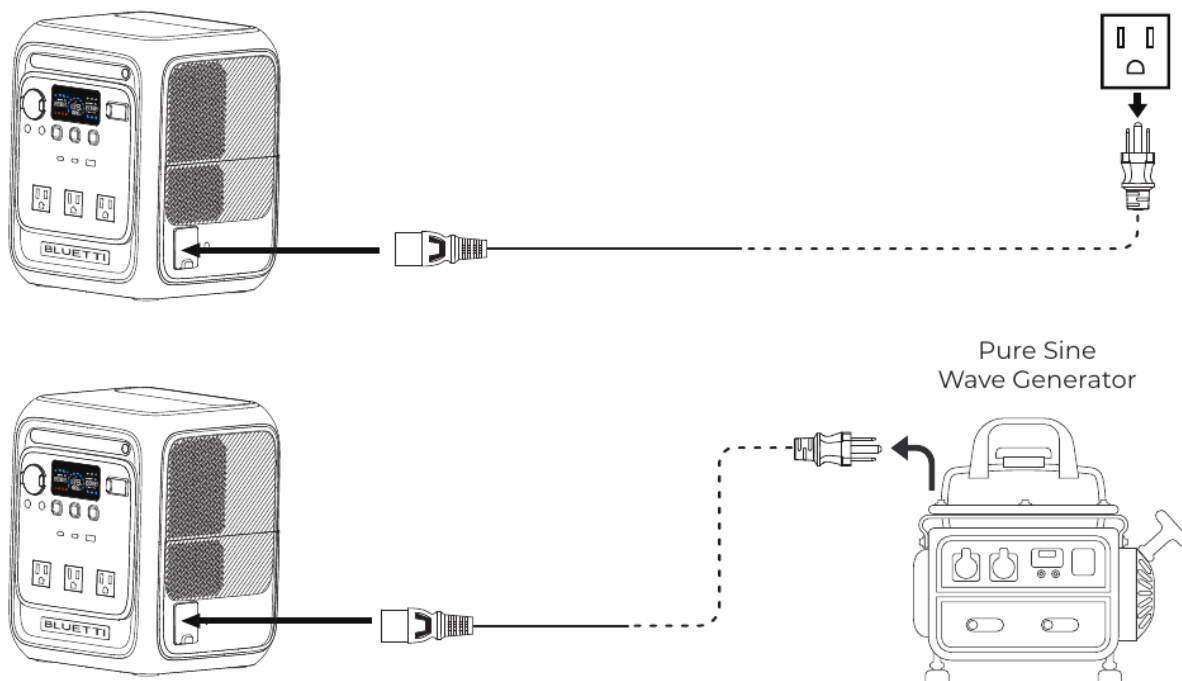

### DC

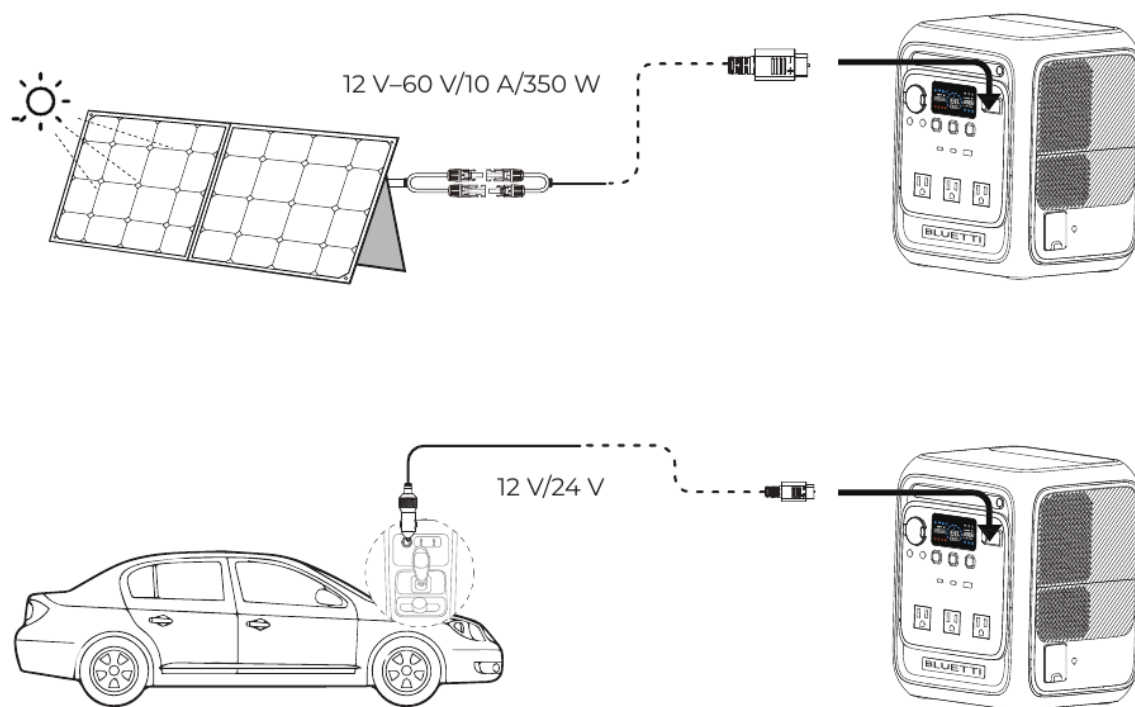

## Power On/Off

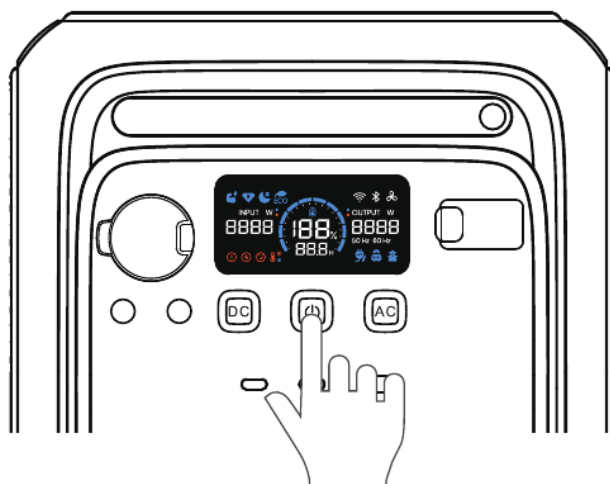

ON 1 s

OFF 2 s

ON 1 s

OFF 2 s

ON 1 s



OFF 2 s

## Discharging


### AC



### DC

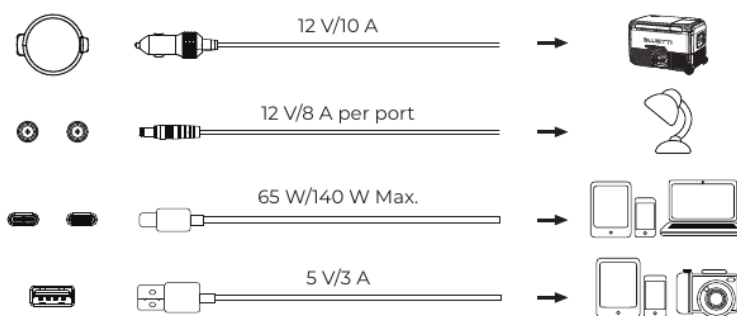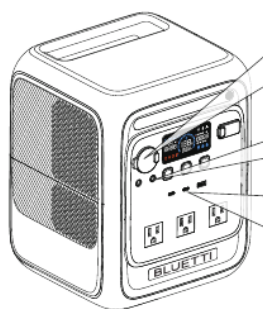

## LCD Display

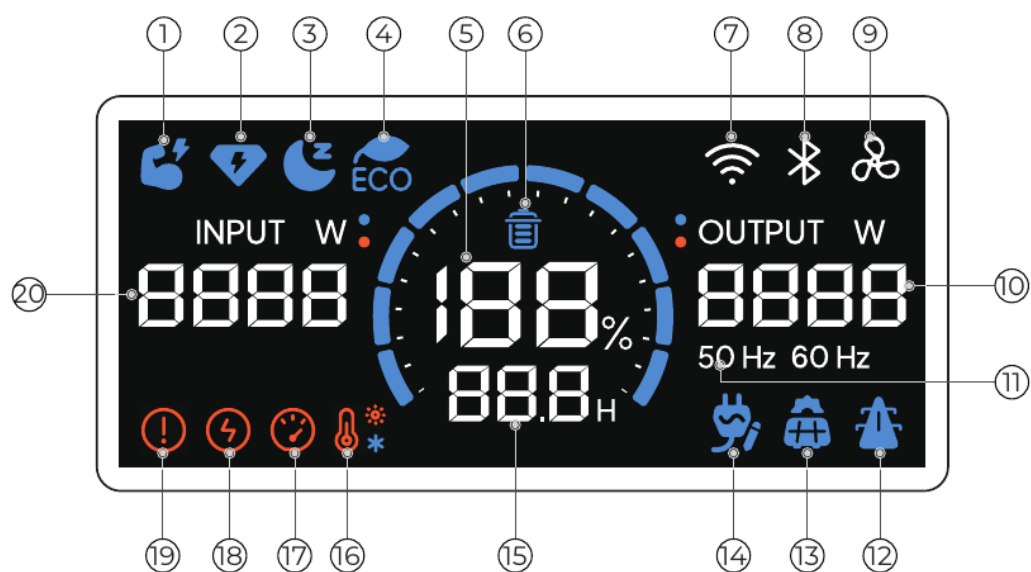

- |                         |                          |                                   |
|-------------------------|--------------------------|-----------------------------------|
| ① Power Lifting Mode    | ⑧ Bluetooth Connection   | ⑮ Remaining Charge/Discharge Time |
| ② Turbo Charging        | ⑨ Fan                    | ⑯ Temp Alarm                      |
| ③ Silent Charging       | ⑩ Total Output Power     | ⑰ Overload                        |
| ④ ECO Mode              | ⑪ AC Output Frequency    | ⑱ Overcurrent/Short-circuit       |
| ⑤ State of Charge (SoC) | ⑫ AC Input               | ⑲ System Fault                    |
| ⑥ UPS Modes             | ⑬ DC Input               | ⑳ Total Input Power               |
| ⑦ Wi-Fi Connection      | ⑭ System Switch Recovery |                                   |

## Need help? We're here for you!

+1 909-570-0909

Mon–Sat, 06:00–17:00 (PDT)

✉ [service@bluettipower.com](mailto:service@bluettipower.com)



Community



@ BLUETTI Official



@ bluetti\_inc



@bluetti.inc



@bluetti.inc

### BLUETTI Power Inc.

3037 E. Warm Springs Rd. Suite 200 - Office #9 Las Vegas, NV 89120

P/N: 17.0303.1120-00A0