



戴尔服务器配置BMC地址及用户名密码

1.开机F2进入BIOS，选择“iDRAC Settings”选项

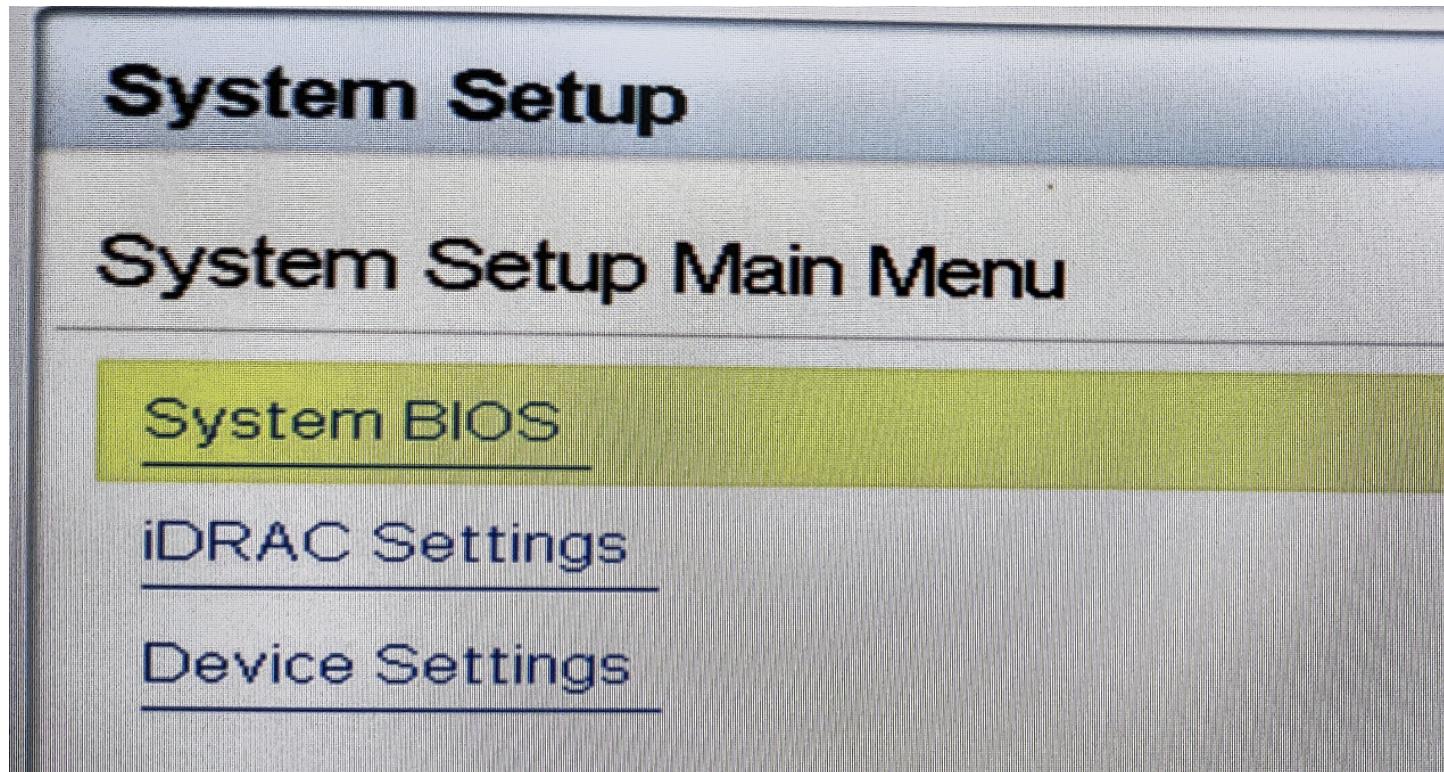

2.选择“Network”选项

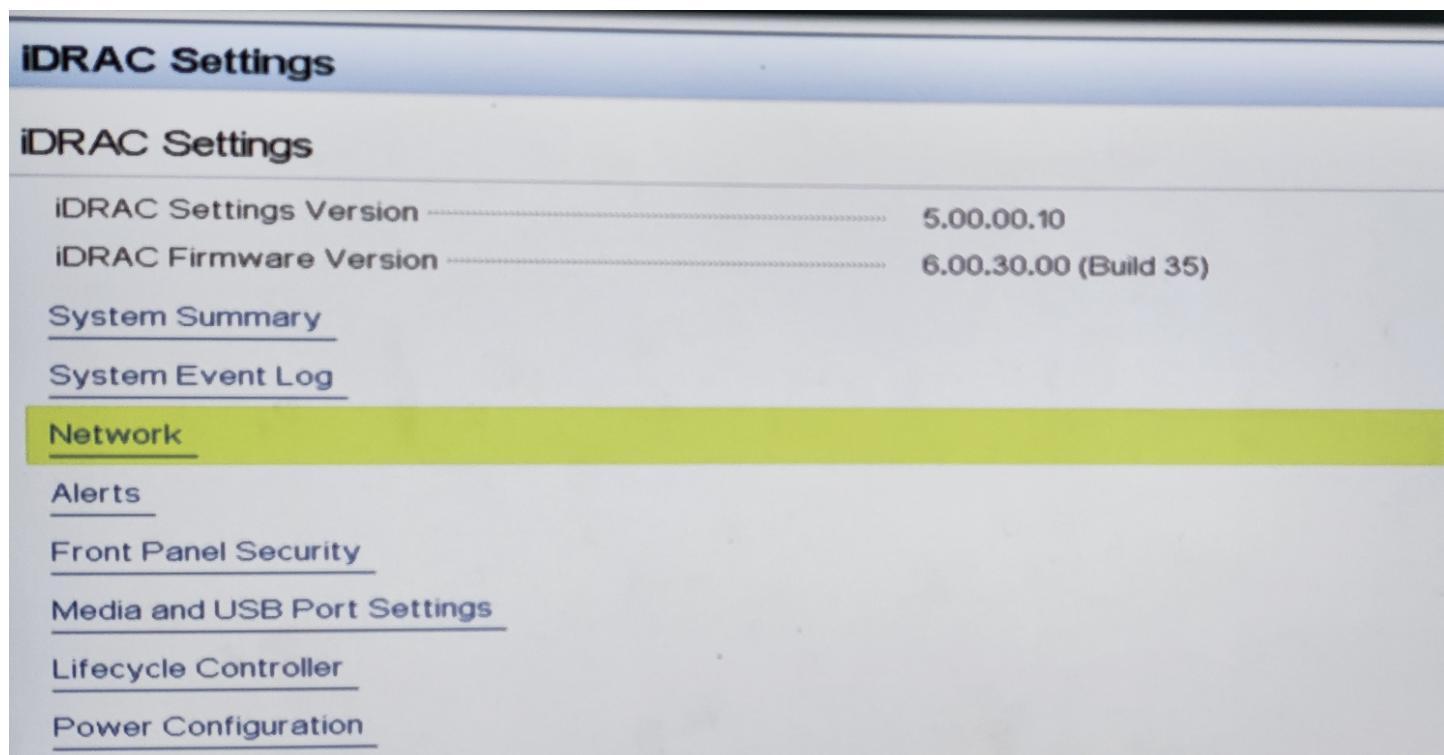

3.进入后下滑找到IPv4并关闭DHCP，配置BMC地址

DRAC Settings

DRAC Settings • Network

COMMON SETTINGS

Register DRAC on DNS	<input checked="" type="radio"/> Disabled	<input type="radio"/> Enabled
DNS DRAC Name	idrac-B1B1PT3	
Auto Config Domain Name	<input type="radio"/> Disabled	<input checked="" type="radio"/> Enabled
Static DNS Domain Name		

IPV4 SETTINGS

Enable IPv4	<input type="radio"/> Disabled	<input checked="" type="radio"/> Enabled
Enable DHCP	<input checked="" type="radio"/> Disabled	<input type="radio"/> Enabled
IP Address		
Gateway	0.0.0.0	
Subnet Mask	0.0.0.0	
Use DHCP to obtain DNS server addresses	<input type="radio"/> Disabled	<input checked="" type="radio"/> Enabled

4.配置用户名密码：“iDRAC Settings”选项下找到

iDRAC Settings

iDRAC Settings

- Alerts
- Front Panel Security
- Media and USB Port Settings
- Lifecycle Controller
- Power Configuration
- Thermal
- System Location
- User Configuration
- Smart Card
- Communications Permissions

5.进入“User Configuration”进行配置

iDRAC Settings

iDRAC Settings • User Configuration

User ID	2
Enable User	<input type="radio"/> Disabled <input checked="" type="radio"/> Enabled
User Name	root
LAN User Privilege	Administrator
Serial Port User Privilege	Administrator
Change Password	Press <Enter> to input

WARNING: The default user name and or password has been detected and pose a security risk.
To reduce a security risk, create a unique user name and password.