

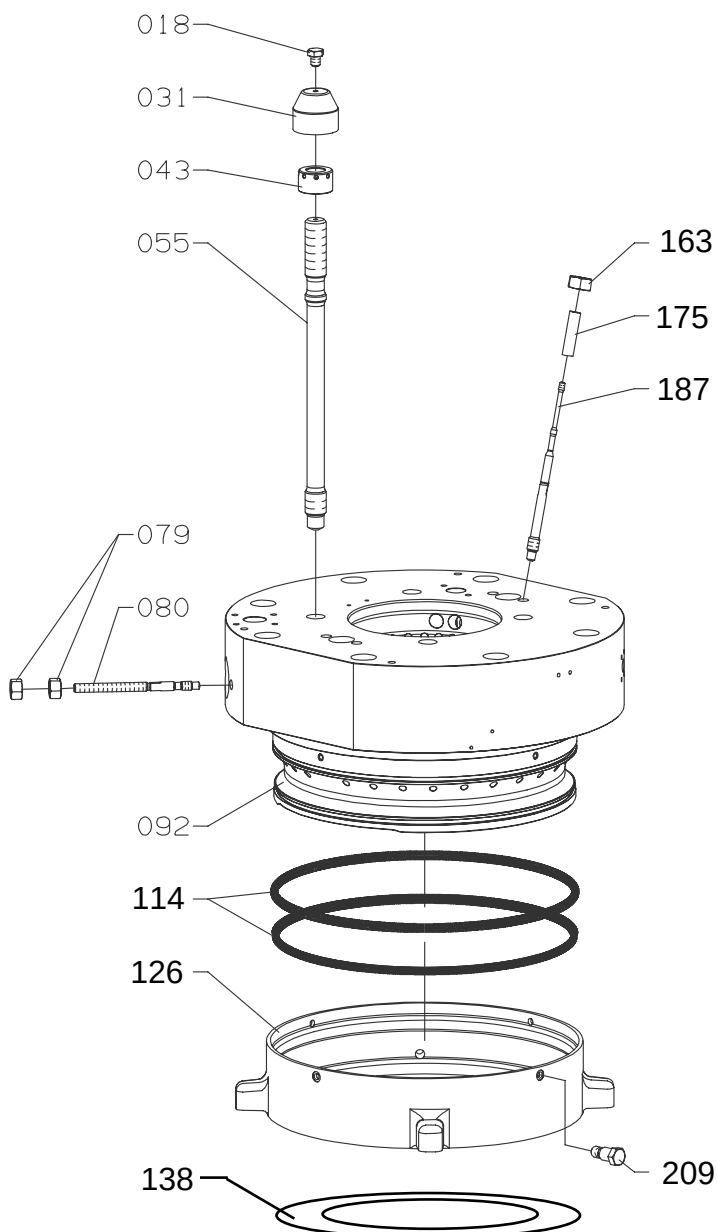
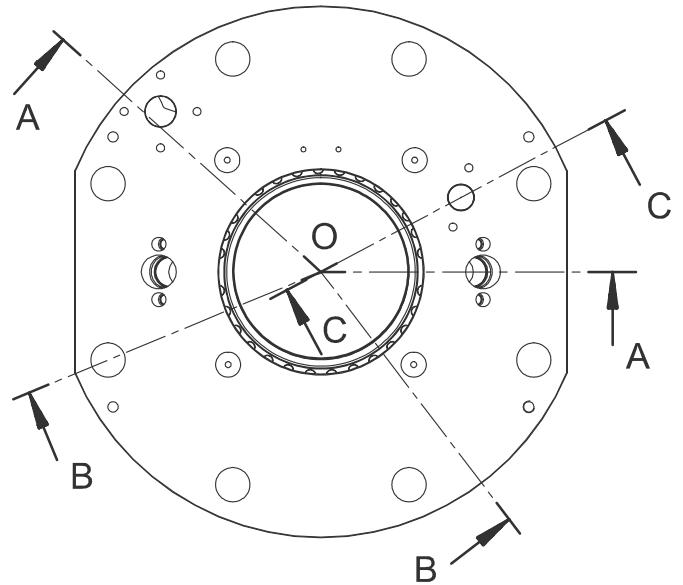



C - C

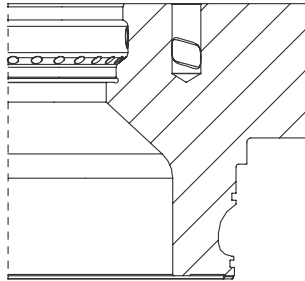

A - O - A


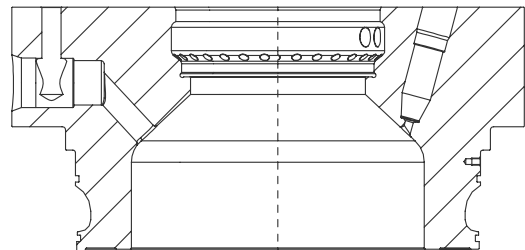


B - O - B

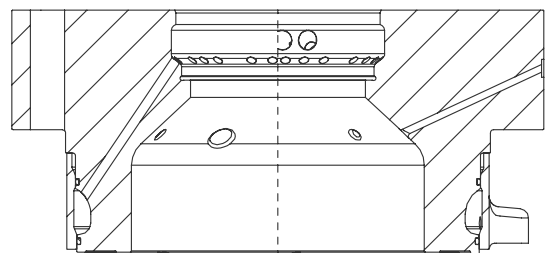

Item No.	Item Description
018	Screw
031	Protective cap
043	Nut
055	Stud for exhaust valve
079	Nut
080	Stud for starting valve
092	Cylinder cover
114	O-ring
126	Cooling jacket
163	Nut
175	Distance pipe
187	Stud for fuel valve
209	Screw
138	Gasket

Item No.	Item Description

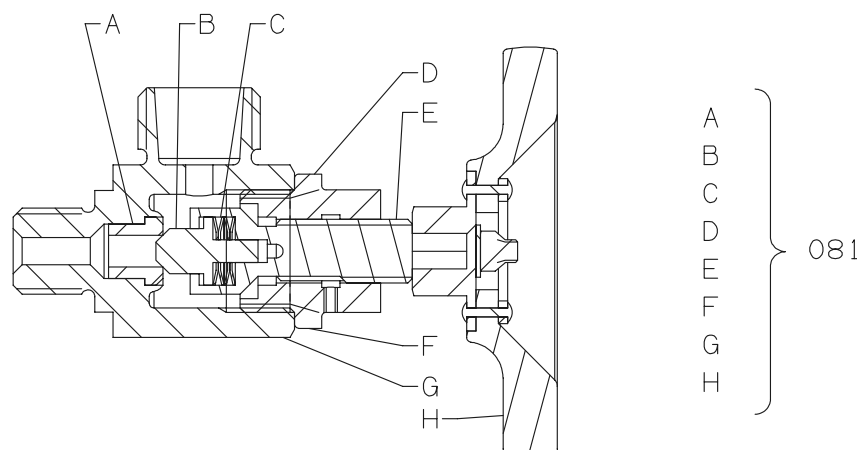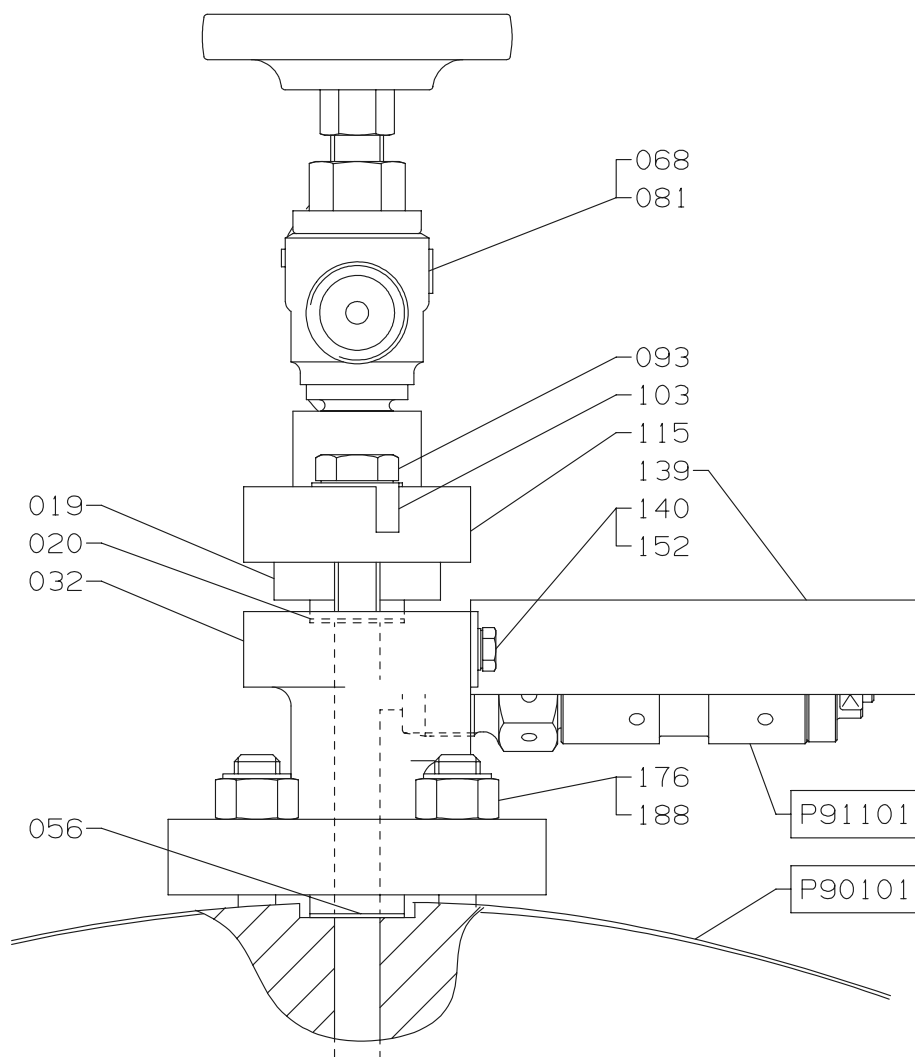

Item No.	Item Description	Item No.	Item Description
019	Connecting piece		
020	Gasket		
032	Extension		
056	Gasket		
068	Gasket		
081	Indicator cock		
093	Screw		
103	Locking plate		
115	Flange		
140	Screw		
152	Lock washer		
176	Stud		
188	Nut, self-locking		