


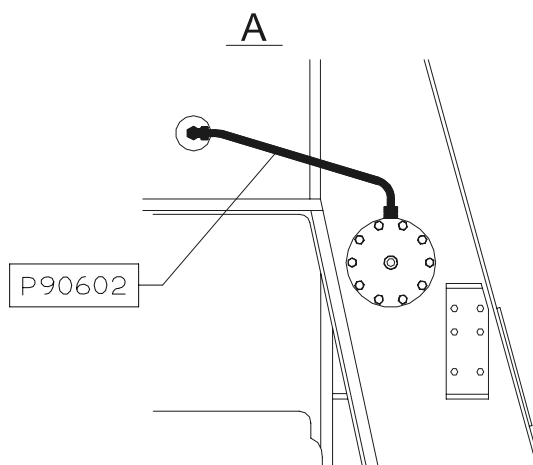


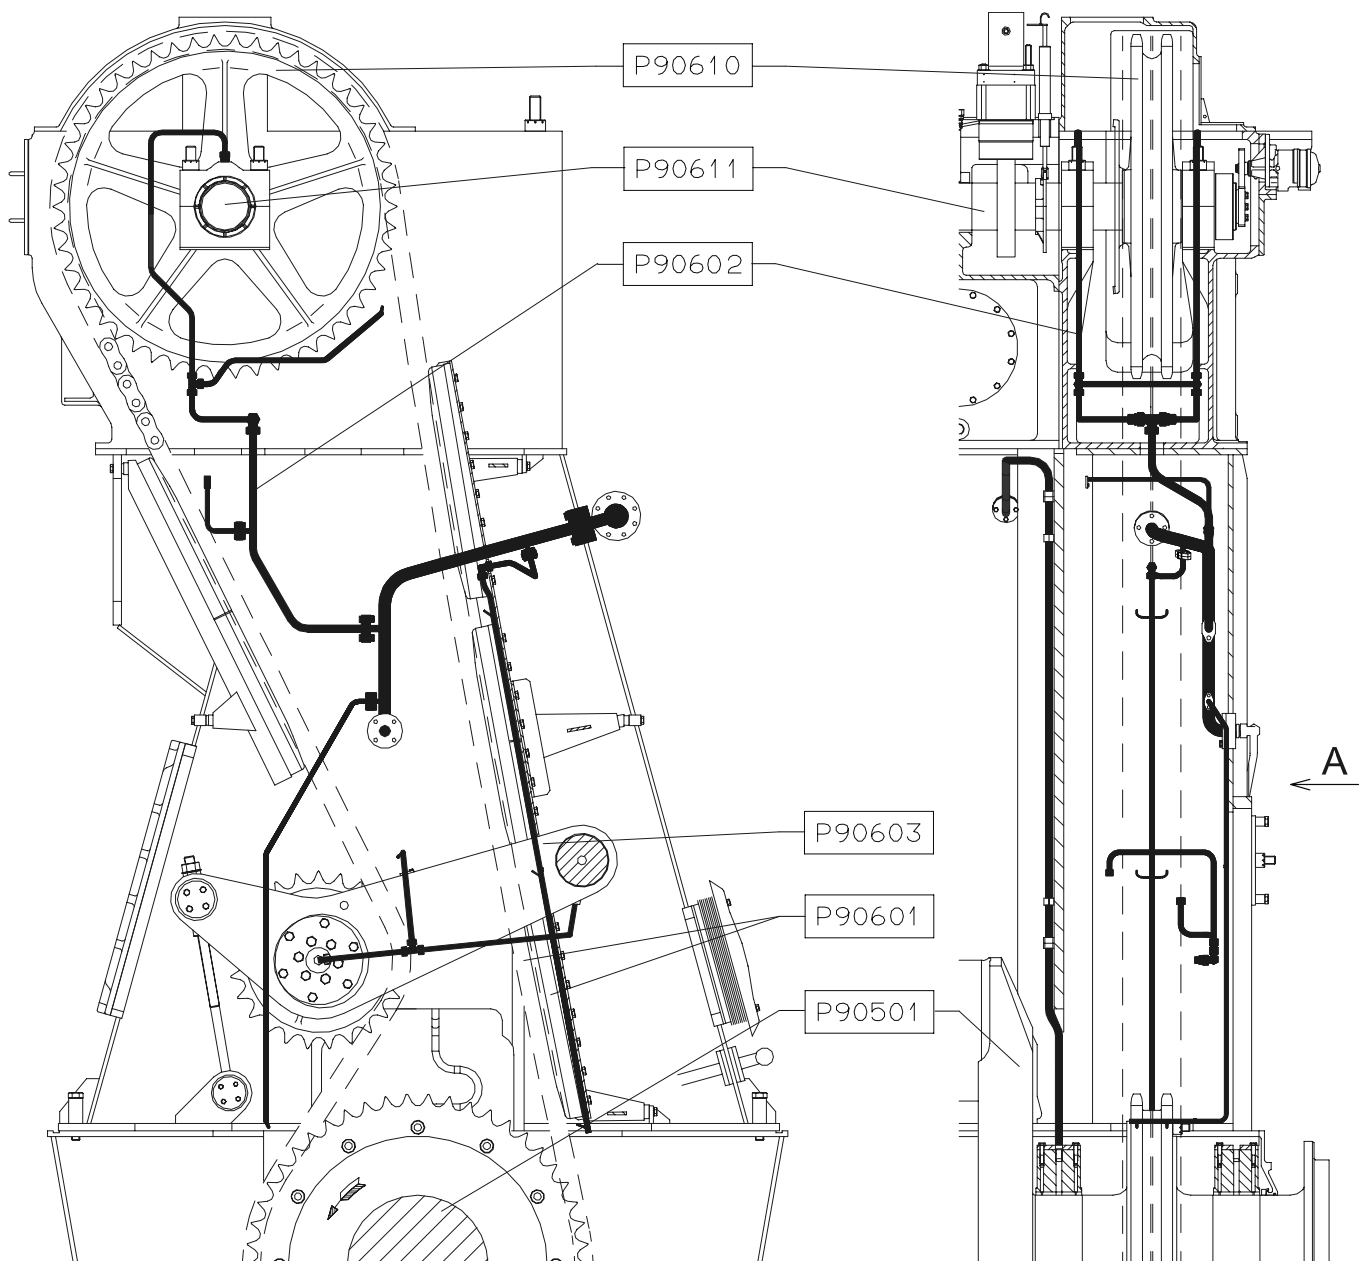

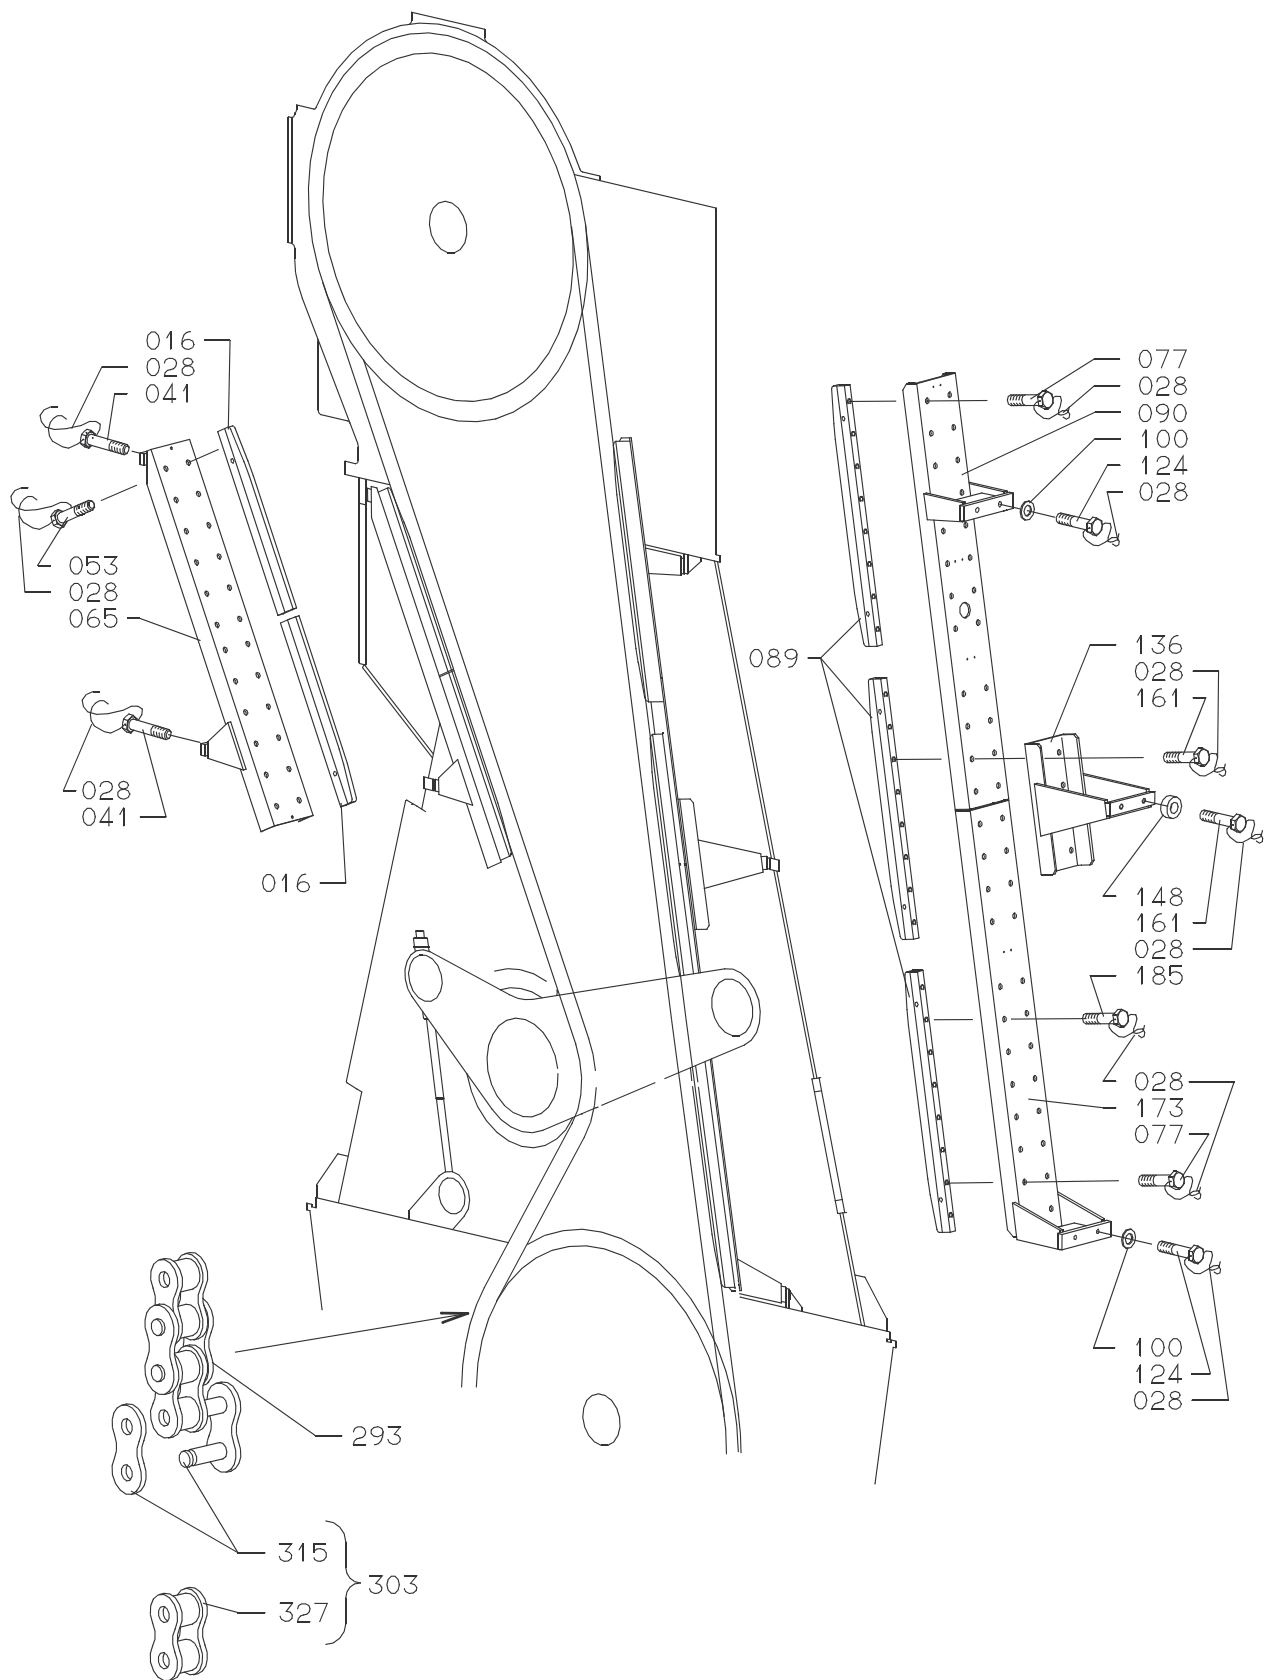



Item No.	Item Description
016	Guidebar
028	Locking wire, L=5000
041	Screw
053	Screw
065	Bracket for guidebar
077	Screw
089	Guidebar
090	Beam for guidebar
100	Washer
124	Screw
136	Bracket
148	Disc
161	Screw
173	Beam for guidebar
185	Screw
293	3½" Chain, complete
303	Chain link, complete
315	Outer link
327	Inner link

Item No.	Item Description



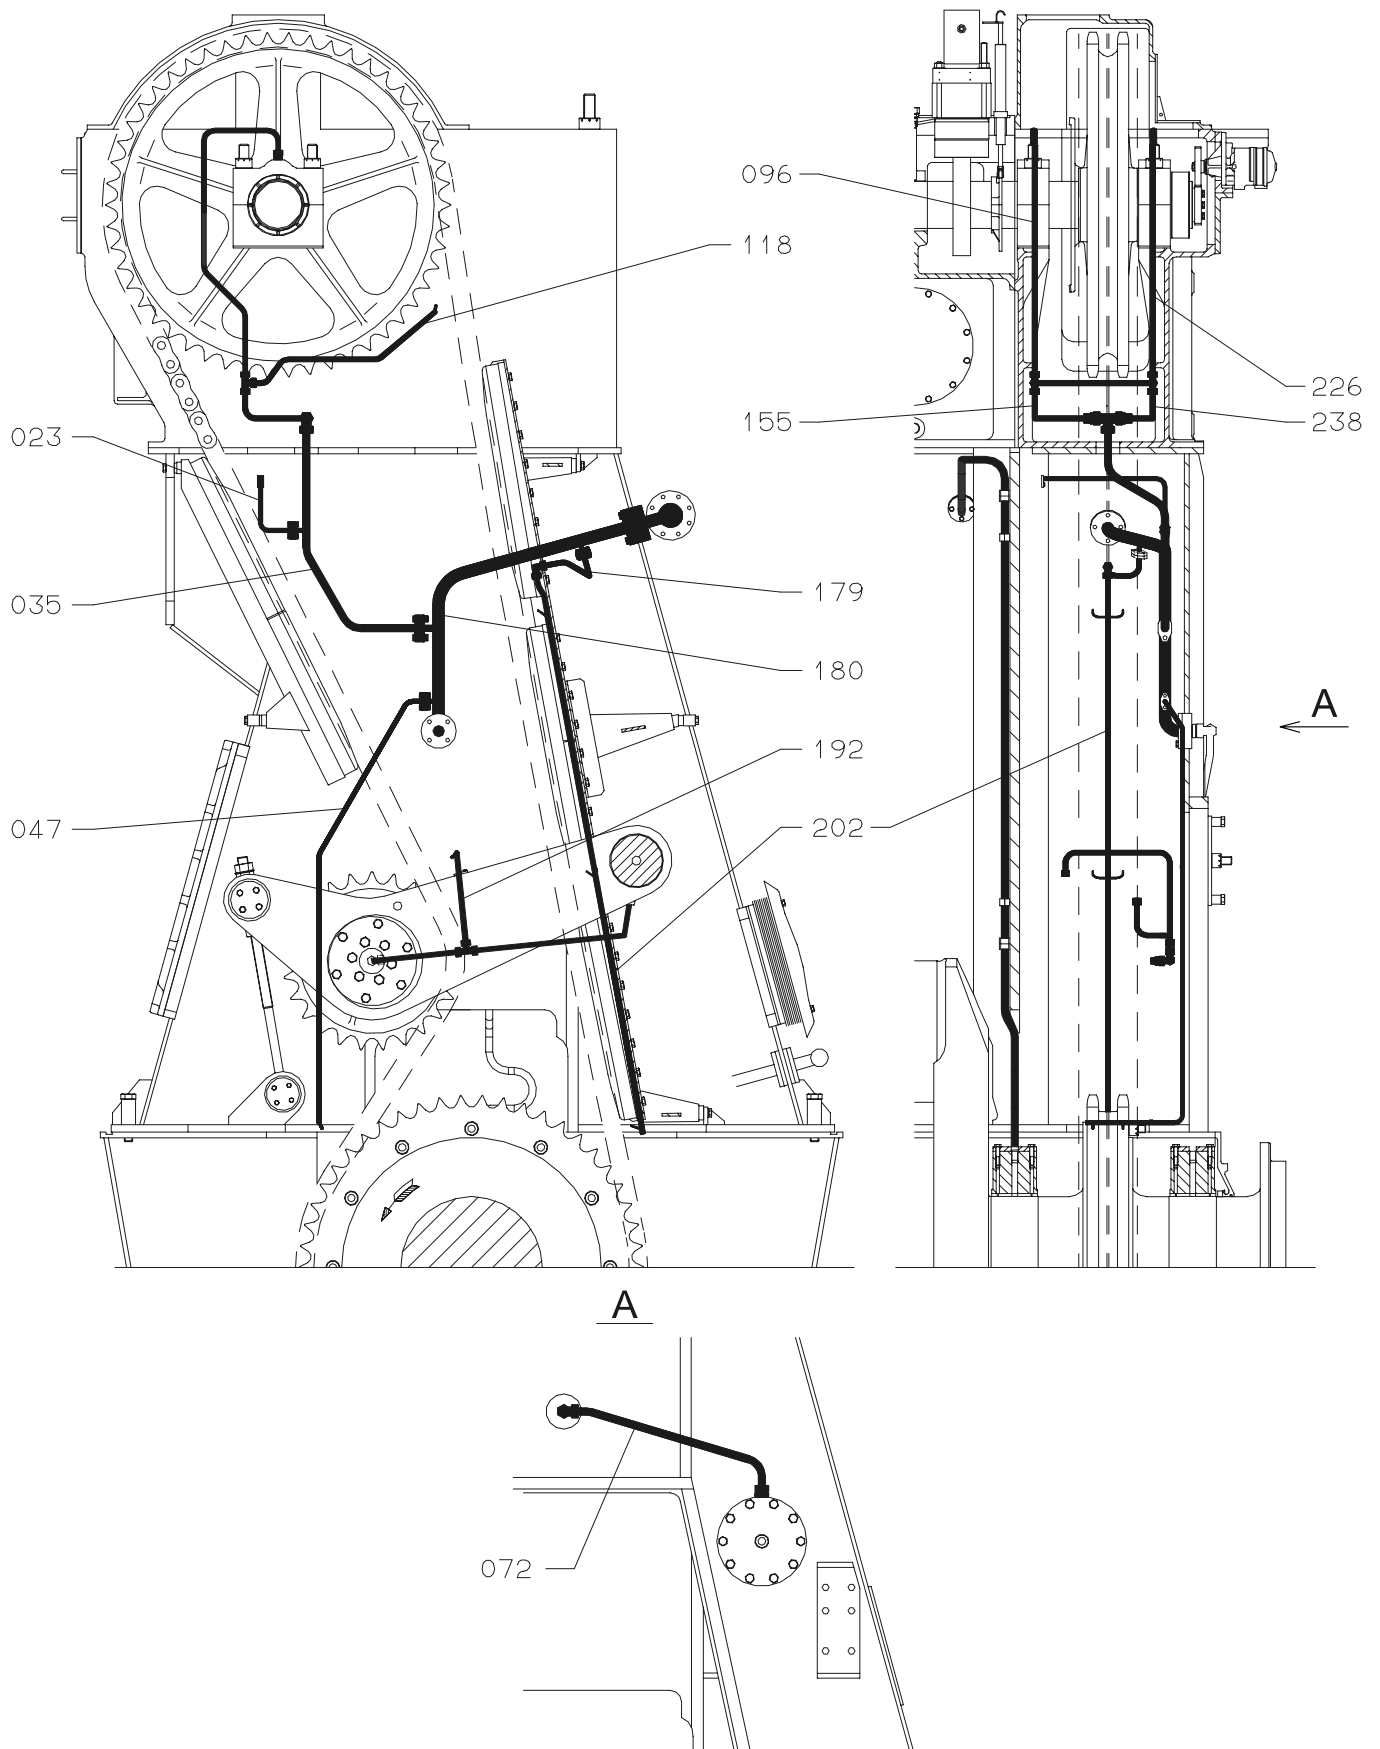




Item No.	Item Description	Item No.	Item Description
023	Lubricating pipe		
035	Lubricating pipe		
047	Lubricating pipe		
072	Steel pipe		
096	Lubricating pipe		
118	Spray pipe		
155	Lubricating pipe		
179	Lubricating pipe		
180	Lubricating pipe		
192	Lubricating pipe		
202	Spray pipe		
226	Lubricating pipe		
238	Lubricating pipe		

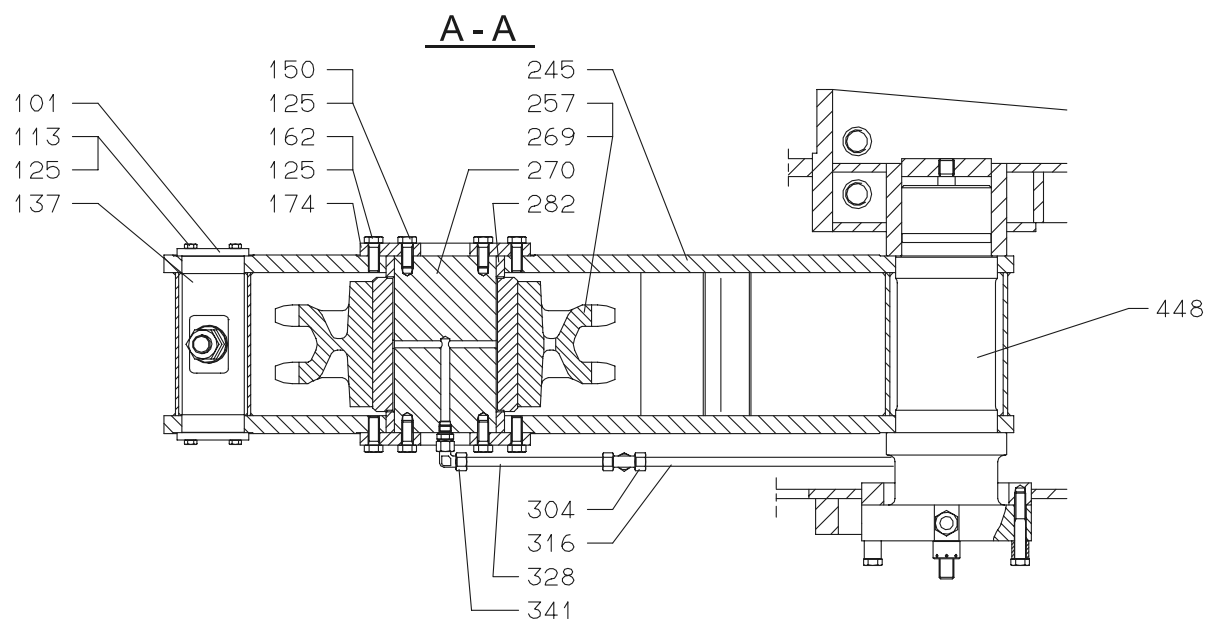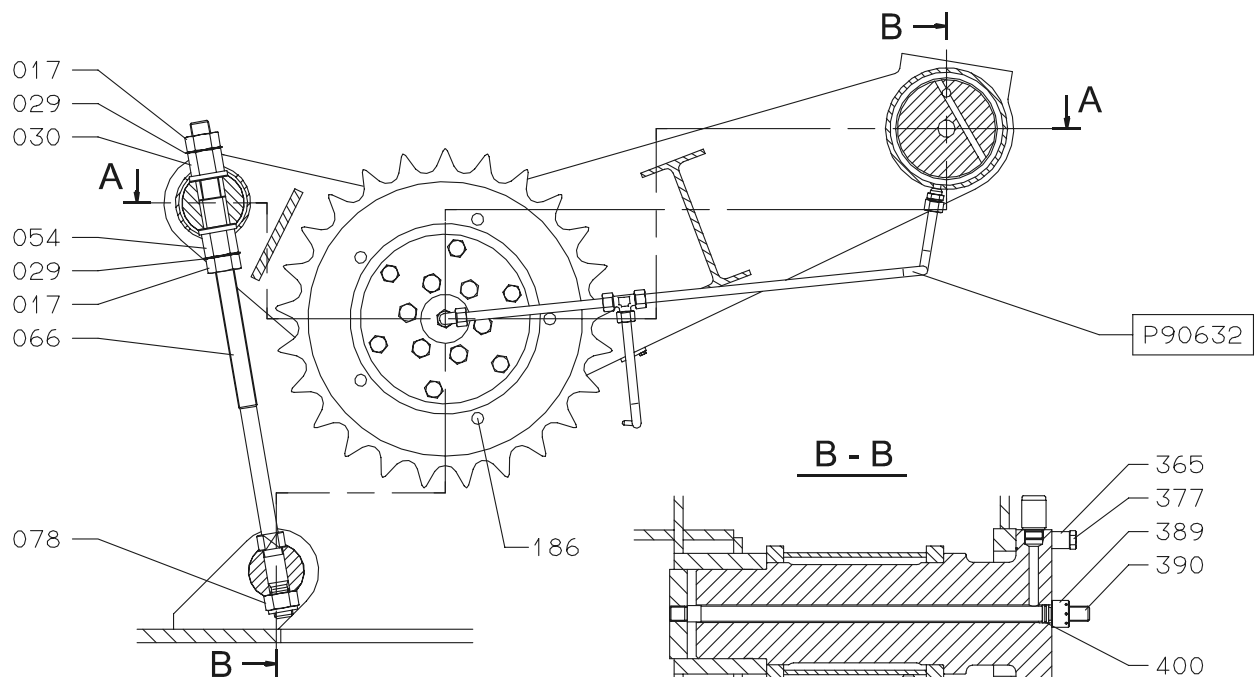

Item No.	Item Description	Item No.	Item Description
017	Nut		
029	Locking plate		
030	Guide nut		
054	Guide nut		
066	Tightening bolt		
078	Nut, self-locking		
101	Cover		
113	Screw		
125	Locking wire		
137	Shaft		
150	Screw		
162	Screw		
174	Flange		
186	Stop screw		
198	Shaft		
208	Cover		
221	Screw		
245	Bracket		
257	Chain wheel		
269	Bushing		
270	Shaft		
282	Distance piece		
304	Coupling		
316	Lubrication oil pipe		
328	Lubrication oil pipe		
341	Coupling		
365	Distance pipe		
377	Screw		
389	Nut		
390	Stud		
400	O-ring		
412	Guide pin		
424	O-ring		
448	Shaft		

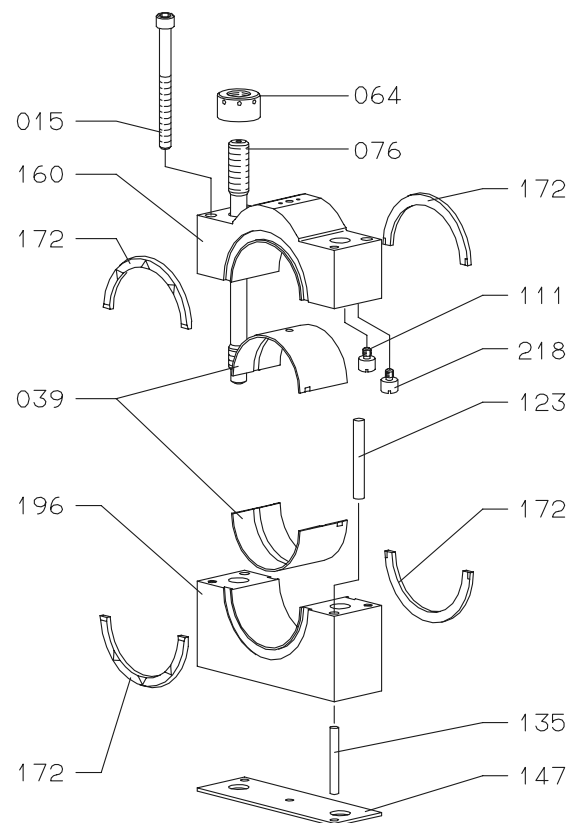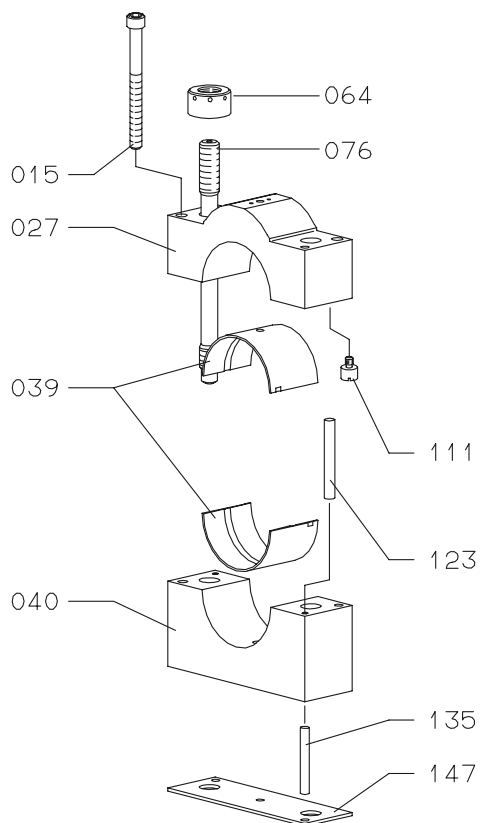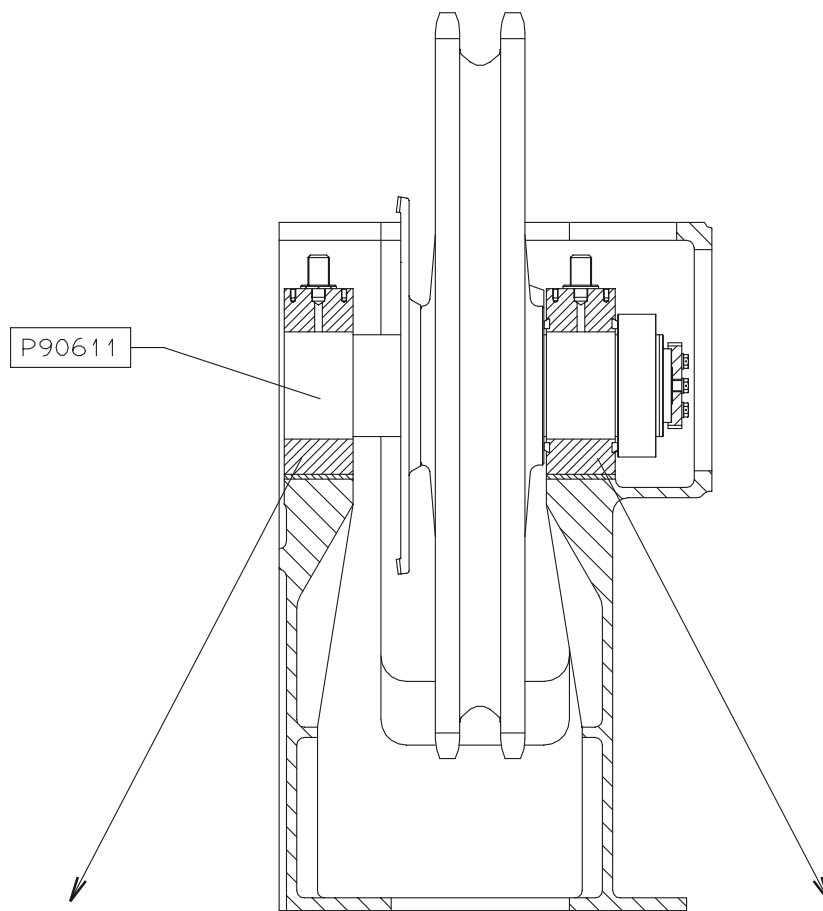




Item No.	Item Description	Item No.	Item Description
015	Screw		
027	Bearing cap		
039	Bearing shell in 2/2		
040	Bearing housing		
064	Nut		
076	Stud		
111	Guide screw		
123	Guide pin		
135	Guide pin		
147	Shim		
160	Bearing cap		
172	Thrust ring		
196	Bearing housing		
218	Screw		




Item No.	Item Description	Item No.	Item Description
010	Camshaft		
034	Exhaust cam		
046	Fuel cam		
058	Indicator cam, complete		
083	Plug		
105	Indicator cam, upper part		
117	Screw		
130	Nut, self-locking		
142	Indicator cam, lower part		
154	Screw*		
166	Repair cam, fuel*		
191	Screw*		
201	Repair cam, exhaust*		
213	Chain wheel		
225	Thrust disc		
237	Gear wheel		
249	Screw		
250	Locking wire		
	Note:		
	* Optional extra		


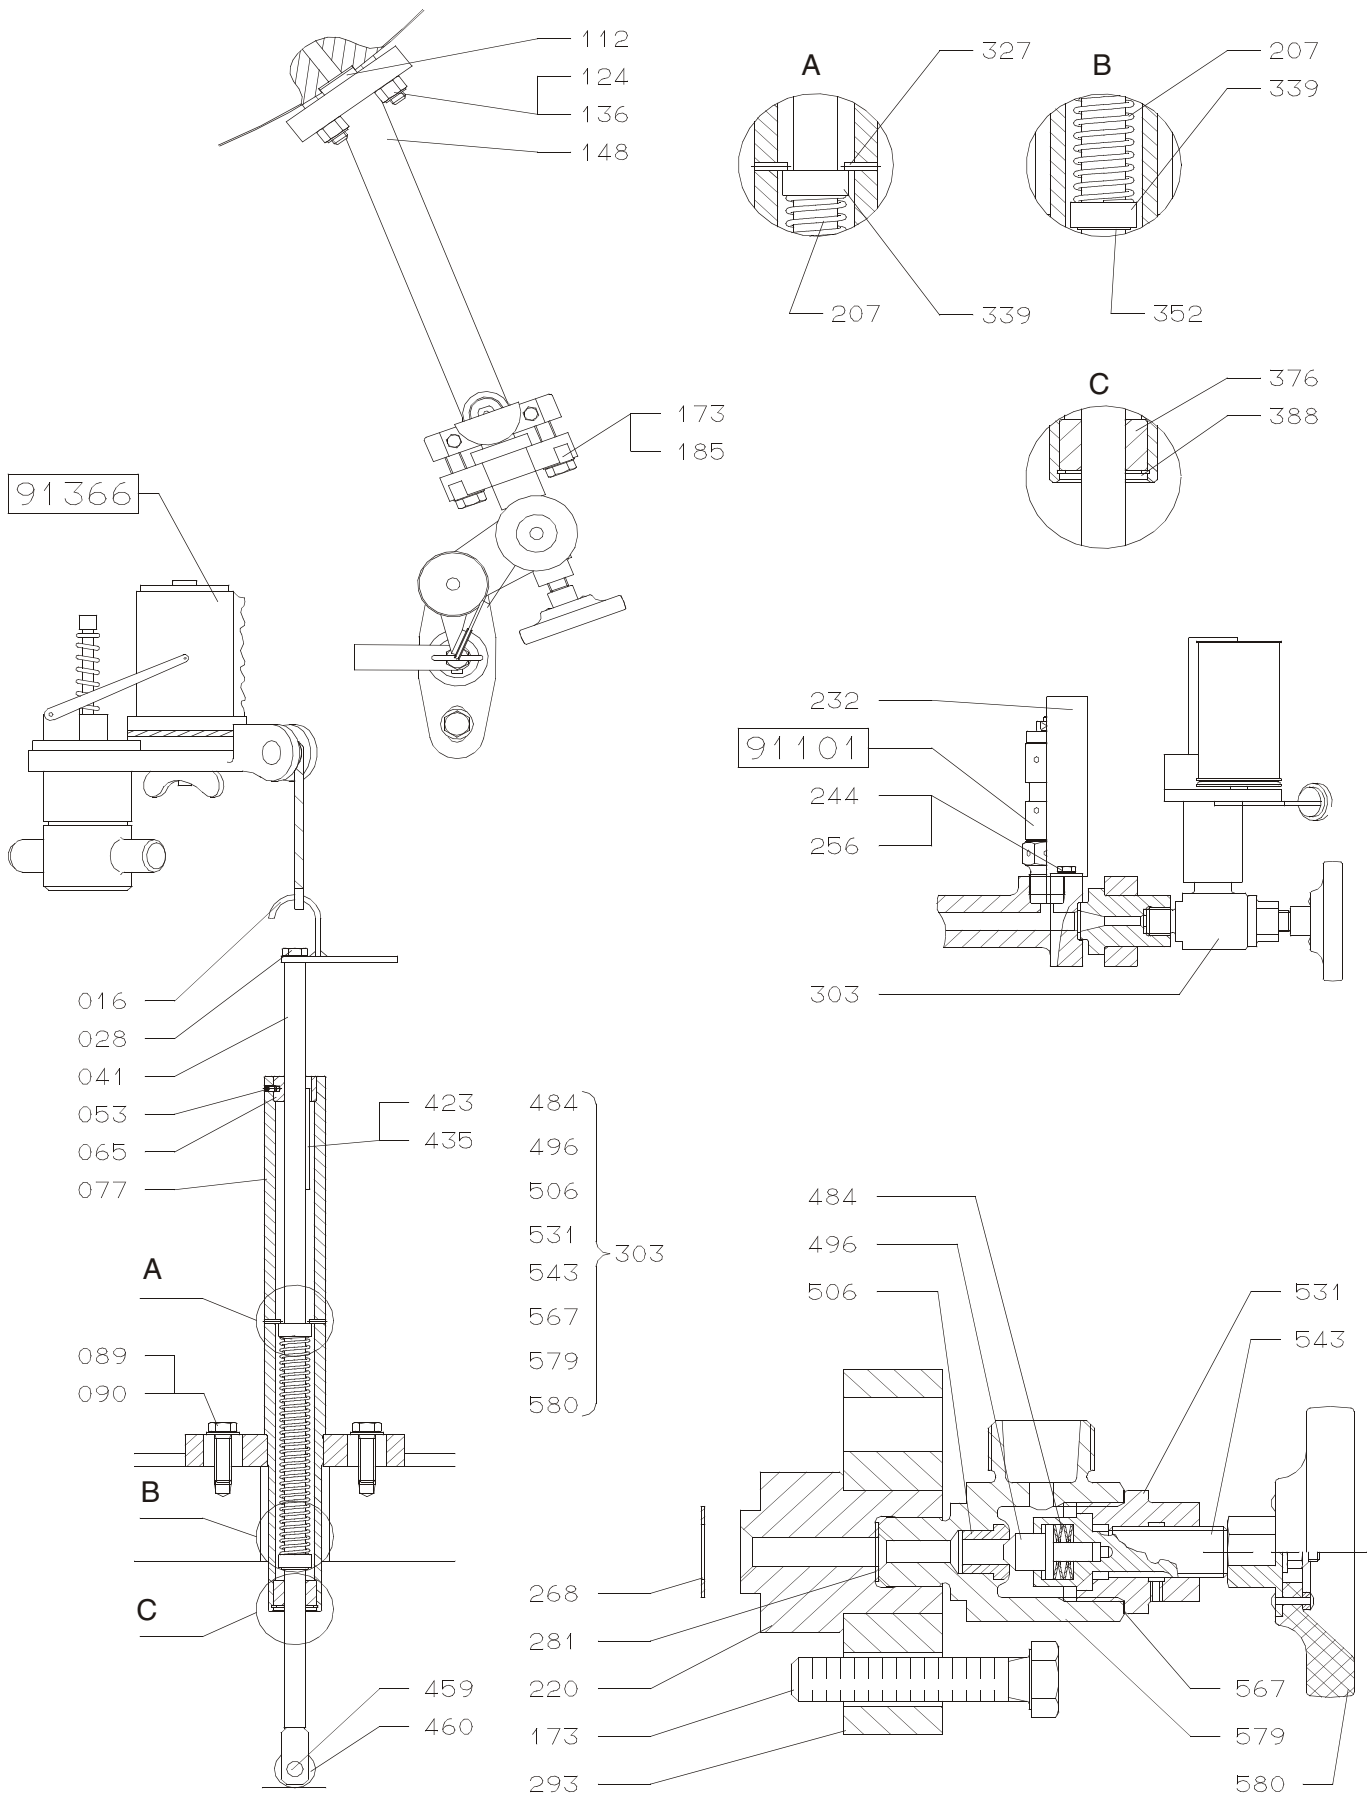


Item No.	Item Description
016	Handle
028	Screw
041	Roller guide
053	Screw
065	Liner
077	Housing
089	Screw
090	Washer
112	Packing
124	Stud
136	Self-locking nut
148	Extension
173	Screw
185	Lock washer
207	Spring
220	Connecting piece
232	Guard
244	Screw
256	Lock washer
268	Packing
281	Packing
293	Flange
303	Indicator valve
327	Spring pin
339	Liner
352	Circlip
376	Liner
388	Circlip
423	Key
435	Screw
459	Shaft
460	Bearing
484	Disc spring
496	Valve cone
506	Valve seat
531	Spindle guide
543	Spindle
567	Gasket
579	Valve housing
580	Handwheel

Item No.	Item Description

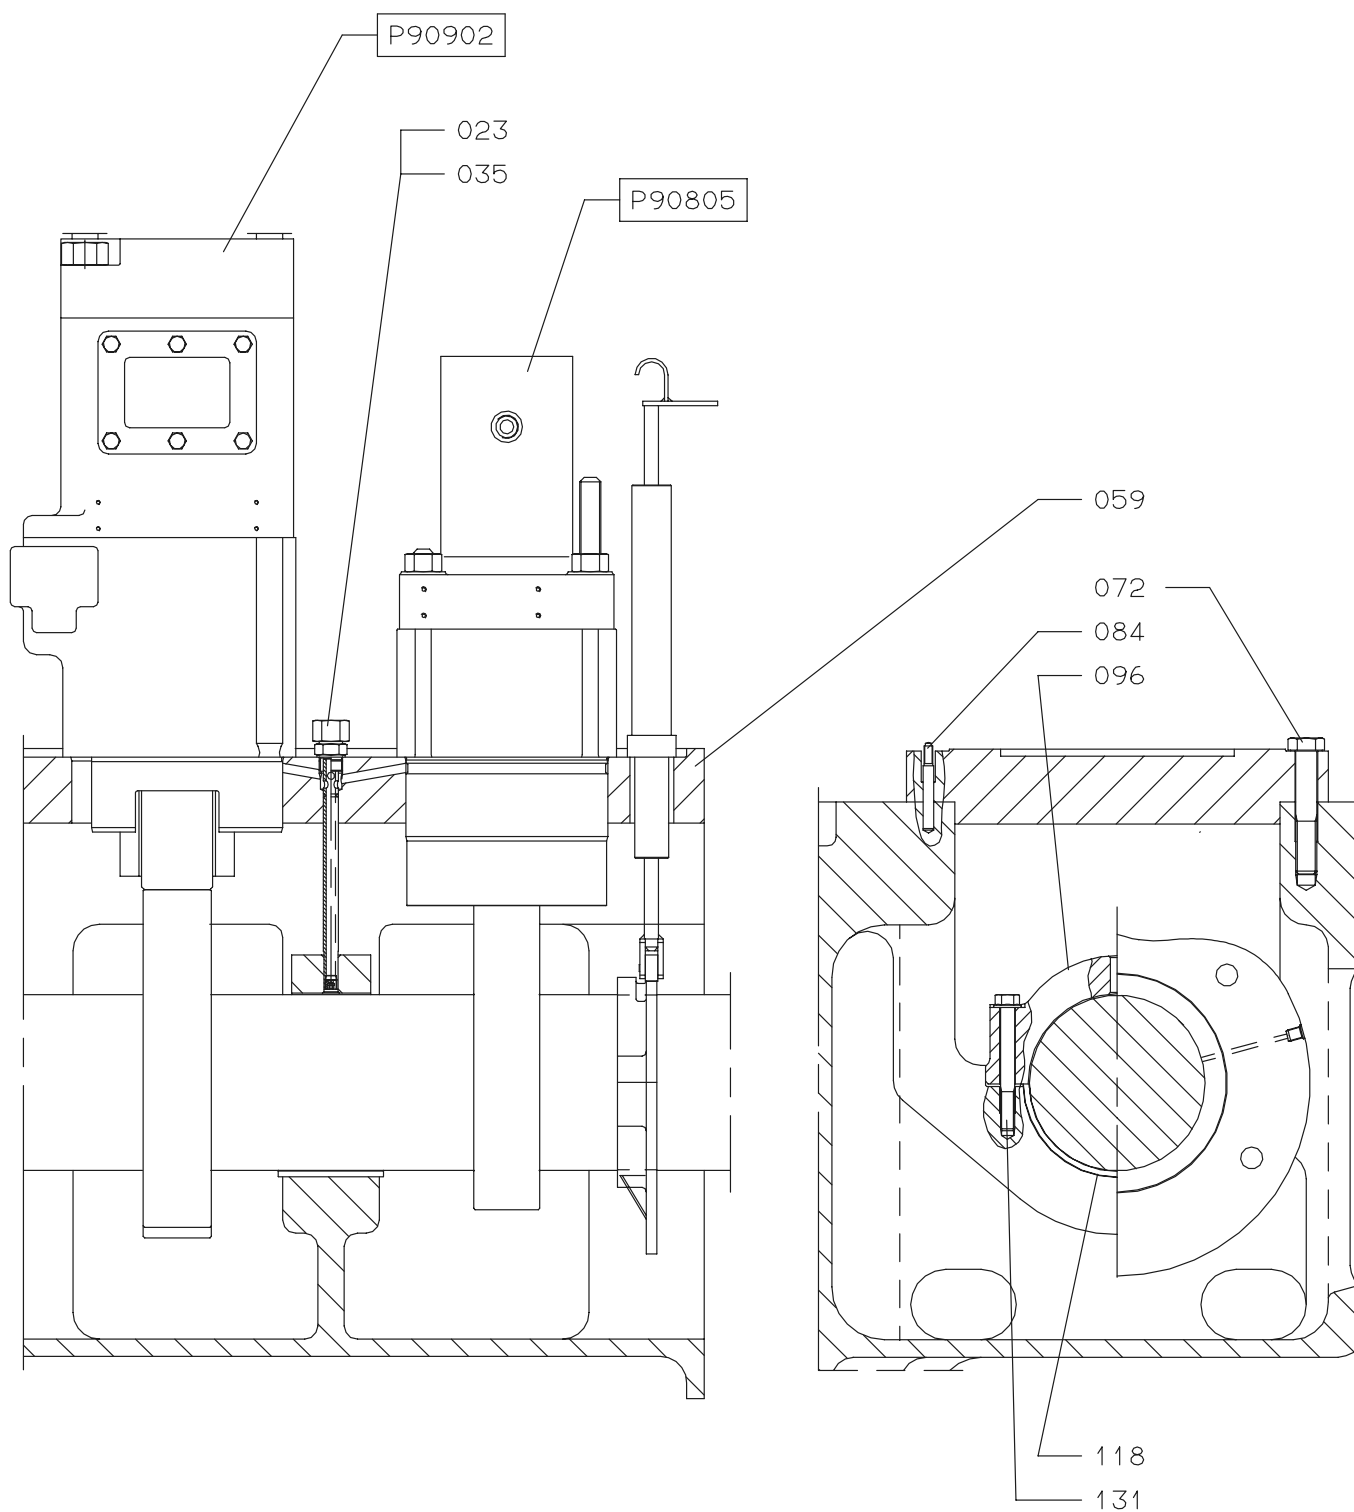


Item No.	Item Description

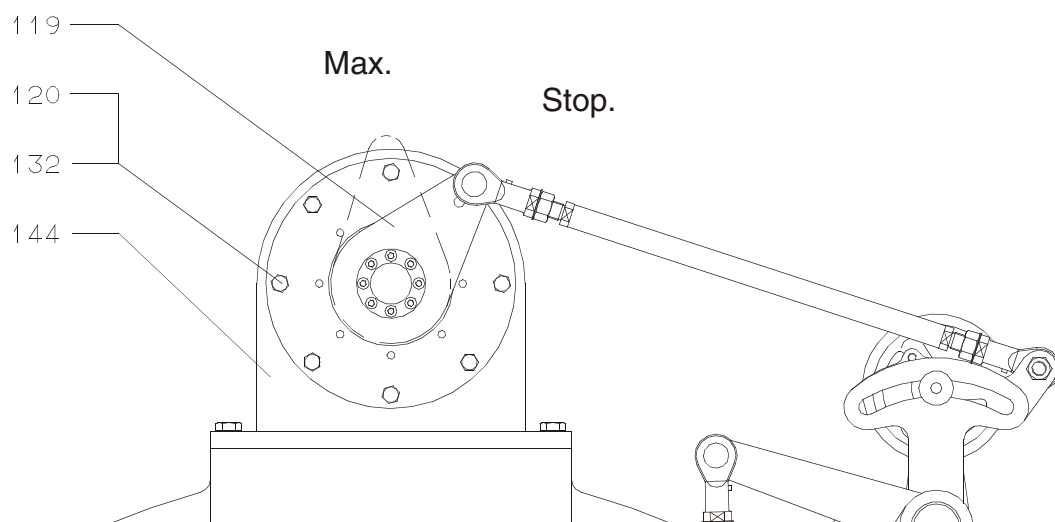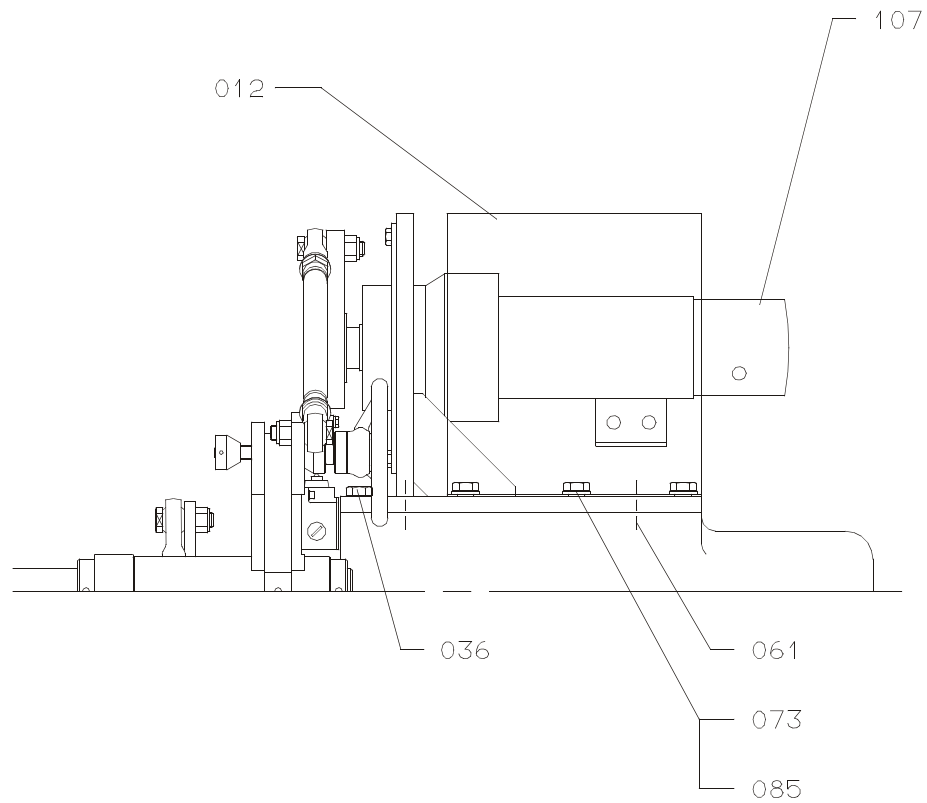


Item No.	Item Description
012	Guard
036	Screw
061	Guide pin
073	Screw
085	Washer
107	Electrical governor actuator
119	Lever
120	Screw
132	Spring lock
144	Bracket


Item No.	Item Description

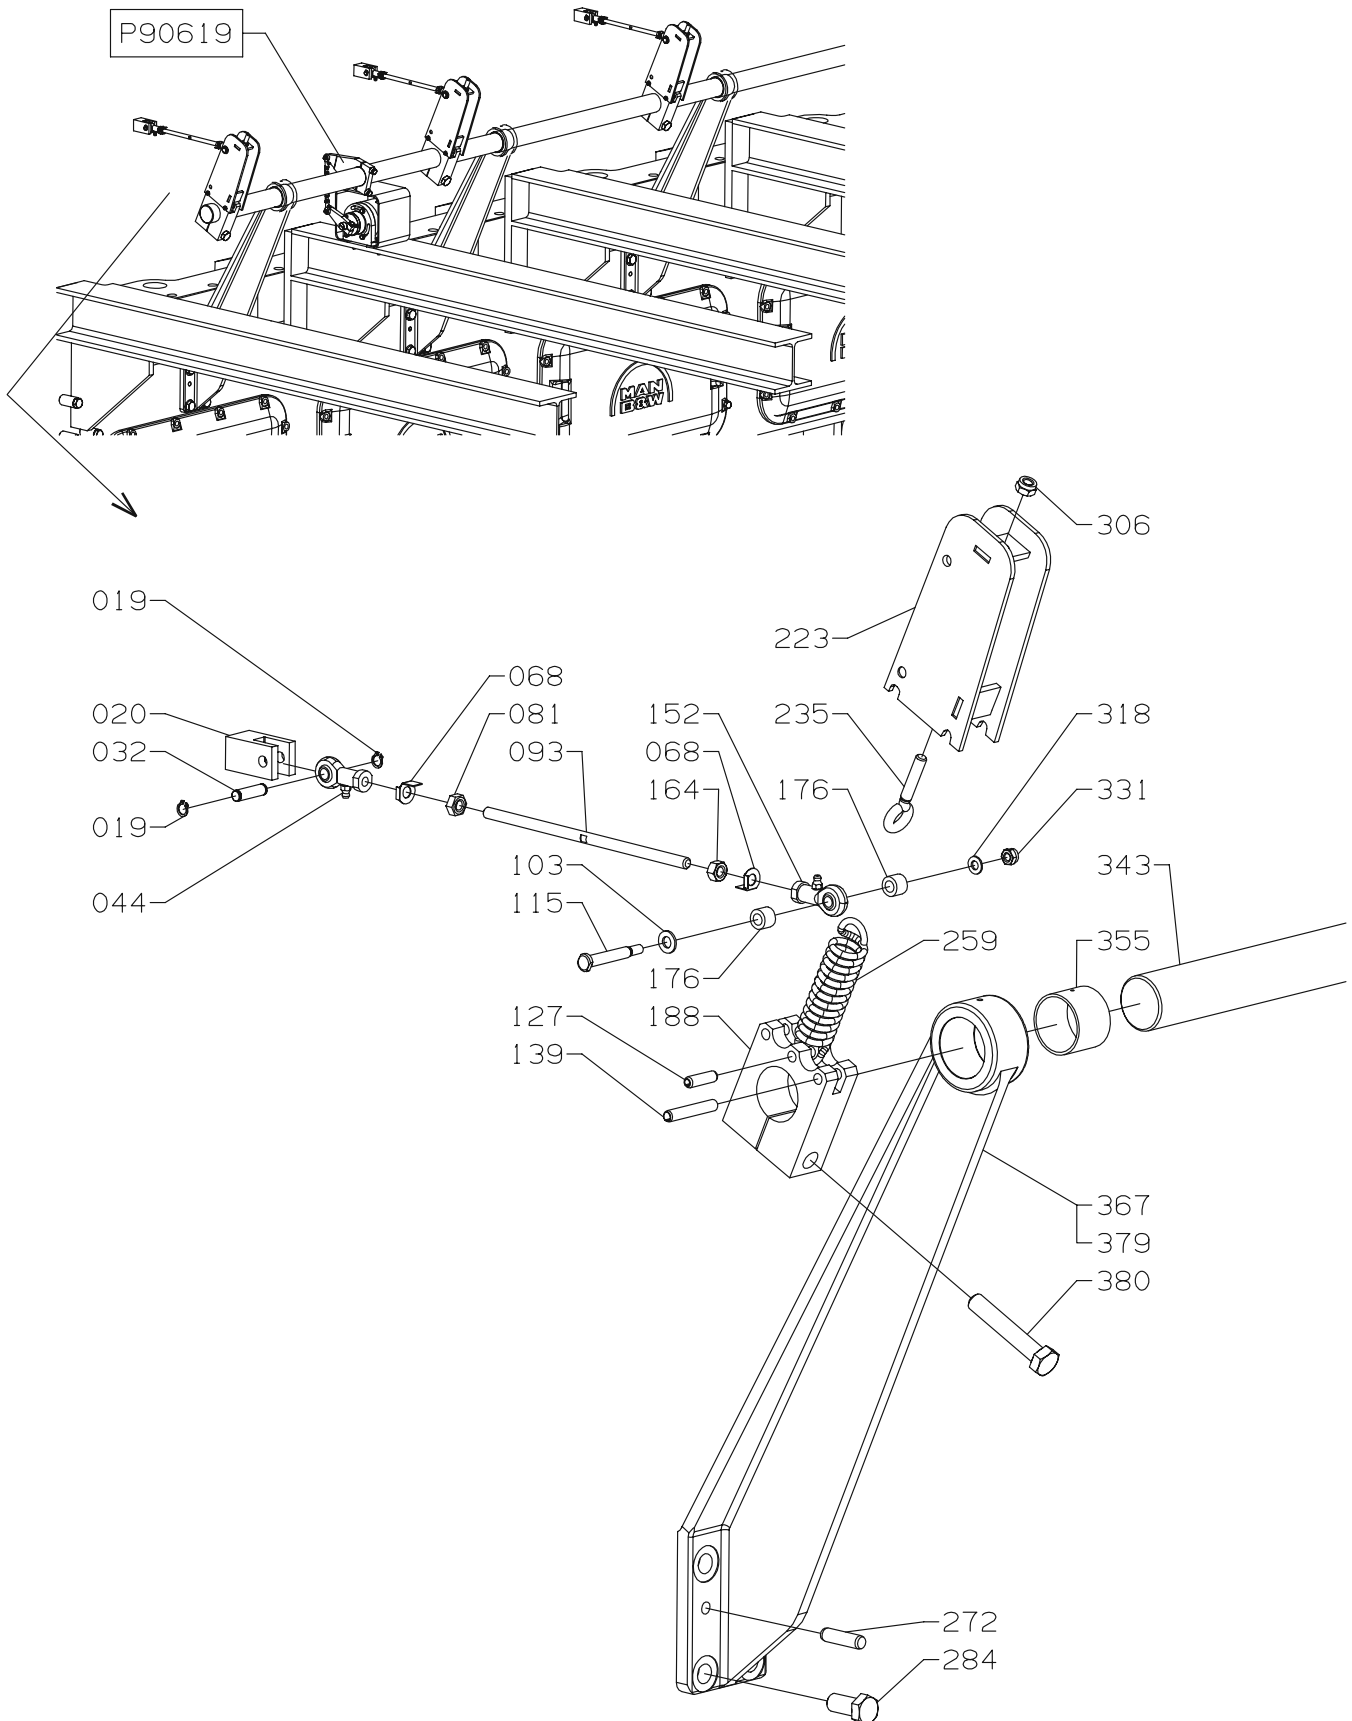


Item No.	Item Description	Item No.	Item Description
019	Retaining ring for shaft		
020	Forked lever		
032	Dowel pin		
044	Ball joint		
068	Locking plate		
081	Counter nut for pull rod		
093	Pull rod		
103	Washer		
115	Fitted bolt		
127	Spring pin		
139	Spring pin		
152	Ball joint		
164	Nut		
176	Spacer, tubular		
188	Clamping arm		
223	Lever		
235	Eye bolt		
259	Spring		
272	Guide pin		
284	Screw		
306	Nut, self-locking		
318	Washer		
331	Nut, self-locking		
343	Regulating shaft		
355	Bushing		
367	Bearing pedestal		
379	Bearing pedestal, last cylinder		
380	Screw		
	Note:		
	*		

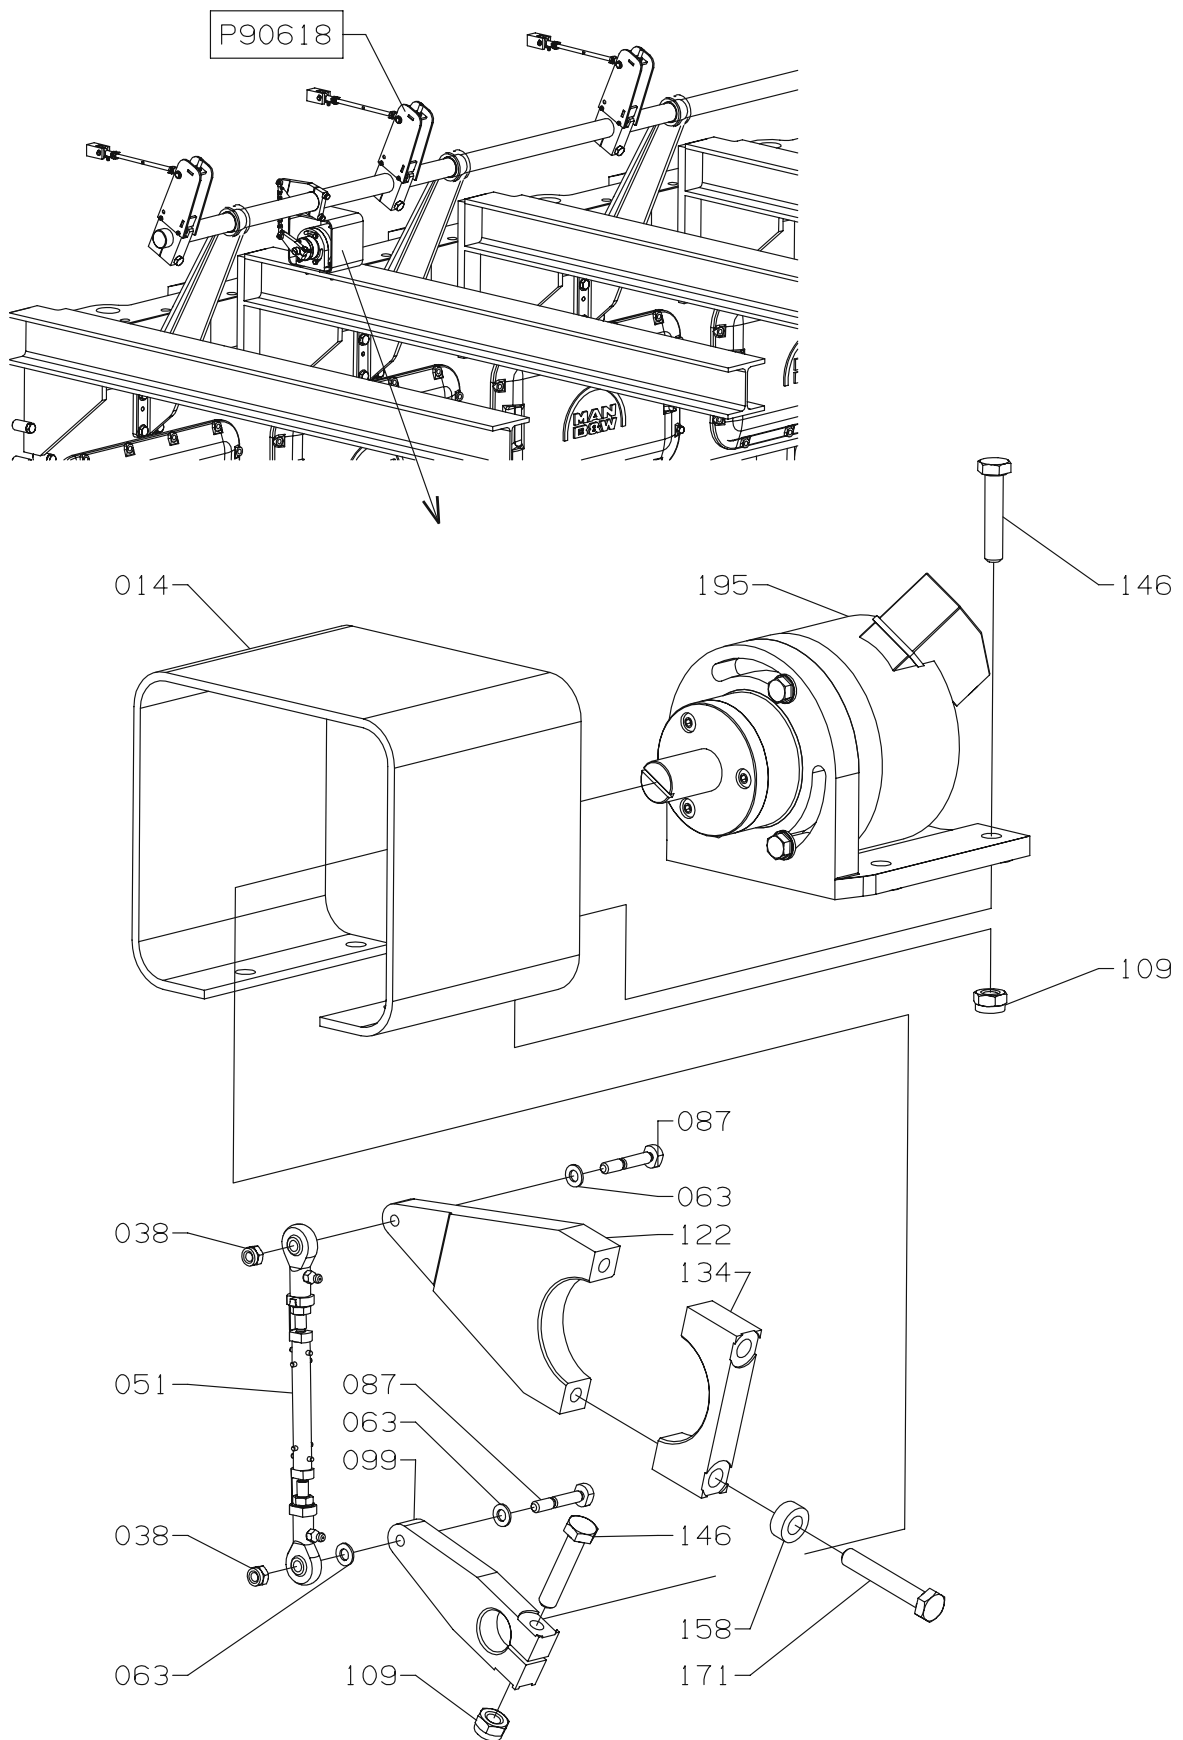

Item No.	Item Description	Item No.	Item Description
014	Cover		
038	Nut, self-locking		
051	Pull rod, complete		
063	Washer		
087	Fitted bolt		
099	Clamping arm		
109	Nut, self-locking		
122	Clamping arm		
134	Plate		
146	Screw		
158	Disc		
171	Screw		
195	Potentiometer		
	Note:		
	*		


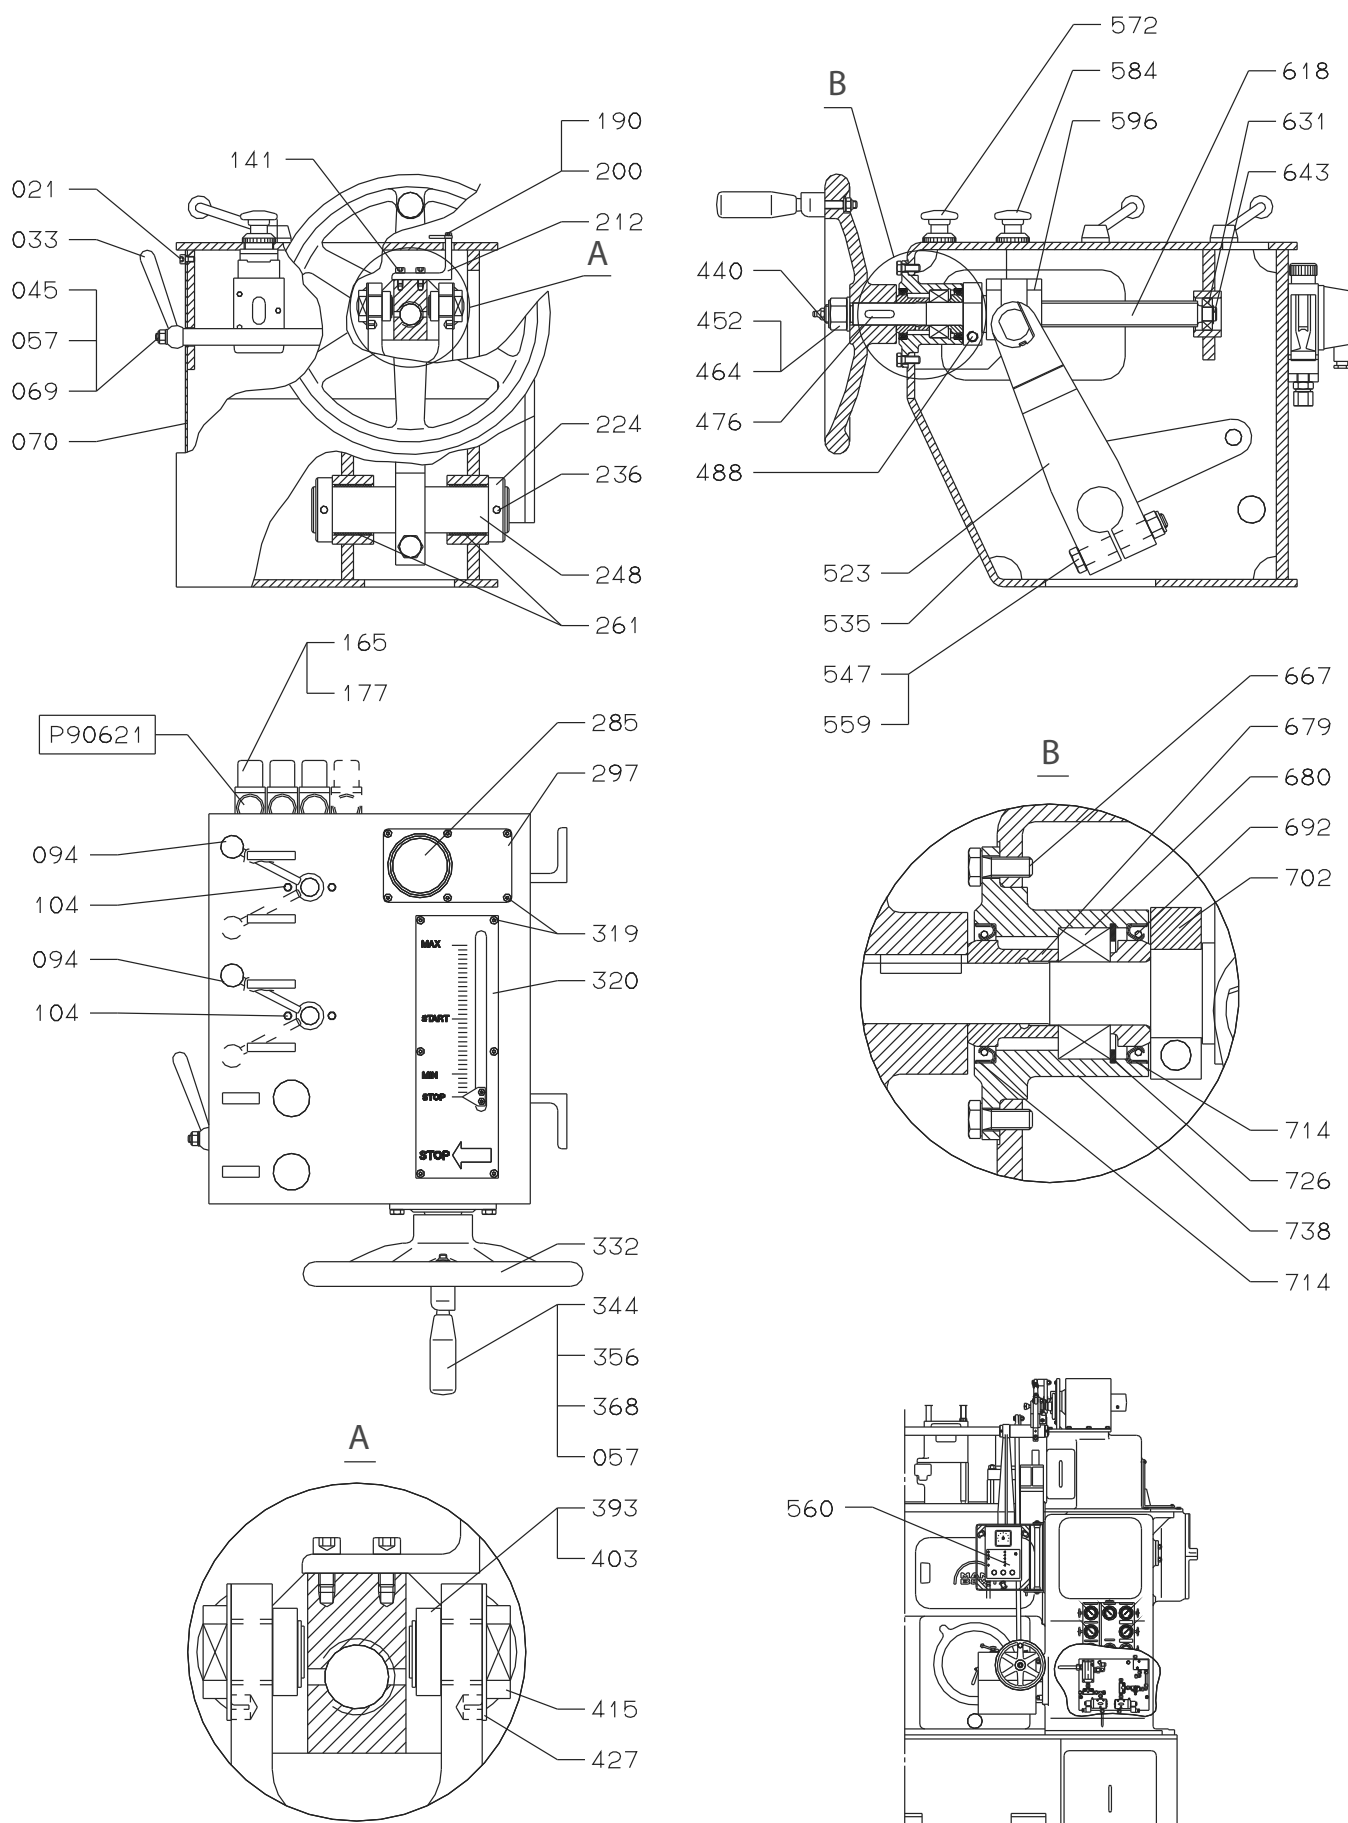


Item No.	Item Description	Item No.	Item Description
021	Screw	702	Clamping block
033	Handle	714	Sealing ring
045	Shaft	726	Retaining ring
057	Nut, self-locking	738	Bearing
069	Washer		
070	Plate		
094	Valve, 5/2-way		
104	Screw		
141	Screw		
165	Screw		
177	Pressure switch		
190	Pointer		
200	Screw		
212	Angle lever		
224	Stop ring		
236	Pin		
248	Shaft		
261	Bushing		
285	Bellows gland		
297	Cover		
319	Screw		
320	Index plate		
332	Hand wheel		
344	Handle		
356	Stud		
368	Lock washer		
393	Slide shoe		
403	Retaining ring		
415	Screw		
427	Lock washer		
440	Grease nipple		
452	Nut, self-locking		
464	Washer		
476	Key		
488	Split pin		
523	Angle lever		
535	Console		
547	Screw		
559	Nut, self-locking		
560	Local control box		
572	Valve, 3/2-way		
584	Valve, 3/2-way		
596	Nut		
618	Spindle		
631	Ball bearing		
643	Retaining ring		
667	Screw		
679	Thrust ring		
680	Ball bearing		
692	Thrust ring		

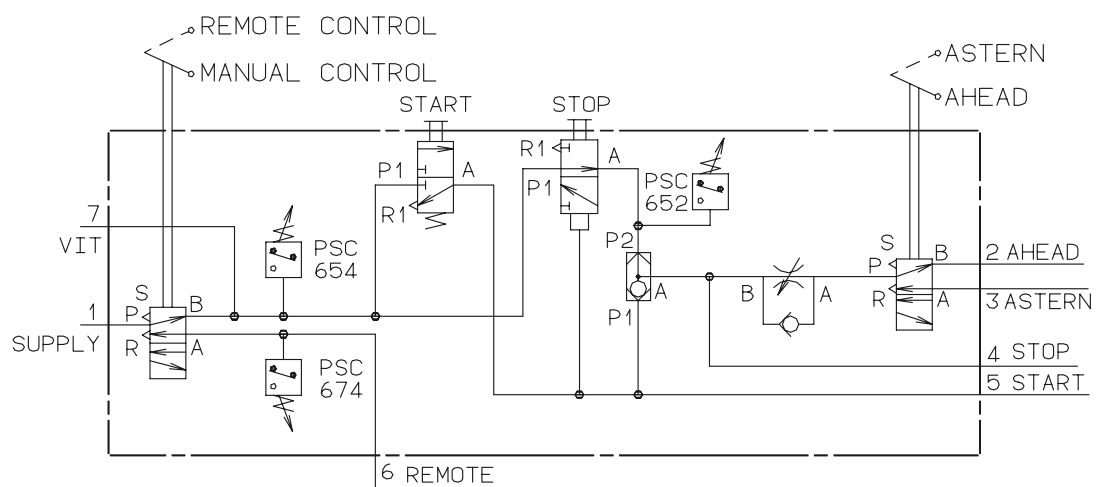



Item No.	Item Description	Item No.	Item Description
027	Copuling		
039	Non-return valve		
040	Steel bar		
052	Screw		
064	Copper pipe		
076	Coupling		
111	Coupling		
135	Coupling		
159	Coupling		
160	Plug		
184	Coupling		
196	Connection		
206	Copper pipe		
218	Non-return valve		
231	Steel bar		
255	Coupling		

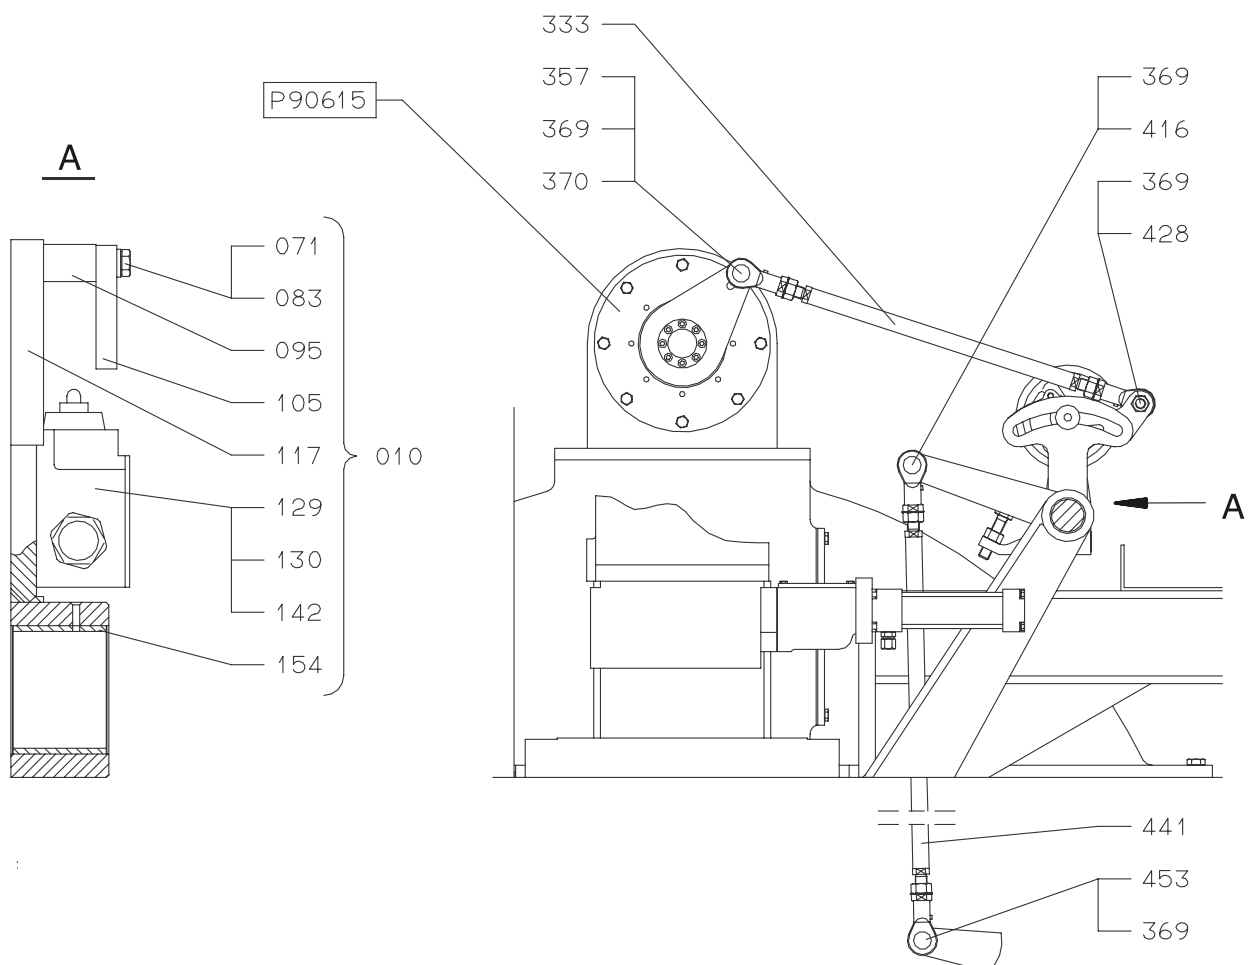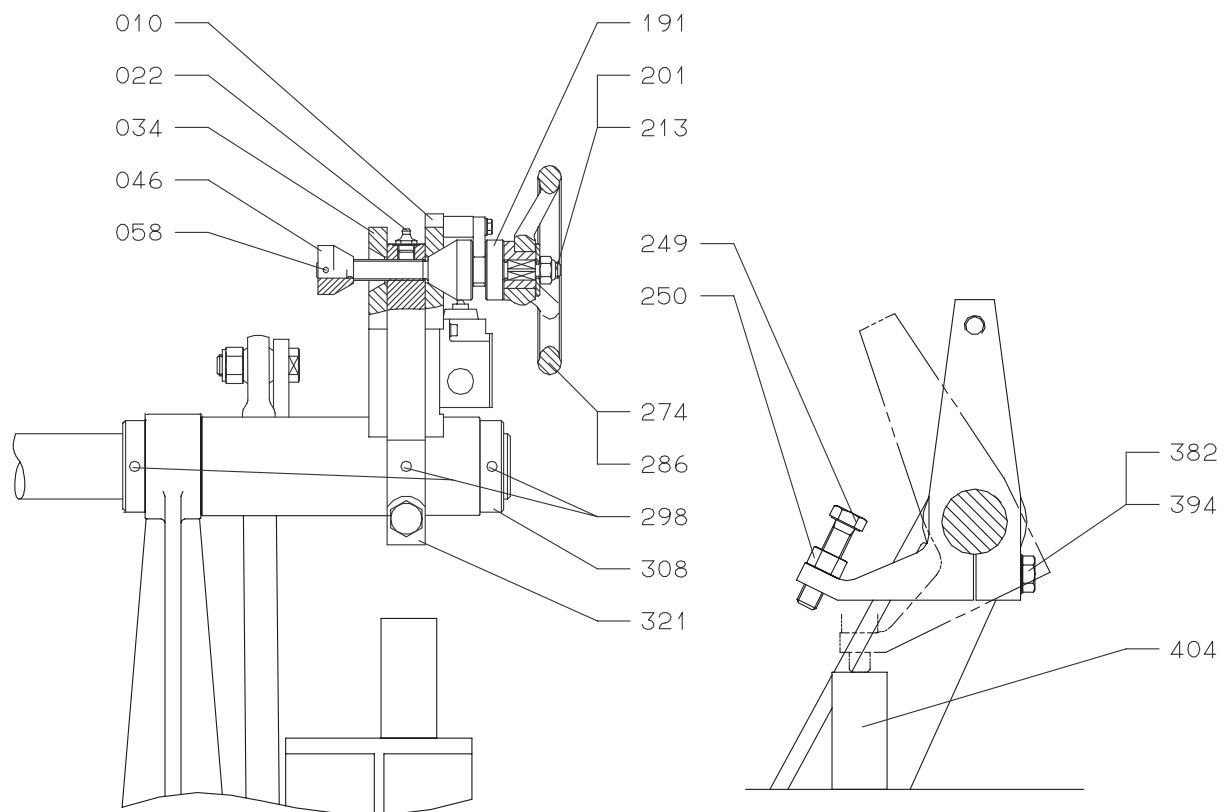

Item No.	Item Description	Item No.	Item Description
010	Lever, complete		
022	Grease nipple		
034	Lever		
046	Cone		
058	Pin		
071	Screw		
083	Washer		
095	Bushing		
105	Lever		
117	Lever		
129	Switch		
130	Screw		
142	Lock washer		
154	Bushing		
191	Cone		
201	Nut, self-locking		
213	Washer		
249	Screw		
250	Nut		
274	Impact socket		
286	Impact handwheel		
298	Pin		
308	Stop ring		
321	Clamping arm		
333	Pull rod		
357	Fitted bolt		
369	Nut, self-locking		
370	Distance pipe		
382	Screw		
394	Lock washer		
404	Support		
416	Fitted bolt		
428	Fitted bolt		
441	Pull rod, complete		
453	Fitted bolt		