


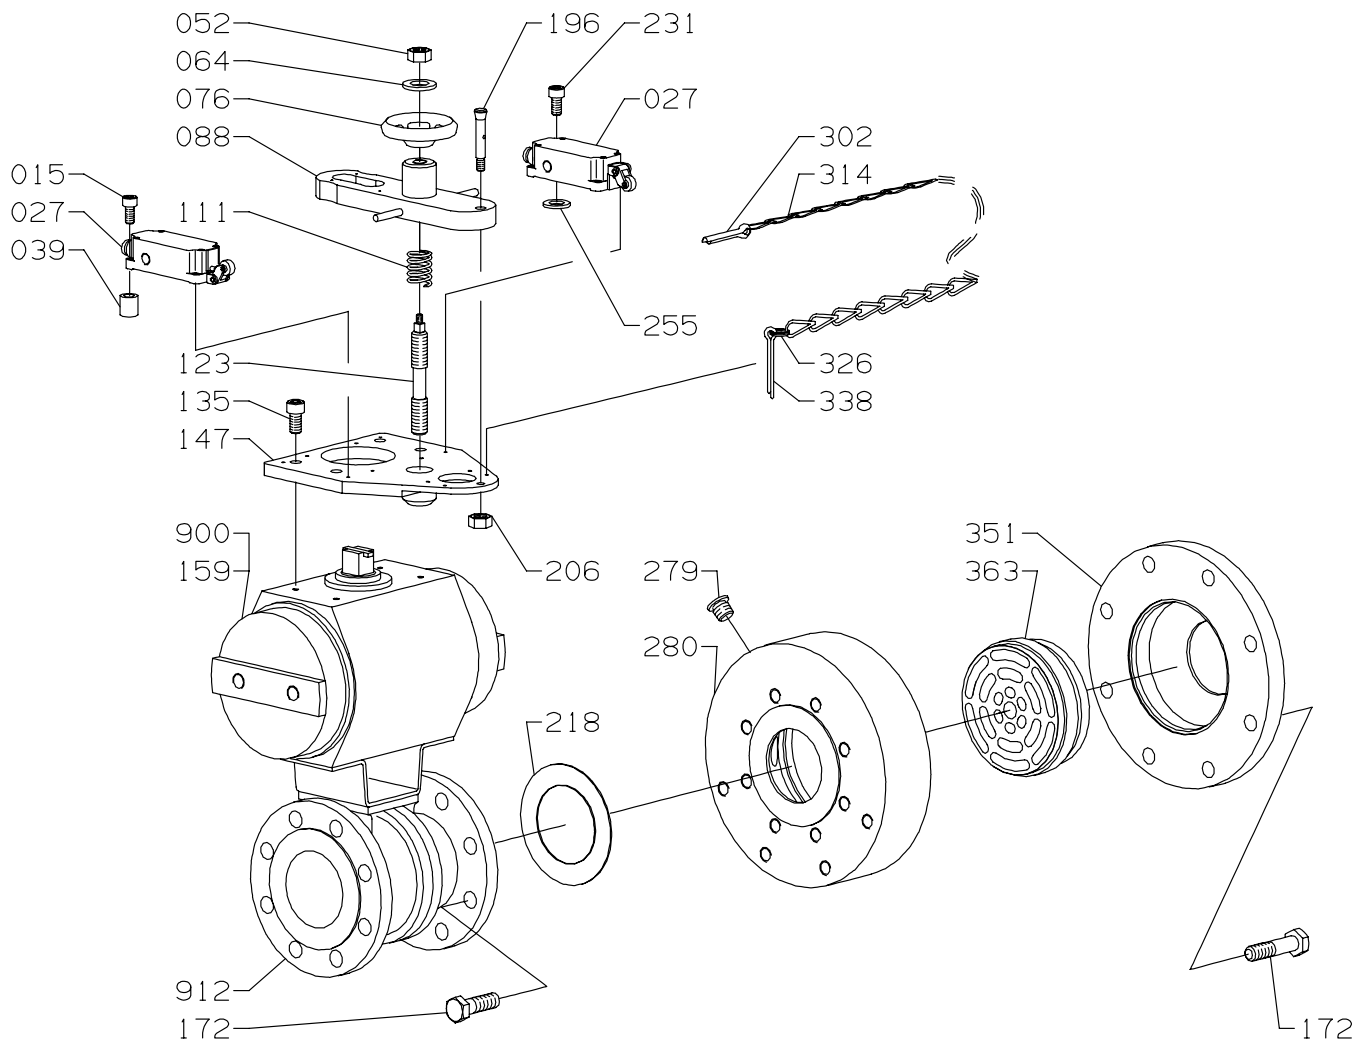
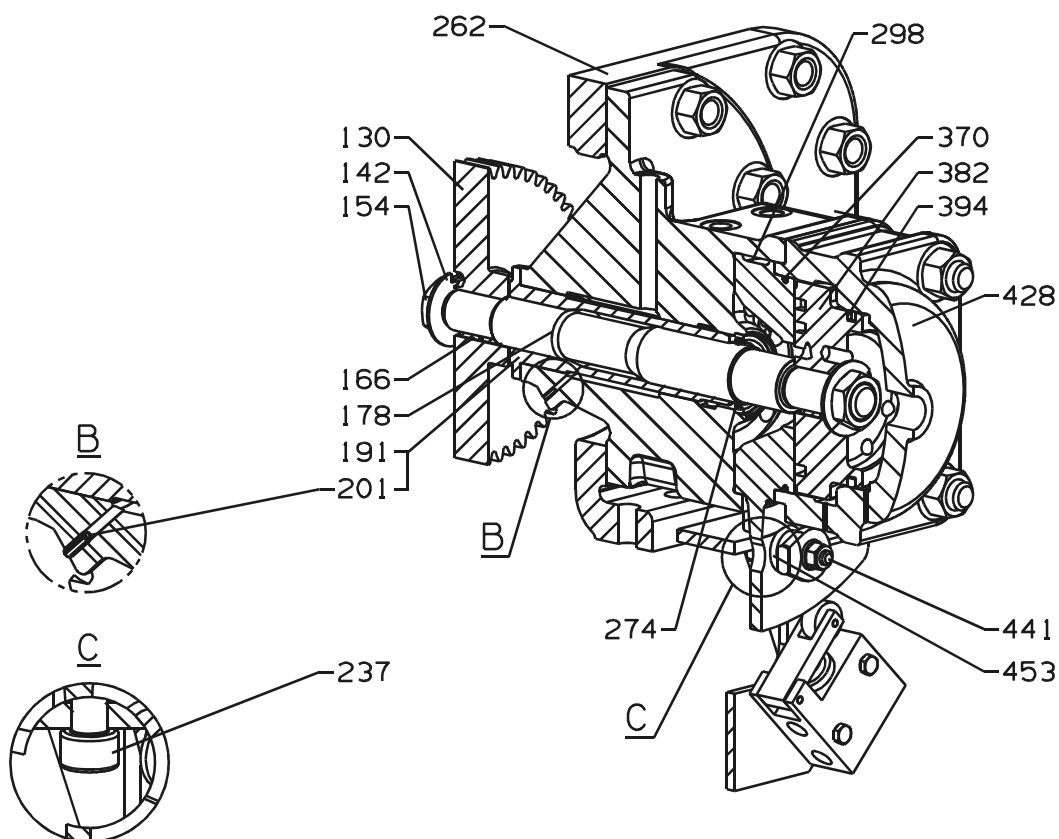


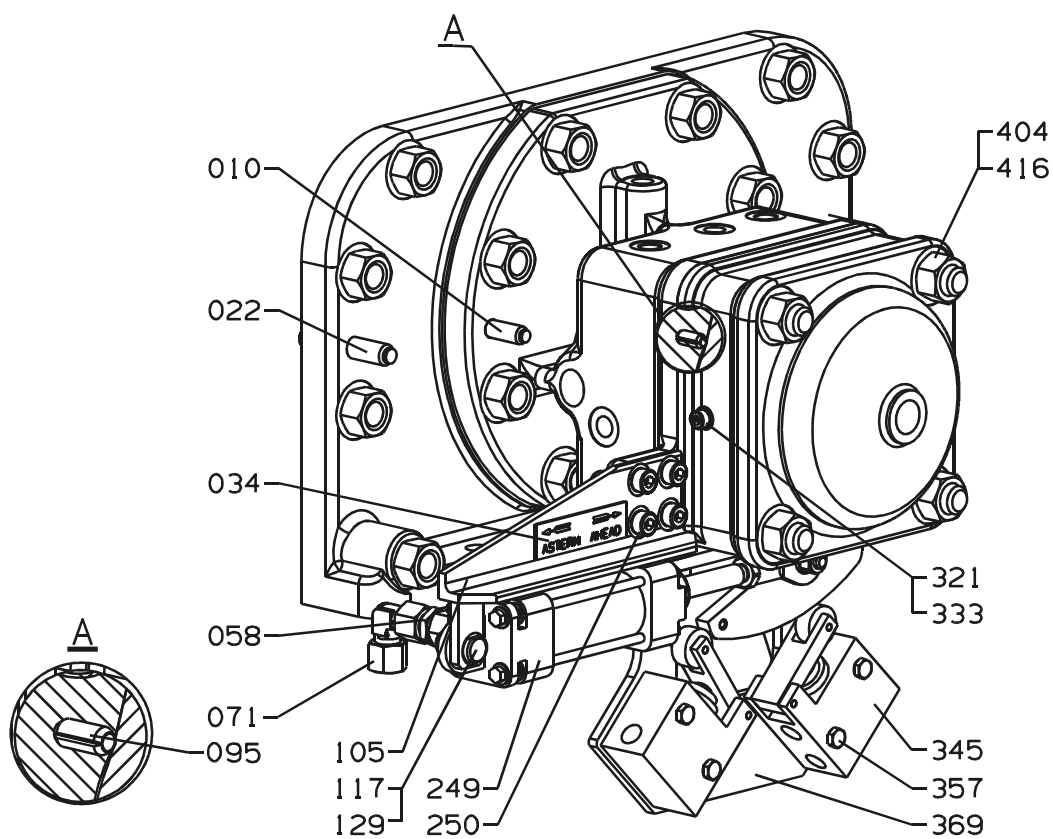

Item No.	Item Description	Item No.	Item Description
015	Screw		
027	Switch		
039	Spacer, tubular		
052	Nut		
064	Washer		
076	Handwheel		
088	Locking plate		
111	Spring		
123	Spindle		
135	Screw		
147	Plate		
159	Ball valve, with actuator*		
172	Screw		
196	Guide pin		
206	Nut		
218	Packing		
231	Screw		
255	Washer		
279	Plug screw		
280	Housing		
302	Split pin		
314	Sundry chain		
326	Key ring		
338	Split pin		
351	Housing		
363	Non-return valve		
900	Repair kit, actuator*		
912	Repair kit, ball valve*		
	Note:		
	* When ordering spare parts for this item, please state manufacturer's Part No.		

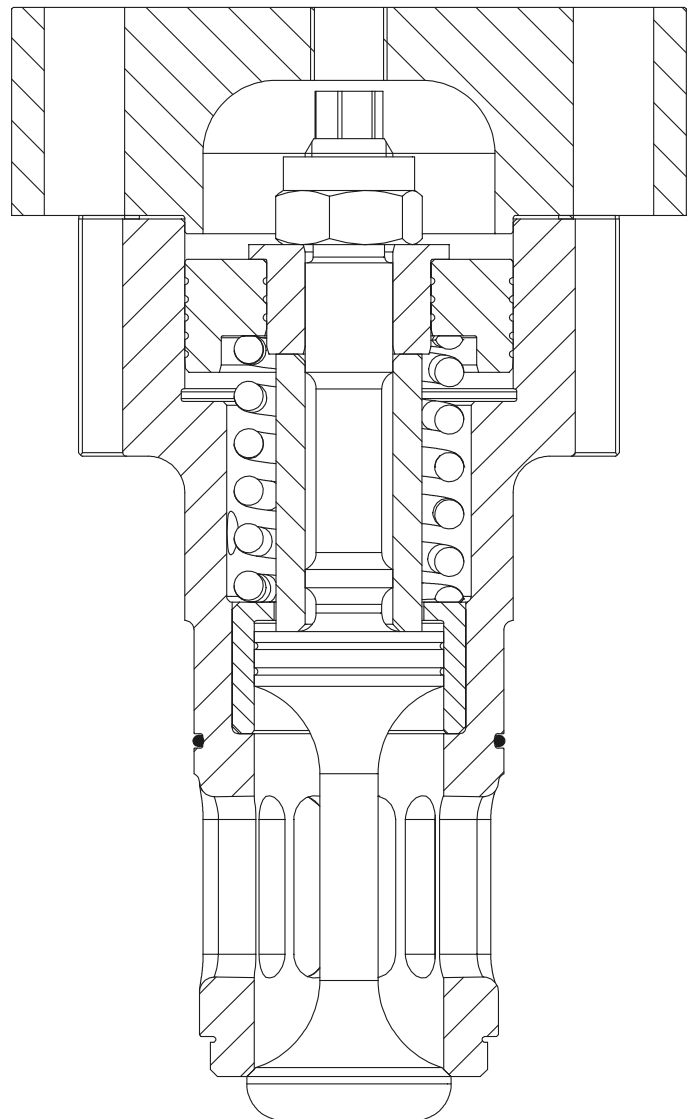

Item No.	Item Description	Item No.	Item Description
010	Guide pin		
022	Guide pin		
034	Name plate		
058	Coupling		
071	Adapter		
095	Spring pin		
105	Bracket		
117	Nut		
129	Fitted bolt		
130	Gear wheel		
142	Lock washer		
154	Nut		
166	Key		
178	Shaft		
191	Bushing		
201	Spring pin		
237	Screw		
249	Air cylinder		
250	Screw		
262	Distributor housing, complete*		
274	Sealing ring		
298	Reversing disc*		
321	Screw		
333	Packing		
345	Valve, 3/2-way		
357	Screw		
369	Bracket		
370	Sealing ring		
382	Distributor disc		
394	Piston ring		
404	Nut		
416	Stud		
428	Cover		
441	Fitted bolt		
453	Washer		
	Note:		
	* When ordering spare parts, please state number of cylinders.		

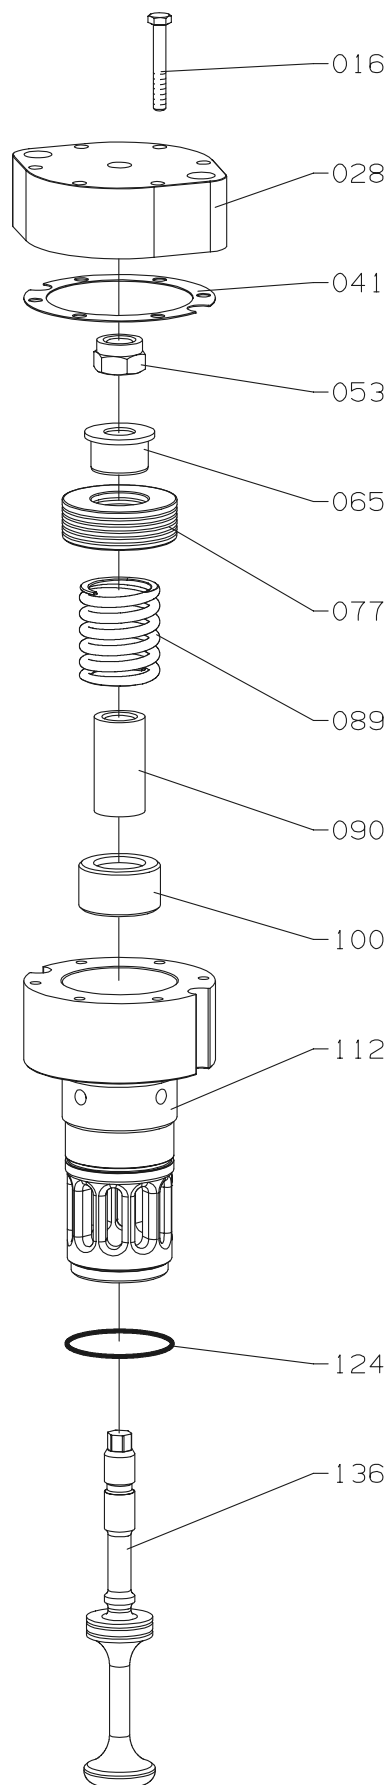



Item No.	Item Description	Item No.	Item Description
016	Screw		
028	Cover		
041	Packing		
053	Self-locking nut		
065	Piston		
077	Piston		
089	Spring		
090	Distance pipe		
100	Liner		
112	Valve housing		
124	Sealing ring		
136	Valve spindle		