


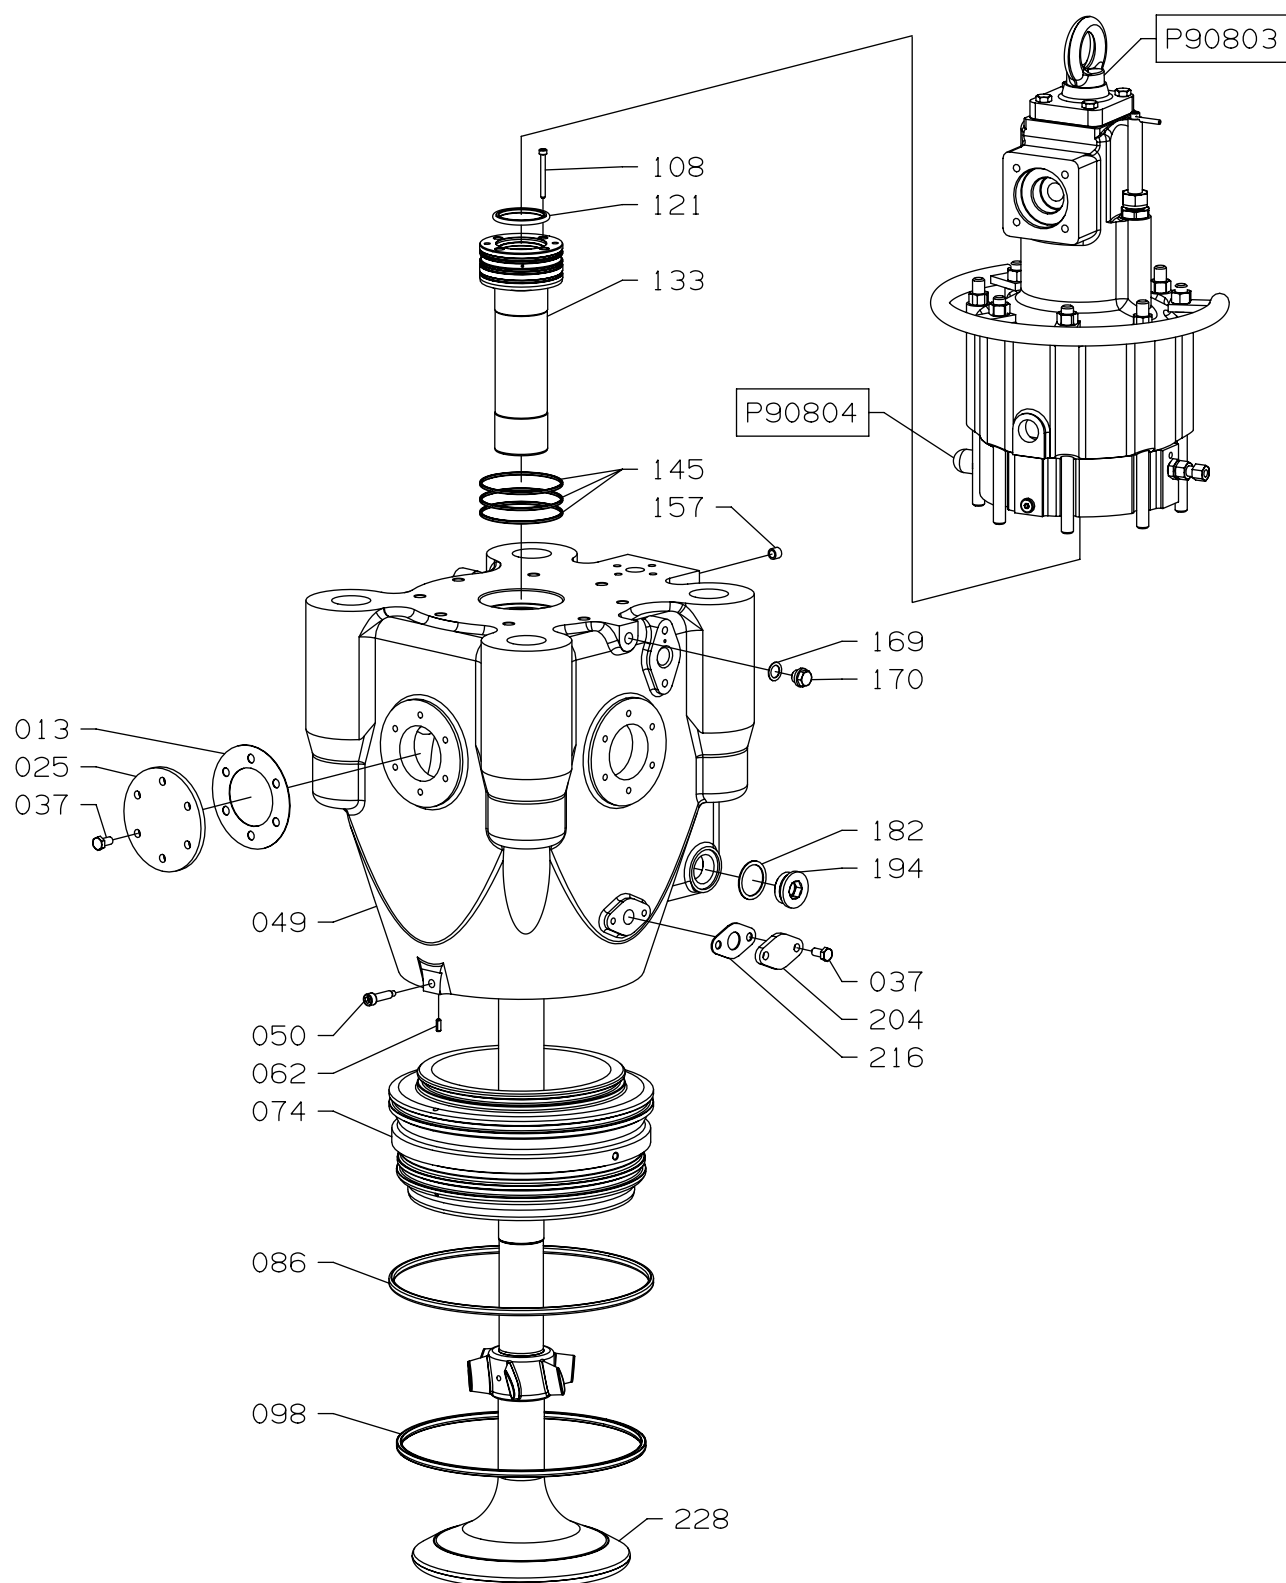


Item No.	Item Description	Item No.	Item Description
013	Packing		
025	Cover		
037	Screw		
049	Exhaust valve housing		
050	Screw		
062	Spring pin		
074	Bottom piece		
086	O-ring		
098	Sealing ring		
108	Screw		
121	Sealing ring		
133	Spindle guide		
145	Sealing ring		
157	Thread insert		
169	Packing ring		
170	Plug screw		
182	Packing ring		
194	Plug screw		
204	Flange		
216	Packing		
228	Exhaust valve spindle		



Exhaust Valve - Upper Parts

MAN B&W

Plate
P90803-0049

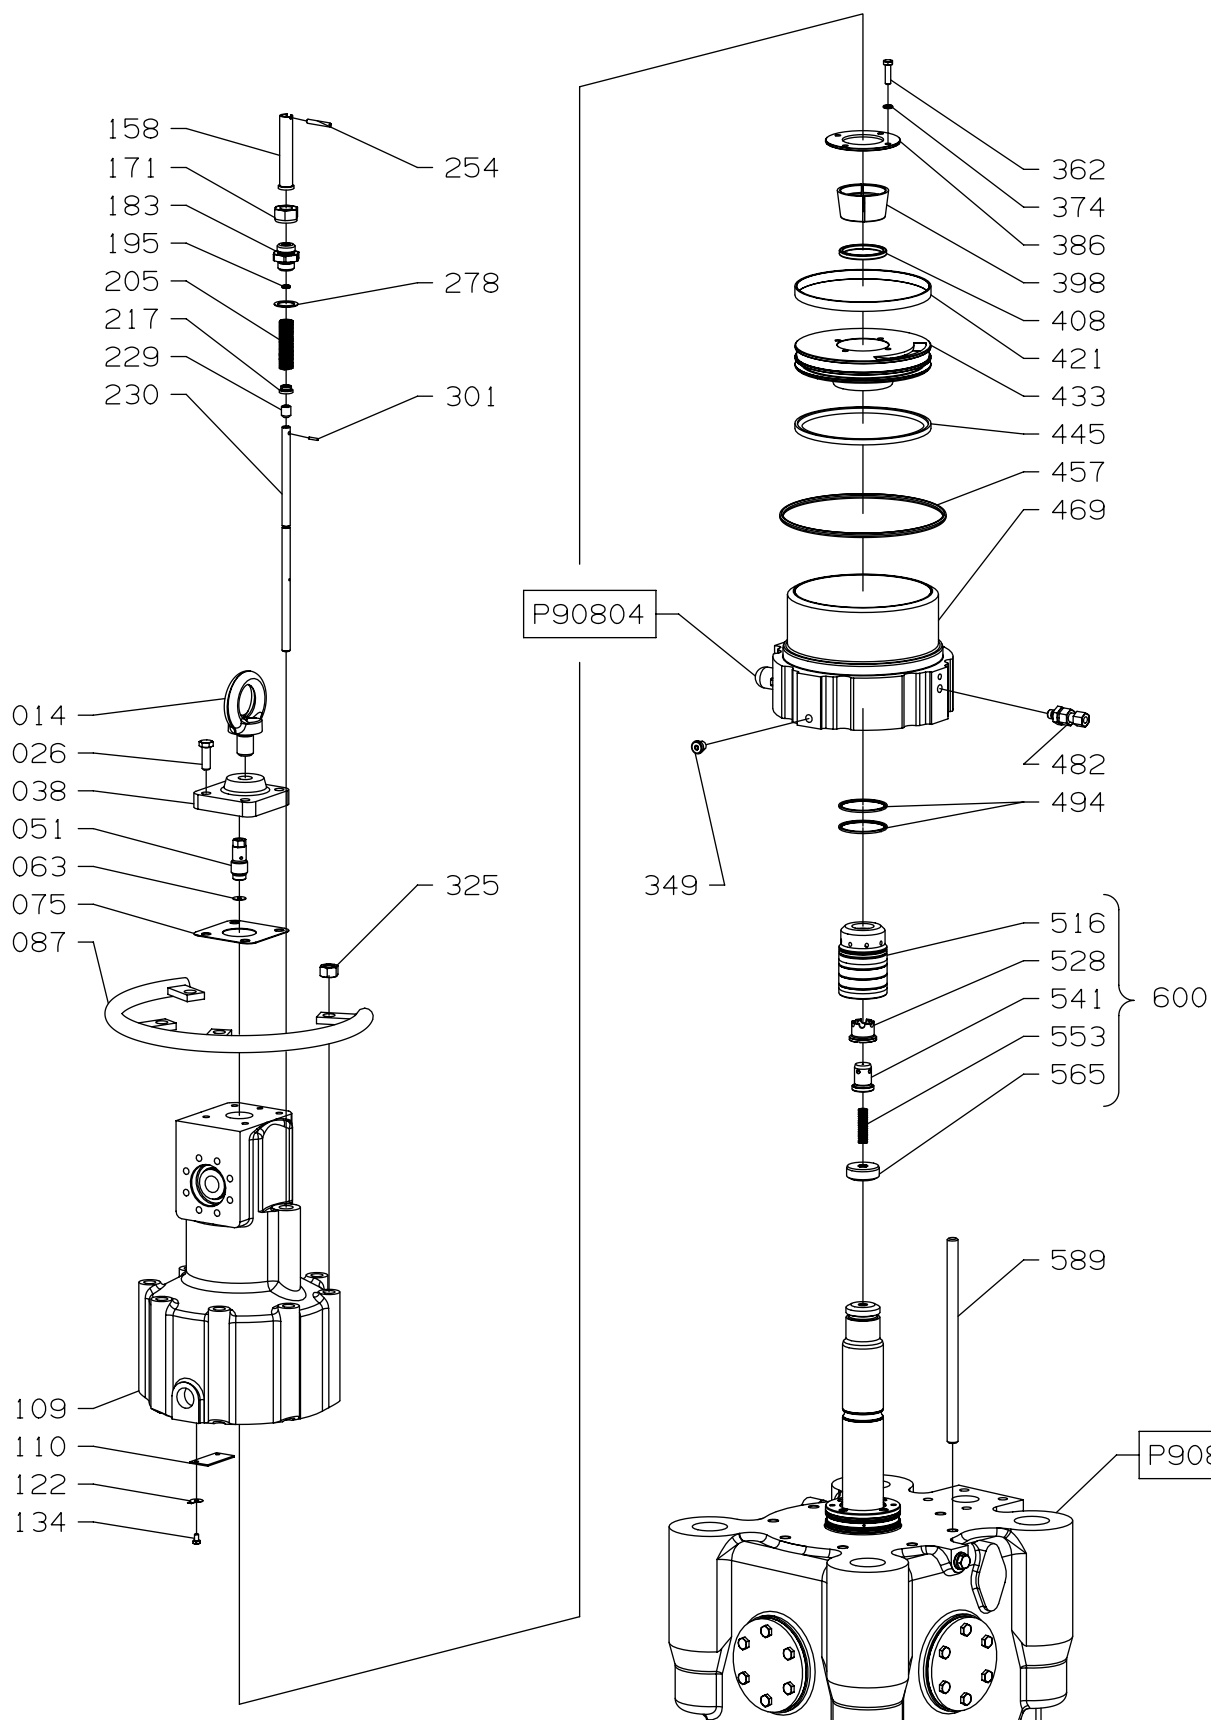


Item No.	Item Description	Item No.	Item Description
014	Eye bolt		by MAN Diesel only.
026	Screw		
038	Plate		
051	Orifice plug		
063	Disc		
075	Packing		
087	Steel pipe		
109	Oil cylinder		
110	Disc		
122	Locking plate		
134	Screw		
158	Pipe		
171	Union nut		
183	Reducing nipple		
195	O-ring		
205	Spring		
217	Disc		
229	Point screw		
230	Rod.lift-rotation check		
254	Dowel pin		
278	Packing ring		
301	Spring pin		
325	Nut		
349	Plug screw		
362	Screw		
374	Cam lock washer*		
386	Flange		
398	Cone		
408	Sealing ring		
421	Sealing ring		
433	Piston, air cylinder		
445	Sealing ring		
457	Sealing ring		
469	Air cylinder		
482	Non-return valve		
494	Piston ring		
516	Piston, actuator		
528	Slide		
541	Piston		
553	Spring		
565	Disc		
589	Stud		
600	Piston actuator, complete		
	Note:		
	* Cam lock washers are to be supplied		

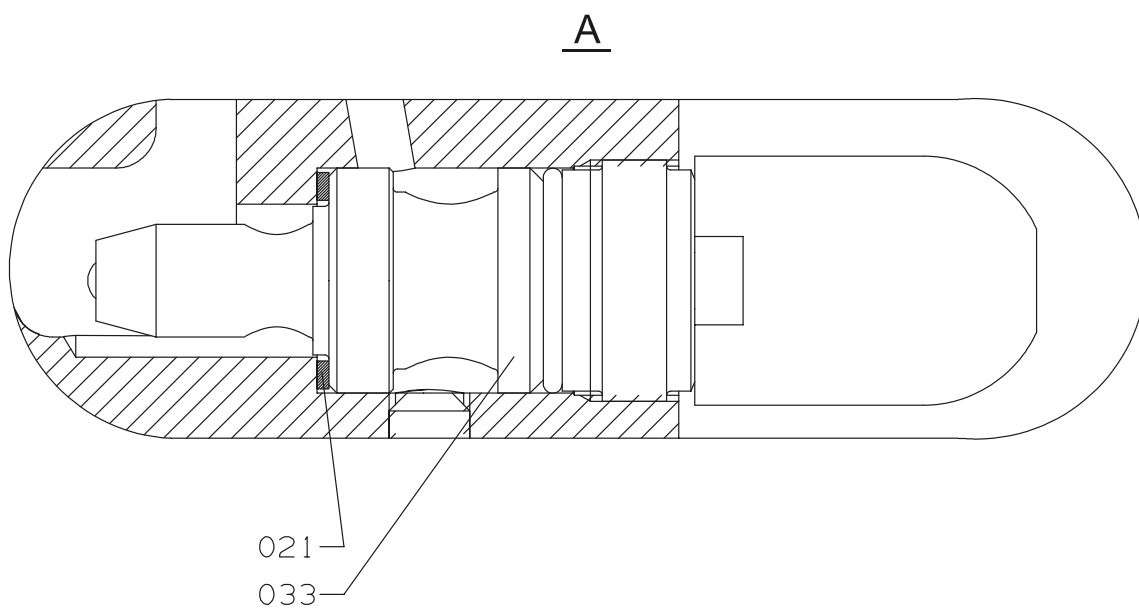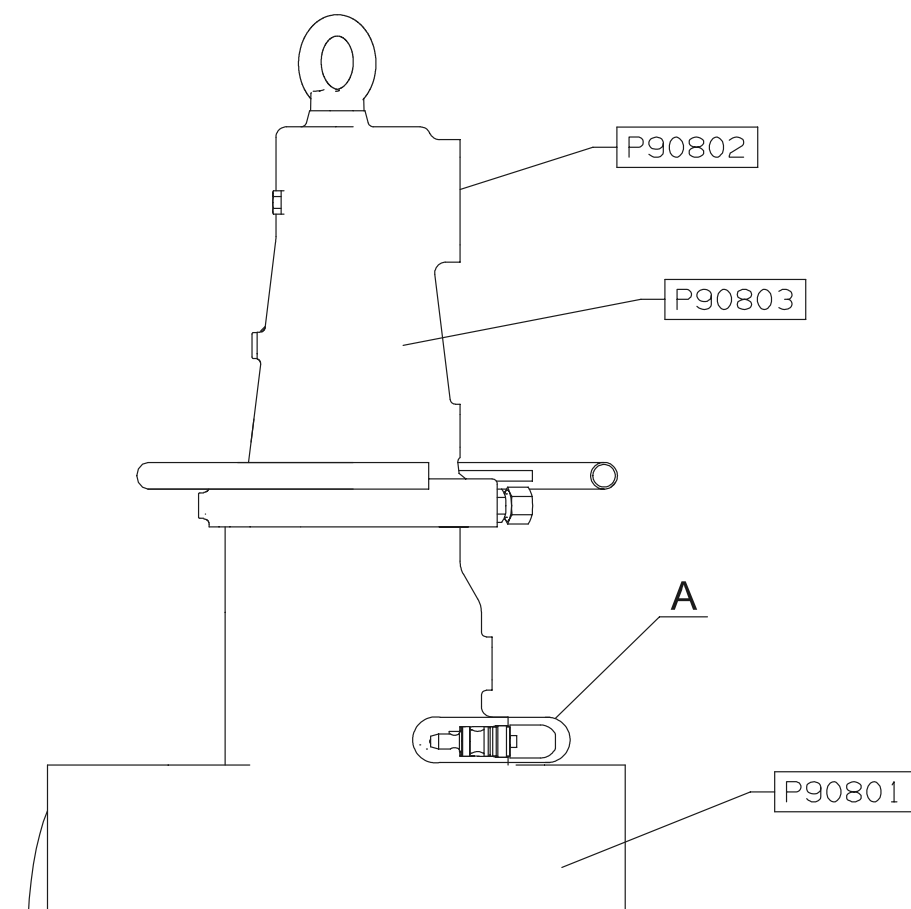




Item No.	Item Description
021	Gasket
033	Safety valve




Item No.	Item Description

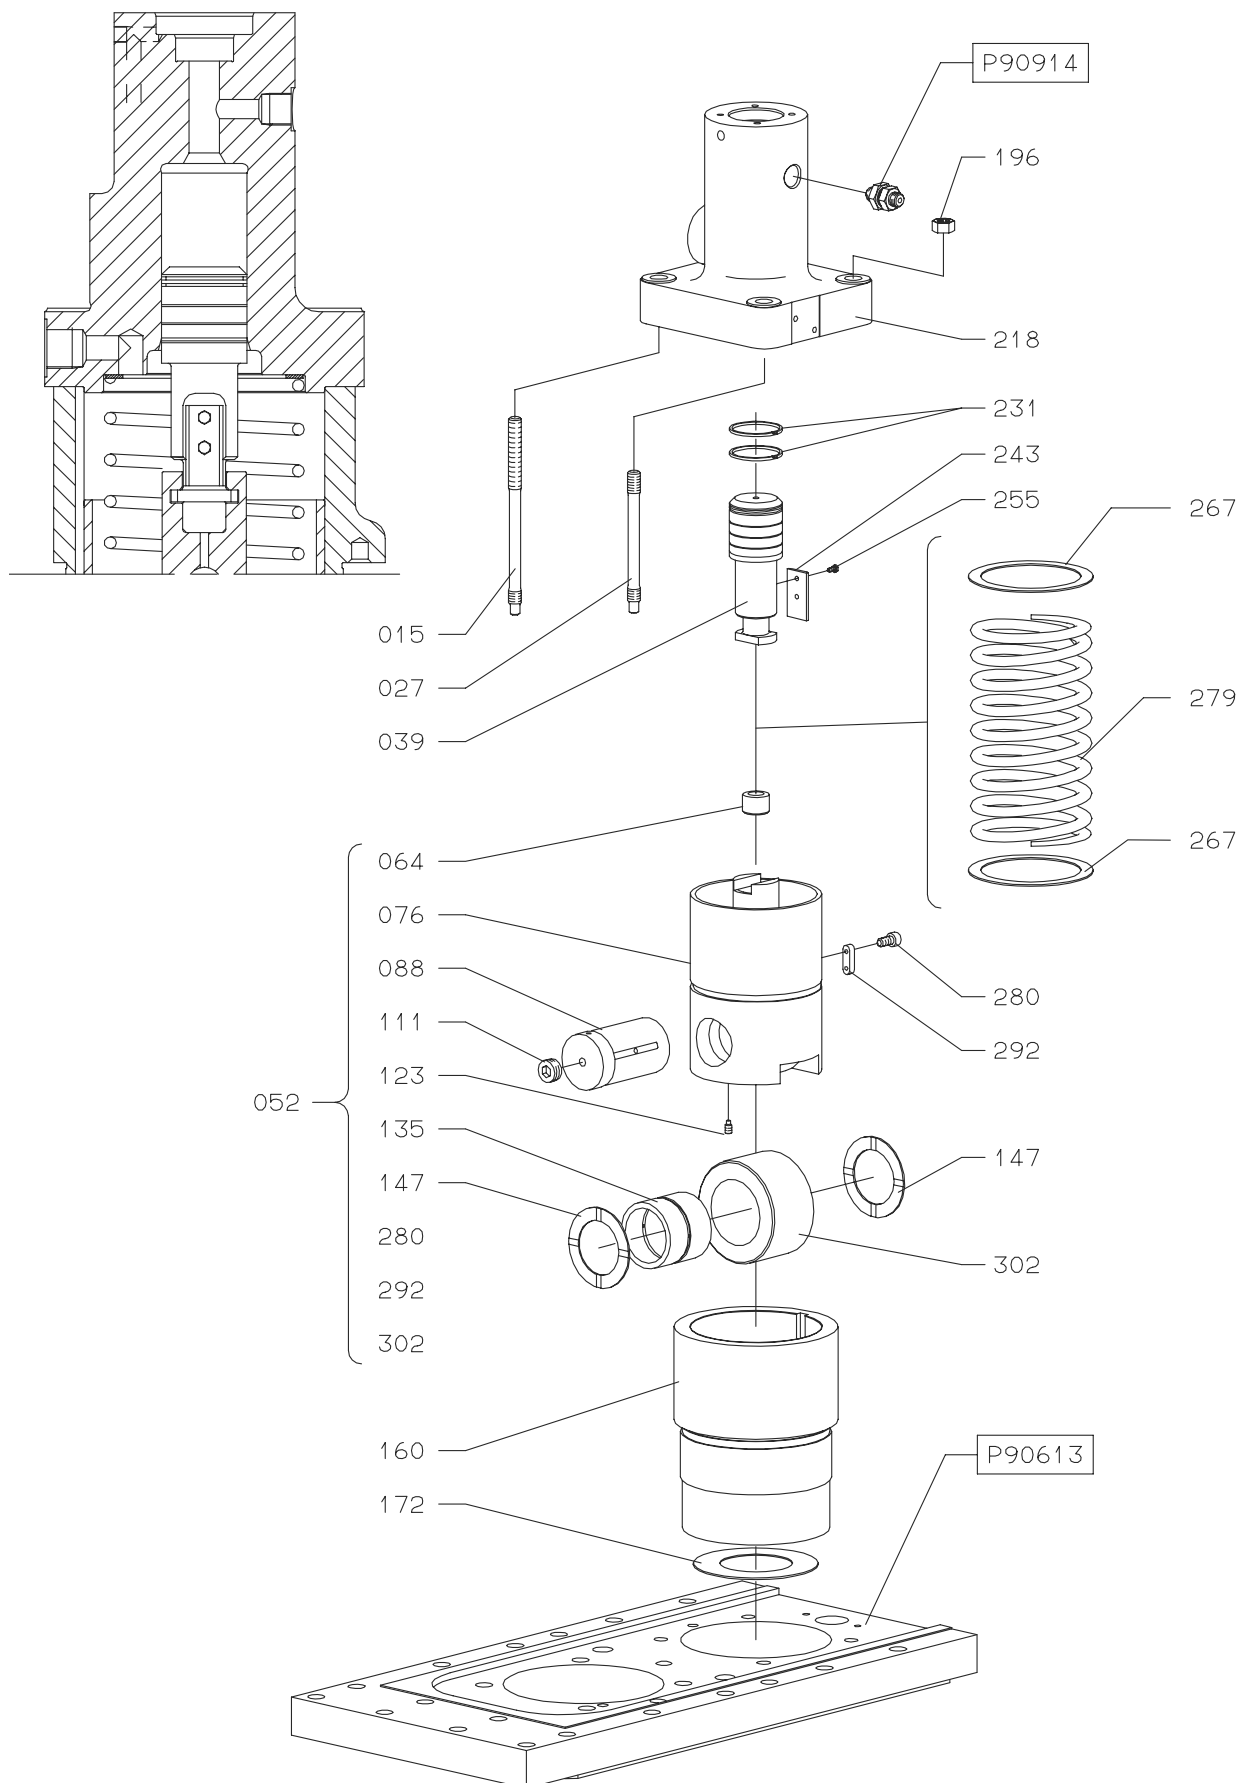


Item No.	Item Description	Item No.	Item Description
015	Stud		
027	Stud		
039	Piston		
052	Roller guide, complete		
064	Thrust disc		
076	Roller guide		
088	Shaft		
111	Plug		
123	Screw		
135	Bushing		
147	Disc		
160	Bushing		
172	Sealing ring		
196	Nut		
218	Oil cylinder		
231	Piston ring		
243	Disc		
255	Screw		
267	Disc		
279	Spring		
280	Screw		
292	Key		
302	Roller		

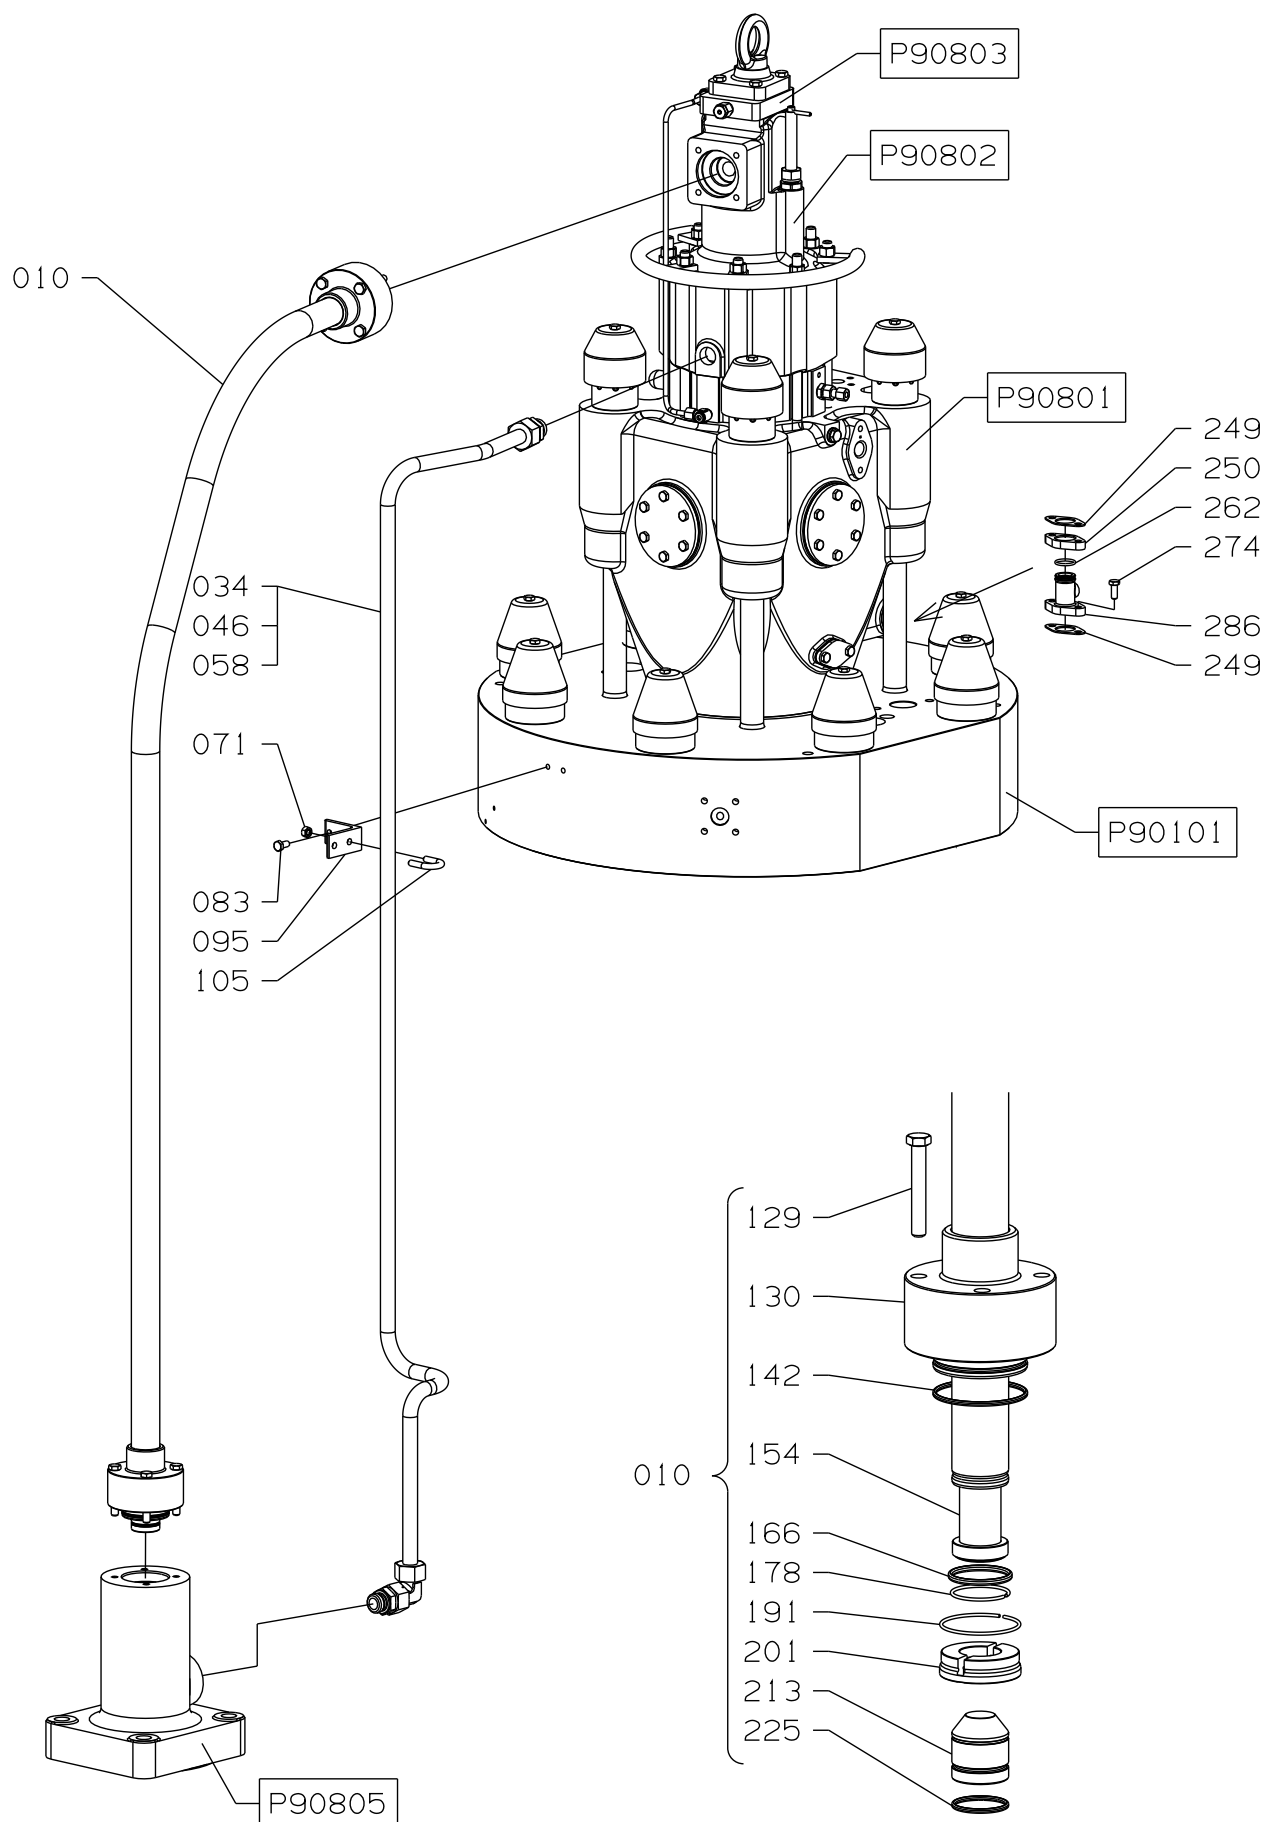


Item No.	Item Description		
010	Hydraulic pipe, complete		
034	Steel pipe		
046	Straight stud coupling		
058	Adjustable elbow coupling		
071	Nut		
083	Screw		
095	Support		
105	Clamp		
129	Screw		
130	Thrust flange		
142	Sealing ring		
154	Hydraulic pipe		
166	O-ring		
178	Retaining ring		
191	Retaining ring		
201	Sleeve, divided		
213	Intermediate piece		
225	Sealing ring		
249	Packing, oval		
250	Flange		
262	Sealing ring		
274	Screw		
286	Cooling water connection		

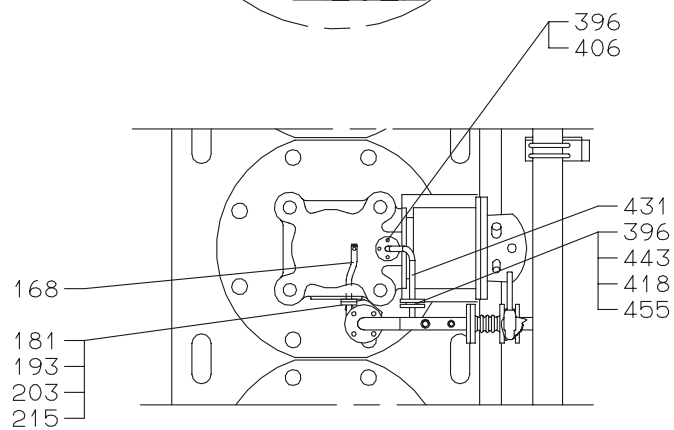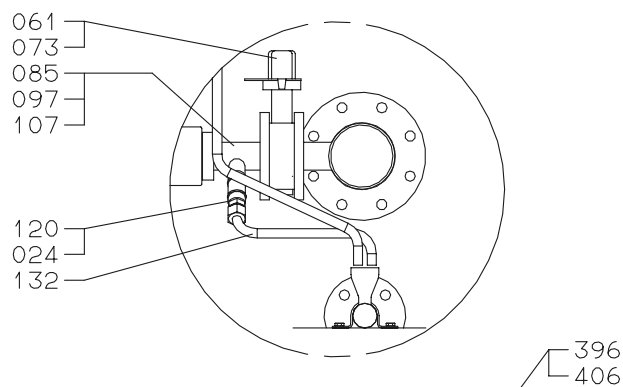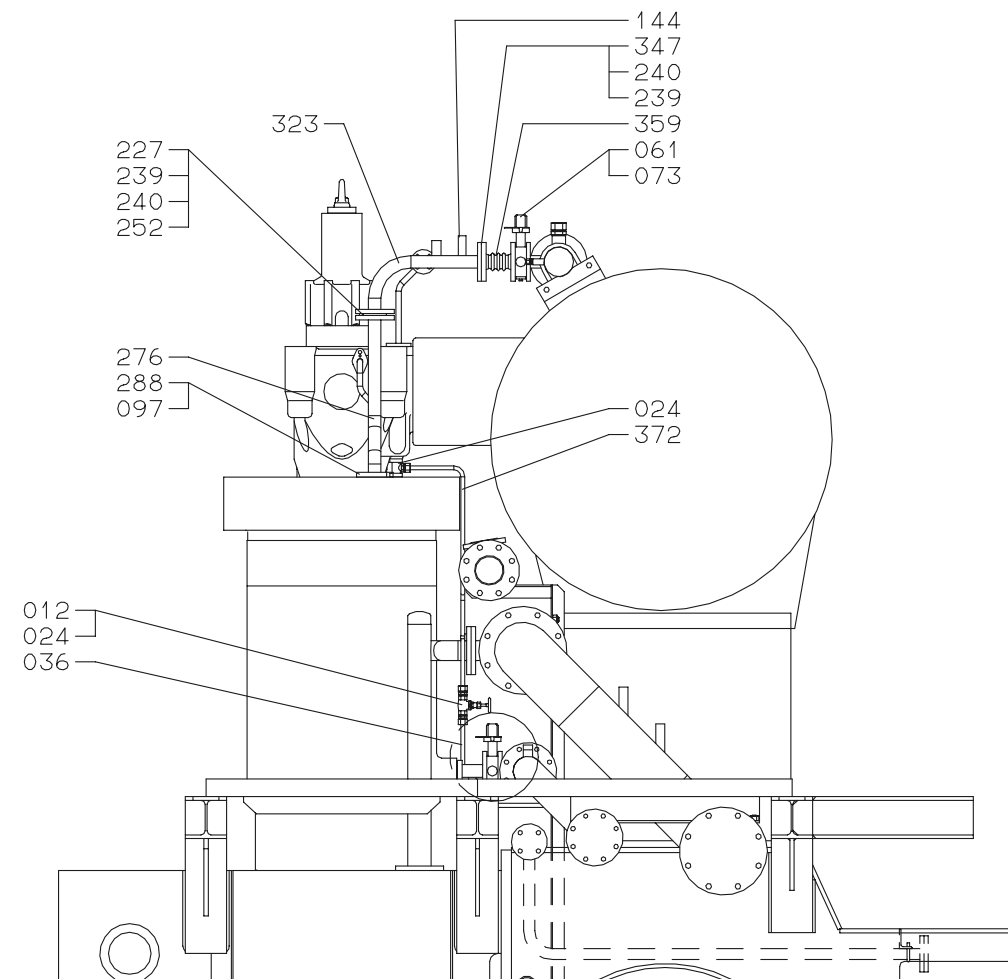

Item No.	Item Description	Item No.	Item Description
012	Valve		
024	Coupling		
036	Pipe		
061	Butterfly valve		
073	Screw		
085	Pipe		
097	Screw		
107	Packing		
120	Ball valve		
132	Drain pipe		
144	Plug screw		
168	Pipe (inside valve housing)		
181	Packing		
193	Screw		
203	Screw		
215	Packing		
227	Screw		
239	Nut		
240	Packing		
252	Orifice plate		
276	Cooling pipe		
288	Packing		
323	Cooling pipe		
347	Screw		
359	Compensator		
372	Pipe		
396	Packing		
406	Screw		
418	Screw		
431	Cooling pipe		
443	Orifice plate		
455	Nut		

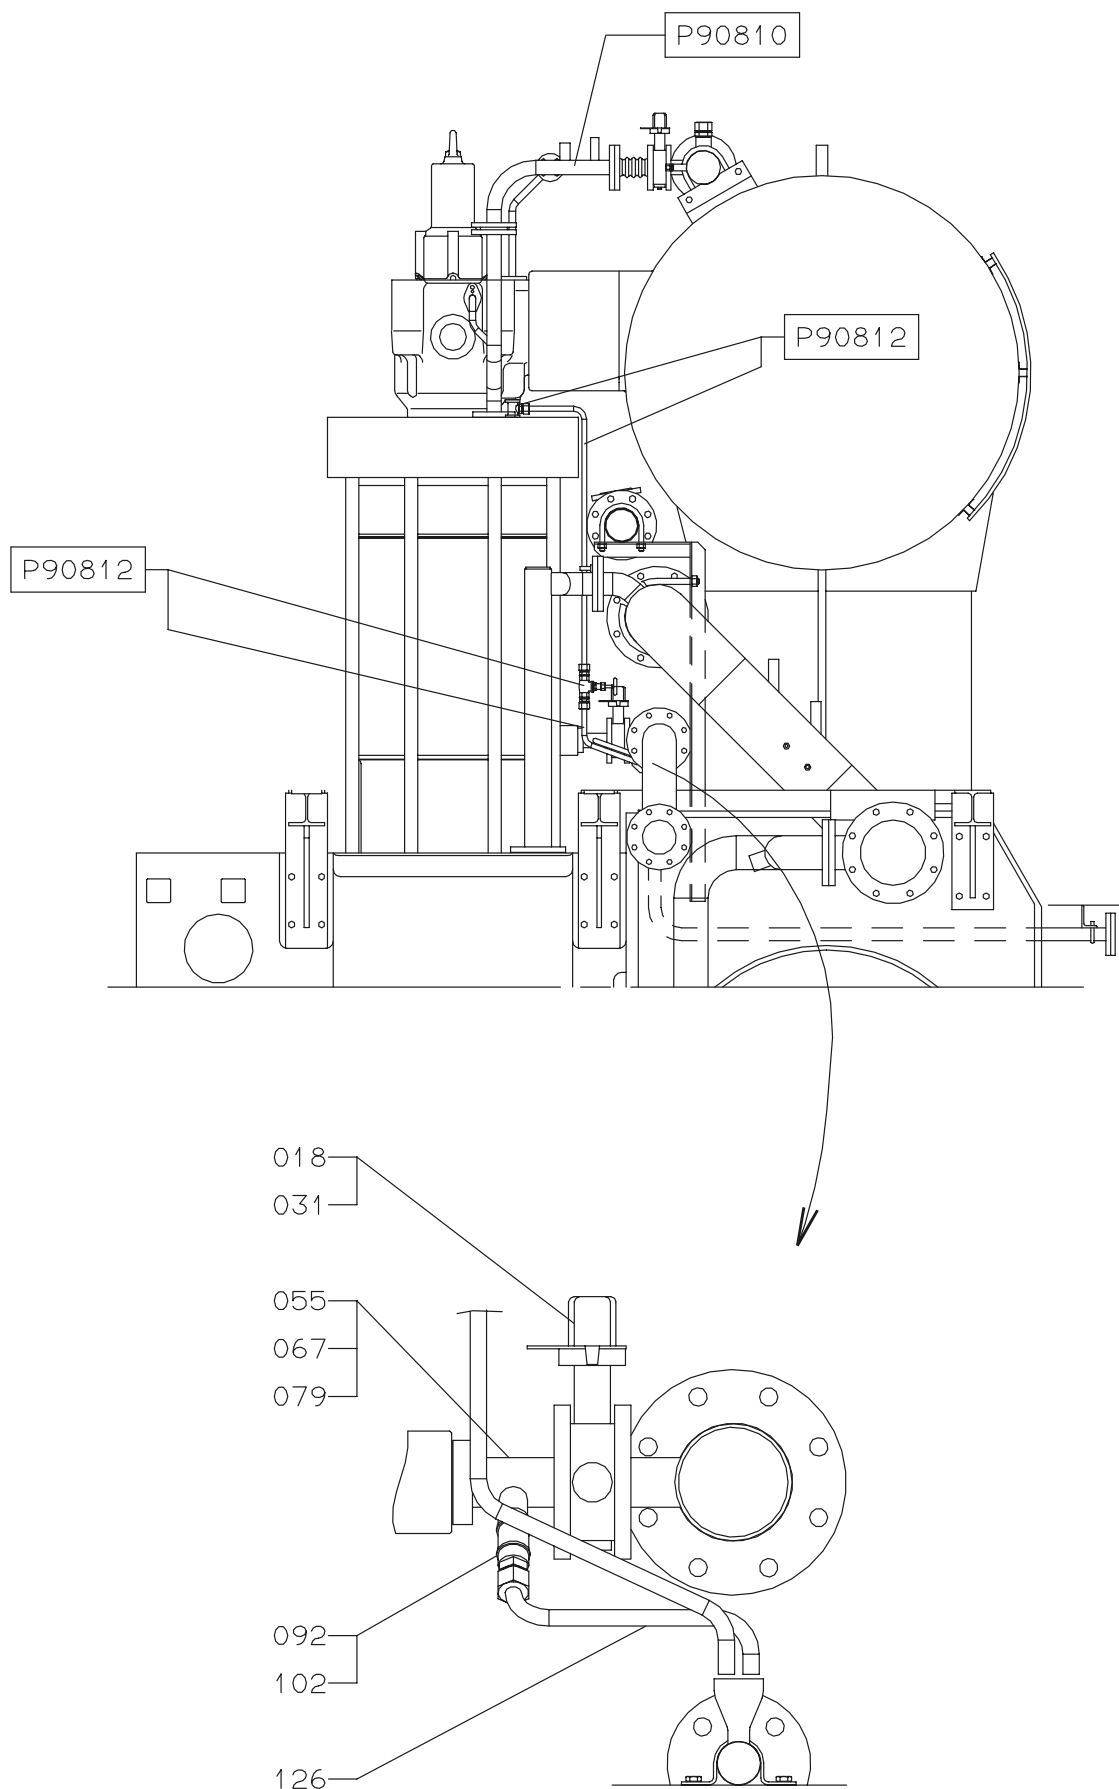

Item No.	Item Description
018	Butterfly valve
031	Screw
055	Freshwater pipe, inlet
067	Screw
079	Packing
092	Ball valve
102	Coupling
126	Drainwater pipe

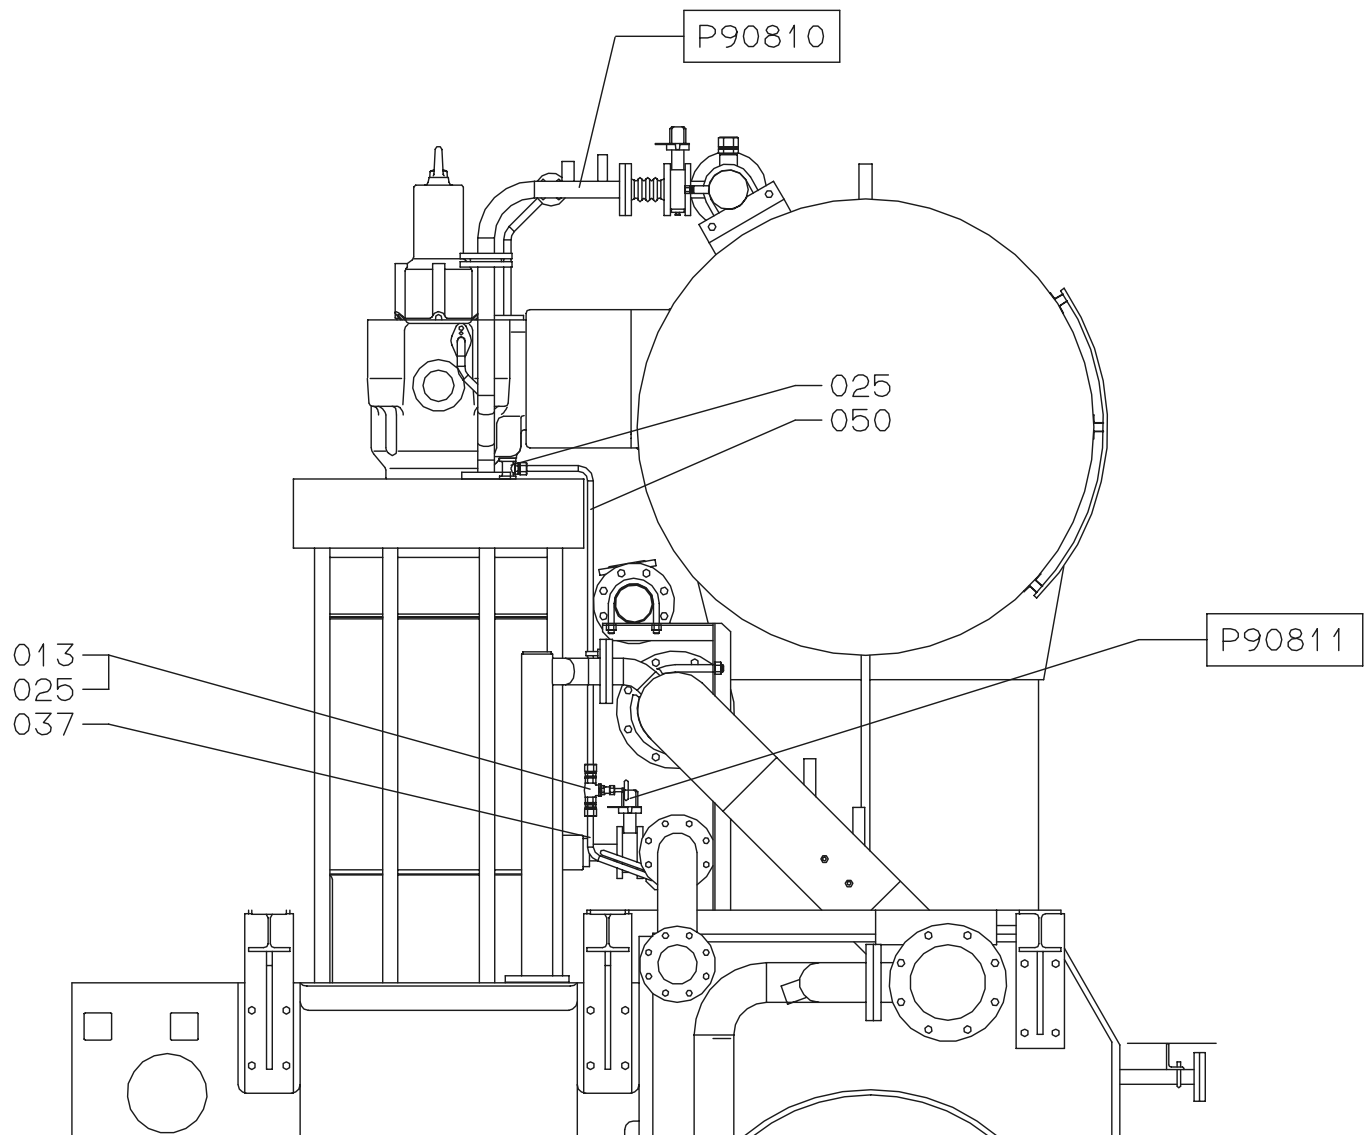

Item No.	Item Description
013	Valve
025	Coupling
037	Pipe
050	Pipe