



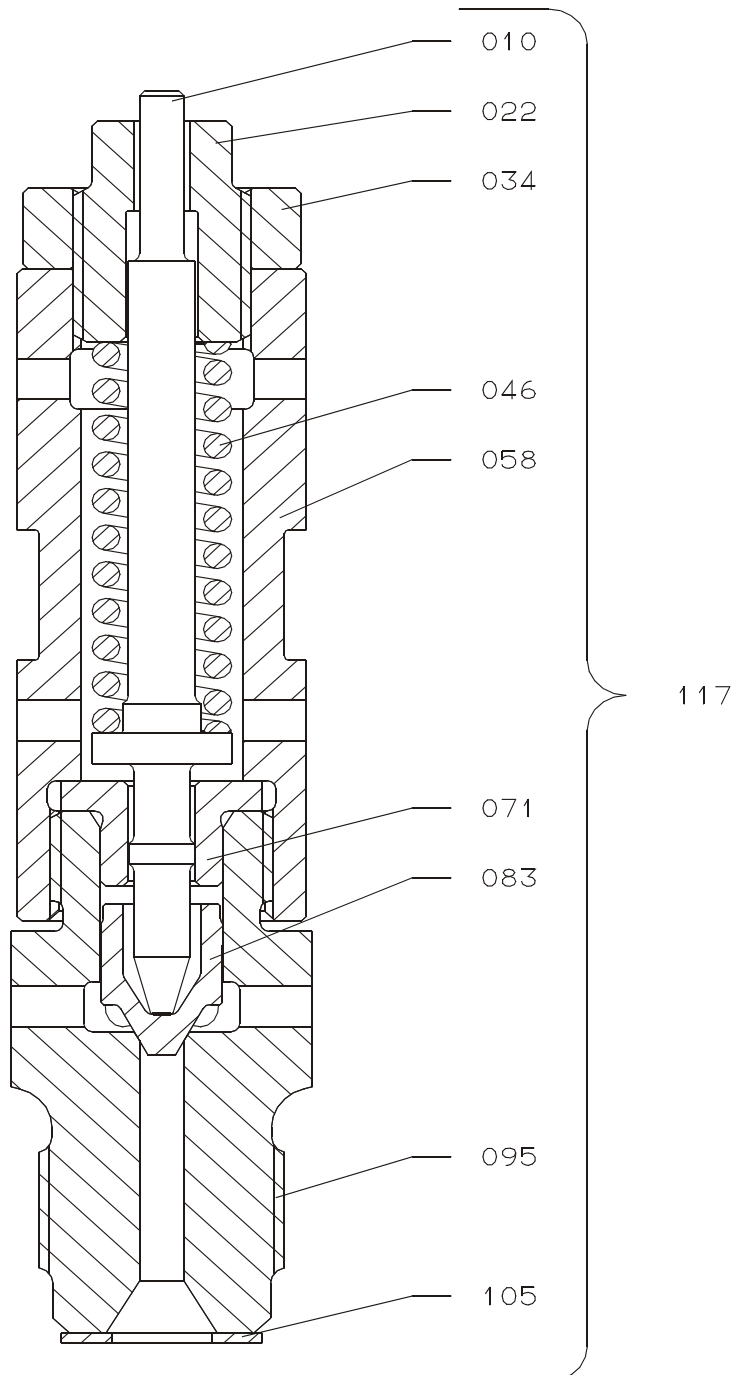


Item No.	Item Description
010	Spindle
022	Spring retainer
034	Lock nut
046	Spring
058	Valve housing
071	Stop ring
083	Valve flap
095	Valve guide
105	Gasket
117	Safety valve, complete



Item No.	Item Description

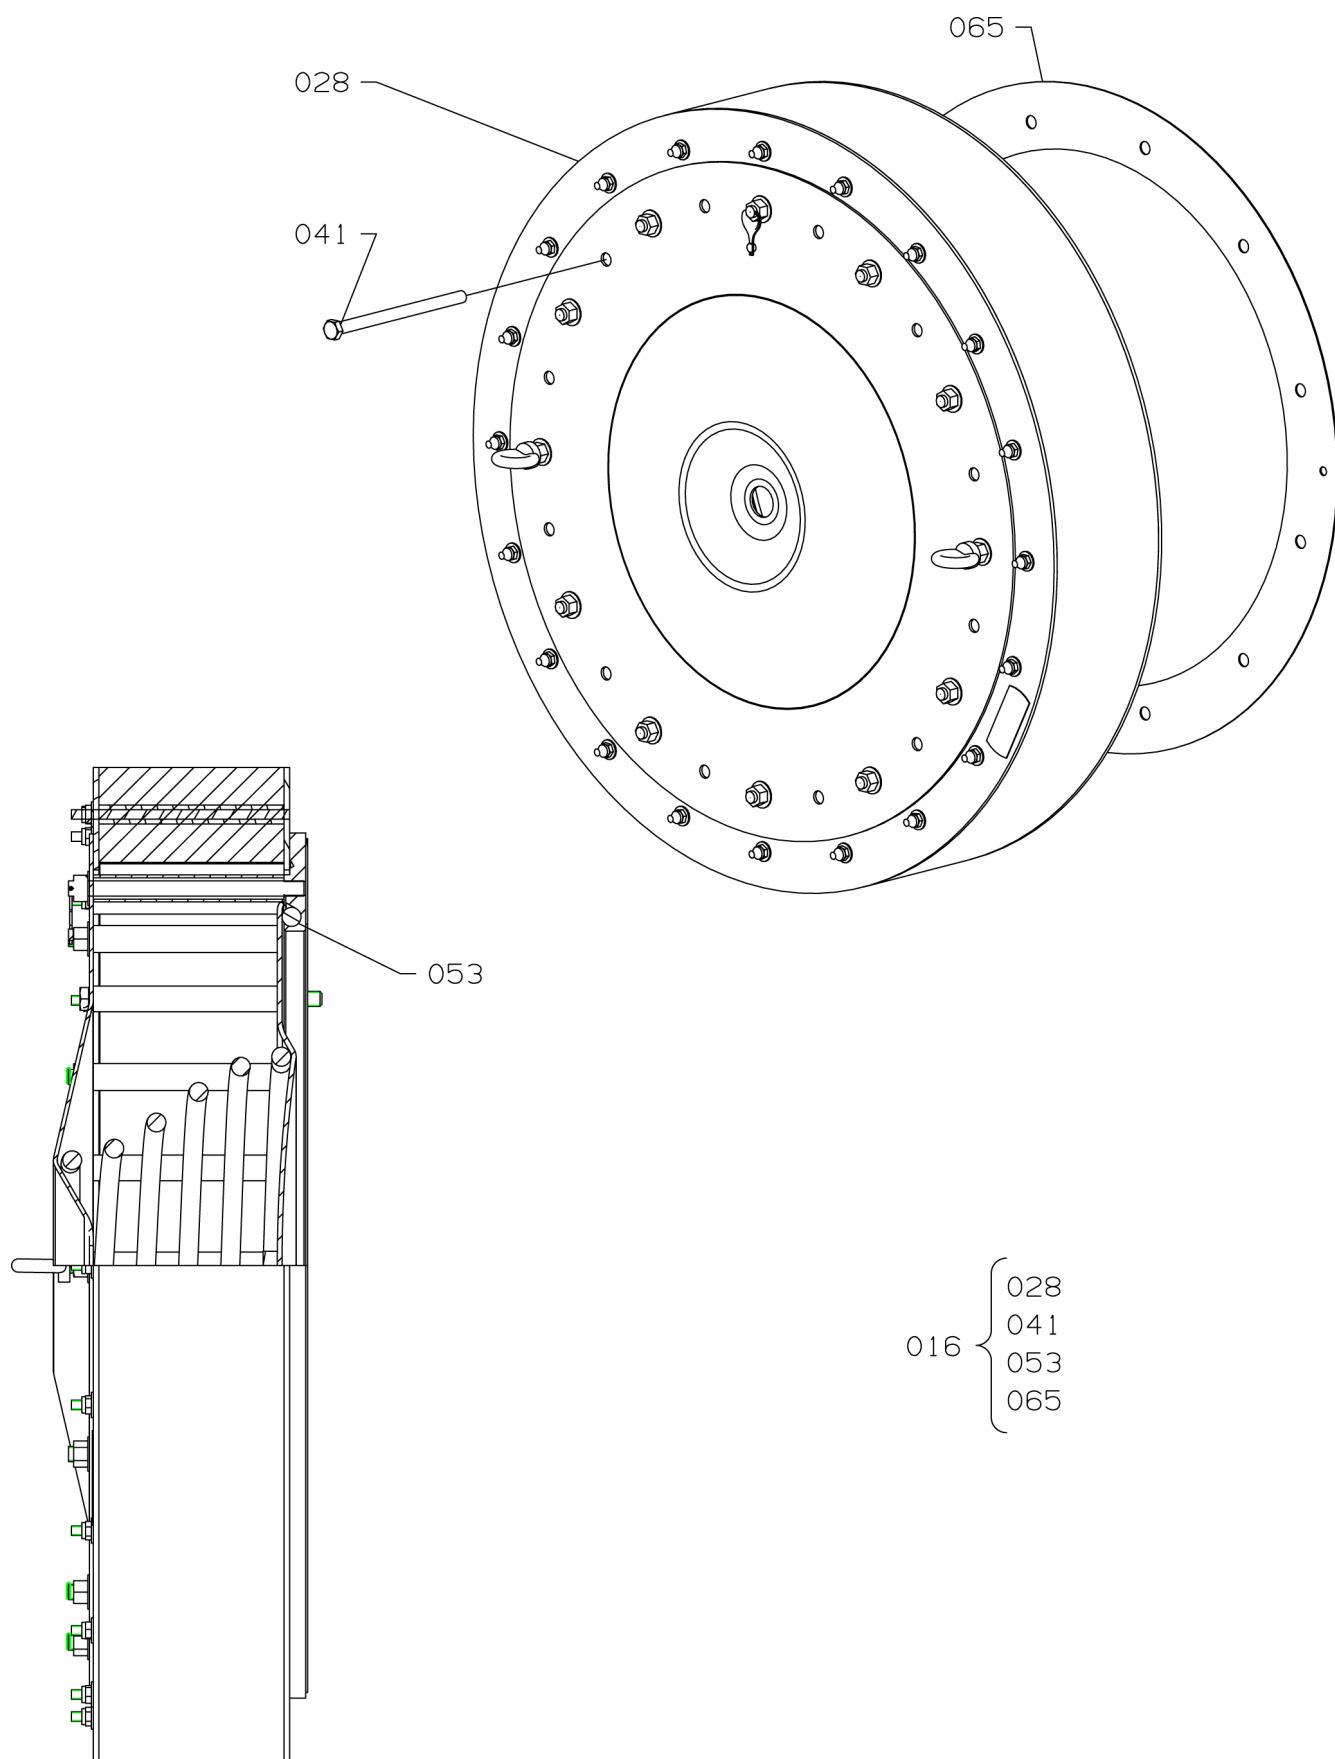

Item No.	Item Description	Item No.	Item Description
016	Relief valve, complete*		
028	Relief valve*		
041	Screw*		
053	O-ring*		
065	Packing*		
	Notes:		
	* When ordering, please state manufacturer and type of relief valve.		

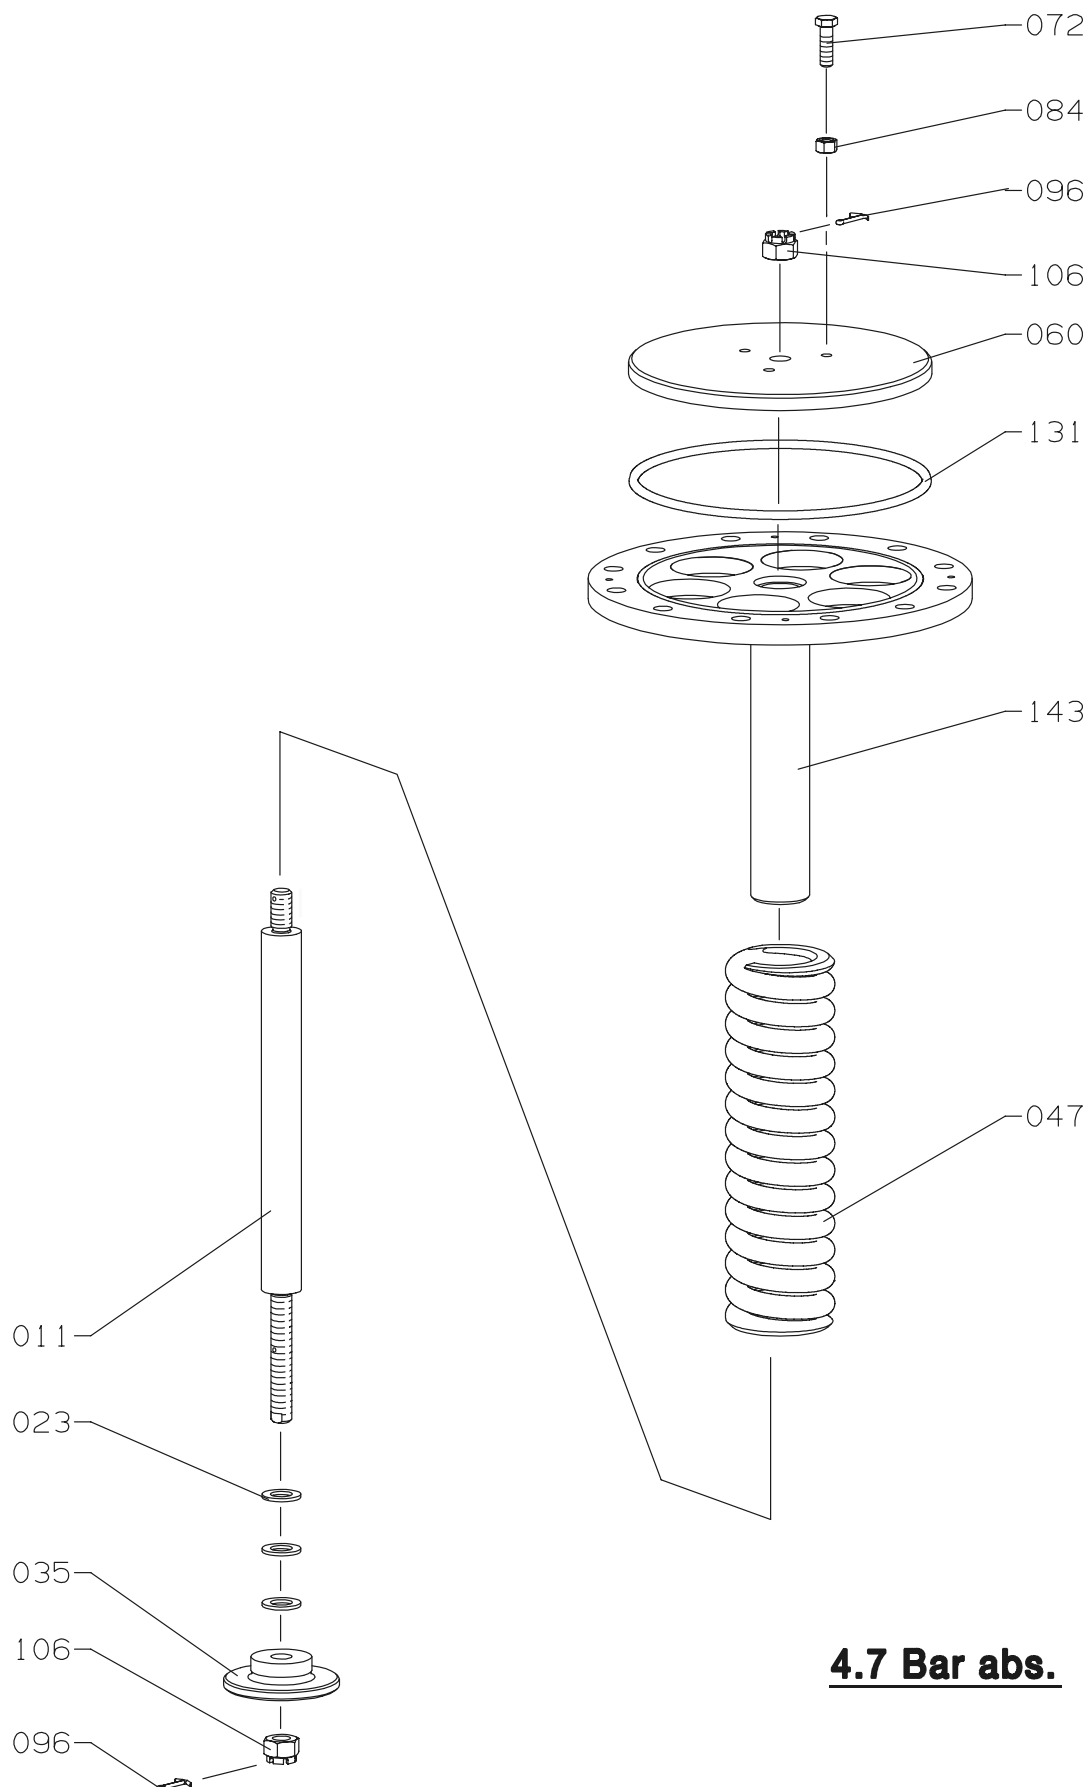

Item No.	Item Description	Item No.	Item Description
011	Spindle		
023	Washer		
035	Spring retainer		
047	Spring		
060	Valve flap		
072	Screw		
084	Nut		
096	Split pin		
106	Castle nut		
131	Seal		
143	Valve seat		

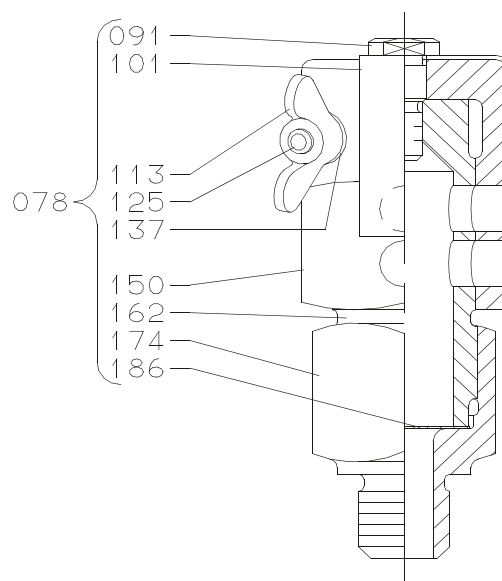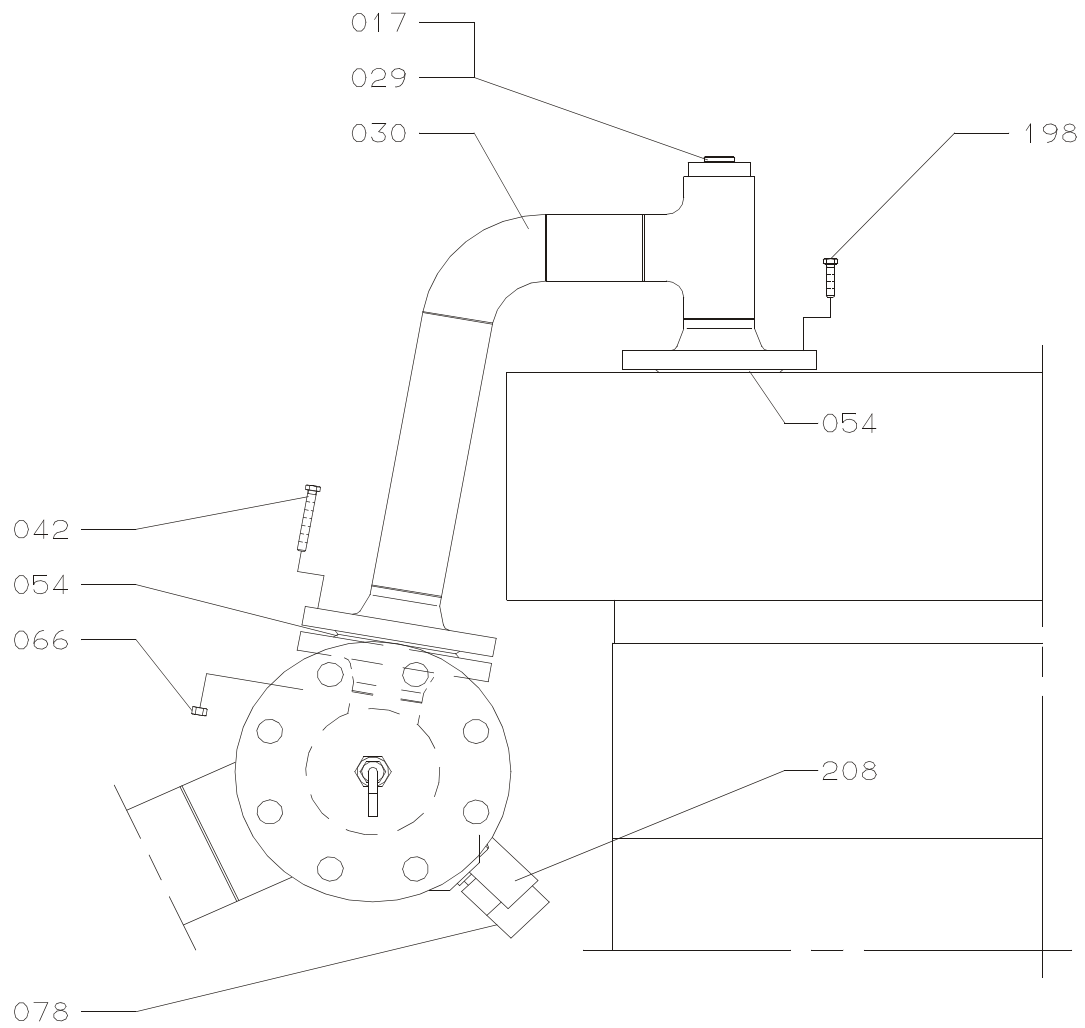

Item No.	Item Description
017	Plug screw
029	Gasket
030	Starting air pipe, complete
042	Screw
054	Gasket
066	Nut
078	Bursting cap, complete
091	Screw
101	Check plate
113	Wing nut
125	Screw
137	Washer
150	Bursting cap cover
162	Perforated cylinder
174	Housing
186	Bursting disc
198	Screw
208	Safety cap

Item No.	Item Description