

SAFETY PRECAUTIONS *For detailed sketch, see 900-2*

☒	Stopped engine
☐	Shut off starting air supply – <i>At starting air receiver</i>
☐	Block the main starting valve
☐	Shut off starting air distributor/distributing system supply
☐	Shut off safety air supply – <i>Not ME-engines</i>
☐	Shut off control air supply
☐	Shut off air supply to exhaust valve – <i>Only with stopped lubricating oil pumps</i>
☐	Engage turning gear
☐	Shut off cooling water
☒	Shut off fuel oil
☐	Stop lubricating oil supply
☐	Lock the turbocharger rotors

Data

Ref.	Description	Value	Unit



The task-specific tools used in this procedure are shown on the plates at the end of this chapter or in the chapters indicated by the first three digits in the plate number, e.g. **P90951** refers to chapter 909.

Plate	Item No.	Description

1. During running of the engine, check if there are any leaks.

If a leak occurs, replace the O-ring inside the relief valve. See *separate instructions from the valve manufacturer*.

2. If work involving risks of mechanical damage to the flame arrester has taken place, a visual inspection of the flame arrester should always be performed before starting the engine.


Check on the whole circumference that all the plates in the flame arrester are evenly distributed and that no local openings exist.

If one or more plates in the flame arrester are damaged, the relief valve must be disassembled and the flame arrester replaced. See *separate instructions from the valve manufacturer*.

Note!


The complete flame arrester has to be replaced after a crankcase explosion.

1.

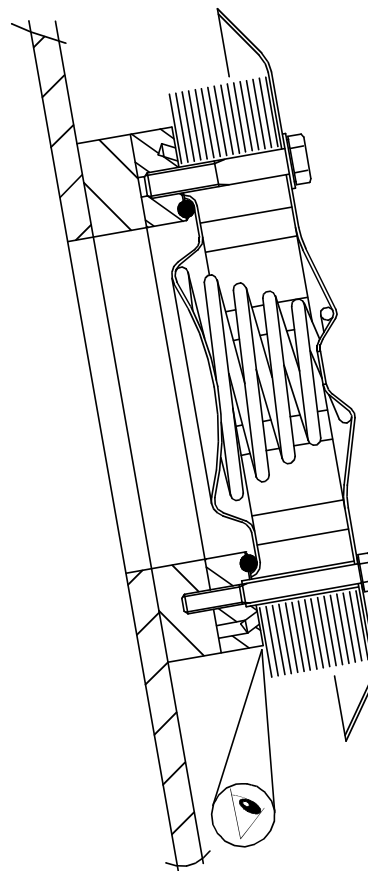

XZ911-2.1 209 01

2.

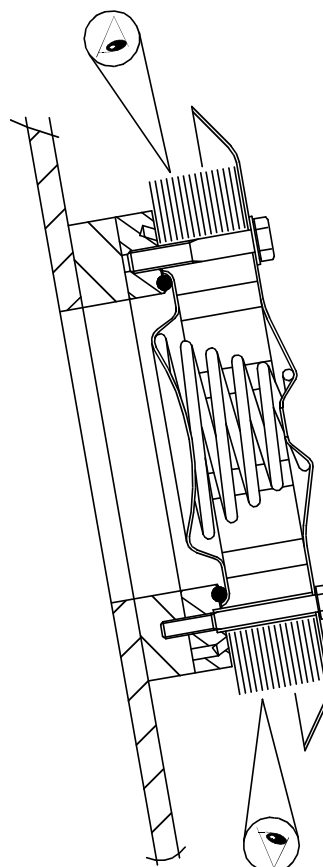

XZ911-2.1 207 03

SAFETY PRECAUTIONS

☒	Stopped engine
☒	Block the starting mechanism
☒	Shut off starting air supply
☒	Engage turning gear
☐	Shut off cooling water
☐	Shut off fuel oil
☐	Shut off lubricating oil
☒	Lock turbocharger rotors

Data

Ref.	Description	Value	Unit

The task-specific tools used in this procedure are shown on the plates at the end of this chapter or in the chapters indicated by the first three digits in the plate number, e.g. P90951 refers to chapter 909.


Plate	Item No.	Description


1. The scavenge air receiver safety valve is calibrated at the factory and does not require any adjustment.
2. Check the scavenge air receiver safety valve by loosening the counter nut and turn the forced opening screw to open the valve approx. 10 millimetres.

Use a piece of cloth to wipe out any dirt from the O-ring packing and close the valve again. Tighten the counter nut.

If this operation cannot be performed smoothly, the safety valve must be dismantled and cleaned.

2.

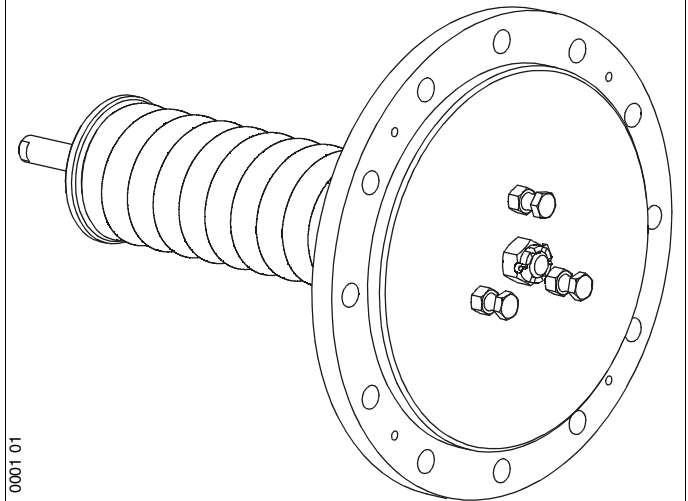

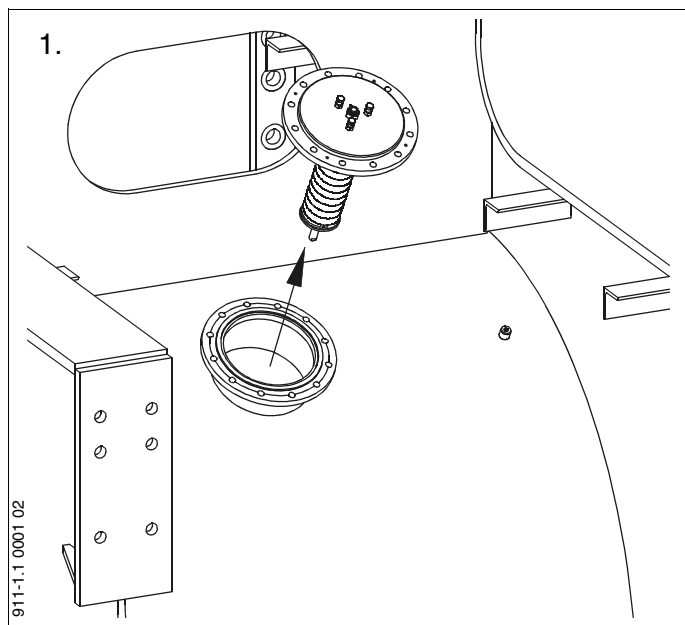

1. Dismount the safety valve from the scavenge air receiver.

1. Remove the split pin.

Unscrew the nut thereby relieving the spring tension.

Remove the nut, spring retainer and washers.


Keep count of the washers.

Pull out the spring.

2. Pull out the valve flap with spindle. If the O-ring seal is damaged remove it without damaging the O-ring groove.


3. Clean the metal surfaces thoroughly.

1.

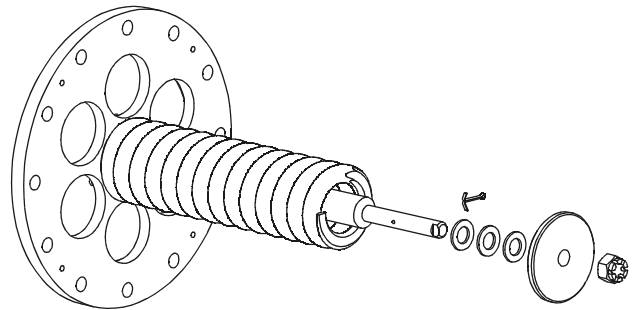


911-1.1 0001 03

2.

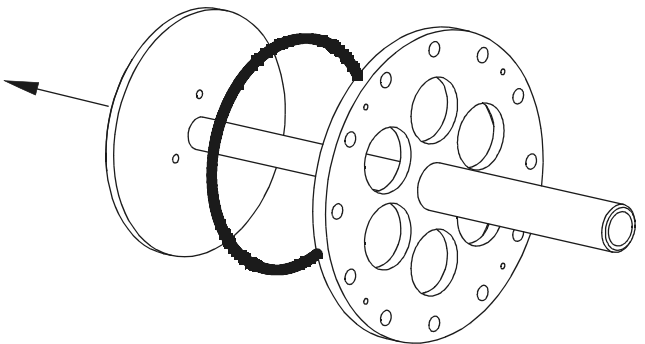

911-1.1 0001 04

4.

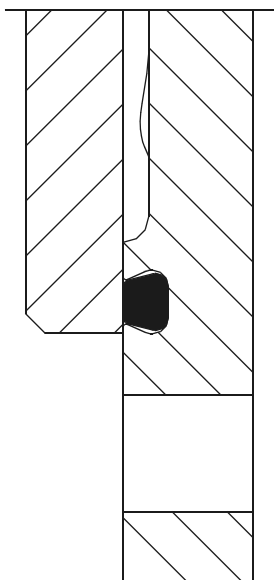

4. If the O-ring seal has been removed mount a new one using Locktite type AVX and Loc-tite activator type T or similar.

5. Push in the valve flap and spindle while taking care not to damage the O-ring seal.


6. Mount the spring, spring retainer and all the washers.

Tighten the nut until the split pin can be mounted.

7. Check the valve according to 91101.1.


911-1.1 0001 05

5.

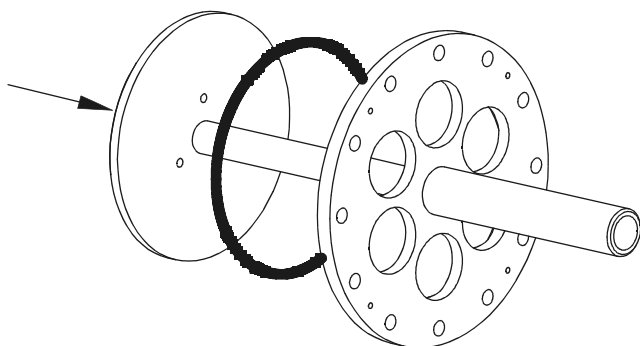

911-1.1 0001 01

6.

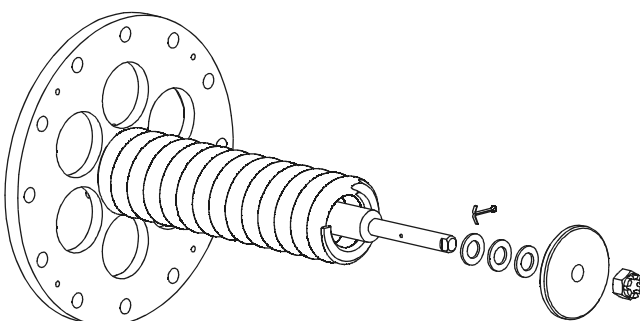

911-1.1 0001 03

1. Mount the safety valve on the scavenge air receiver.

