


Lime Microsystems Limited

Surrey Technology Centre
Occam Road
The Surrey Research Park
Guildford, Surrey GU2 7YG
United Kingdom



Tel: +44 (0) 1483 685 063
e-mail: enquiries@limemicro.com

LMS8001 Companion Board Windows 11 Driver Installation

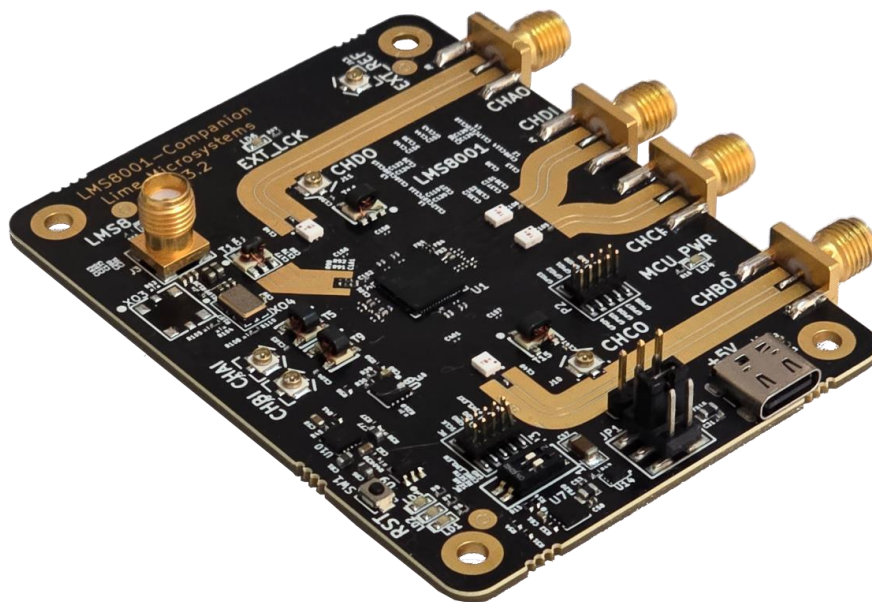

The information contained in this document is subject to change without prior notice. Lime Microsystems assumes no responsibility for its use, nor for infringement of patents or other rights of third parties. Lime Microsystems' standard terms and conditions apply at all times.

DOCUMENT REVISION HISTORY

The following table shows the revision history of this document:

Date	Version	Description of Revisions
21/09/2026	1.0.0	Initial version created.
05/10/2626	1.1.0	Figures updated, text updated.

Contents

1	Observed Issue	1
2	Solution	3

1

Observed Issue

On Windows 11, when the evaluation board is connected to the computer, Device Manager shows the following:

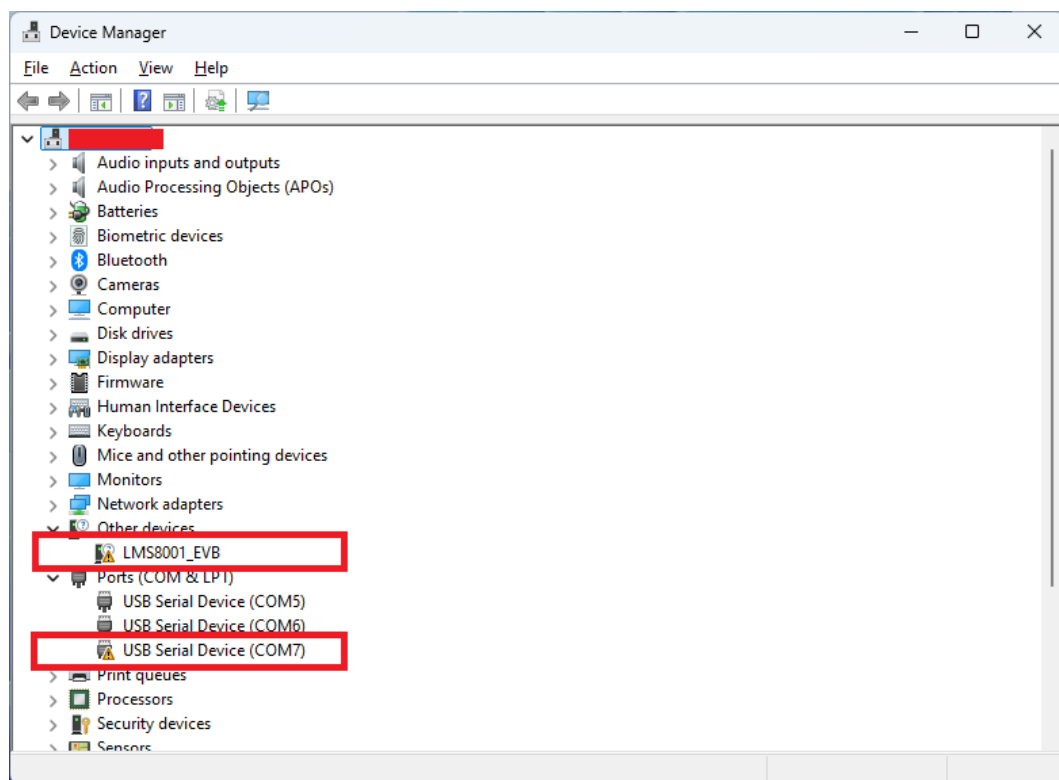


Figure 1.1: Device Manager before driver installation

When the driver installation was tried using the **dpinst_amd64.exe** file, the installation failed.

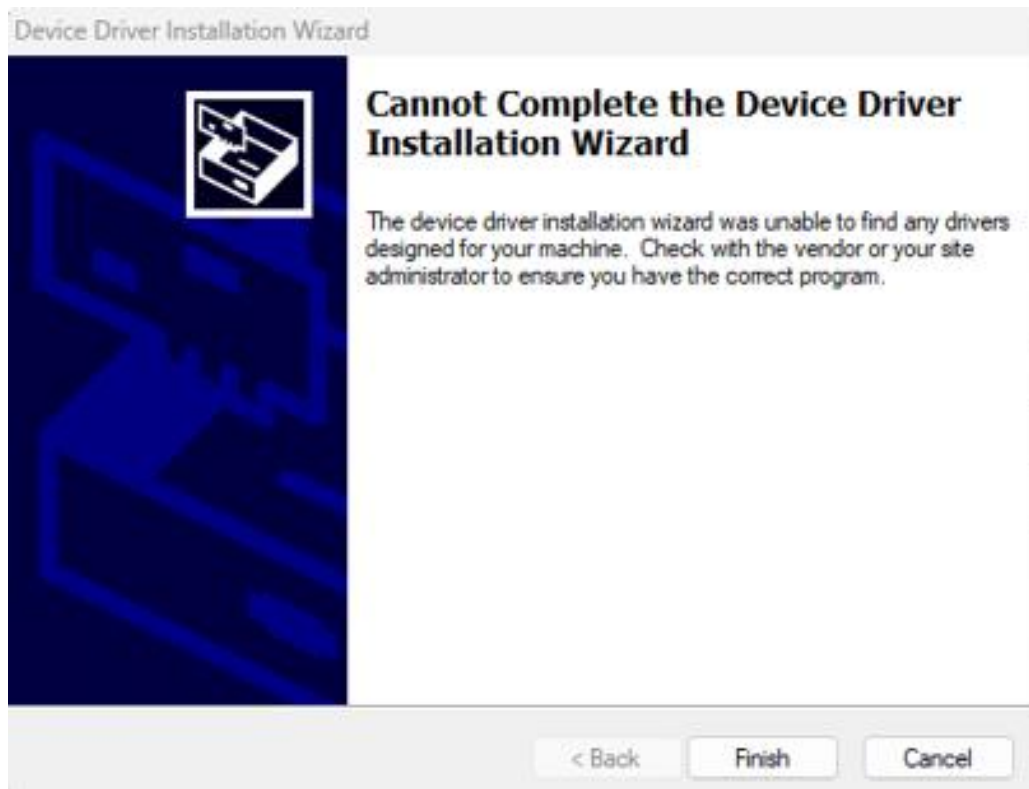


Figure 1.2: Driver installation failed

2

Solution

Install the driver manually. Download the **.inf** and **.cat** files from the link below:

https://github.com/myriadrf/LMS8001-Companion/tree/master/drivers/STM32_VCP/Win8

Name
..
dpinst_amd64.exe
dpinst_x86.exe
stmcdc.cat
stmcdc.inf

Figure 2.1: Marked files for manual driver installation

Run Windows Terminal as Administrator, navigate to the directory containing the **.inf** and **.cat** files, and run the following command:

pnputil /add-driver ".\stmcdc.inf" /install

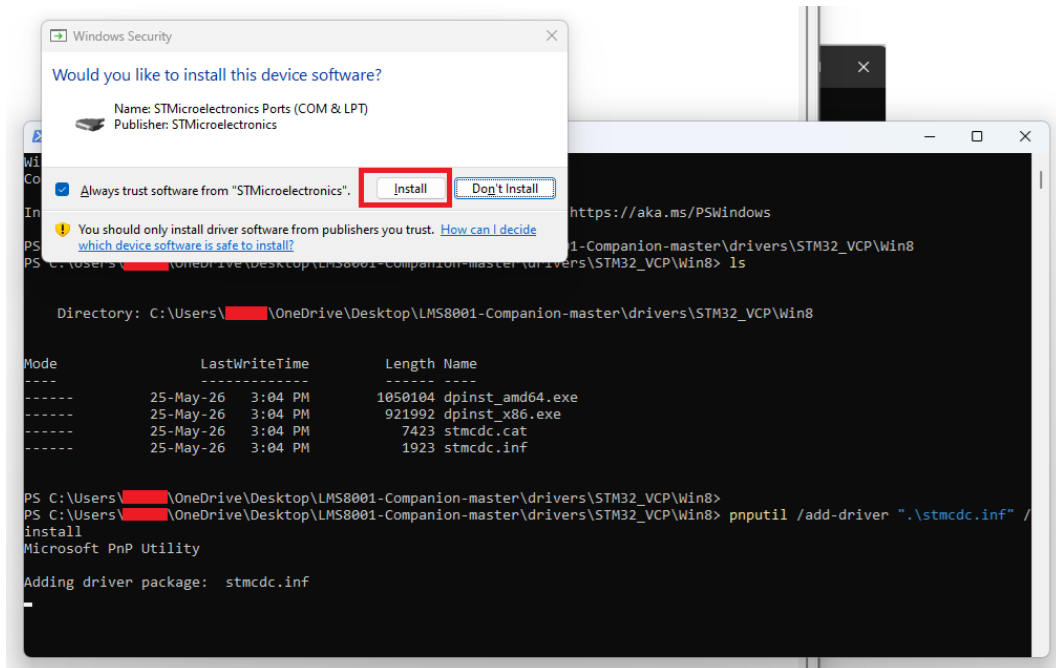


Figure 2.2: Windows Terminal commands for manual driver installation

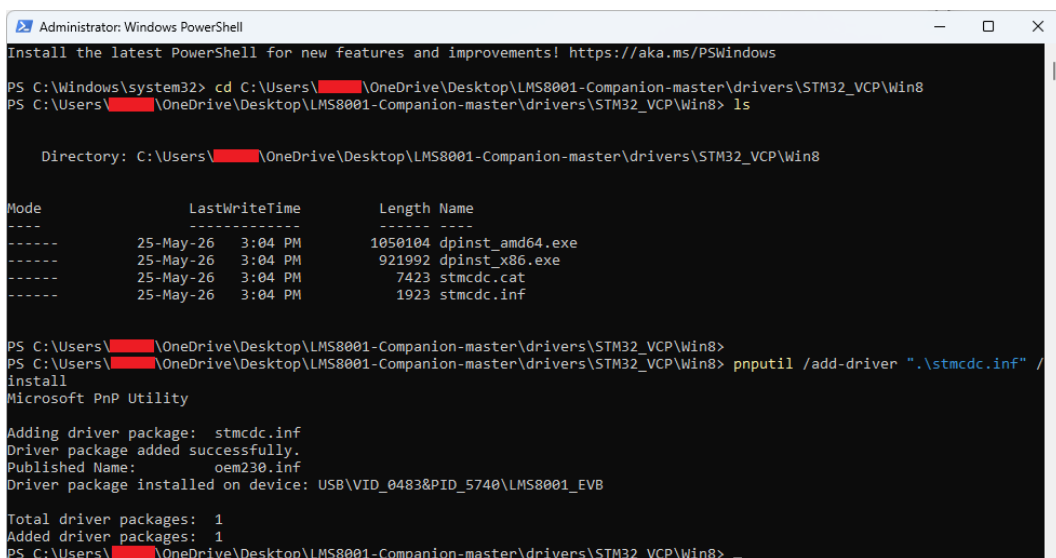


Figure 2.3: Windows Terminal after successful driver installation

After this, Device Manager should show that the evaluation board is detected and that communication through the corresponding COM port has been established.

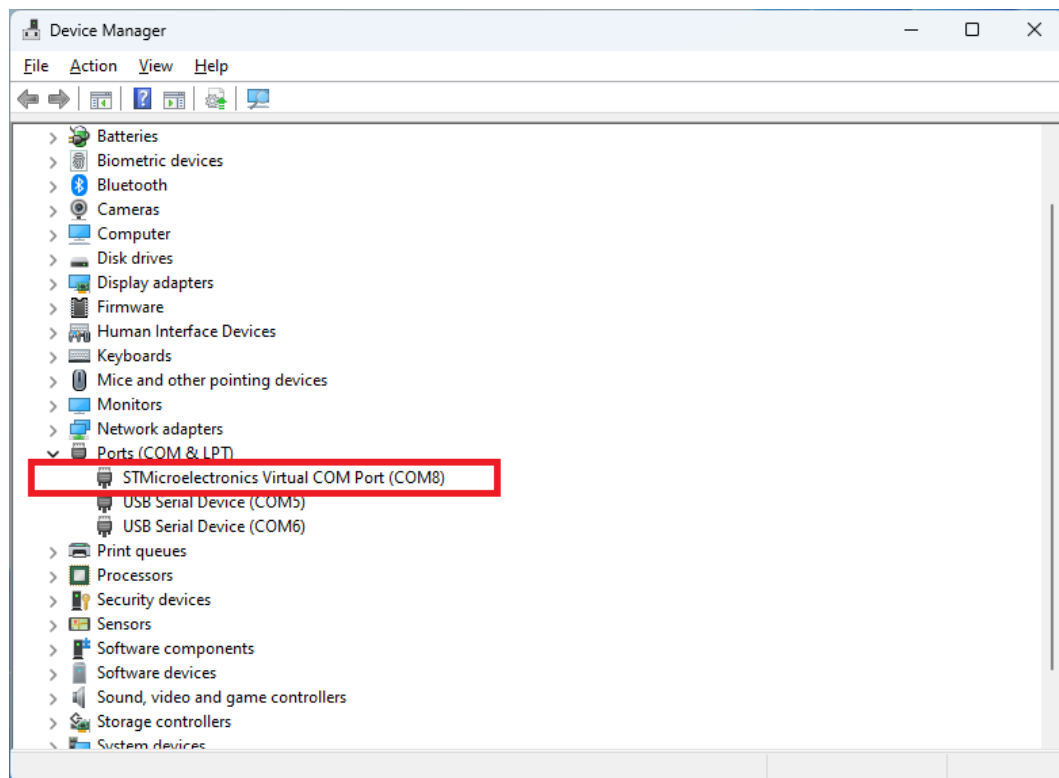


Figure 2.4: Device Manager after successful driver installation

After successful driver installation, LimeSuite NG (or the lms8suite GUI) can be started, and the board can be connected to the GUI.

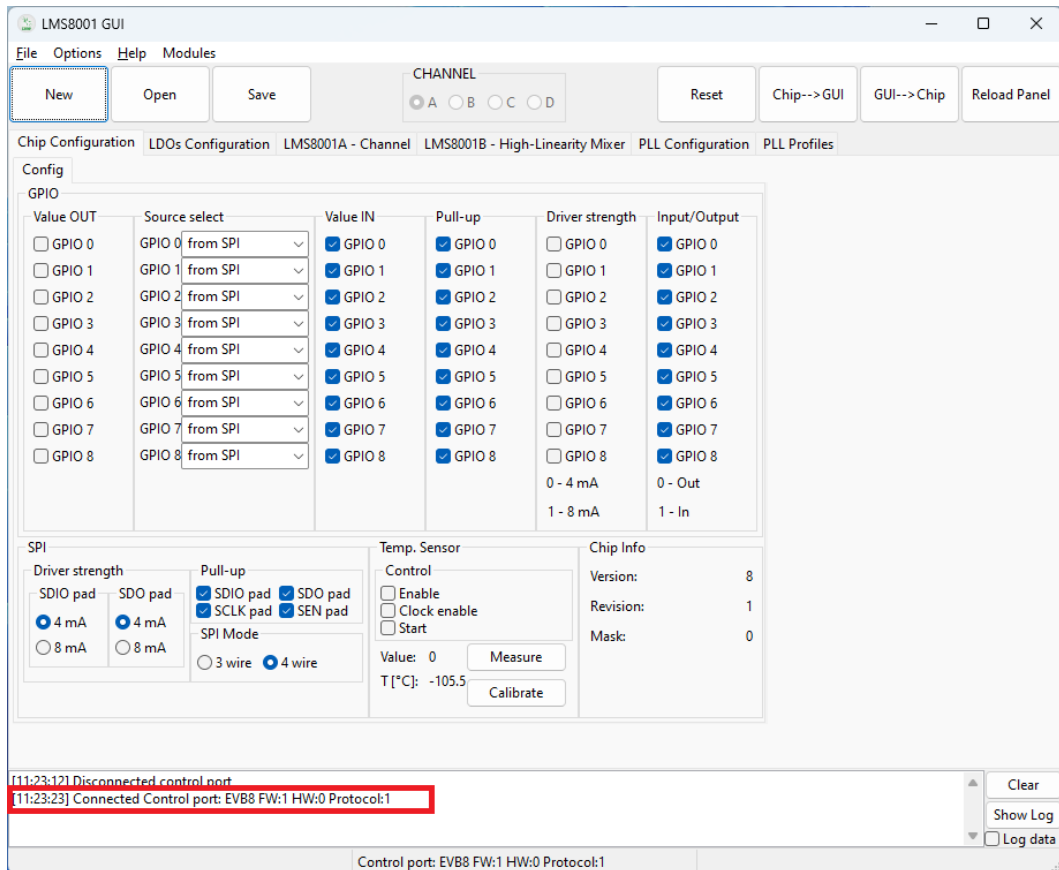


Figure 2.5: GUI after connecting to the board