
EQ Maintenance Manager

Portable Windows application - Beginner user guide

1. This guide explains installation, project setup, account login, maintenance work, approvals, printing and backups.
2. Use the portable Windows ZIP supplied with this guide. Keep all extracted application files together.
3. No Python installation, coding or developer tools are required by end users.

Remember: For administrators, coordinators, technicians, drivers and other authorized users. Screens marked "illustrative" come from the earlier web interface; the Windows login uses real accounts.

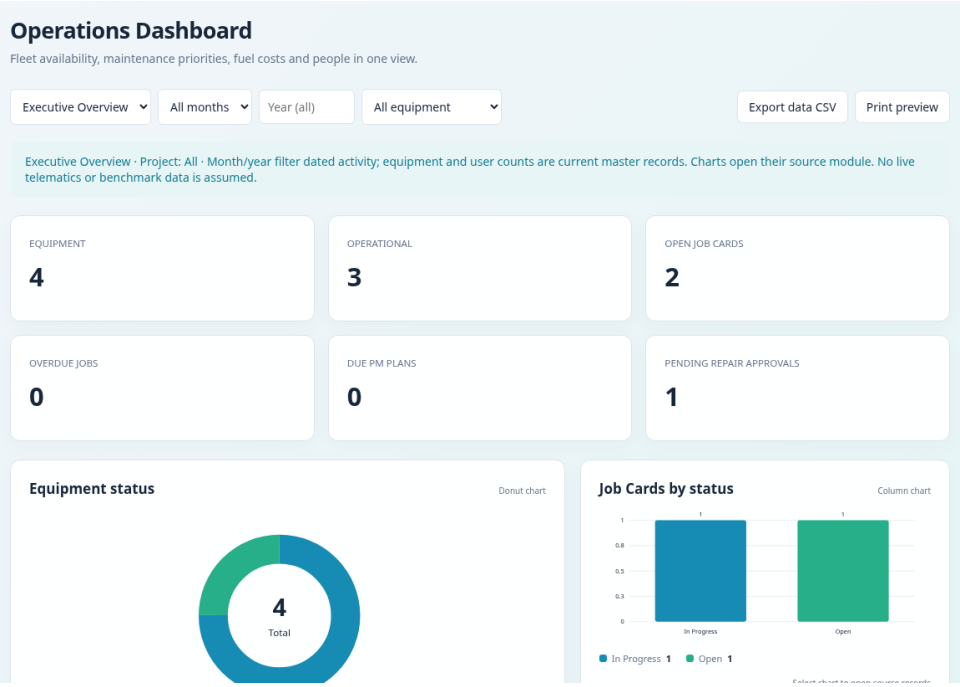

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

1. Unzip and open the Windows app

1. Save the supplied portable ZIP to your computer. Right-click the ZIP and choose Extract All.

2. Choose a folder you can write to, such as Documents\EQMaintenance. Finish extraction before starting the app.

3. Open the extracted folder and launch EQMaintenanceManager.exe. Do not run the executable from inside the ZIP.

4. Keep the executable, supporting files and Data folder together. Do not move only the EXE or delete files that came with it.

5. If Windows shows a security message, check that you received the package from your approved administrator. Follow your organization's software policy.

Remember: The screenshots in this guide show the application. They are not pictures of Windows Explorer or operating-system security dialogs.

2. First administrator and project setup

1. On the first-run setup screen, enter the project code, project name and site/location for your organization.

2. Create the initial administrator account with a UserID and your own password. Use at least 12 characters. There is no default password.


3. Record the project code and administrator UserID securely. Do not share the administrator password with other users.

4. Open Administration > User Settings. Use Project master to review or add projects. Use User master to create individual accounts.

5. For every account, set the name, UserID, user category, project assignment and Active status. Set the account password securely.

6. Create separate accounts for each approver; a requester must not use another person's account to approve their own work.

Remember: Before submitting requests, configure Approval Authority with independent primary and final approvers. The first administrator creates these individual accounts and assigns them to the project.

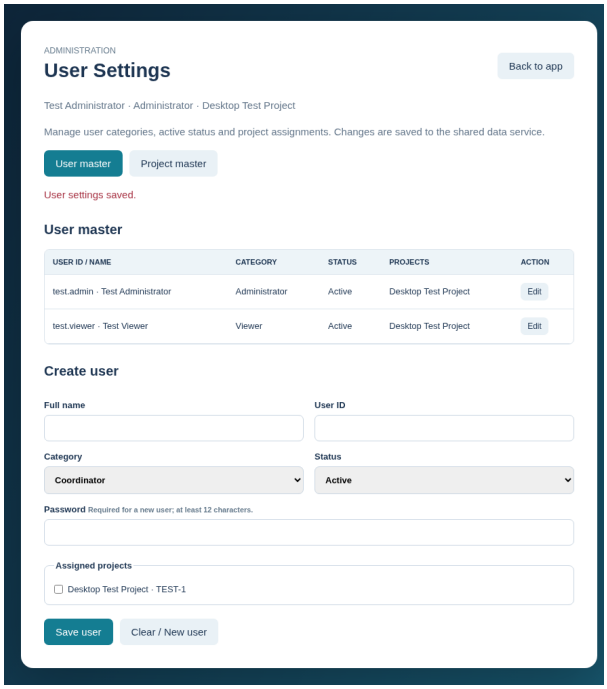


Windows application screenshot

3. Sign in with your own account

1. Select the Project you are authorized to use.
2. Select your User Category.
3. Enter your UserID and password. Choose Sign In.
4. Check that the displayed project and account are correct before entering or approving records.
5. When finished, sign out. To perform the next approval stage, the assigned reviewer must sign in with their own account.

Remember: The Windows application does not use an "acting user" selector. Do not follow account-switching controls that may appear in older demo screenshots. If login fails, ask an administrator to check category, project assignment, Active status and your credentials.

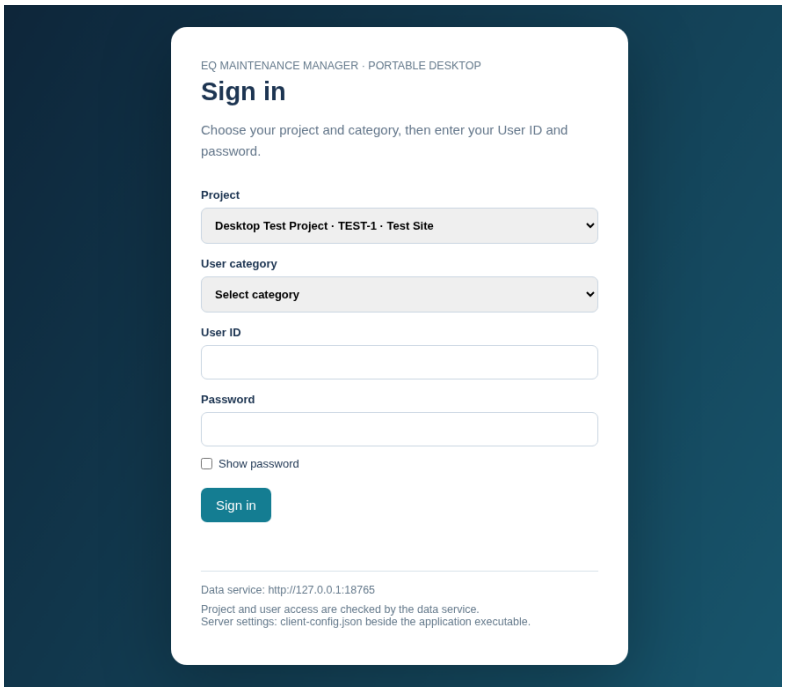


Windows application screenshot

4. Find your way around the dashboard

1. Open Overview > Dashboard after signing in.
2. Choose Executive Overview, Maintenance, Fleet, Fuel & GPS or Productivity.
3. Apply project, equipment, month and year filters to narrow the records shown.
4. Read the KPI cards, then select a chart to open its source records.
5. Use the menu groups to move between maintenance, planning/inventory, fleet, documents and administration.

Remember: Empty charts mean there is no matching data. A chart does not establish a live GPS feed or measured downtime unless those source records exist.

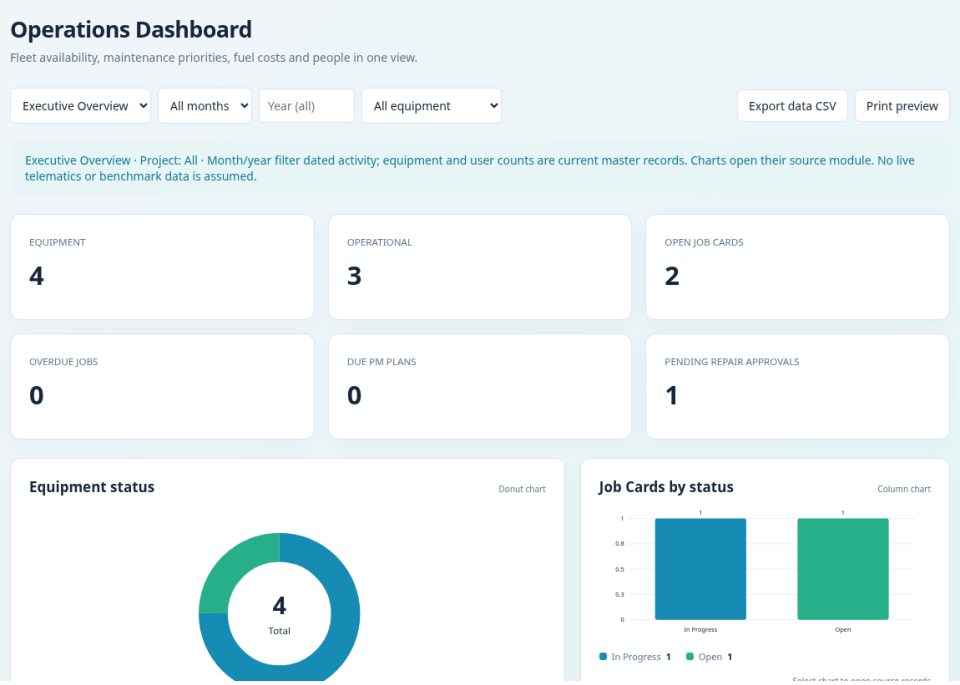


Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.


5. Create and maintain equipment

1. Open Fleet Management > Equipment & User Master > Equipment.
2. Choose + Equipment. Enter the equipment name, category, serial number, location and project.
3. Enter SAP Equipment no and SAP Asset number exactly as supplied. Keep leading zeros; they are identifiers, not quantities.
4. Add registration/plate, manufacturer, model, meter reading and meter unit (km or hours).
5. Set equipment status, criticality and document-expiry dates, then choose Save record.
6. Use Edit to correct a master record. Use History or Print preview to review its maintenance information.

Remember: Check the project and meter unit before saving. Fuel calculations and maintenance records depend on the correct equipment identity and units.

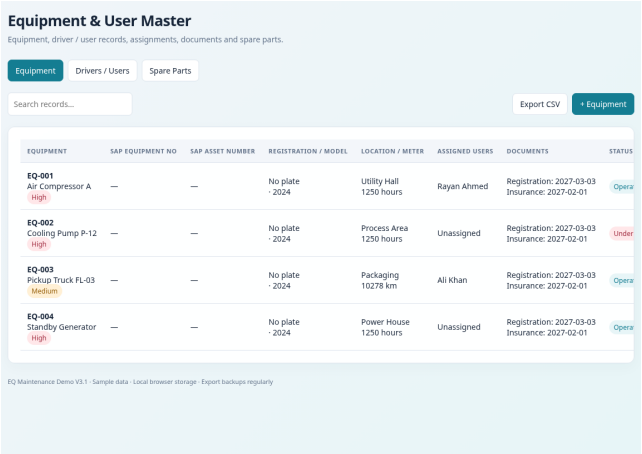

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

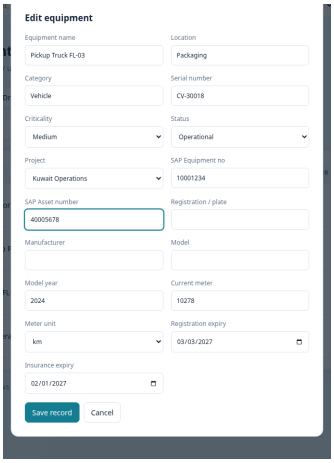


Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

6. Register drivers and equipment users

1. Open Equipment & User Master > Drivers / Users.
2. Choose + Driver / User. Enter the person's name, role, contact and license/authorization details.
3. Set license expiry, equipment assignment and Active/Inactive status. Save the record.
4. Update the assignment when a vehicle or equipment user changes.
5. Use Administration > User Settings > User Master for application login accounts. A driver record alone does not create a login or grant approval authority.

Remember: Driver/operator records describe who uses equipment. Login accounts control access to the application. Administrators must configure each separately.

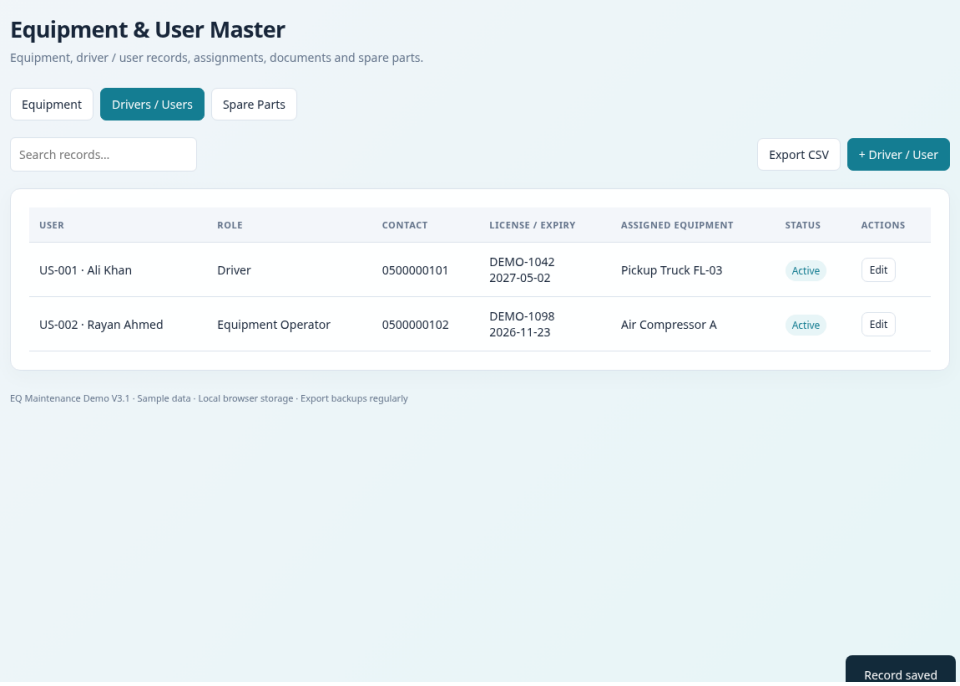


Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.


7. Enter a Repair Request

1. Open Maintenance Operations > Repair Requests and choose + Repair Request.
2. Select the equipment and enter a clear title and fault/service description.
3. Complete the request details: date, BET code, project/department, location, registration/serial, driver/operator and PF number as applicable.
4. Enter kilometers or worked hours in the correct field. Choose the request type and operational status.
5. Enter Requested by details. Do not fill in another person's approval signature.
6. Save the record. It remains a Draft until submitted. Recheck equipment, description and requester information.

Remember: All repair and preventive-maintenance work must start with a Repair Request. A saved Draft is not an approved Job Card.

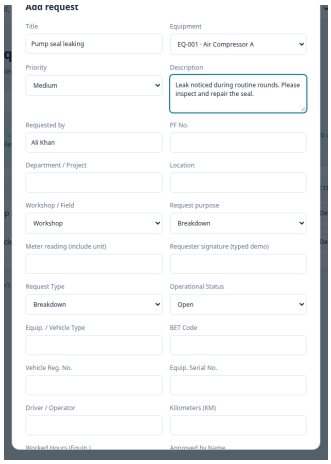

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

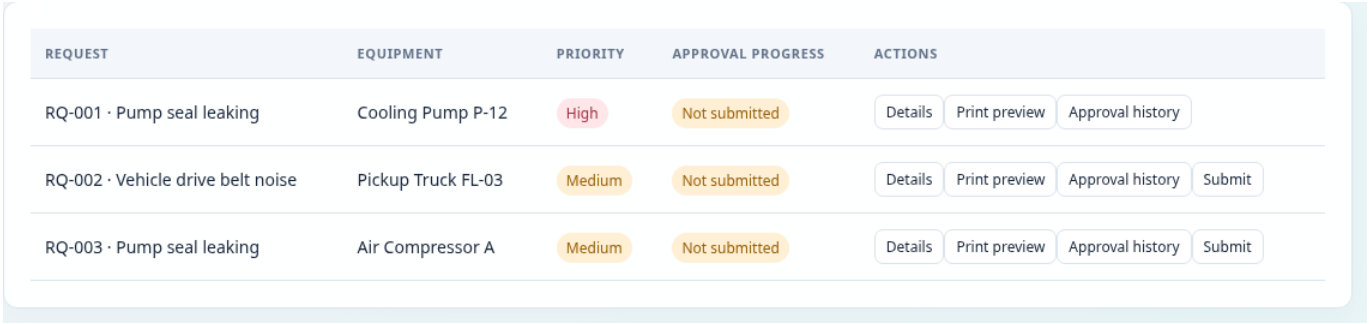

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

8. Submit, review and approve a request

1. The requester opens the Draft and chooses Submit. The request enters the approval queue.

2. The assigned Vehicle / Equipment Coordinator signs in with their own account, opens the request and reviews its details.


3. The coordinator approves the current stage, or rejects it for correction. The first approval does not create a Job Card.

4. The coordinator signs out. The assigned Team Leader signs in and completes the final review.


5. After final approval, check the linked Job Card number. Do not create another card for the same request.

6. Use Approval history to see the recorded reviewer, stage and time. A requester cannot approve their own request.

Remember: Use the current assigned account at each stage. If approval is blocked, check the assigned reviewer, project, account permissions and record state; do not share passwords to bypass the restriction.

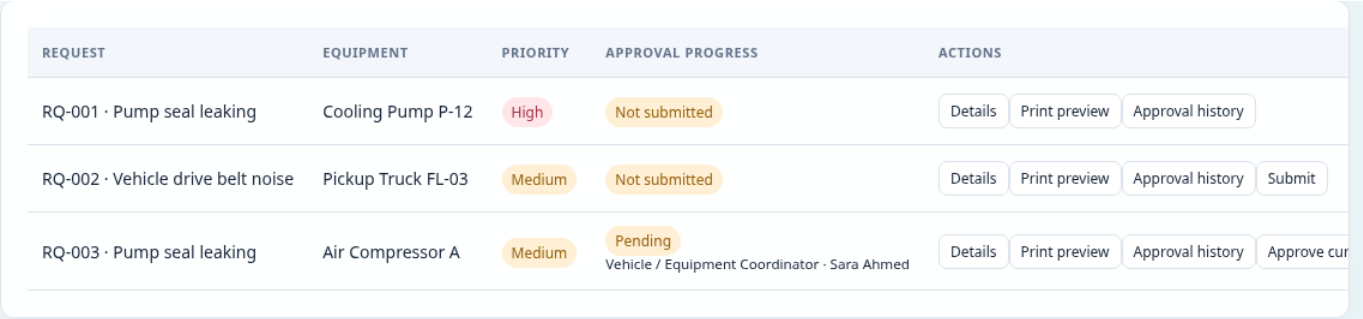

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

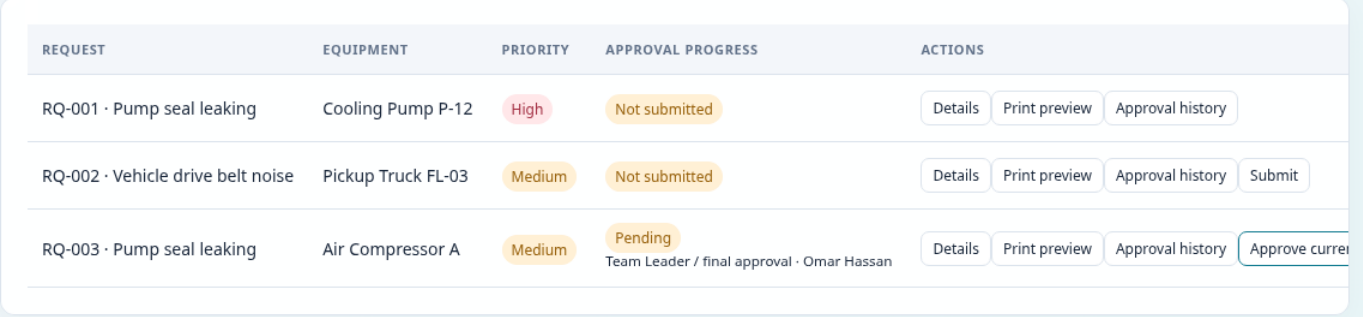


Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

9. Start work from an approved Job Card

1. Open Maintenance Operations > Job Cards. Locate the card generated from the approved Repair Request.
2. Check equipment, fault description, priority, due date and technician assignment.
3. Choose Start when the work begins. Record the work performed, parts, labor hours and any findings.
4. Open the Job Card entry/document when additional required form details are needed, including manpower and vehicle condition.
5. Use the condition diagram to mark a dent, scratch, broken part or crack; add a note and record accessories.

Remember: Direct Job Card creation must not bypass Repair Request approval. Preserve the request-to-card link so the history stays traceable.

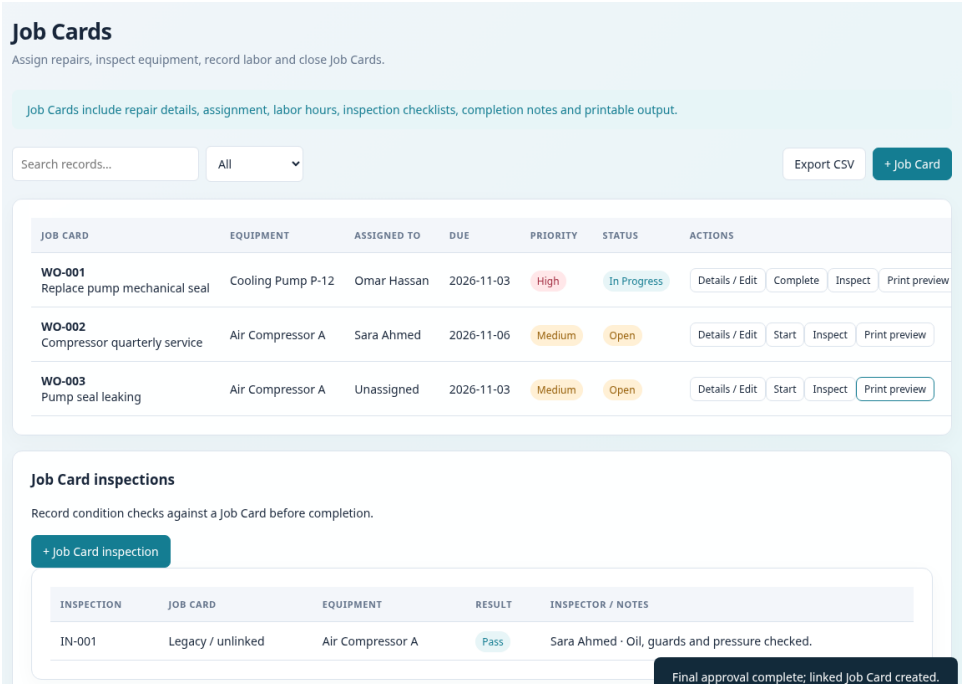


Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.


10. Inspect, submit completion and close

1. Open the Job Card and choose Inspect. Record the checklist results, inspector and findings.
2. Save a passing inspection only after the equipment actually passes. Resolve failures and inspect again before completion.
3. The technician chooses Complete, enters actual labor hours and completion notes, and submits completion.
4. The card enters Awaiting Approval; submission alone must not close it.
5. The technician signs out. The assigned supervisor signs in and reviews the work and current inspection.
6. The supervisor chooses Approve completion. Check Completed status and the approval history.

Remember: A passed inspection and independent supervisor approval are required. If the inspection is failed or no longer current, correct the problem before closure.

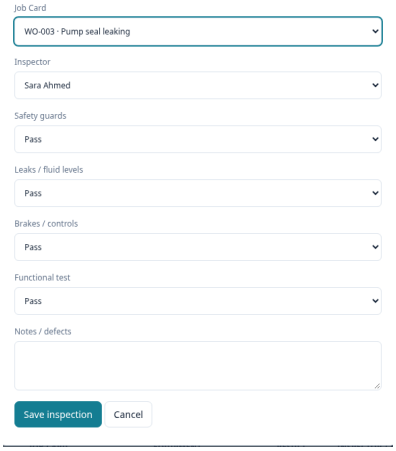

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

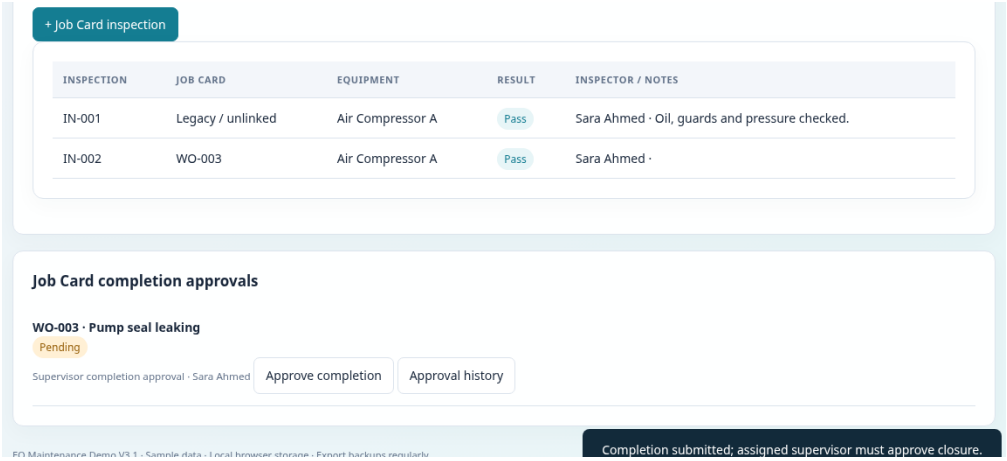

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

11. Plan preventive maintenance

1. Open Planning & Inventory > Preventive Maintenance. Add or edit a plan for the correct equipment.


2. Enter the task, interval, next due date and technician assignment. Follow the approved maintenance procedure and OEM requirements.

3. Generate the linked preventive Repair Request when the plan is due. Submit the request through its approval stages.

4. Work from the Job Card created after approval, then inspect and submit completion for supervisor review.

5. Use Maintenance Calendar and the annual schedule to review upcoming work and required sign-offs.

Remember: Preventive maintenance does not skip request approval. Do not generate a second request while an active linked request already exists. Verify configured hour/date intervals against the approved procedure.

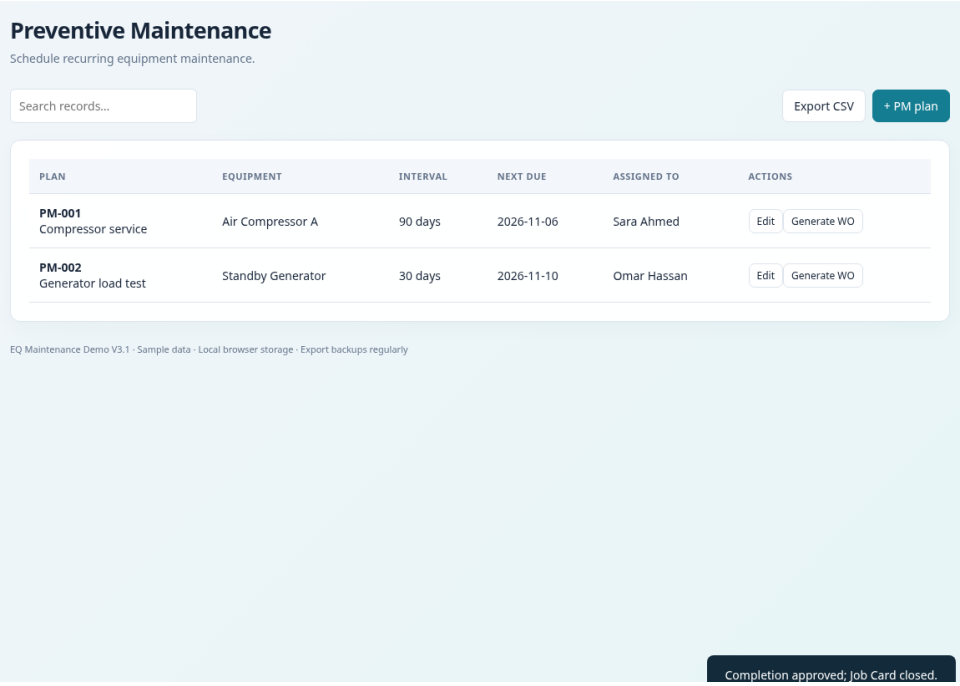


Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

12. Record GPS positions and driver trips

1. Open Fleet Management > GPS & Driver Log. Choose + Trip / GPS record.
2. Select equipment and driver. Enter the trip date, start/stop locations and start/stop times.
3. Enter start and stop odometer readings. Stop KM must not be less than Start KM.
4. Record the position coordinates, fuel added in liters and remarks where available. Save the trip.
5. For bulk entry, download the CSV template, fill its exact headers, then import the file. Review the imported records for duplicates.
6. Choose Driver Log > Print preview to review the official landscape report, including Total KM and Fuel Added (Ltr).

Remember: This application records entered or imported positions. It is not automatically connected to a live GPS device or background tracking feed.

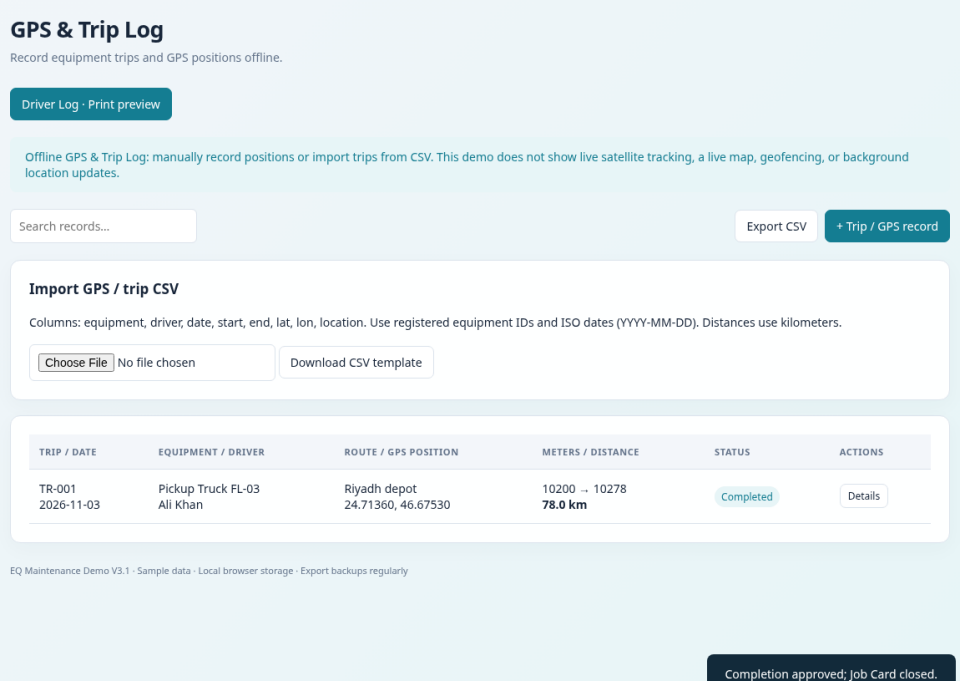


Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

13. Enter fuel and review consumption

1. Open Fleet Management > Fuel Consumption and choose + Fuel entry.
2. Select the equipment and driver; enter date, meter reading, liters, unit price and supplier/station.
3. Indicate whether the tank was filled completely, then save.
4. Check recorded fuel cost and the equipment consumption result.
5. For kilometer equipment, review L/100 km; for operating-hour equipment, review L/hour. Correct the master meter unit if it is wrong.

Remember: Consumption requires a valid interval between full fills. One fill, partial-only records or invalid meter differences may show insufficient data. Do not enter invented readings to force a result.

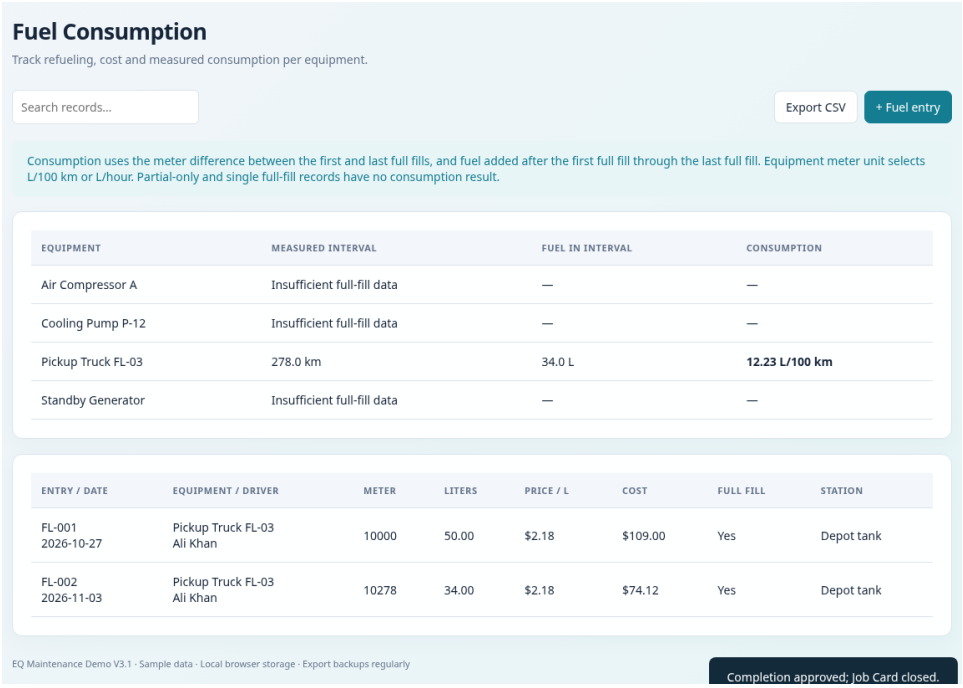

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

14. Raise and fulfill a Purchase Request

1. Open Planning & Inventory > Purchase Requests. Add the spare part, quantity, requester and justification.

2. Save as Draft, then submit for review.


3. The assigned technical/budget reviewer signs in and approves the current stage. The assigned procurement approver then signs in and completes approval.

4. Do not receive stock before all required approvals are complete.

5. After actual material receipt, the authorized user chooses Fulfill / Receive and verifies the stock movement.

6. Review the PR approval history and stock quantities. Do not repeat a receipt just because a screen took time to refresh.

Remember: A Purchase Request is an internal approval record, not proof that goods were ordered or delivered. Shared-service transaction controls must prevent duplicate receipt and stock updates.

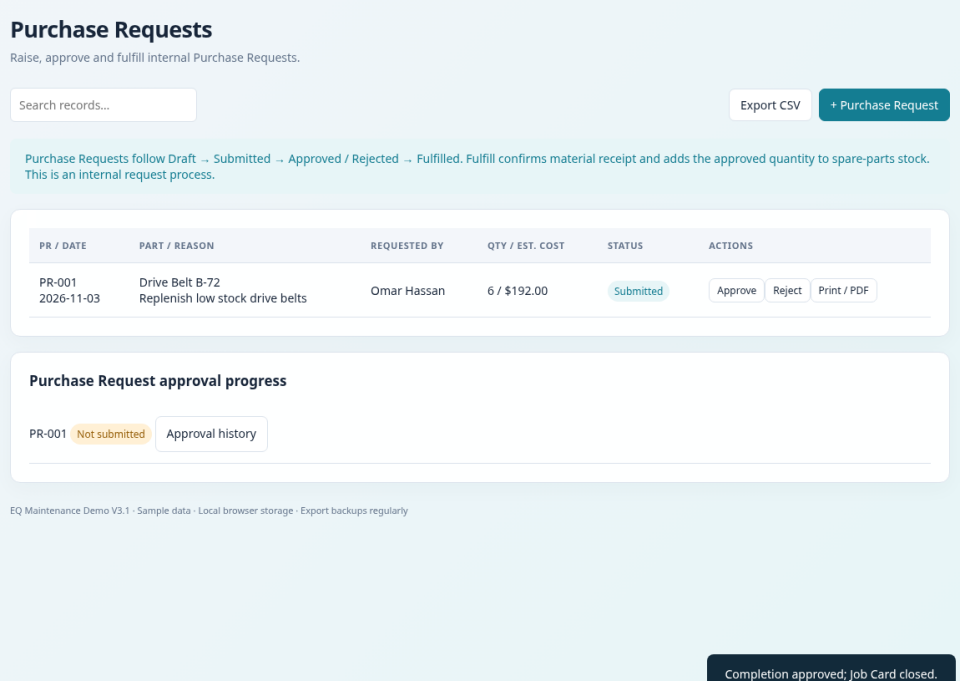


Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

15. Use the controlled Document Center

1. Open Analytics & Documents > Document Center. Choose the required form.
2. Complete the entry fields and repeating rows; use the revised company layout shown in preview.
3. Save Draft while information is incomplete. Submit only when the required preparation fields are complete.
4. Assigned reviewers sign in with separate accounts and record their decisions. For the annual schedule, follow HoD I&C review then HoD Mechanical approval.
5. Approved documents retain their revision and sign-off history. Use a new controlled revision rather than silently changing an approved record.

Remember: Forms: FR_EQ_001 Maintenance Record; 002 Schedule; 003 Diesel Service; 004 Repair Request; 005 Job Card; 006 Driver Declaration; 007 Handover; 008 Driver Log. Procedure revision 02 is separate from the form revisions.

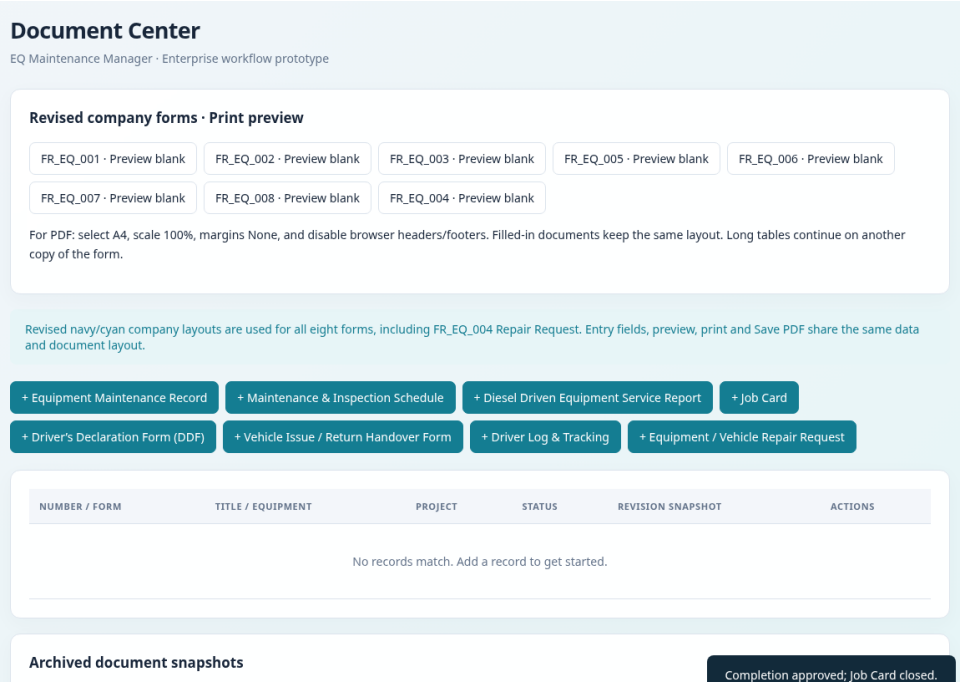

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

16. Preview, print and save a PDF

1. Open the required record and choose Print preview. For unsaved form entry, choose Print preview current form.

2. Check the company identity, form number/revision, equipment, values, table rows and approval state before printing.


3. Choose Print to send the document to an available printer. In the portable Windows app, choose Save PDF to open a file-save dialog and save the PDF directly.

4. Select A4, 100% scale, margins None and turn browser headers/footers off where those controls are shown. Check orientation: forms 001, 002 and 008 are landscape; the other forms are portrait.

5. Choose the destination folder and filename, then save. Open the saved PDF to verify every page.

6. Close the preview to return to entry. If entries are highlighted as too long, shorten/correct them before printing; do not print clipped content.

Remember: The screenshot shows the in-app preview. The portable app saves a PDF directly; the earlier browser demo uses its print dialog.

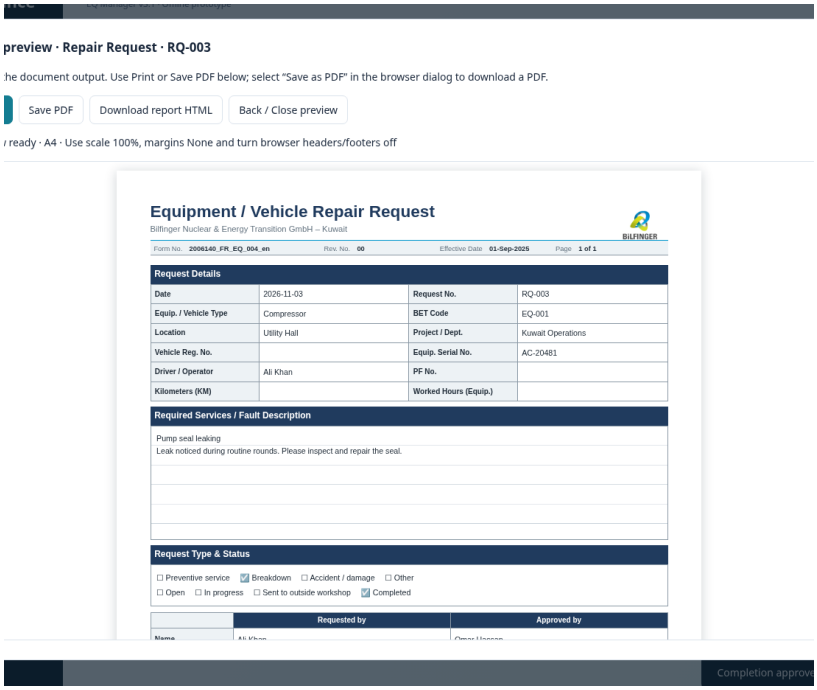

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

17. Branding and document settings

1. An authorized administrator opens Administration > Branding & Layout.


2. Upload the approved logo and check company name, alignment, size and print settings. Preview the result before activation.

3. Open Document Templates to review form numbers, revisions, effective dates, page orientation and layout settings.

4. Change controlled settings only under your organization's document-approval process.

5. Test a newly created document after a branding/template change. Check existing documents separately because saved revisions may retain their original settings.

Remember: Do not change an official form number merely to make it look current. A dark application theme should not change the approved printed document style.

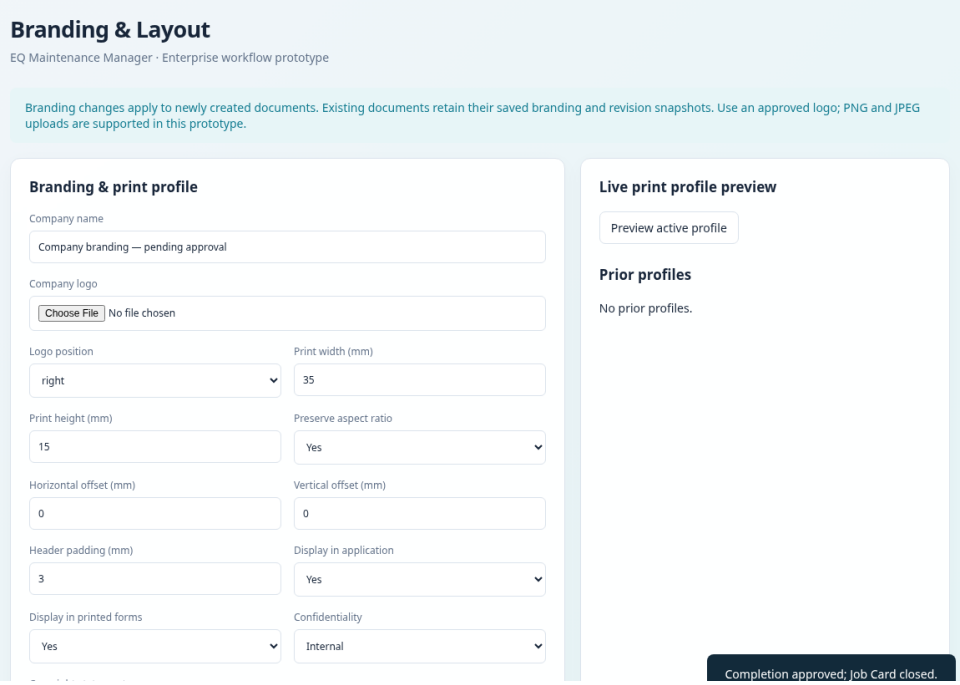

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

18. Back up, update and work together

1. Before an update, sign out and close the application. Back up the Data folder in the extracted portable package. Keep its files together.

2. Where the app provides Export backup, export a JSON backup as an additional recovery copy. Store backups securely and label them by date.


3. Extract a new portable release to a separate folder. Preserve your existing Data folder; do not replace it with an empty sample copy. Follow the release-specific migration instructions.

4. For simultaneous users, administrators must configure one shared service and one authoritative data store. Independent local Data folders do not synchronize automatically.

5. The local service normally uses localhost:8765. For network use, an administrator configures a secured LAN/HTTPS service and points each client's client-config.json to that same service.

6. Back up the shared service's data centrally. Do not copy a live database or let several machines write directly to a shared Data folder unless that deployment method is explicitly supported.

Remember: Do not expose an unsecured localhost development service to the Internet. Multiuser capacity is subject to deployment and load testing; this guide does not guarantee 100 simultaneous users.

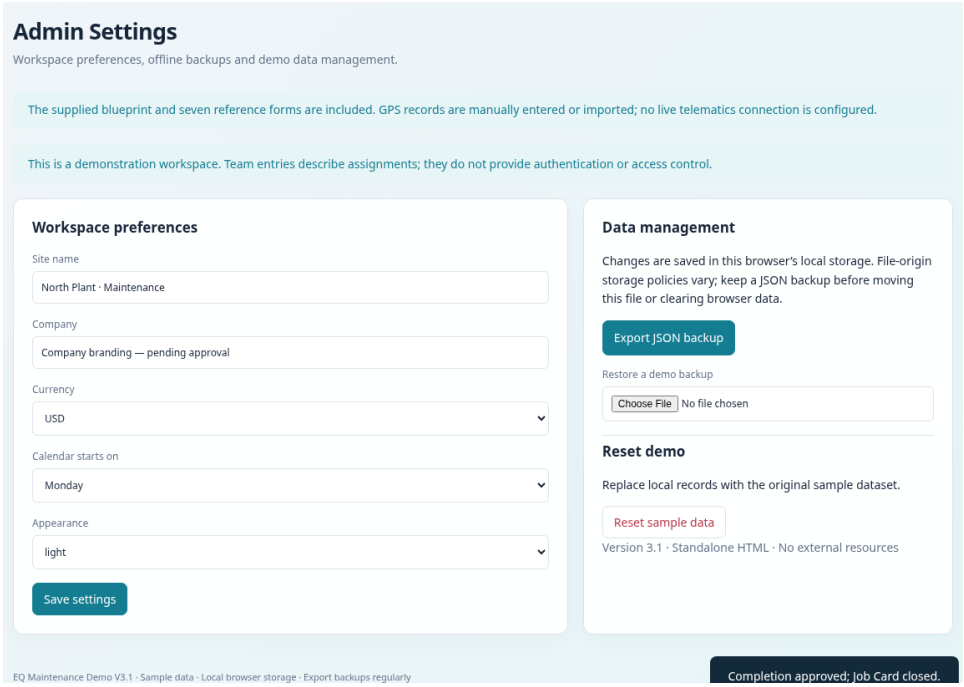

Illustrative application screenshot from the earlier web interface; account controls are intentionally excluded.

19. Import Excel masters and history

1. An Administrator opens Administration > Data Import and chooses Download Excel template. Keep worksheet names and first-row column keys unchanged.

2. Fill the required worksheets. Keep IDs, project codes, UserIDs and SAP numbers as Text to preserve leading zeros. Use ISO dates such as 2026-11-04.


3. Enter sourceProjectCode on every business row. In Users, separate authorized projectCodes with semicolons. Do not enter passwords in the workbook.

4. Choose the completed .xlsx file and select Preview. Review row counts, field errors, duplicate IDs and missing references. Correct the file and preview again until there are no errors.

5. Choose Commit import once. The server saves the validated batch atomically without overwriting existing records. If the preview expires or data changes, run Preview again.

6. Verify imported records. Imported accounts remain Inactive: set each password and activate the account through User Settings > User Master.

Remember: Historical approval rows are evidence, not new live approvals. Opening stock is a reconciled cutover balance; historical Purchase Requests must not post stock again. Back up the authoritative Data before migration. Preview expires after 15 minutes.

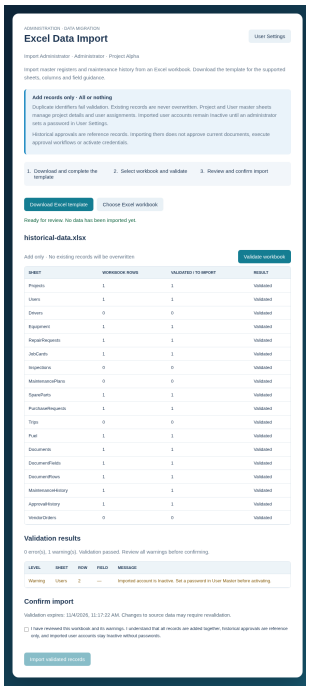

Windows application screenshot

20. Troubleshooting and administrator checklist

1. App will not open: confirm the ZIP was fully extracted and all support files are present. Launch EQMaintenanceManager.exe from the extracted writable folder.

2. Login fails: verify Project > User Category > UserID, then check the password. Ask an administrator to verify the account is Active and assigned to that project/category.

3. Records differ between computers: check client-config.json. Both clients must use the same shared service; separate local instances have separate data.

4. Service unavailable: confirm the service is running, the configured address is correct, and approved firewall/HTTPS settings allow access. Do not disable security controls as a workaround.

5. Approval blocked: check the current stage, assigned reviewer, project permissions, independent-account requirement and inspection state. Open Approval history.

6. Print/PDF incorrect: reopen Print preview, verify the record/template revision, select A4/orientation and review every page before saving.

7. Before asking for support, record the app version, project code, record ID, error text and steps taken. Never send passwords or unneeded personal/medical details.

Remember: Administrator checklist: Project Details configured; individual User Master accounts active; project/category assignments reviewed; named approvers assigned; shared service configured if needed; backup/restore and a complete request-to-close test verified.