



CONFIDENTIAL

Nomadix Nexus



Last Updated
10 January 2025

Table of Contents

#	Section	Page
1	<u>INTRODUCTION</u>	<u>6</u>
1.1	<u>Scope and Purpose</u>	<u>6</u>
1.2	<u>Nomadix Cloud Overview</u>	<u>6</u>
1.3	<u>Documentation Conventions</u>	<u>6</u>
1.4	<u>Further Reading</u>	<u>6</u>
2	<u>NOMADIX CLOUD ACCOUNT MANAGEMENT</u>	<u>6</u>
2.1	<u>Login</u>	<u>6</u>
2.2	<u>Account Creation</u>	<u>7</u>
2.3	<u>Home Page Dashboard</u>	<u>8</u>
2.4	<u>Organization Account Management</u>	<u>9</u>
2.5	<u>User Account Management</u>	<u>11</u>
3	<u>PROPERTIES AND PRODUCTS DEPLOYMENTS</u>	<u>15</u>
3.1	<u>Add a Gateway to the Fleet</u>	<u>15</u>
4	<u>INTRODUCTION</u>	<u>16</u>
4.1	<u>Scope and Purpose</u>	<u>16</u>
4.2	<u>Documentation Conventions</u>	<u>17</u>
5	<u>NOMADIX CLOUD</u>	<u>17</u>
5.1	<u>Login</u>	<u>18</u>
5.2	<u>Add a Gateway to the Fleet</u>	<u>19</u>
5.3	<u>Delete a Gateway from the Fleet</u>	<u>24</u>
6	<u>GATEWAYS FLEET MANAGEMENT</u>	<u>26</u>
6.1	<u>Access</u>	<u>26</u>
6.2	<u>Display Elements</u>	<u>27</u>
6.3	<u>Custom Filters</u>	<u>28</u>
6.4	<u>Bulk Upgrade</u>	<u>30</u>
6.5	<u>Multi-Organization Views</u>	<u>32</u>
7	<u>GATEWAY INDIVIDUAL MANAGEMENT</u>	<u>38</u>
7.1	<u>Access</u>	<u>38</u>
7.2	<u>Display Elements</u>	<u>39</u>
7.3	<u>Connectivity</u>	<u>40</u>
7.4	<u>Backups</u>	<u>46</u>
7.5	<u>Licensing</u>	<u>47</u>

#	Section	Page
7.6	Activity	48
7.7	Firmware Update	51
8	<u>INTRODUCTION</u>	56
8.1	Scope and Purpose	56
8.2	Documentation Conventions	56
9	<u>NOMADIX CLOUD OVERVIEW</u>	56
9.1	Nomadix Cloud Web UI Overview	57
10	<u>GETTING SET UP ON THE NOMADIX CLOUD</u>	58
10.1	Procedure	58
11	<u>CHANGE ACCOUNT SETTINGS</u>	61
11.1	Basic Settings	61
11.2	Set up Passkeys	63
11.3	Change your password	65
11.4	Change Two Factor Authentication settings	65
12	<u>MANAGING USERS</u>	66
12.1	Add new users	66
12.2	Delete users	67
12.3	Resetting a user's password	67
12.4	Locking a user's account	69
13	<u>USING SINGLE SIGN ON</u>	69
13.1	Procedure	70
14	<u>ADDING A SUB-ORGANIZATION</u>	70
14.1	Procedure	71
14.2	Linked Organizations	72
14.3	Download this guide	73
15	<u>INTRODUCTION</u>	73
15.1	Scope and Purpose	73
15.2	Nomadix Cloud Overview	73
15.3	Documentation Conventions	73
15.4	Further Reading	73
16	<u>NOMADIX CLOUD ACCOUNT MANAGEMENT</u>	74
16.1	Login	74
16.2	Account Creation	74
16.3	Home Page Dashboard	77
16.4	Organization Account Management	78
16.5	User Account Management	81

#	Section	Page
17	<u>PROPERTIES AND PRODUCTS DEPLOYMENTS</u>	<u>89</u>
17.1	<u>Add a Gateway to the Fleet</u>	<u>89</u>
18	<u>INTRODUCTION</u>	<u>95</u>
18.1	<u>Scope and Purpose</u>	<u>95</u>
18.2	<u>Documentation Conventions</u>	<u>95</u>
19	<u>NOMADIX CLOUD OVERVIEW</u>	<u>95</u>
19.1	<u>Nomadix Cloud Web UI Overview</u>	<u>95</u>
20	<u>GETTING SET UP ON THE NOMADIX CLOUD</u>	<u>97</u>
20.1	<u>Procedure</u>	<u>97</u>
21	<u>CHANGE ACCOUNT SETTINGS</u>	<u>100</u>
21.1	<u>Basic Settings</u>	<u>100</u>
21.2	<u>Set up Passkeys</u>	<u>102</u>
21.3	<u>Change your password</u>	<u>104</u>
21.4	<u>Change Two Factor Authentication settings</u>	<u>104</u>
22	<u>MANAGING USERS</u>	<u>104</u>
22.1	<u>Add new users</u>	<u>104</u>
22.2	<u>Delete users</u>	<u>105</u>
22.3	<u>Resetting a user's password</u>	<u>105</u>
22.4	<u>Locking a user's account</u>	<u>105</u>
23	<u>USING SINGLE SIGN ON</u>	<u>106</u>
23.1	<u>Procedure</u>	<u>107</u>
24	<u>ADDING A SUB-ORGANIZATION</u>	<u>107</u>
24.1	<u>Procedure</u>	<u>107</u>
24.2	<u>Linked Organizations</u>	<u>108</u>
25	<u>INTRODUCTION</u>	<u>109</u>
25.1	<u>Scope and Purpose</u>	<u>109</u>
25.2	<u>Documentation Conventions</u>	<u>110</u>
26	<u>NOMADIX CLOUD</u>	<u>110</u>
26.1	<u>Login</u>	<u>111</u>
26.2	<u>Add a Gateway to the Fleet</u>	<u>111</u>
26.3	<u>Delete a Gateway from the Fleet</u>	<u>112</u>
27	<u>GATEWAYS FLEET MANAGEMENT</u>	<u>113</u>
27.1	<u>Access</u>	<u>113</u>
27.2	<u>Display Elements</u>	<u>113</u>
27.3	<u>Custom Filters</u>	<u>114</u>
27.4	<u>Multi-Organization Views</u>	<u>115</u>

#	Section	Page
28	<u>GATEWAY INDIVIDUAL MANAGEMENT</u>	120
28.1	<u>Access</u>	120
28.2	<u>Display Elements</u>	121
28.3	<u>Connectivity</u>	122
28.4	<u>Backups</u>	127
28.5	<u>Licensing</u>	128
28.6	<u>Activity</u>	129
28.7	<u>Firmware Update</u>	132

Clone - Administration Guide


INTRODUCTION

Scope and Purpose

Thank you for using Nomadix products. This Administration Guide covers the core functionality of Nomadix Cloud, including management of Organizations, Users, Properties and Products.

Nomadix Cloud Overview

Nomadix Cloud is the single pane of glass management application for all Nomadix products. It offers consolidated configuration and monitoring capabilities for entire fleets of equipment and solutions across thousands of sites via an intuitive web user interface. Hosted by Nomadix, the platform is designed with security and privacy at its core and supports integrations through APIs. Key functionality includes centralized management of Organizations, Users, Properties, Products and more, all accessible via single sign-on.

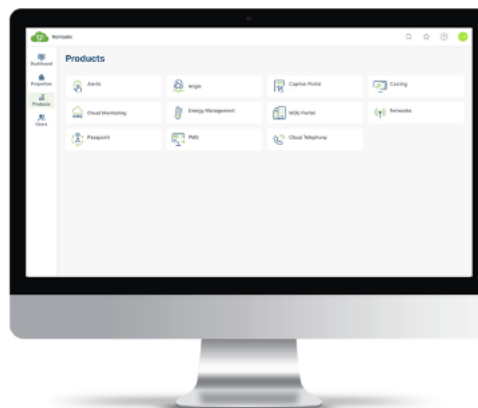

Documentation Conventions

{{snippet.Documentation Conventions}}

Further Reading

This document covers the Nomadix Cloud core functionality for Organizations, Users, Properties and Products management. Please refer to the individual administration guides for complete setup and configuration instructions for each respective Nomadix product.

NOMADIX CLOUD ACCOUNT MANAGEMENT

Login

In a web browser, navigate to: <https://nomadix.cloud/> and enter your **email** and **password** information.

Warning

If you don't have a Nomadix Cloud account, please request one as described in the next section.

Account Creation

Nomadix Cloud access is granted by **invitation** from the administrator(s) of an Organization's account.

Your title goes here

- The initial requires contacting the Nomadix support team.
- Subsequent within an existing organization are done by the administrator(s) of that account.

Organization Account Request

- Email **support@nomadix.com** and request a Nomadix Cloud account creation. Please include:
- Your company's full legal name – this must match an Organization in our records.
- The email address of the prime administrator for your Nomadix Cloud's Organization account.
- The Nomadix team will prepare the account and import your Organization's gateways and properties before sending out an invitation email to complete the Registration process described further in this guide.

Warning

- Please check your email spam folder in case the invite gets routed to it.
- Setting up an Organization may take a few days depending on the amount of preparation work required from the Nomadix support team.

User Account Request

- Users must contact their respective Organization's administrator(s) to request a Nomadix Cloud account creation.
- The Organizations' administrator(s) will send out invitation emails as explained later in this guide with a link to complete the **Registration** process described next.

Account Registration

- New users having requested the creation of an account as described earlier receive an **email invitation** with a link to the **Registration** page:
- Click **Accept Invitation** to open the Nomadix Cloud web registration page and fill-in the required fields:

Warning

- To ensure security of your Nomadix Cloud account, always use a complex password and set the slider to enable two-factor authentication.
- Please use two-factor applications such as Google Authenticator or Microsoft Authenticator. Nomadix Cloud doesn't support two-factor authentication via SMS.

- Click **Set up two-factor authentication** to configure it via an authentication application.
- Enter the **six-digit code** and your **password**, then click **Confirm**. You will be asked to save your security recovery codes in case you lose the device running the two-factor application:
- Once you click **I have saved my security codes**, a success prompt message is displayed. Click **Done** and you are ready to use Nomadix Cloud.

Home Page Dashboard


When you log into Nomadix Cloud, you will first land on your Organization's home page **Dashboard** displaying the following elements:

Element	Description
Organization Name	Click your Organization's name in the top left corner of the screen to open its summary page.
Magnifying Glass Icon - Search Bar	Click on the magnifying glass icon in the top right corner of the screen to display the search bar to find Organizations, Users or Properties.
Star Icon - Recent Projects	Click the star icon in the top right corner of the screen to display a panel showing the most recent Properties and Deployments you visited to quickly get back to those locations.
Avatar Profile - Initials	Your avatar profile (showing your initials) is displayed in the top right corner of the screen. Click on it to show a pull-down menu allowing you to: Open your account summary page Change your password Sign out
Left Navigation Shortcuts	The panel on the left side of the screen will always show on every page and provides navigation shortcuts to go straight to the Dashboard, Properties, Products or Users pages.
Central Panel	The central panel shows a summary count for Properties and Products deployments across your whole Organization. It may also display information or warning messages such as in the example screenshot.

Organization Account Management

Organization Summary Page

- Click your **Organization's name** in the top left corner of the screen to open its **Summary Page**.

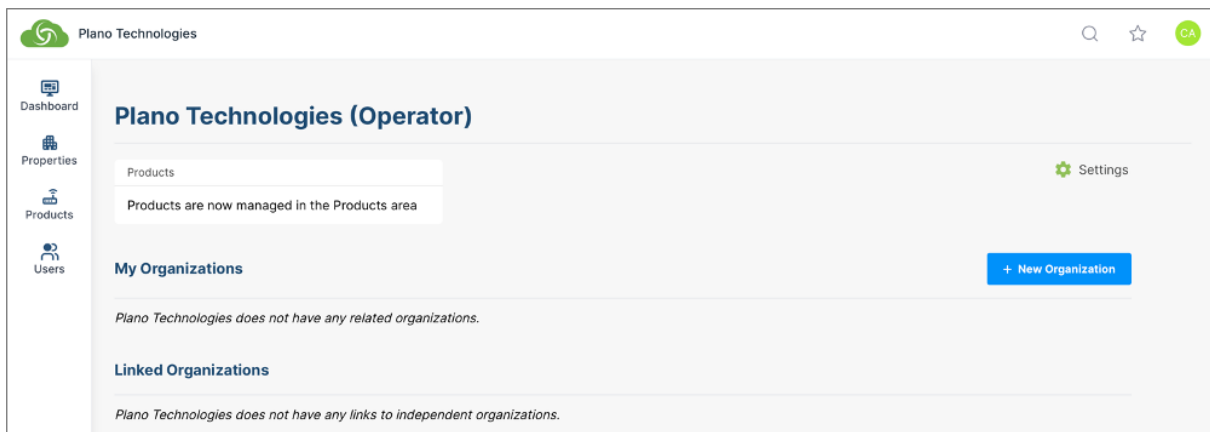

Warning

Products you have access to are setup by Nomadix during the preparation of your account, as per the sales agreement signed with your Organization.


Organization Types

The Organization type (displayed in brackets next to your Organization name) is setup by Nomadix during the preparation of your account. There are 3 types offering different views and permissions within Nomadix Cloud:

- **Operator:** Reselling Nomadix Products and managing them on behalf of multiple Customers
- **Customer:** Using Nomadix Products that could be supplied by multiple Operators
- **Distributor:** Managing several Resellers of Nomadix Products

Organization Account Settings

- Click on the **Settings** icon to edit your Organization account's settings:

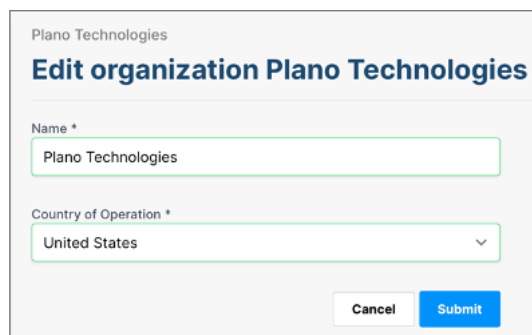

Warning

Since most of an Organization's settings are setup by Nomadix upon the initial account creation, an individual administrator can only change the name and country of operation.

Organization Sub-Accounts

You can manage sub-accounts under your Organization. There are 2 types:

- **Customer:** this creates a tag that can later be available during the creation of individual Properties to group all deployments belonging to a unique brand.
- **Sub-Organization:** this creates smaller groups within an Organization, allowing granular Users management. For example, restricting access to deployments by Region, Projects, etc. by only inviting certain Users to these specific subgroups rather than to the whole Organization.

Notes

You can expand Organization Sub-Accounts by splitting them into further Sub-Accounts, and so on. Just repeat the process.

Warning

Customer type Organizations can only create more Customer type Sub-Accounts.

- Click on the **New Organization** icon to add a Sub-Account and fill-in the required fields.

- You can later **Edit** or **Delete** Sub-Accounts from your Organization's summary page.

Linked Organizations

Linked Organizations are separate Accounts where certain reciprocal views and/or permissions are granted due to the nature of their relationships. Examples of Linked Organizations include:

- Master Distributors and their Resellers
- Customer Brands serviced by multiple Resellers

Warning

For privacy and security reasons, Linked Organizations are only configurable by Nomadix. Please contact the support team should you require links to be setup with other Organizations.

User Account Management

Users Summary Page

Click the **Users** shortcut in the left Navigation panel to open the **Users Summary Page**, displaying a list of all users for a given Organization along key information. You can also click on the **Funnel** or **Magnifying Glass** icons to either filter or search through the list.

Name	Email	Team	Last Signed In	Role
CA Christophe Ameline		All Users	about 1 hour ago	Admin

Users Roles

There are 3 types of Users Roles offering different views and permissions within Nomadix Cloud:

- **Admin:** this level allows full Deployment and editing permissions, as well as Organization and Users management.
- **Editor:** this level only allows editing permissions to existing Deployments for the Organization or Sub-Account the User belongs to.
- **Viewer:** this level only allows viewing permissions to existing Deployments for the Organization or Sub-Account the User belongs to.

Delete Users

- Select a User from the list and click on the **trashcan** icon.

Warning

- Administrators must ensure Nomadix Cloud accounts that are unused or belonging to employees who left the company are removed from the system to maintain ongoing security.
- Deleted Users cannot be recovered – they will need to be recreated if necessary.


Invite Users

- Click the **Invite User** button to add new accounts to the Organization and fill-in the required fields, then click the **Send an Invitation** button.

Warning

Please ensure you send the invitation from the Sub-Account you wish a User to have access to, if you do not want them to have permissions across the entire Organization.

- **New Users** will be in pending state until they accept their invitation and go through the short **Registration** process as described earlier in this guide. Administrators can **Resend** the invitation if required.

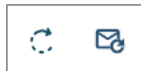

Users Accounts Settings

- Either click on your **avatar profile** in the top right corner of the screen or on a **name** in the Users list to open the **Settings** panel.

Element	Description
Sign Out	Click to log out of Nomadix Cloud.
Settings Tabs	Switch between configuration settings tabs for Personal Details, Notifications and Login & Security.
Profile Avatar	Click on the paint pot icon next to your profile avatar to customize its color.
Profile Role	Displays the role configured for the profile: Admin, Editor, Viewer. A pull-down list is shown to Admin profiles only where they can select a different role.
Approval Status	Indicates whether a profile is designated as an Approver for changes to a Nomadix Captive Portal configuration. See the Captive Portal documentation for more information.
Name	Click on the pencil icon to modify the profile name.
Organization	Indicates which Organization the User account is a member of.
Timezone	Use the drop-down list to select a timezone. This will impact scheduled activities in Nomadix Cloud.
Color Scheme	Use the slider to switch the Nomadix Cloud interface between light mode, dark mode, or according to the system display settings.

- Click on the **paint pot** icon next to your profile avatar to customize its **color**.
- Click on the **pen** icon next to your profile avatar to change the **First Name** and **Last Name**.
- Click on the **Notifications** tab to set the profile preferences for automated system email communications issued by Nomadix Cloud.
- Click on the **Login & Security** tab to check the account status, as well as configure Passkeys and two-factor authentication – as described in other sections of this guide.

Warning

Only Admin profiles have access to the Account Status functionality. The option is not shown to Editor and Viewer profiles.

- Admin profiles can **lock** and **unlock** an account from this tab.

Warning

It is best practice to lock Users accounts when they are on an extended leave of absence to reduce the risk of potential security breach.

Passkeys

Passkeys are a replacement for passwords designed to provide more secure and easier logins.

Warning

The following example is for Windows 11. The process may vary with other operating systems.

- From the **Login & Security** tab, click on the **Generate Key** button:
- Click **OK** to proceed.
- You can then select a variety of ways to identify yourself. In this example, we will use the fingerprint reader on a laptop, but other choices include setting up a PIN code or using an external security key.
- Once you have scanned your fingerprint, you will get a confirmation that the Passkey has been registered.
- The Passkey will now show as being registered and **Enabled** in Nomadix Cloud.
- You can now log into Nomadix Cloud using your Passkey. You can further **add multiple Passkeys** using different formats such as a PIN or hardware security key or **delete** them by clicking on the **trashcan** icon.

Passwords

Users can change their passwords from their Account settings:

- From the **Login & Security** tab, click **Change Password** option. Fill-in the current password, new password and click the tick icon to save the change.

Warning

Passwords must be at least 12 characters long.

An Administrator can also trigger a Passwords Reset for a user.

- From the **Login & Security** tab, click **Reset Password** option.
- The User will receive an automated email with a link to change their password.

Two-Factor Authentication

If not setup during the account registration process as described earlier in this guide, two-factor authentication can be later configured from the Account settings.

- From **the Login & Security** tab, click **Change Password** option. Fill-in the current password, new password and click the tick icon to save the change.
- Enter the six-digit code and your password, then click **Submit**. You will be asked to save your security recovery codes in case you lose the device running the two-factor application. You are then ready to use this method to log into Nomadix Cloud.

Warning

- To ensure security of your Nomadix Cloud account, always use a complex password and set the slider to enable two-factor authentication.
- Please use two-factor applications such as Google Authenticator or Microsoft Authenticator. Nomadix Cloud doesn't support two-factor authentication via SMS.

PROPERTIES AND PRODUCTS DEPLOYMENTS

Add a Gateway to the Fleet

This section covers how to add a single Gateway to the Fleet using the New Gateway Wizard.

Warning

- The initial Fleet import is performed by Nomadix as part of the company account creation.
- When a Nomadix Partner sells and installs a new gateway, it must be manually added to Nomadix Cloud. New gateways are not added automatically.
- Adding a Gateway requires the user to have the relevant Admin access privilege.
- Gateways can be added to existing or new properties.

The New Gateway Wizard simplifies the process of adding a gateway to the Nomadix Cloud and reduces the chances of entering incorrect information. Adding the gateway from the Fleet View combines the steps of deploying a product, creating a property and adding the gateway.

Using the New Gateway Wizard:

- Creates a property (if required)
- Deploys the Networks module
- Adds the gateway to Nomadix Cloud

Adding a Gateway from the Property Level

Use this method when you are already working within a property.

1. Create a new property.
2. Deploy the **Networks** module for the property.
3. From the left menu, select **Nomadix Gateways**.
4. Click the **New Gateway** button in the upper-right corner.
5. Enter the **NSE ID** and **Serial Number** of the gateway and click **Next**.
6. Enter the **room count** for the property, you can use the default contact information or add a new contact set up for property.
7. Click **Add and View**. The new gateway is added to the property and is now ready to be registered and connected to the Nomadix Cloud.

Adding a Gateway from Fleet View

Use this method when adding a gateway from an organization-level view or when the property does not yet exist.

Procedure

1. Navigate to **Fleet View** for your organization.
2. Click **New Gateway**.
3. Enter the **NSE ID** and **Serial Number**, then click **Next**.
4. Begin entering the **property name and address**, when the correct property appears in the list, select it.
5. Confirm the property details. If you need to correct it, click **Back** and then re-enter the location information, otherwise click **Next**.

6. Complete the **New Property** form with below given fields and make sure to accept the EULA at the bottom of the page and click **Add and View**.
- | | |
|---------------------------------|--|
| Mandatory Fields | Comments |
| Site Code | This can be any unique alpha-numeric identifier. It is best practice to use the same ID assigned to the property from the hotel brand. If the Gateway is going into a lab, then this can be a random number. |
| Venue Type | Select the appropriate venue type from the pull-down list. |
| Room Count | The total number of guest rooms at the property. This value is used for reporting and capacity-related configuration. |
| Contact First Name | The first name of the primary contact for the property. |
| Contact Last Name | The last name of the primary contact for the property. |
| Contact Telephone Number | The contact number of the primary contact. This may be used for operational or support-related communication. |
| Contact Email | The email address of the primary contact. This address is used for notifications and support communication. |
- These fields are optional but important for hotel properties.
- | | |
|------------------------|---|
| Optional Fields | Comments |
| Customer Code | A unique identifier assigned to the customer or organization. This code is used to associate the property with the correct customer record and for internal tracking purposes. |
| Sub Brand | This drop-down lists all the hotel sub-brands which Nomadix works with such as Hilton Garden Inn or Marriott Residence Inn. |
| Customer | This drop-down includes the major hotel brands serviced by Nomadix and is where you set the Brand type for the location such as Hilton or Marriott. This drop-down also includes non-hotel customer organizations which the MSP has set up. |
7. Now the new property has been created, the Networks module deployed, and the gateway is added to the Nomadix Cloud. The gateway is now ready for registration and connection to the Nomadix Cloud.

Warning

This document covers the Nomadix Cloud core functionality for Organizations, Users, Properties and Products management. Please refer to the individual administration guides for complete setup and configuration instructions for each respective Nomadix product.

Gateways Fleet Management - Administration Guide


INTRODUCTION

Scope and Purpose

Thank you for using Nomadix products. This Administration Guide covers the features and configuration options available on the Nomadix Cloud Gateways Fleet Management module:

- **Fleet View:** display a global view of your entire Nomadix gateways estate, filter and search by groups or by individual deployments requiring attention. Download the results as a csv file

- **License:** check bandwidth, devices and doors licenses, as well as which optional modules are enabled
- **Status:** monitor connectivity status, firmware version and contract expiry date
- **Backup:** save the gateway flash file system securely to the cloud on a regular schedule or as required
- **Firmware update:** keep your fleet of gateways up to the most recent versions of Nomadix software to get the latest features and security updates

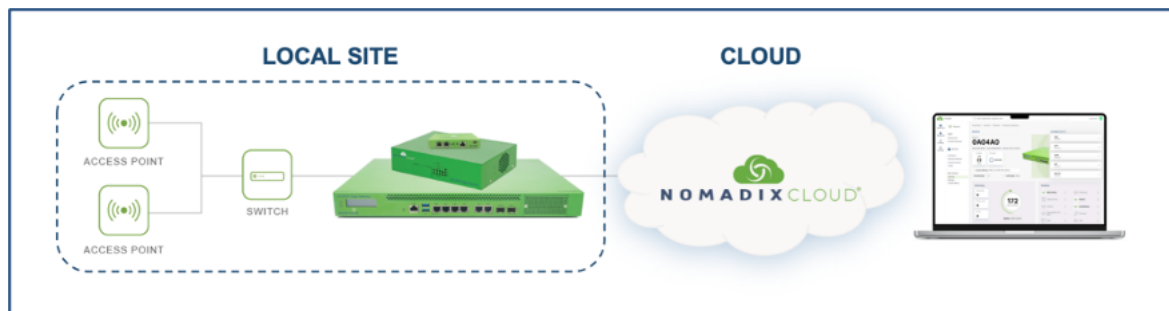

Documentation Conventions

{{snippet.Documentation Conventions}}

NOMADIX CLOUD

Nomadix Cloud is the single pane of glass centralized management platform for all Nomadix products. A secure multi-tenant solution hosted by Nomadix, it offers administration, configuration and supervision via a single sign-on intuitive web-based interface.



NOMADIXCLOUD®

Iterative project progressively integrating all Nomadix Products & Services


 Single Pane of Glass	 Centralized Common Platform	 Future Enhanced Services
• Portfolio management • Single Sign-On • Intuitive web user interface • Free of charge	• Organizations • Users • Properties • Products	• Monitoring & analytics • Alarms & notifications • APIs • Common look & feel

Notes

For more information regarding the overall Nomadix Cloud features and functionalities, please refer to the dedicated marketing and technical collateral, as this guide focuses on its Gateways Fleet Management module.

Login

In a web browser, navigate to: <https://nomadix.cloud/> and enter your **email** and **password**.

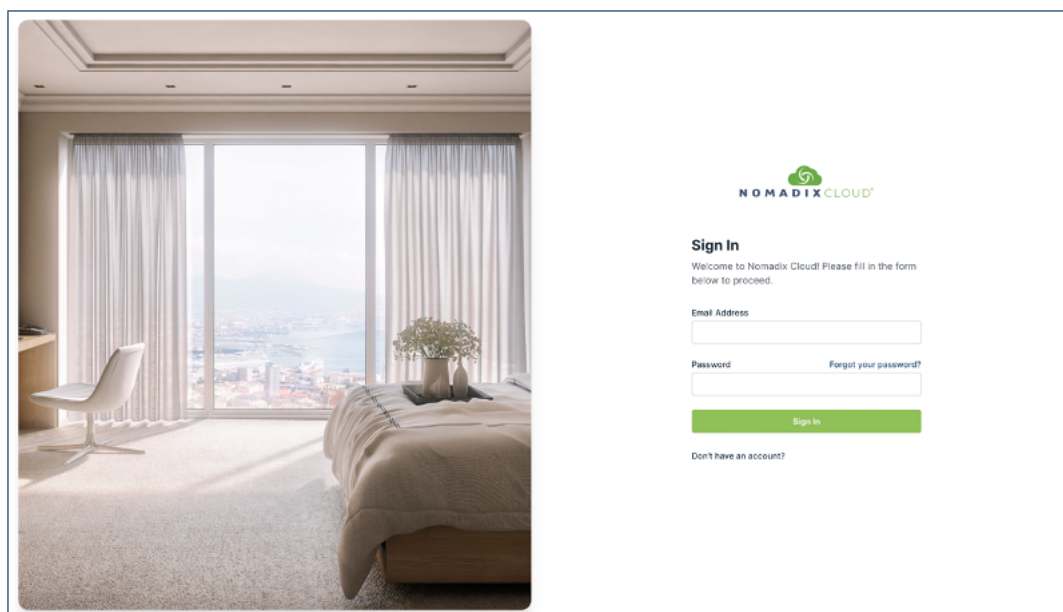

The login page features a large image of a modern bedroom with a large window overlooking a city and water. To the right of the image is the login form.

NOMADIXCLOUD®

Sign In
Welcome to Nomadix Cloud! Please fill in the form below to proceed.

Email Address

Password [Forgot your password?](#)

[Don't have an account?](#)

If you don't yet have an account, click the “**Don't have an account?**” option and follow the process.

Warning

- The first account creation for a new company requires human validation. Please contact your Nomadix representative to ensure they are aware of your request.
- The first account creation for a new company requires human validation. Please contact your Nomadix representative to ensure they are aware of your request.

Add a Gateway to the Fleet

This section covers how to add a single Gateway to the Fleet using the New Gateway Wizard.

Warning

- The initial Fleet import is performed by Nomadix as part of the company account creation.
- When a Nomadix Partner sells and installs a new gateway, it must be manually added to Nomadix Cloud. New gateways are not added automatically.
- Adding a Gateway requires the user to have the relevant Admin access privilege.
- Gateways can be added to existing or new properties. The procedure shows how to create a new property.

The New Gateway Wizard simplifies the process of adding a gateway to the Nomadix Cloud and reduces the chances of entering incorrect information. Adding the gateway from the Fleet View combines the steps of deploying a product, creating a property and adding the gateway.


Using the New Gateway Wizard:

- Creates a property (if required)
- Deploys the Networks module
- Adds the gateway to Nomadix Cloud


Adding a Gateway from the Property Level

Use this method when you are already working within a property.


1. Create a new property.
2. Deploy the **Networks** module for the property.

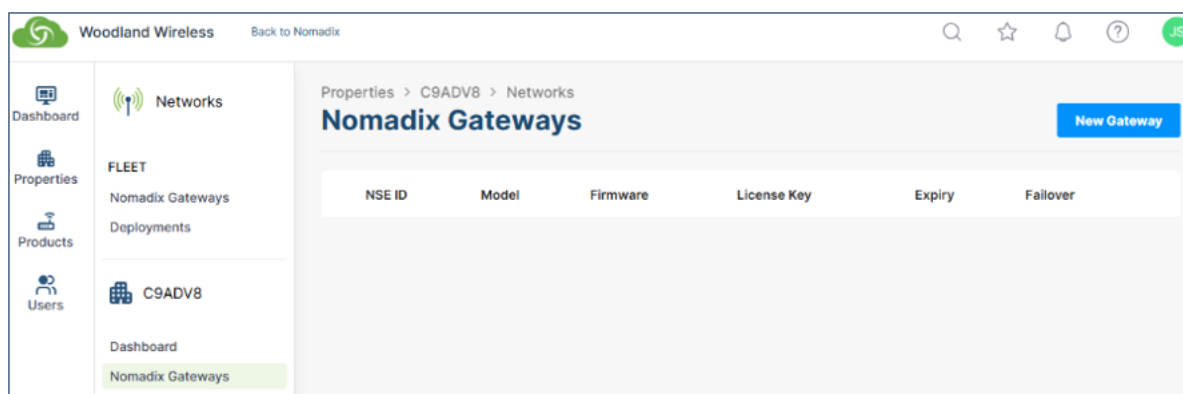

3. From the left menu, select **Nomadix Gateways**.
4. Click the **New Gateway** button in the upper-right corner.
5. Enter the **NSE ID** and **Serial Number** of the gateway and click **Next**.

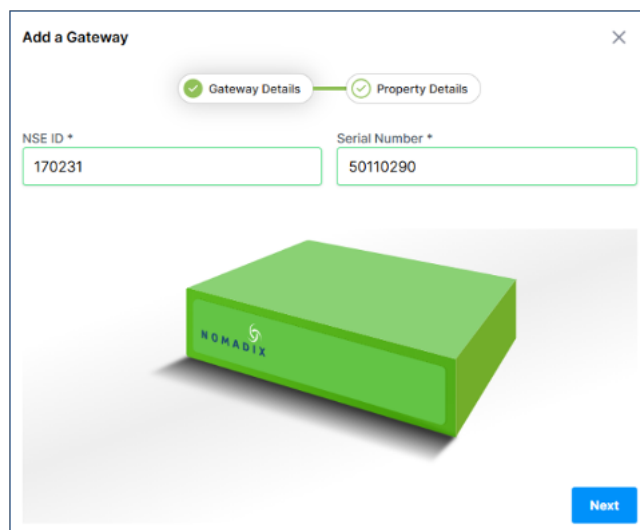

6. Enter the room count for the property, you can use the default contact information or add a new contact set up for property.

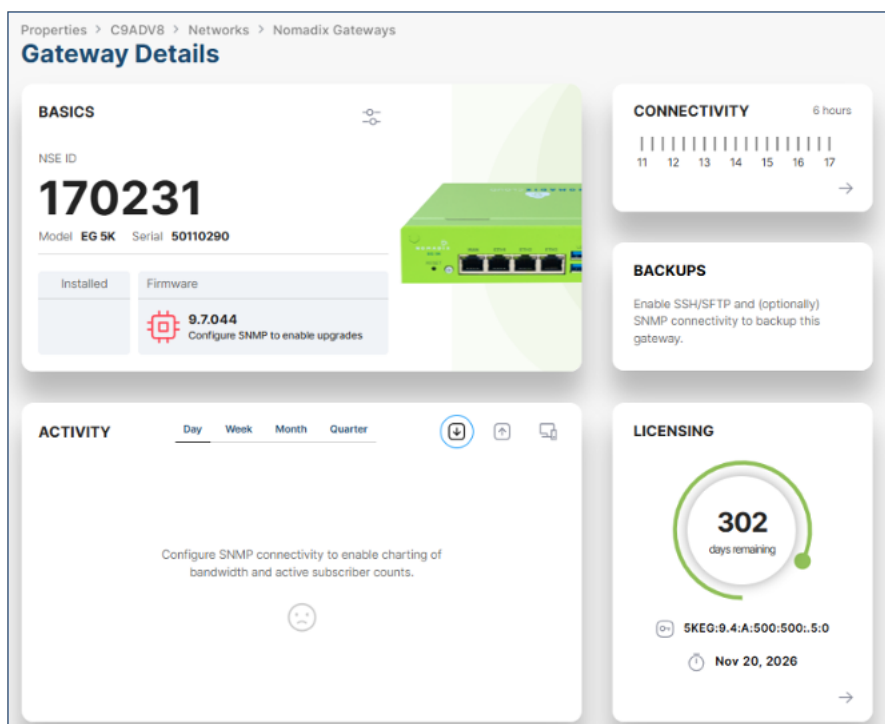


Adding a Gateway from Fleet View

Use this method when adding a gateway from an organization-level view or when the property does not yet exist.


Procedure

1. Navigate to **Fleet View** for your organization.

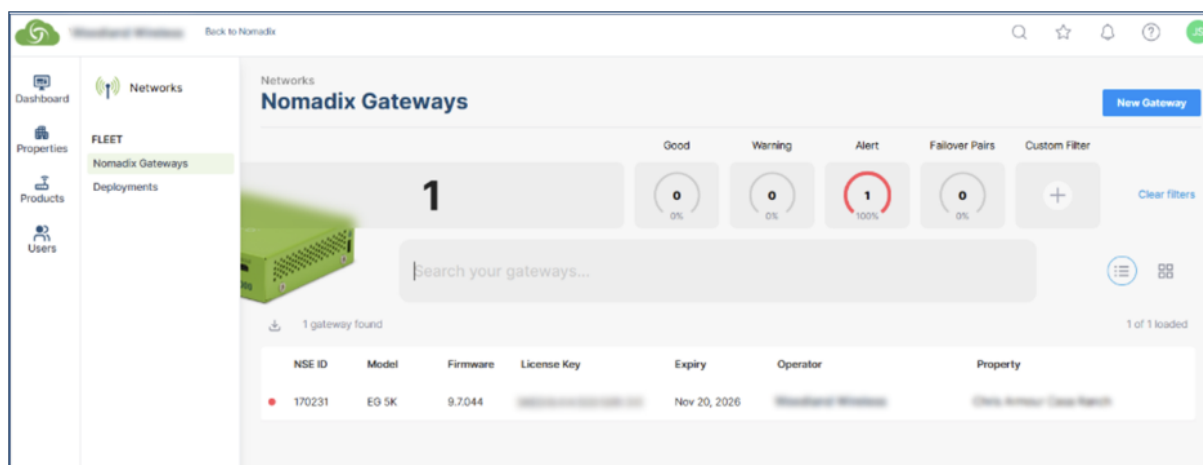

2. Click **New Gateway**.

3. Enter the **NSE ID** and **Serial Number**, then click **Next**.

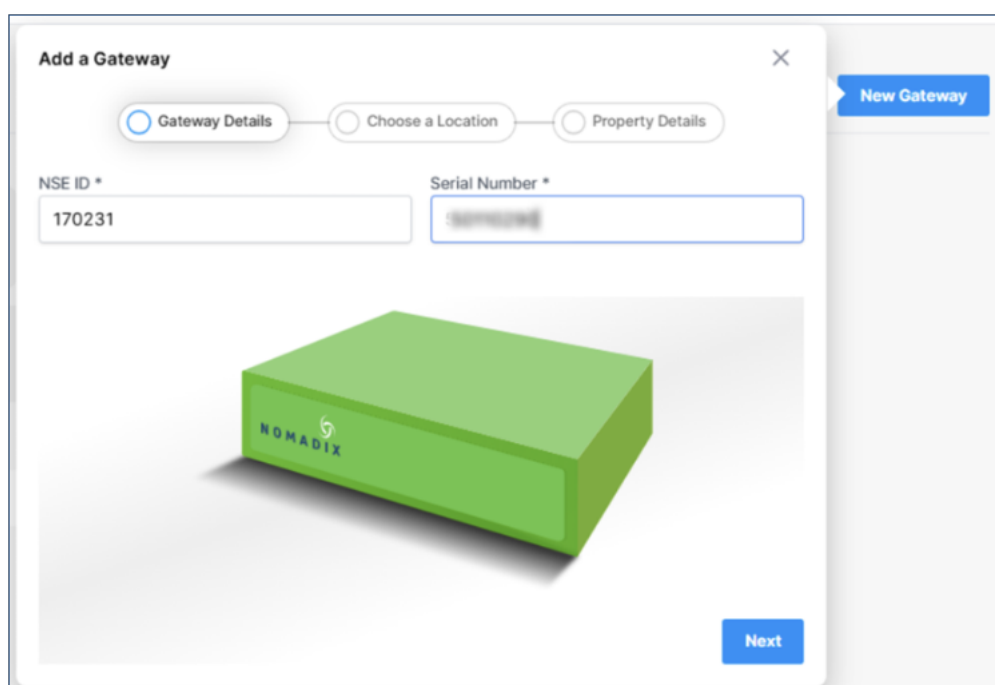

4. Begin entering the **property name and address**, when the correct property appears in the list, select it.

Add a Gateway

Gateway Details **Choose a Location** Property Details

brantford

Home2 Suites by Hilton Brantford
1000 Brantford, Brantford, ON, Canada

None of these what you are looking for? [Add address manually](#)

New Gateway

Clear filters

0 of 0 loaded

5. Confirm the property details. If you need to correct it, click Back and then re-enter the location information, otherwise click **Next**.

Add a Gateway

Gateway Details **Choose a Location** Property Details

Home2 Suites by Hilton Brantford
1000 Brantford, Brantford, ON, Canada

Back **Next**

New Gateway

Clear filters

0 of 0 loaded

6. Complete the **New Property** form with below given fields and make sure to accept the EULA at the bottom of the page and click **Add and View**. Mandatory Fields
- Comments** Site Code This can be any unique alpha-numeric identifier. It is best practice to use the same ID assigned to the property from the hotel brand. If the Gateway is going into a lab, then this can be a random number.
 - Venue Type** Select the appropriate venue type from the pull-down list.
 - Room Count** The total number of guest rooms at the property. This value is used for reporting and capacity-related configuration.
 - Contact First Name** The first name of the primary contact for the property.
 - Contact Last Name** The last name of the primary contact for the property.
 - Contact Telephone Number** The contact number of the primary contact. This may be used for operational or support-related communication.
 - Contact Email** The email address of the primary contact. This address is used for notifications and support communication.
- These fields are optional but important for hotel properties. Optional Fields
- Comments** Customer

CodeA unique identifier assigned to the customer or organization. This code is used to associate the property with the correct customer record and for internal tracking purposes. Sub Brand This drop-down lists all the hotel sub-brands which Nomadix works with such as Hilton Garden Inn or Marriott Residence Inn. Customer This drop-down includes the major hotel brands serviced by Nomadix and is where you set the Brand type for the location such as Hilton or Marriott. This drop-down also includes non-hotel customer organizations which the MSP has set up.

Add a Gateway

Gateway Details Choose a Location Property Details

Site Code * Customer Code

QLSKD

Venue Type *

Hospitality: Hotel/Resort

Sub Brand

Home2 Suites by Hilton

Room Count *

150

Customer

Contact first name * Contact last name *


Contact telephone number * Contact email *

☒ By deploying a product I accept the [EULA](#).

Back Add Add and View

New Gateway

7. Now the new property has been created, the Networks module deployed, and the gateway is added to the Nomadix Cloud. The gateway is now ready for registration and connection to the Nomadix Cloud.

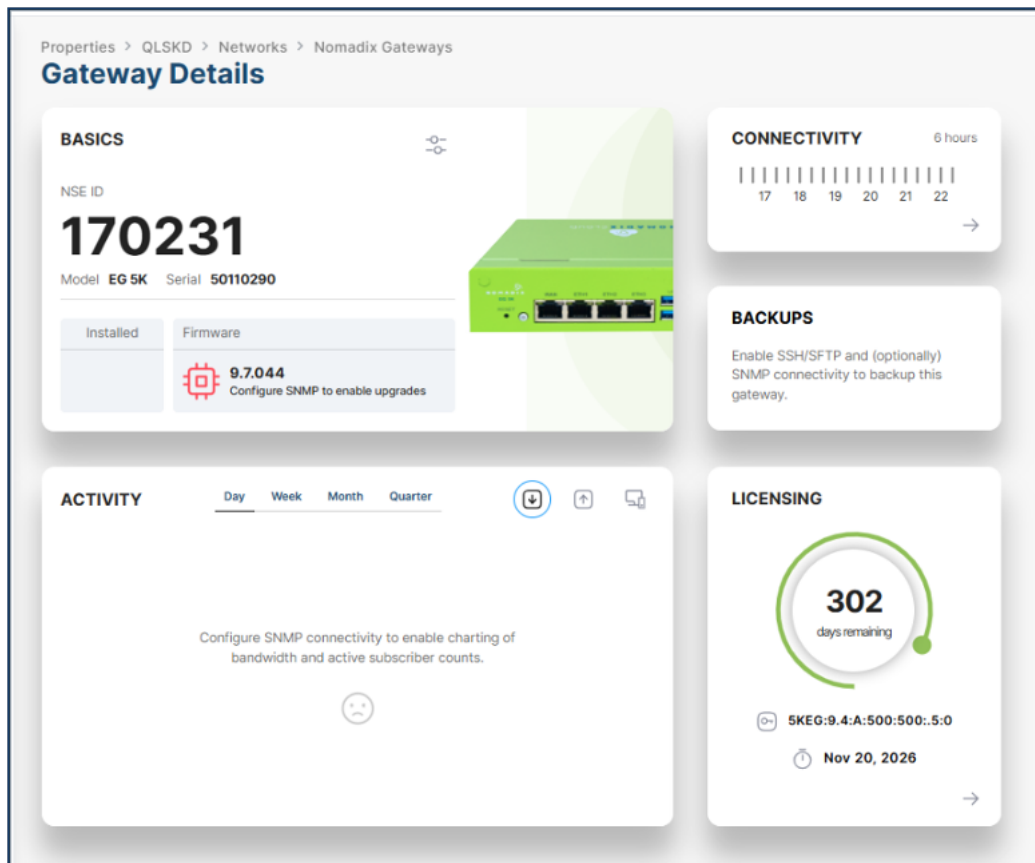

Delete a Gateway from the Fleet


This section covers how to delete a single Gateway from the Fleet. Gateways may need to be deleted for a variety of reasons, including:

- Hardware upgrade to a new model and disposal of the old gateway.
- RMA replacement of a faulty gateway.
- The property has transferred to a new Partner.


Warning

- If you need to delete a whole property (for instance, if the property is being transferred to a new Partner), you will need to delete the gateway first then delete the deployments to the property, then delete the property itself.
- Deleting a Gateway requires the user to have the relevant Admin access privilege.


1. Log into Nomadix Cloud, navigate to the property and select the **Networks** tile.

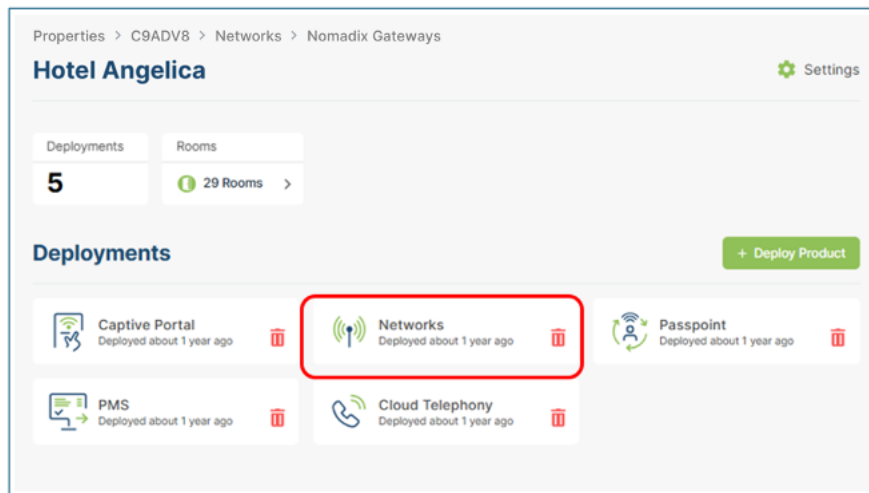

2. Select **Nomadix Gateways** from the sidebar menu:

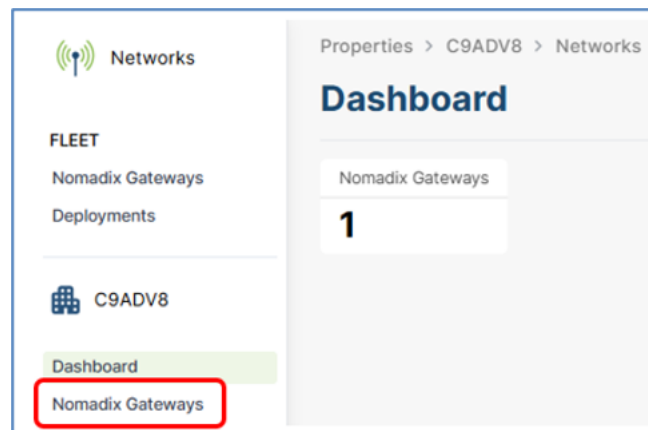


3. This provides a list of the gateways at the site. Select the **trashcan** icon beside the gateway you wish to delete:

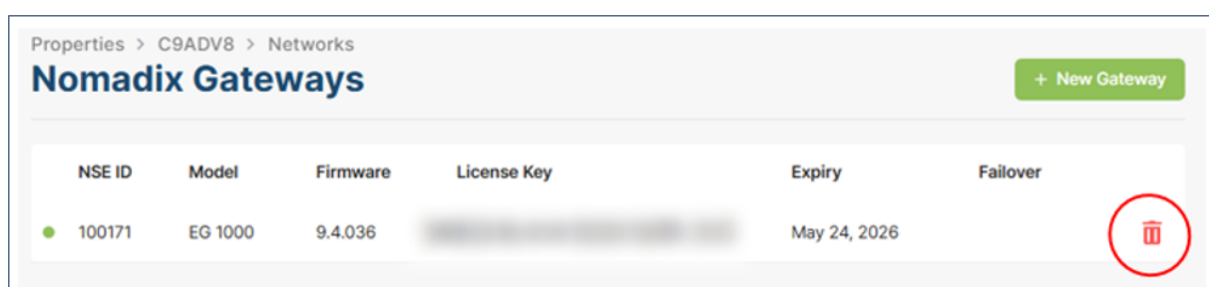


4. You are asked to select the reason for the deletion. Select a one from the dropdown and then click **Submit**.

Warning This is only so that Nomadix can monitor why gateways are being removed from Nomadix Cloud, it does not initiate any processes with Nomadix support or order processing. Please be sure to follow the normal RMA or upgrade procedures before removing the gateway from Nomadix Cloud.

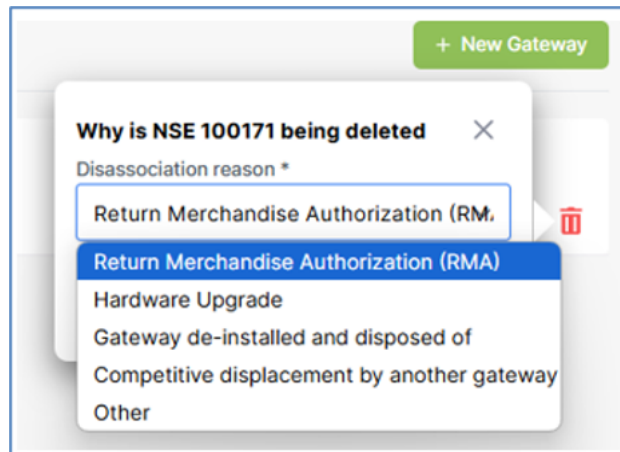

5. Click **OK** on the popup window asking for confirmation to begin the deletion process:

Warning This process will delete all backups and analytics history for the gateway. If the gateway has been connected to the Nomadix Cloud for an extended period, the deletion process may take several minutes to complete.

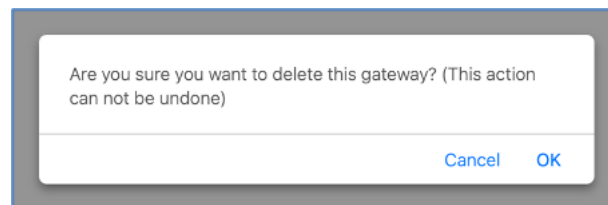


GATEWAYS FLEET MANAGEMENT


The **Nomadix Gateways Fleet page** is the main interface for administrators to display all the Nomadix gateways they have access to. It aggregates data imported from the Nomadix ordering and licensing systems and parses it into a summary list, offering several options.

Access

From the Nomadix Cloud home page, navigate to **Products > Networks** to access the Gateways Fleet Management module.

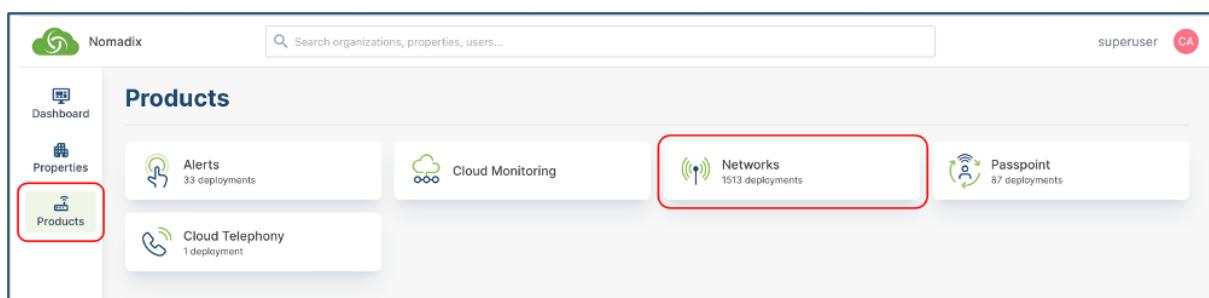

Then, in the left menu select the **Nomadix Gateways** option.

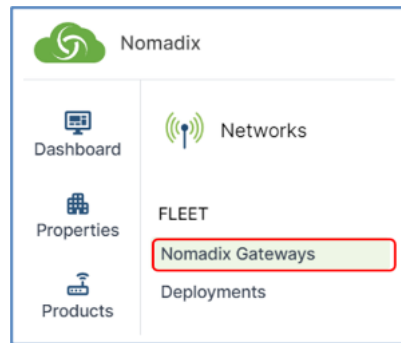


Notes

The options displayed depend on the administrator's access rights, the products installed base and the type of organization.

Display Elements

Below are the different elements of the Fleet View user interface:

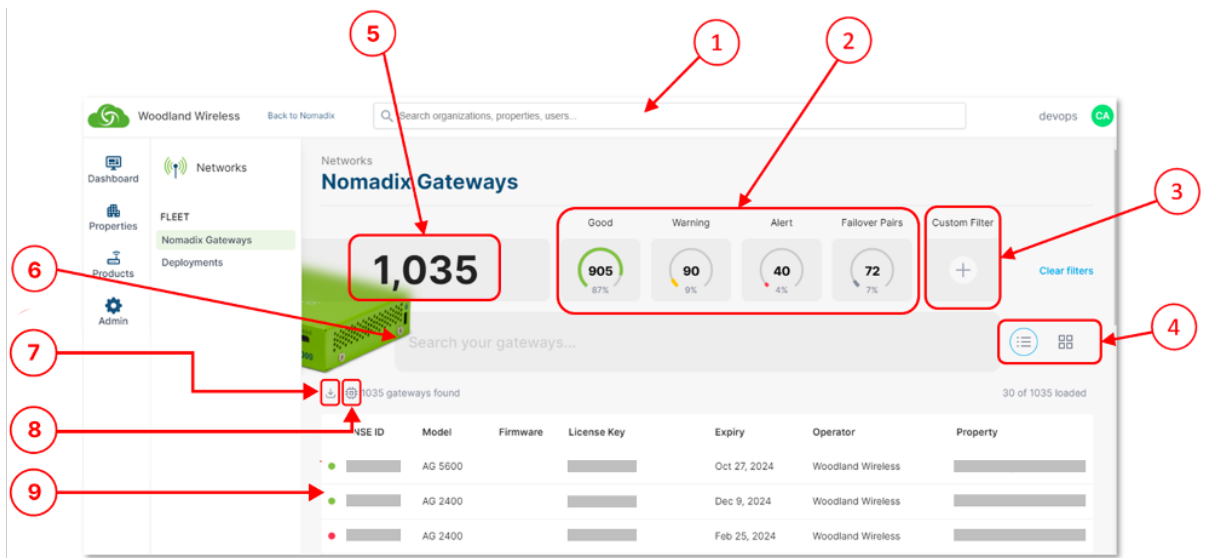

Element	Description
1 – Main Search Bar	Top level search bar that allows to look for organizations, properties and users.
2 – Quick Filter Tiles	These allow to quickly filter the gateways list. Good - Shows gateways that are licensed in good standing. Warning - Shows gateways within 60 days of license expiry. Alert - Shows gateways that are out of licensing or have data anomalies from the import (contact Nomadix to resolve). Failover Pairs - Shows all the failover pairs in the list.
3 – Custom filters	Custom filters allow to select complex sets of filtering criteria to zoom in on sub-sets of gateways of interest such as particular models, firmware versions or hotel brands.
4 – Card View Switch	Displays gateways as cards rather than as a list, which makes it more visual and easier to consult on mobile devices.
5 – Total Gateways	Total number of gateways in the Fleet for this organization.
6 – Fleet Search	Allows to search for property name or gateway model or NSE ID.
7 – CSV download	Downloads a comma-separated values file (CSV) of the data currently shown in the gateways list. This can then be used to pass information such as expiry dates to other parts of the organization.
8 – Firmware Upgrade Status	Shows a table with the upgrade status and activity across your sites.
9 – Gateways List	Main table of gateways, including key information at a glance.

Notes

Several **Quick Filter Tiles** can be selected at the same time to show a combined view.


Custom Filters

The Custom Filter option allows to filter the gateways fleet view by the following parameters (depending on your organization type):


- Model
- Property name
- Firmware version
- Features
- Brand (meaning hotel brand such as Hyatt or Marriott)
- Sub-brand (meaning hotel flags such as Residence Inn or Courtyard)
- Country
- Region
- Sub-region

To use them, follow the instructions below:


1. From the Fleet View, click the “+” under **Custom Filter**:

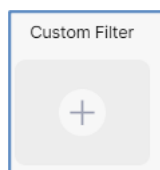


2. From the list of available parameters, select the desired filters:

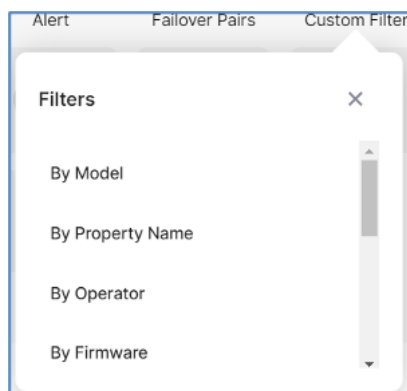

3. Selecting **Models** opens a submenu of the available options and previews the number of units:

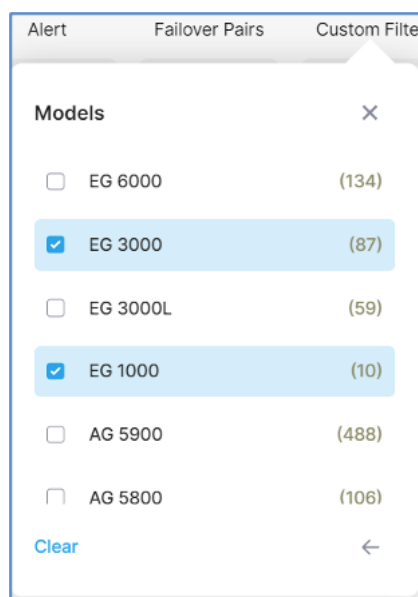


4. You can select as many items as required from the sub-menu and then click the ← arrow at the bottom to return to the main Custom Menu dialog to continue selecting as many filter parameters as required.
5. The filter criteria appears in a pill or cartouche below the Custom Filter button. The filter can be edited with the **pencil icon** or removed with the “x” to the right of the pill.

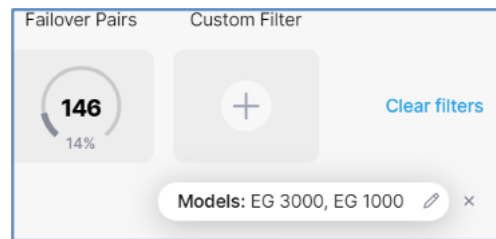

- You may select as many filter criteria as required and then use the download icon to download a CSV of the list for further processing in a spreadsheet application.

Bulk Upgrade


This section explains how to Schedule multiple Gateways in the fleet for upgrade. In the Fleet View multiple Gateways can be selected. Once that selection is made a new button appears and the number of gateways selected is listed:

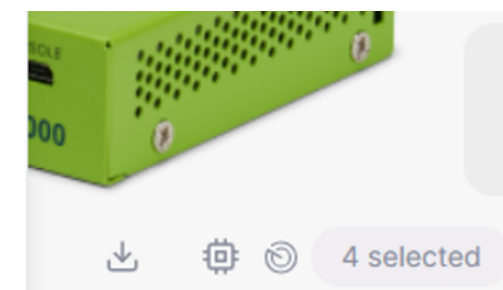

Warning


Bulk Upgrade is only available for gateways that have a valid license and full connectivity with SNMP, SSH, and SFTP

Once the gateways are selected and you click on the Schedule Firmware upgrades Button the following pop-up appears:

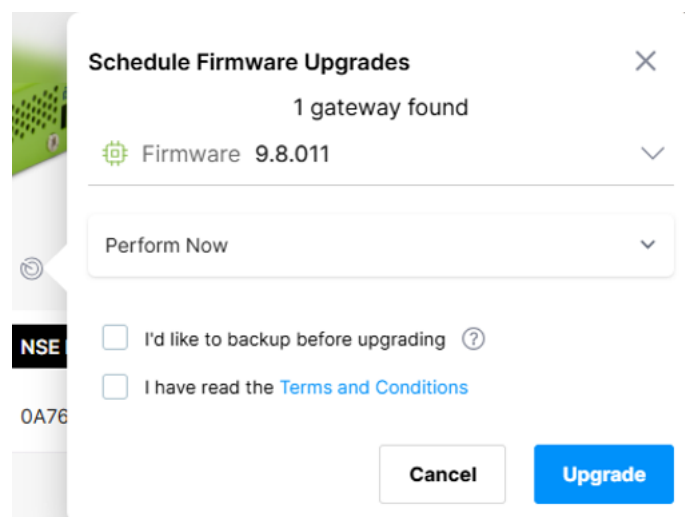

1. Select the desired **Firmware** from the drop down-drop-down list provided.
2. Select whether the firmware upgrade should be **Performed Now** or at the **Scheduled Maintenance Window**.
3. Check the box if a **Backup before upgrade** is desired.
4. Check the box stating the **Terms and Conditions** has been read. (This step is mandatory)
5. Click on the **Upgrade** Button to schedule the upgrade of the selected Gateways.
6. Click on the **Cancel** button or the X in the top right to exit this pop-up.


The Firmware Upgrade Status can be selected from the Fleet View. This will Open a new window that shows the gateways that are Scheduled, In Progress, Completed, and Failed for the selected day. The Date can be changed and the different headings can be selected to display filter the Gateways that according to their status fall under that heading for the selected day.

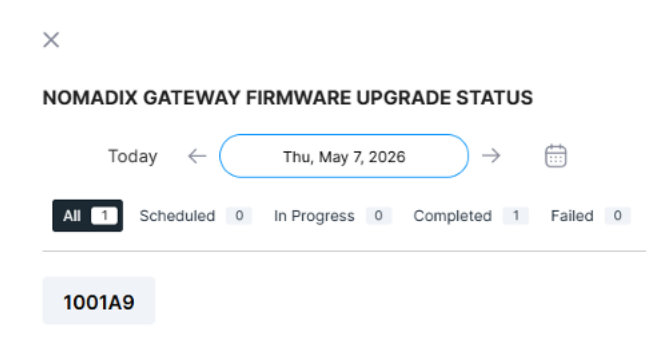

Bulk Upgrade can be configured to run during the scheduled maintenance window for the property. The Maintenance Window is configurable either through a .cvs file for bulk updates or a single property site.

On a single property site:

1. Access the respective site Properties in Nomadix Cloud and click on **Maintenance Settings**.

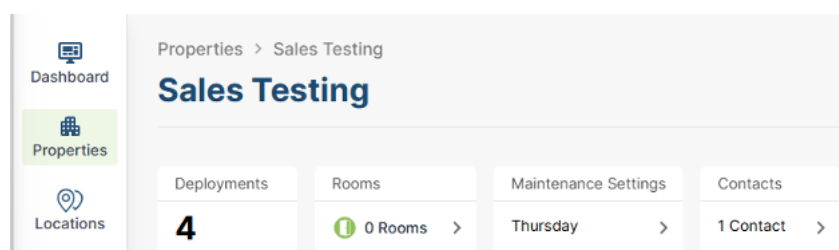

2. Select the day of the week.

3. Select Specify the two hour time in either the the maintenance time as needed from the provided options. AM or PM Row for the Maintenance window.

4. Click on **Apply** to save your settings or click cancel to abort.

To upload a .csv file to configure the maintenance settings on multiple Properties at the same time:

1. Click on the **Properties** button on the menu bar.
2. Click on the **Settings** icon.

3. In the **Manage Maintenance Settings** dialog box click on the Download maintenance settings .CSV link to obtain the current properties and their settings .csv.

4. Use the downloaded .csv file to update and configured the properties and their Maintenance settings properly go to the **Manage Maintenance Settings** Dialog box and **upload the updated .csv** that has the proper configurations.

5. Click on the **Upload** button.

Multi-Organization Views

This section explains the types of **organizations** in Nomadix Cloud and how their Fleet information views vary.

Warning

- Multi-Organization Management is only required for companies in need of overall visibility of a Nomadix gateways installed base managed by multiple sub-organizations, for example Distributors for their Indirect Resellers or large End Customers serviced by multiple Managed Services Providers.
- All views described below – apart from Operator - are only available by specific requests to Nomadix and following a review of their legitimacy.

Distributor View

A **Distributor** is an organization that markets Nomadix products via a channel of **Indirect Resellers** that don't themselves have a direct contractual relationship with Nomadix. Typically, Distributors may not know where gateways end-up being ultimately deployed, however they do follow up on yearly service contracts.

Distributor Fleet View characteristics:

Distributor View	Distributor Access Rights
NSE IDModelOperating OrganizationLicense expiry	Can filter by model/country/region/sub region, but not by brand/sub-brand.Cannot click through from Fleet View to see the property or gateway pages.Can have sub-organizations

Operator View

An **Operator** is typically a **Managed Service Provider** with a direct relationship with Nomadix (i.e. not buying through Distributors).

Operator Fleet View characteristics:

Operator View	Operator Access Rights
Full	Can use all available filters such as model, brand/sub-brand, region and so on. Can add new users, deploy products, and configure products. Can perform actions on the gateway such as backup or upgrade the firmware.

Customer

A **Customer** is typically a company where **Managed Services Providers** or **Indirect Resellers** sell, deploy and support Nomadix equipment.

Customer Fleet View characteristics:

Customer View	Customer Access Rights
NSE IDModelFirmwareLicense KeyExpiryOperating OrganizationProperty	Cannot create properties or deployments.Can create users inside their organizations, but cannot configure products.

Hotelier

A **Hotelier** is a special type of customer that is setup to be associated with a major hotel brand such as Hyatt or Marriott. Once a hotel brand is selected, then that organization can see the gateways fleet view of all properties that share that brand designation.

Hotelier Fleet View characteristics:

Hotelier View	Hotelier Access Rights
NSE IDModelFirmwareLicense KeyExpiryOperating OrganizationProperty	Can click through from the Fleet View to see the gateways detailed information, however, cannot make changes to the gateways such as perform backups or upgrade firmware.Can see all their properties and click through to see the status of deployments at the sites.

Sub-Organization

A **Sub-Organization** can be setup by an Organization as an isolated entity that sits under its main umbrella.

Sub-Organization Fleet View characteristics:

Sub-Organization View	Sub-Organization Access Rights
Same as original type	Sub-Organization users cannot see the information associated with their Parent Organization. The Parent Organization can see all the information associated with the Children Organizations. Operators can create both Customers and Sub-Organizations. Customers can be used for individual properties serviced by Sub-Organizations. Sub-Organizations can be a regional office or subsidiary of the Parent Organization. Customers can only create further Sub-Organizations. Hoteliers can be used for different sub-brands of the main brand. Any number of levels of Sub-Organizations can be set, but it is recommended to not build too many recursive layers.

GATEWAY INDIVIDUAL MANAGEMENT

The **Gateway Details** page displays general information for an individual device, including identification, firmware, connectivity, backup, licensing and activity.


Access

There are a couple of ways to access the Gateway View, as described below:

Menu	Description
Products Menu  Products	From the Nomadix Cloud home page, click on the Products icon in the left menu, then click on the Networks tile, which takes you to the Fleet View (described in the previous chapter). Select a device from the list or search for a specific gateway.
Properties Menu  Properties	From the Nomadix Cloud home page, click on the Properties icon in the left menu. Select a site from the list or search for a specific one. Click on the Networks tile, then click on Nomadix Gateways in the left menu and finally select the device from the list.

Display Elements

Below are the different elements of the Gateway Details user interface:

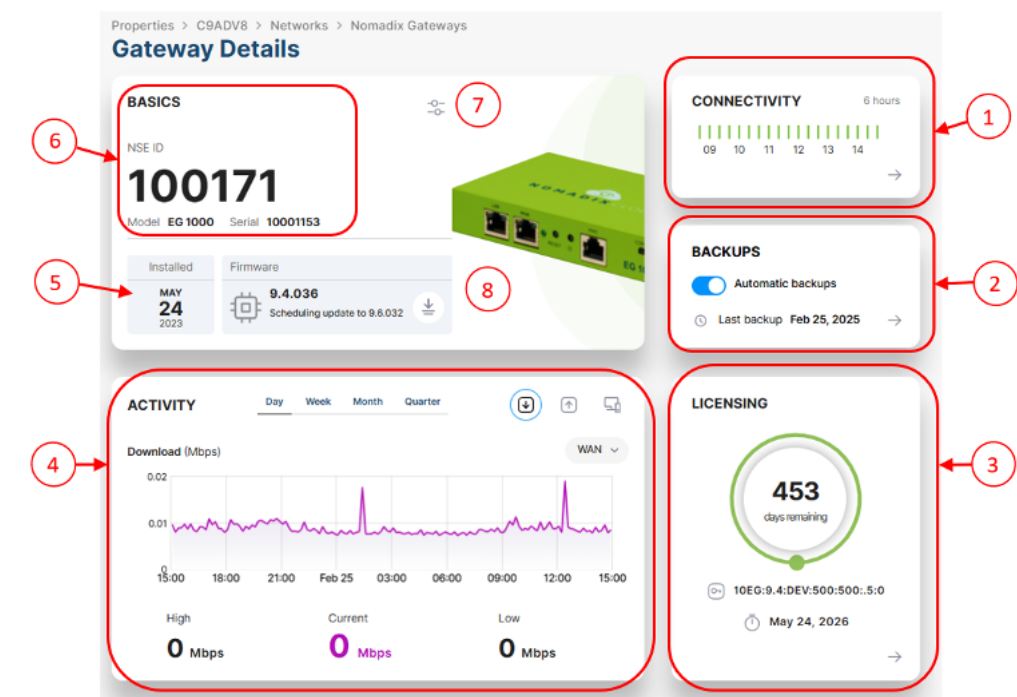

Element	Description
1 – Connectivity	This shows a summary of the gateway connectivity status over the last 12 hours (configuring gateway connectivity is described further in this guide).
2 – Backups	Move the slider to turn Auto Backup on or off (how to configure this function is described further in this guide).
3 – Licensing	The Licensing area shows the basic parameters licensed to the gateway and provides a countdown timer to how long is left before they expire. Includes the raw license string for the Gateway in case it is required for support. Click the → icon in the bottom right of the panel to access more licensing detail.
4 – Activity	The activity panel shows graphs of the recent download and upload bandwidth being utilized on the gateway. It also shows how many subscriber devices have been authorized via the gateway. More detail on using the Activity panel later in the guide.
5 – Installation Date	This is the date when the gateway first went live and contacted the Nomadix licensing server.
6 – Gateway Identification	This shows the main identifying information for the gateway: NSE ID Serial Number Model
7 – Maintenance Settings	Allows for a time and day to be set up to check if a firmware upgrade is available and, if one is available, to apply the upgrade.
8 – Firmware Update	This shows the current installed version of the firmware and indicates if a new version is available for the gateway.

Connectivity

This section covers the connectivity of a Nomadix Gateway to Nomadix Cloud. The goal is to get all connectivity types working properly and to have the Connectivity panel showing **green**.

Warning

- For Gateway connectivity to function reliably over time, a fixed WAN IP address is required, otherwise the parameters need to be reset every time the ISP rotates addresses.
- If the Gateway is still using the default 172.30.30.172 address, go to Configuration > Ethernet Ports/WAN in the web user interface and set the WAN port.
- The following instructions assume the Gateway has already been added to the Nomadix Cloud.
- For bulk provisioning of connectivity parameters for large gateways' installed bases, please refer to the separate Gateway Connectivity API guide.
- Depending on the firewall configuration at the site, it may be necessary to configure the firewall's Access Control List (ACL) to include the following Nomadix Cloud source IP addresses: 13.40.251.03.11.3.15535.176.58.147


Connectivity Types

The connection types each have their own functions:

Type	Description
Ping	Indicates basic gateway to Nomadix cloud connection.
SSH/SFTP	Allows the Nomadix cloud to execute gateway Command Line Interface (CLI) commands, upload and download files from the gateway. Used for:Backup and restoreSetting up Management connectivityFirmware upgrade for older firmware versions
SNMP	Simple Network Management Protocol (SNMP) is a networking protocol used for the management and monitoring of the gateway. It is used for: Determining the firmware versionSetting up the Management connectivityCollecting analytics data to populate the graphs The Nomadix Cloud supports both SNMP Version 2 and Version 3.
XML API	This is how the Nomadix Cloud connects to the XML interface on the gateway. It is used for connecting to the PMS module.

Connectivity Status

The Connectivity panel shows a summary of all the connectivity states over the last 12 hours.

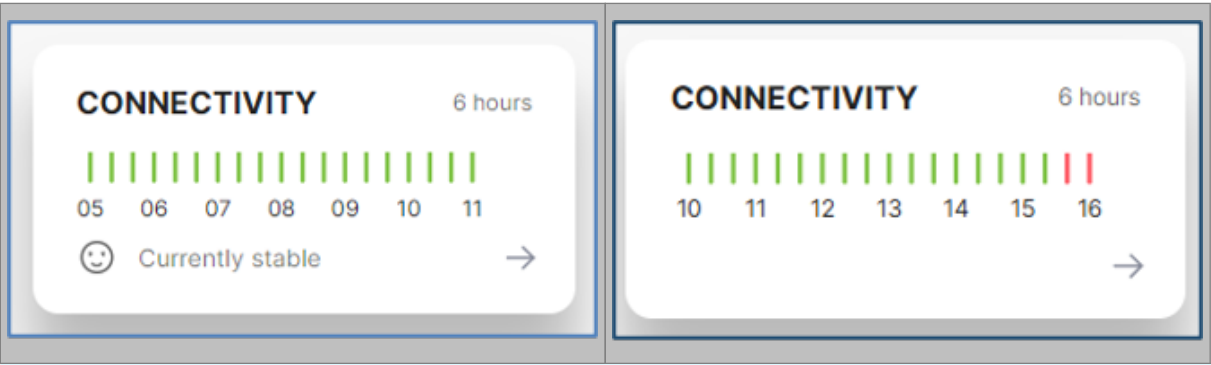

Notes


If one of the connectivity types is down, the status panel will indicate that the connection is unstable.

Selecting the —> icon in the lower right of the Connectivity panel, will open the connectivity drawer which will provide more details on the status of each connection type over the current 24 hours period. For instance, if the SFTP/SSH connection has just gone offline, the status icon will turn red as shown below (the grey indicators are future times):



Color	Description
Green	All connectivity types are working and the gateway is reachable by the Nomadix Cloud.
Yellow	A connectivity type has been down for less than 5 minutes (this can appear occasionally for transient issues and then correct itself).
Red	One of the connectivity types is down and the gateway has been unreachable for more than 5 minutes.
Grey	Not configured or future time stamp.

You can then select the pencil icon to correct the configuration of the connection (refer to the instructions for configuring each connectivity). In addition, you can select the icon in the upper right-hand corner to see the connectivity status as a pie chart for better visualization:

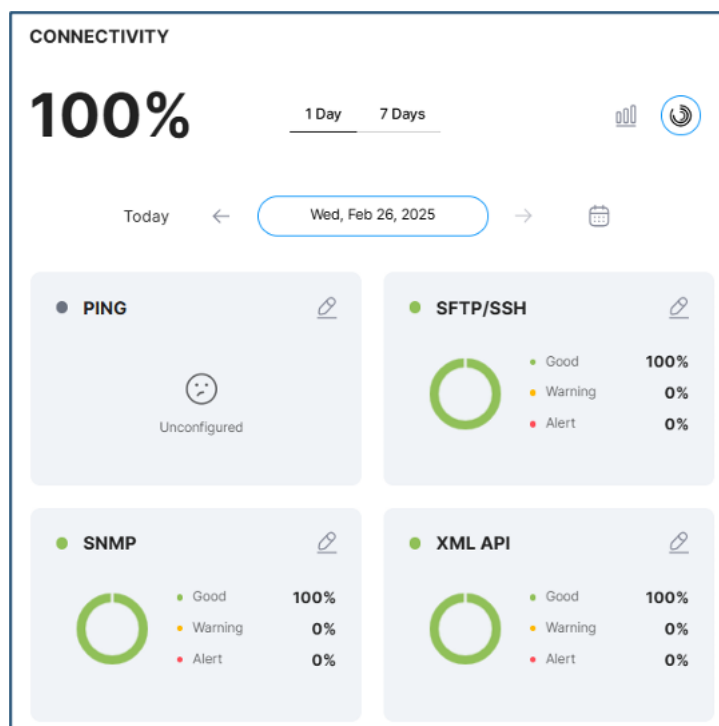

The controls at the top of the panel allow you to select a week's worth of data and select information for time periods going back 90 days:

Connectivity Configuration

Notes

Warning

- Ensure the gateway is up and running, connected to the network and you can log into the Web user interface.
- down its LAN IP address, WAN IP Address, and login credentials (you can type "What is my IP address" in a web browser to find your WAN IP address).
- The first time the Management connection is enabled, the gateway may reboot up to two times.

The following steps detail how to setup the different connectivity types:

1. Log into the Gateway and check what **ports** are being used for what **services** by going to **Configuration > Access Control**. Below are all typical ports for network applications:

In this example, SNMP uses the default port 161.

Configurable Ports	Note: Make sure that the ports are not allocated already
Telnet Port	23
HTTP Port	80
HTTPS Port	443
SSH/SFTP Port	22

NOTE: Port number changes require a reboot to be put into operational effect.


2. Log into the **site router** and configure **Port Forwarding** for each of the services listed above to be directed to the IP address of the Nomadix Gateway:


WarningThe Port Forwarding user interface will vary depending on the make and model of the site router. Depending on the network and WAN setups, the external ports may have to be mapped to different internal ports. This will not impact connectivity to the Cloud. For Ping, you need to enable ICMP rather than a specific port. Check your router's documentation for details. Ping may or may not be reliable depending on the ISP's policies. If Ping does not work, the other connectivity types likely will still work. If required, whitelist the following IP addresses on your firewall: 13.40.251.03.11.3.15535.176.58.147

Port Forwarding List (Max Limit : 64)							
Service Name	External Port	Internal Port	Internal IP Address	Protocol	Source IP	Edit	Delete
Nomadix FTP	22	22	192.168.1.131	TCP			
SNMP Server	161	161	192.168.1.131	UDP			
Nomadix XML	80	80	192.168.1.131	TCP			
Ping	1		192.168.1.131	OTHER			

3. Back in Nomadix Cloud, you can now configure connectivity by clicking on → icon in the bottom right of the Connectivity panel:


This opens the drawer for configuring each connectivity setting:

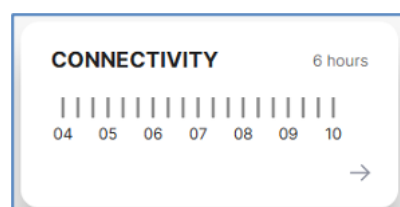

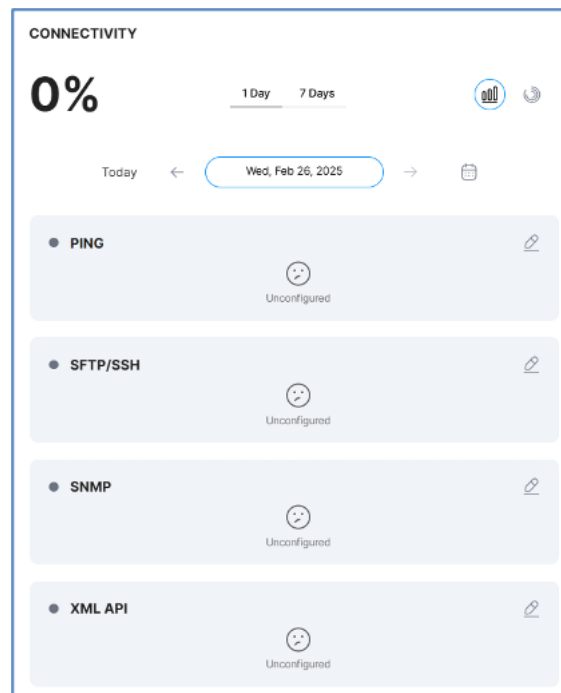

- Click the pencil icon in the upper right corner of each connectivity panel to access the settings:

Ping just requires the WAN IP address
 SFTP/SSH requires the WAN IP, port number and login credentials
 For SNMP Version 2: On the Gateway, go to Configuration > SNMP and ensure the SNMP Daemon Mode is set to "V2 Only" then set passwords for Get and Set: In the Nomadix Cloud SNMP panel, select SNMP Version 2c and enter the values for the WAN IP address, port, SNMP version and the Get/Set passwords:
 For SNMP Version 3: On the Gateway, go to Configuration > SNMP and ensure the SNMP Daemon Mode is set to "V3 Only" then go to Configuration > SNMPv3 and set up the SNMP connection per the gateway documentation. In the Nomadix Cloud SNMP panel, select SNMP Version 3 and enter the values for the WAN IP address, port, SNMP version and the User Name, security protocols and passwords (only Operator and Administrator are supported user names):
 To setup XML: On the Gateway, go to Configuration > AAA > Options and click the XML settings button: Check the Enable Authentication via XML User Credentials box Click the link for User Credentials (or go to System > Login) and set a password for the default XML user xmlcommand: In the Nomadix Cloud, set the IP address, port, the user as "xmlcommand" and the password: The "Use HTTPS" toggle can be selected to ensure the connection is secured by SSL.

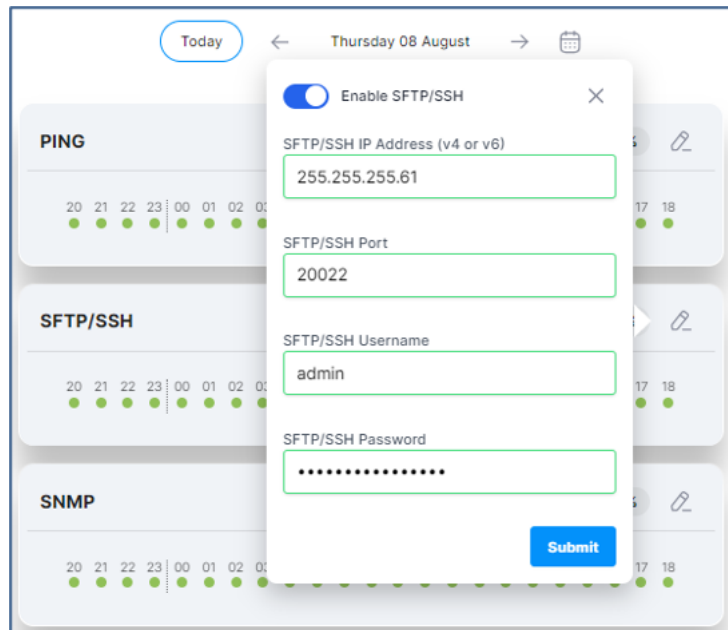

With all steps completed, you should now have all connectivity status indicators showing as **“Green”**.

Backups

An important utility available as part of the Gateways Fleet Management module is the capability to back individual devices to the Nomadix Cloud. This allows for an easy way to capture the current configuration before an important upgrade, or to restore a Gateway in case of a RMA.


The key features include:

- **Automated Daily Backups** - These are retained for one month and then recycled
- **Manual Backups** – with 2 options:
 - – Default one month retention
 - – Retained until deleted. Up to 10 Forever Backups can be retained for each Gateway
- **Backups Downloads** – For offline storage to another system or for manually restoring a Gateway


Warning

- SFTP/SSH connectivity must be enabled for backups to operate.
- Backups only contain the settings for a gateway and are not a complete firmware image.

1. Move the **slider** to the “on” position to enable Automatic Backups:

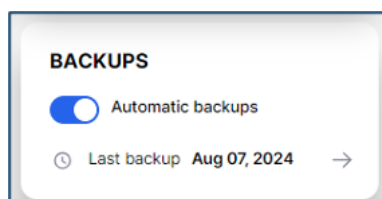



2. To access further configuration parameters, click the → icon in the lower right of the Backup panel. This opens a drawer with the listing of backups for the gateway and associated controls:

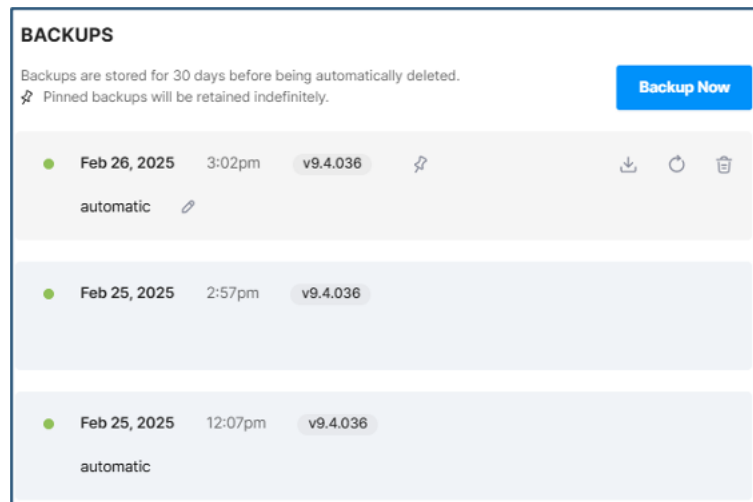

3. To trigger a Manual Backup, click the Backup Now button in the upper right corner. When complete, it will show as a Manual Backup with the date, time, and firmware version:

Hovering over the backup will reveal additional controls described below:

IconDescription
 a – Pencil IconChange the description of the backup.
 b – Pin IconAllows you to designate a backup as “forever”, meaning it will not be deleted after 30 days.
 c – Download IconAllows you to download a zip file of the backup.
 d – Restore IconTrigger a restore of the backup file.
 e – Trashcan IconDelete a backup you no longer need.

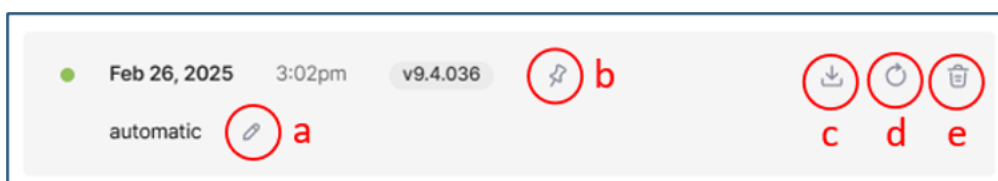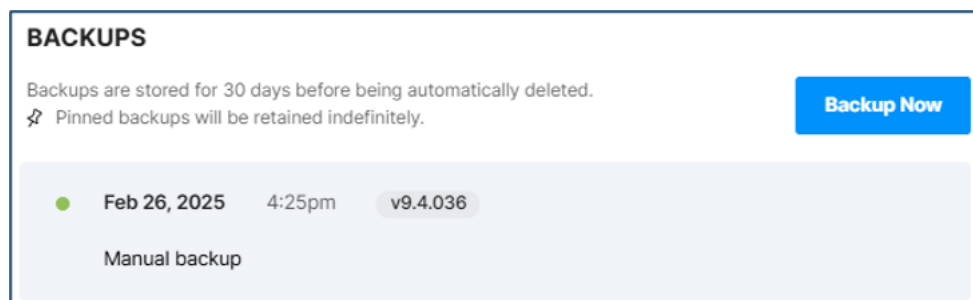


Warning


You can only restore onto the same version of firmware as the backup.

Licensing

The Licensing panel provides a basic overview of the status of the gateway license:

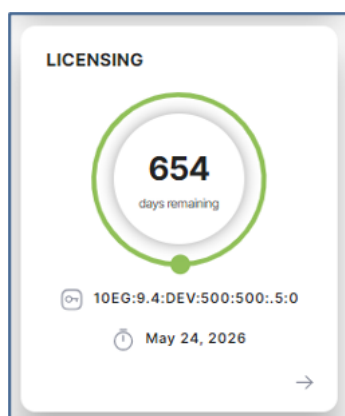

To see a more detailed description of each module or product licensed for the gateway, click the → icon in the lower left corner of the panel:

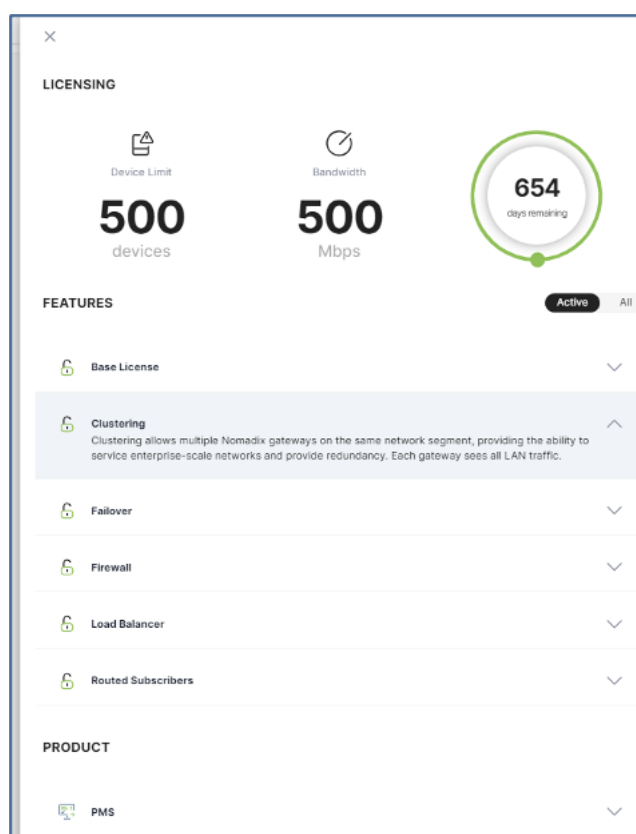


Each module can be selected to see its function. Selecting "All" in the upper right corner will show all possible available modules or products for the gateway.


Activity

The Activity panel provides real-time insight into how the gateway is performing to help monitor services and troubleshoot potential issues with the site configuration. There are three available graphs:

1. **Download** shows the download stream activity on the selected port (see below on how to select different ports):

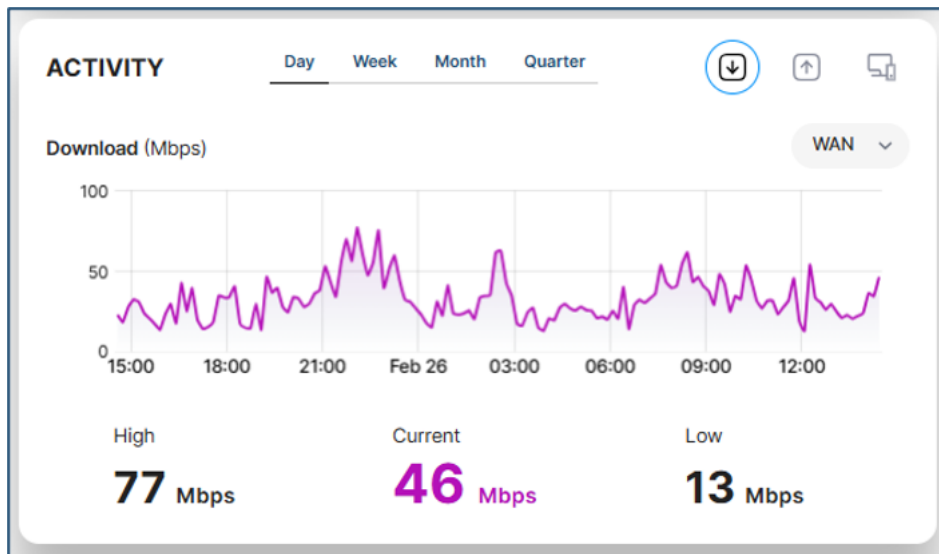

2. **Upload** shows the current upload stream activity of the selected port (see below on how to select different ports):

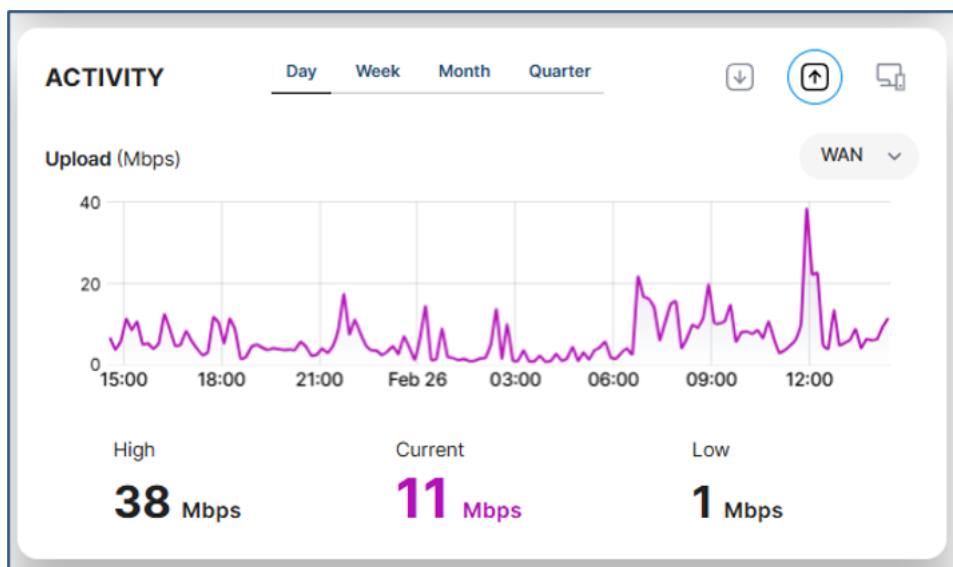


3. **Devices** reflects the number of user devices currently authorized through the gateway – such as via a captive portal – as counted in the gateway web UI at Subscriber Administration → Current:

You can select timeframes of the current day, the previous week, previous month or previous quarter to examine activity levels. To see a detailed information for a specific timeframe, just put your mouse pointer over the graph:




You can select different gateway ports to monitor the upload and download graphs.

1. From the upload or download graph, click the drop-down menu in the upper right corner and select the port you wish to monitor. The graphs will populate accordingly:

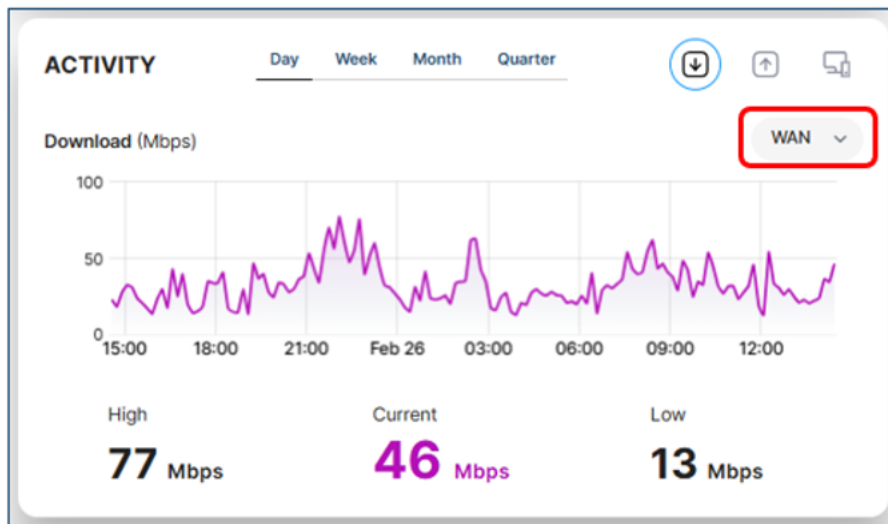

2. Depending on the model of gateways, there will be more or less ports available for monitoring. For example, for an EG 6000 you would see this list:

Note For more information on the ports shown, please refer to the documentation for your model of Nomadix gateway.

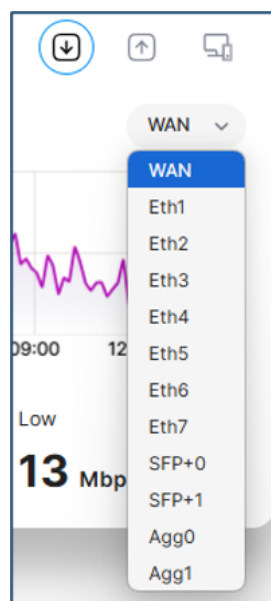

Firmware Update

Nomadix Cloud allows an administrator to update the Gateway firmware directly from the Status page, as well as schedule future updates. The Gateway Status page will show if a new version is available as shown below:



Warning


- SSH/SFTP, SNMP and Management must be enabled for this functionality to be available.
- Firmware upgrade from Nomadix Cloud does not currently support downgrading firmware.

Procedure


If the Gateway Status page indicates that a new firmware version is available, follow these steps:

1. Click the **upgrade** icon to select the new firmware version you wish to upgrade to:


Warning Versions of the gateway firmware before 8.16 need to be updated to 8.16 before the gateway can be updated to 9.0 firmware versions. The Cloud upgrade process will prompt you to perform the interim upgrade.

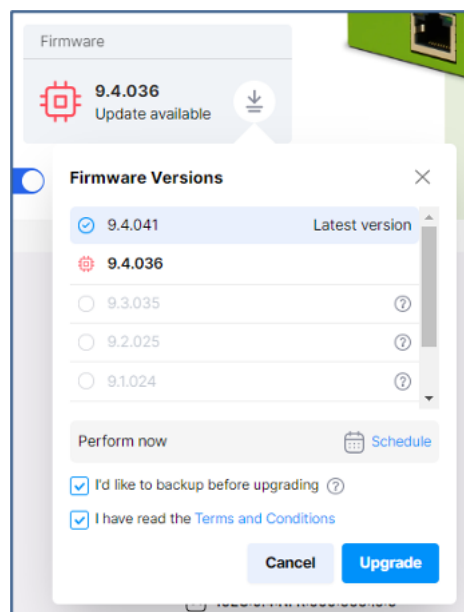


2. If you wish to schedule the upgrade for a later time (for instance, when the gateway traffic is low), then click **"Schedule"** to open the dialog box below (to skip scheduling, proceed to step 7).

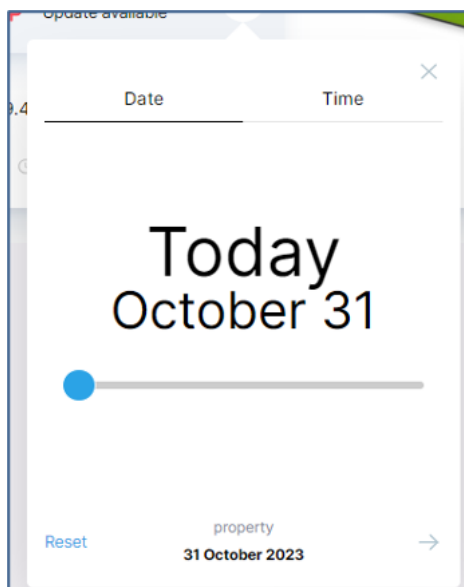


3. Use the **slider** to select a day up to a month in advance for the upgrade.
4. Click "**Time**" to set the time for the upgrade:

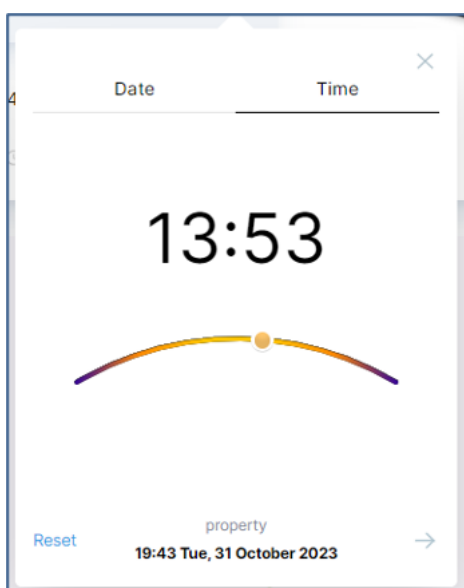


5. Use the **slider** to select a time for the upgrade and click the → icon in the bottom right to accept the schedule.
6. To discard a scheduled upgrade, click "**Reset**" in the lower left corner of the dialog box.
7. With either a schedule set or without, you can opt to do a **backup** before upgrading (recommended).
Warning You must accept the standard terms and conditions for a firmware upgrade.

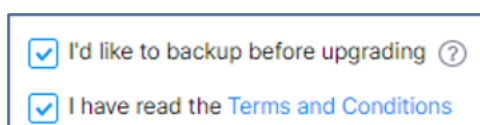


8. The firmware panel now shows that the upgrade has been scheduled:

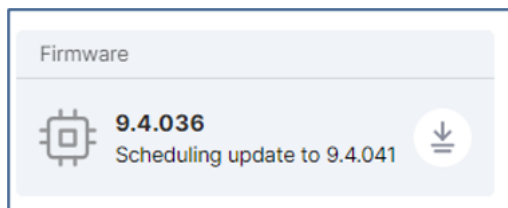


9. Once the scheduled time is reached, the firmware panel shows a progress message:

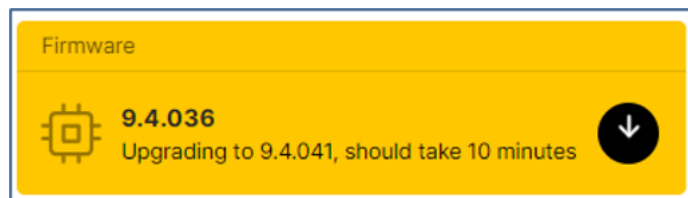

10. After the upgrade, the gateway is in self test mode for approximately 5 minutes, but is processing traffic:
Warning Do not perform any actions with the gateway WebUI or CLI during this self-test interval.

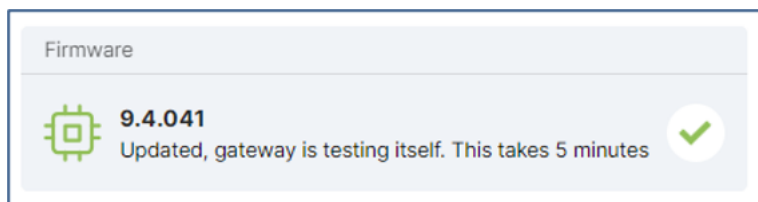

11. When the upgrade is complete, the panel shows success message below:

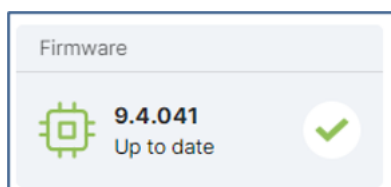


Maintenance Settings

Maintenance settings allow you to configure a regular time for an upgrade to occur whenever new firmware versions are available.

1. Select the **Maintenance Settings** icon from the Gateway status page:




2. From this dialog, select “**Schedule**” to pick a day and time:

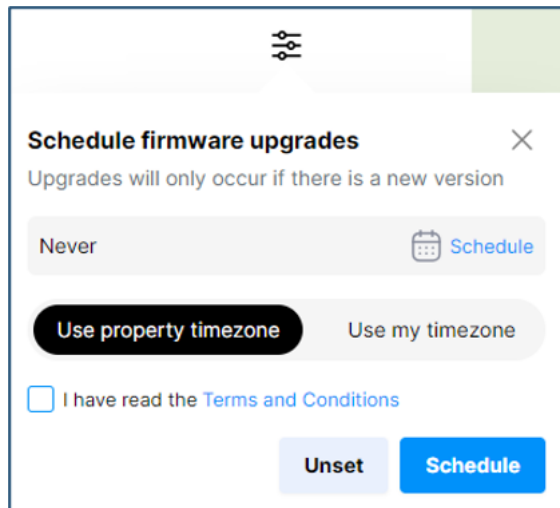

The screenshot shows a dialog box titled "Schedule firmware upgrades" with a close button (X) in the top right corner. Below the title, it states "Upgrades will only occur if there is a new version". There are two main sections: the first has a "Never" button and a "Schedule" button with a calendar icon; the second has two buttons, "Use property timezone" (highlighted in black) and "Use my timezone". Below these is a checkbox labeled "I have read the Terms and Conditions". At the bottom are "Unset" and "Schedule" buttons.


3. Select a day of the week for the upgrade to occur:

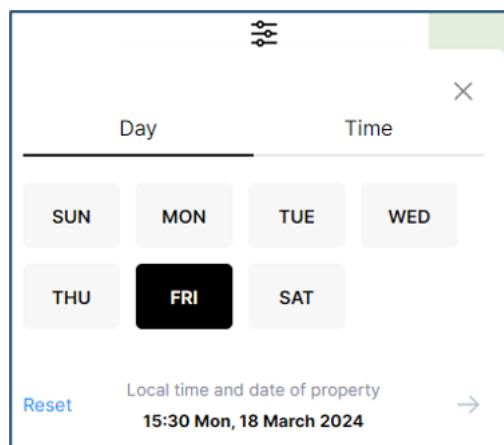

The screenshot shows a dialog box with tabs for "Day" and "Time". Under the "Day" tab, there are seven buttons for the days of the week: SUN, MON, TUE, WED, THU, FRI (highlighted in black), and SAT. At the bottom, there is a "Reset" button, the text "Local time and date of property", and the date/time "15:30 Mon, 18 March 2024" with a right arrow.


4. Click "**Time**" and select a time with the slider:

WarningThe gateway reboots during the upgrade process, so best practice is to select a time when the site is typically quiet.

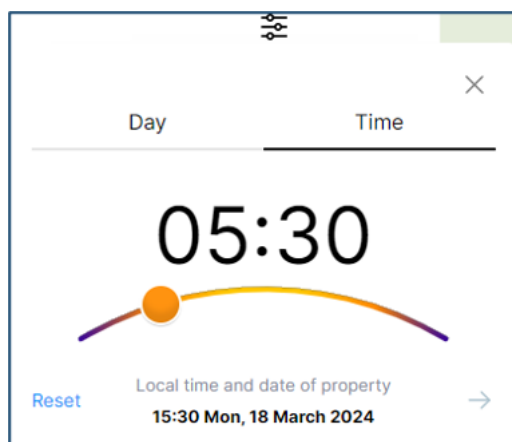

The screenshot shows the same dialog box with the "Time" tab selected. A large digital clock displays "05:30". Below the clock is a horizontal slider with a yellow-to-purple gradient and an orange dot indicating the selected time. At the bottom, there is a "Reset" button, the text "Local time and date of property", and the date/time "15:30 Mon, 18 March 2024" with a right arrow.

5. You can choose to have the upgrade happen either in your local time zone or the one of the property.

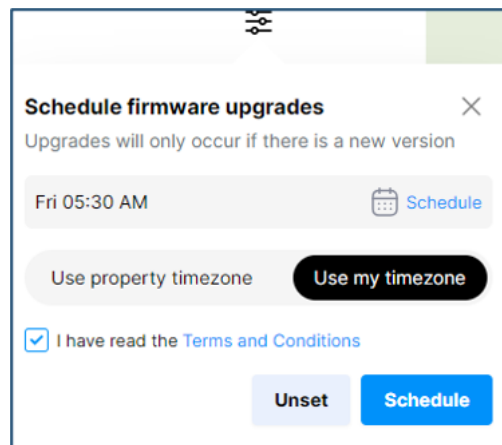

6. Click **"Schedule"** to set the upgrade time and you will get a confirmation message:

Successfully updated Maintenance Settings x

7. To remove the settings from a gateway, click **"Unset"**.

Setup and Basic Administration Guide

INTRODUCTION

Scope and Purpose

Thank you for using Nomadix products. This Administration Guide covers the features and configuration options available on the Nomadix Cloud platform, as of its release (November 2023). It is aimed at end-users from the Nomadix channel partner community.

Documentation Conventions

{{snippet.Documentation Conventions}}

NOMADIX CLOUD OVERVIEW

Nomadix Cloud is the unified platform for managing and controlling Nomadix products, both for MSPs and property owners. It provides the framework for managing users, access permission and products across the Nomadix portfolio


All Nomadix partners are eligible to use the Nomadix Cloud free of charge

This guide provides instructions for:

- Getting access to the system
- Setting up and managing accounts
- Accessing other Nomadix products from the Nomadix Cloud
- Deploying new products

Nomadix Cloud Web UI Overview

When you first log into the Nomadix Cloud, you will first see the main dashboard page for your organization. This section describes the main navigation elements of the page.

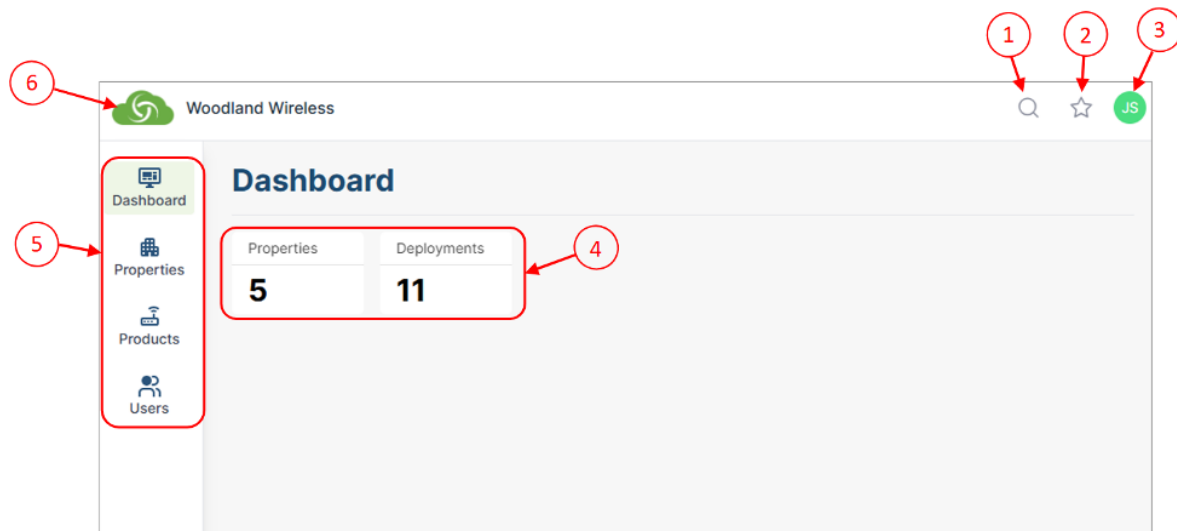


Element	Explanation
1 – Main Search Bar	Use this search bar to find users, properties, and organizations.
2 – User Profile settings	From the Profile icon you can access settings for you profile such as resetting your password, changing the portal color scheme and logging out of the system.
3 – Recent	Click the start to show the most recent properties and deployments you most recently visited so you can go back to those locations.
4 – Properties/ Deployments	This shows the count for properties and product deployments across your whole organization.
5 – Left-hand menu	This gives you access to the dashboard (this page), properties, and users.
6 – Partner top level	Clicking the logo in the upper left corner will take you to the top level for your organization and give you access to areas for managing users and sub-organizations.

GETTING SET UP ON THE NOMADIX CLOUD

To get access to the Nomadix Cloud, you need to send a request to Nomadix Support to be set up and have the initial admin user added to the portal.

Procedure

1. Email support@nomadix.com and request access. Please include: The full legal name of your company – this must match the name of a partner in our records. The email address of the resource who will be the Admin for your Cloud account.
2. Nomadix will import your organization's gateways and properties into the Nomadix Cloud then send out an invitation to complete the registration.
Note Setting up an organization may take a few days depending on the work queue of the Nomadix Support team. Please check your email spam folder to make sure the invite has not ended up there.
3. Whomever you designate as the initial account administrator will receive an invitation via email to complete the user sign-up form:

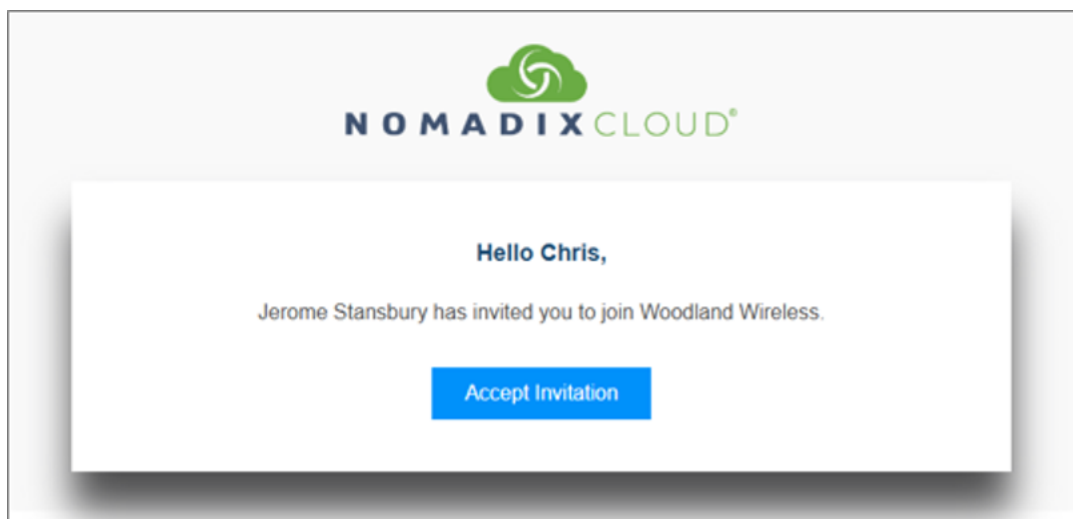

4. Click “Accept invitation” and you will launch the Nomadix Cloud registration page:

Notes To ensure security of your Nomadix Cloud account, always use a complex password and click the slider to enable two-factor authentication. The Nomadix Cloud only supports authenticator applications (such as Google Authenticator or Microsoft Authenticator) for two factor authentication. The Nomadix Cloud does not support two factor authentication via SMS.

Join Woodland Wireless

First Name * Last Name *

Jane Fenster

New Password

.....

New Password (for confirmation)

.....

Two-factor authentication

Protect your account with two-factor authentication. Each time you sign in to your user account, you'll need your password and a one-time passcode.

☒ Enable two-factor authentication

Set up two-factor authentication

5. Click “Set up two-factor authentication” and you are prompted to set up two-factor authentication via an authentication application on your mobile phone.

Set up two-factor authentication

Two-factor authentication (2FA) is an extra layer of security used when logging into websites or apps.

1 Scan the image below

Scan this image with the two-factor authentication app on your phone. We recommend using cloud-based TOTP apps such as: 1Password, Authy, LastPass Authenticator, or Microsoft Authenticator.



If you cannot scan, please enter the following code manually:
QJ3TUPE0PBF555G4VEASB6Q5

2 Enter the code from the application


After scanning the QR code image, the app will display a code that you can enter below.

6-digit code *


Your current password *

Confirm

6. Enter the six-digit code and your password and click “Confirm” and you are promoted to save your security recovery codes in case you lose you mobile phone.

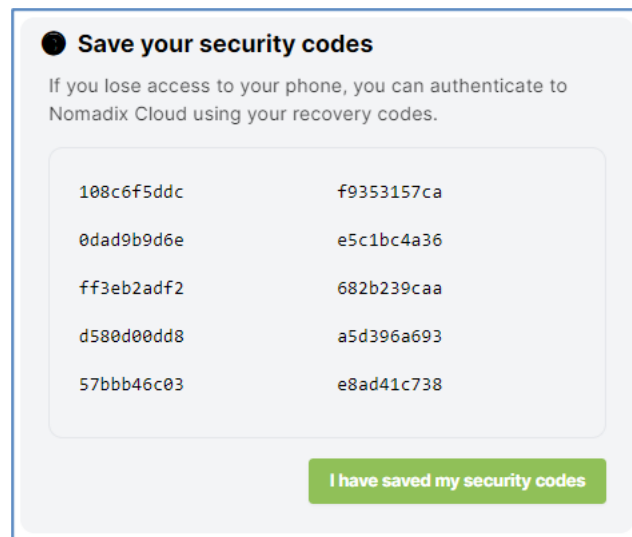

- Once you have confirmed you have saved your security codes, then you are given a success prompt and you are ready to use the Nomadix Cloud.

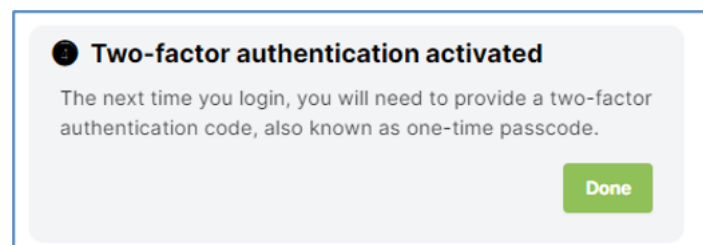

CHANGE ACCOUNT SETTINGS

Once you have completed the sign-up procedure for the Nomadix Cloud, you can customize the look and feel of the portal and manage your basic account settings.


Basic Settings

- Nomadix Cloud users can change various settings for their account by clicking on the icon in the upper right-hand corner:



- This shows the page for user settings:

ElementExplanation1 – RoleYour designated role in the organization. This can be:Admin – able to add usersEditor – can configure Nomadix Cloud productsView – only able to view data on products2 – Approver statusIndicates if you have been designated an approver for changes to a Nomadix Captive Portal. See the Captive Portal documentation for more information.3 – Sign outLog out of the Nomadix Cloud.4 – Name and emailClick the pencil icon to modify your name and email.5 – OrganizationThis indicates what organization your account is a member of. Typically, this would be the MSP or other type of organization you are a part of.6 – TimezoneUse the drop down to select your timezone. This will impact scheduling activities in Nomadix Cloud – such as scheduling gateway firmware downloads.7 – Color schemeUse the slider to select if you want to see the Nomadix Cloud UI in light mode, dark mode, or according to your system display settings.

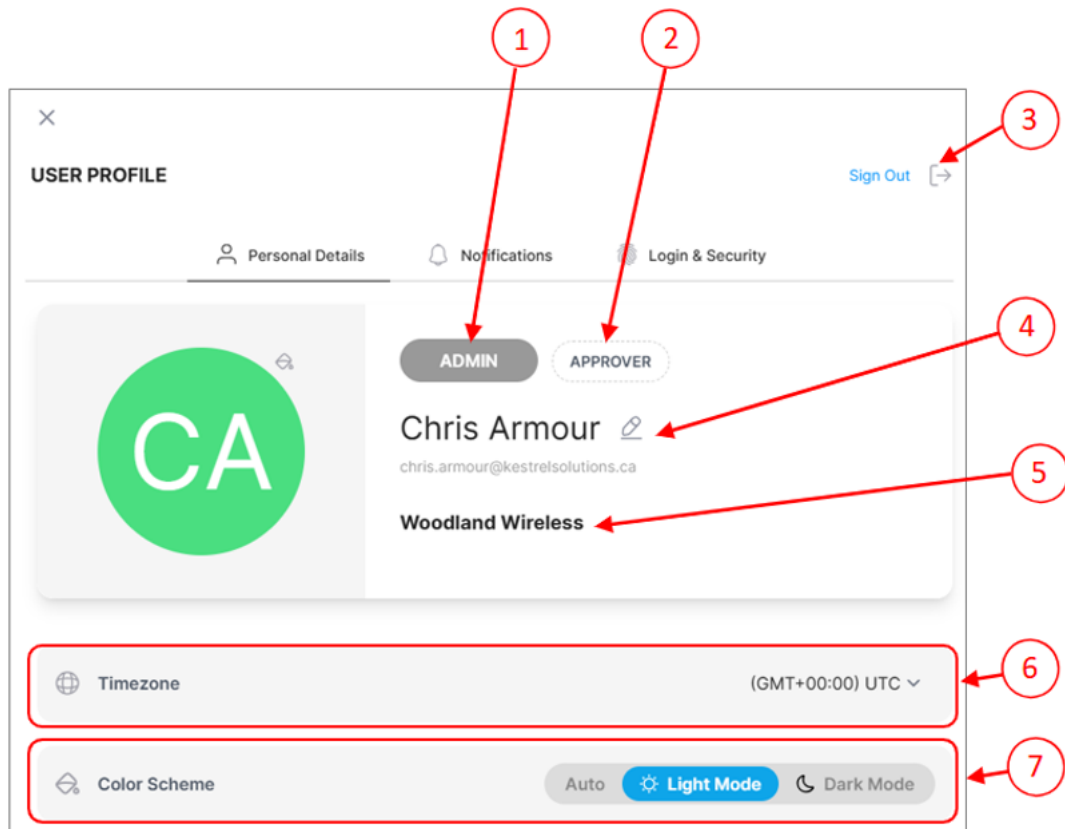


3. Notifications in Nomadix Cloud allow the user to be informed via email of significant changes or events in the system. The Notifications tab includes the following settings:

ElementExplanation1 – LicensingEmails will be generated for products nearing the end of their license terms.

2 – TechnicalCommunicates important service related updates such as an upcoming system outage for maintenance.


3 – GeneralInforms users of new features or functions on the platform.

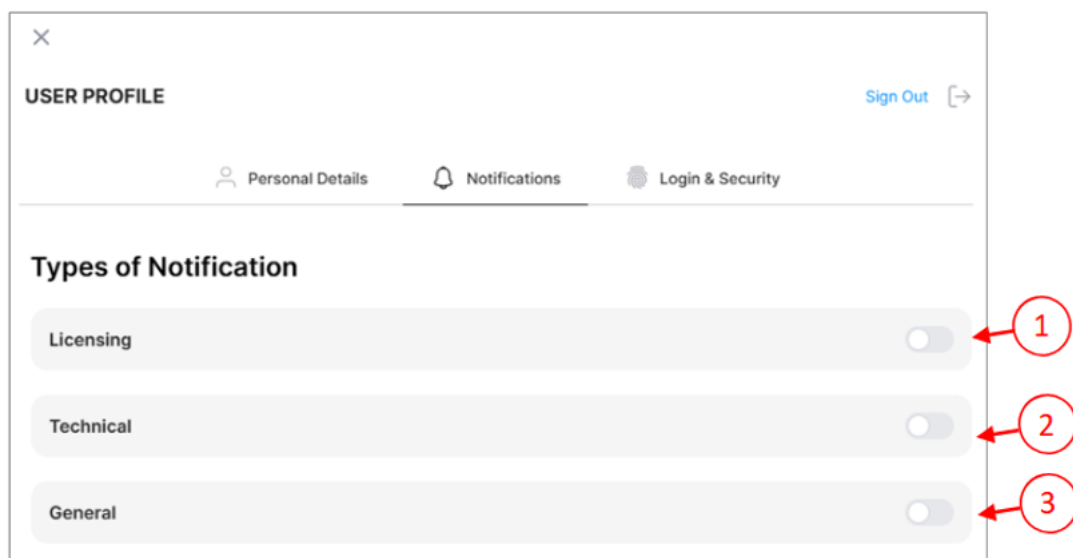


Set up Passkeys

Passkeys are a replacement for passwords designed to provide more security and easier logins. To set up a Passkey:


1. Go to User Profile and select the Login & Security tab:

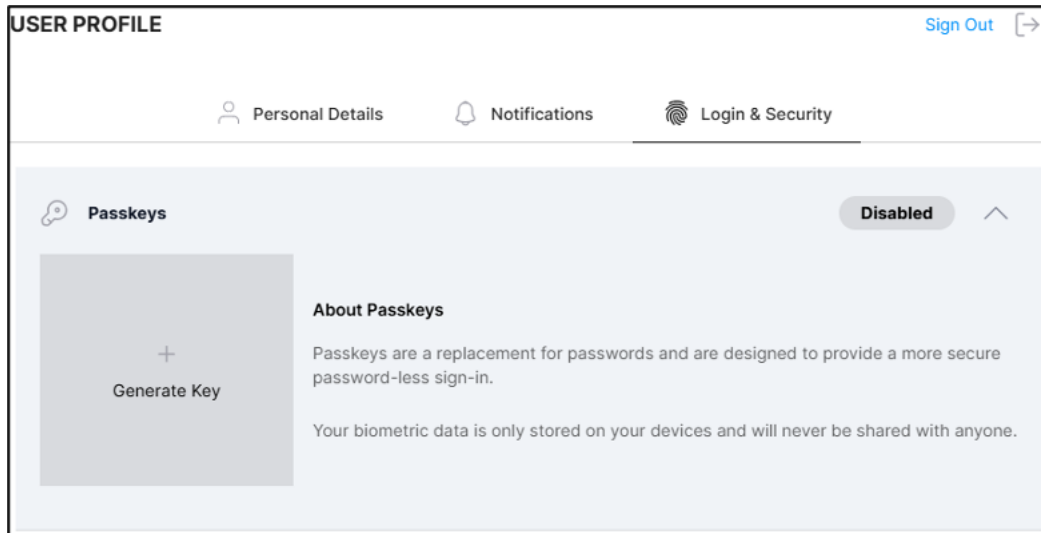


2. Click the “Generate Key” button (note the example provided is for Windows 11 – process may vary on other operating systems) and click OK to proceed:

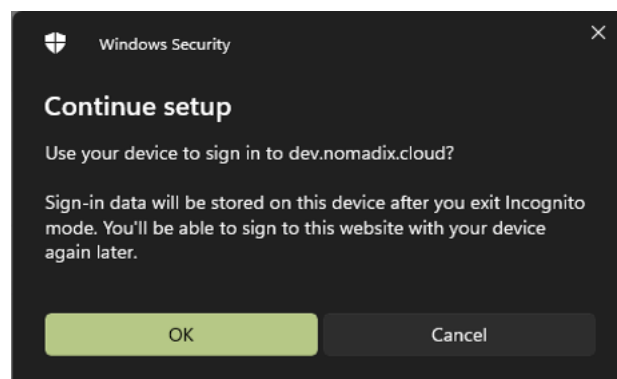


3. You can then select a variety of ways to identify yourself. In this example, using the fingerprint reader on a laptop, but other choices include setting up a PIN code or using an external security key.

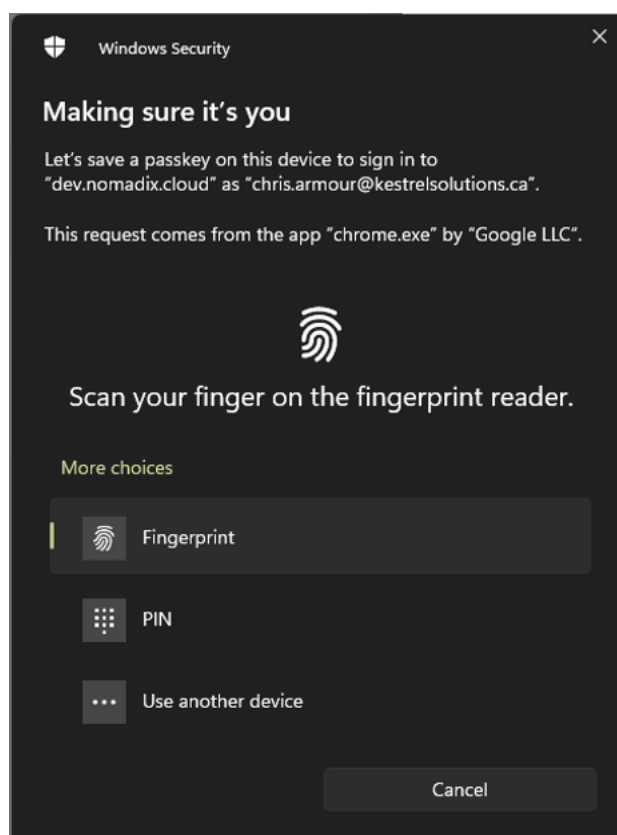

4. Once you have scanned your fingerprint, you will get a confirmation that the Passkey has been registered:

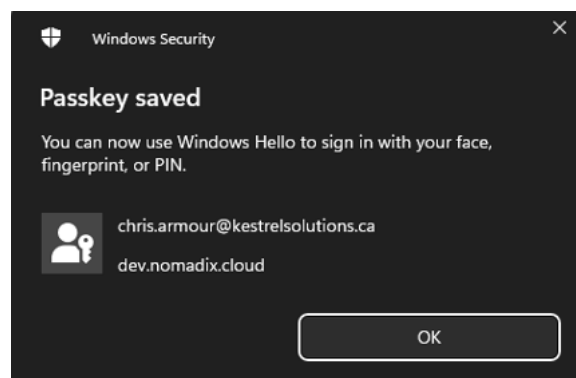

5. The Passkey will now show has being registered in Nomadix Cloud and enabled:

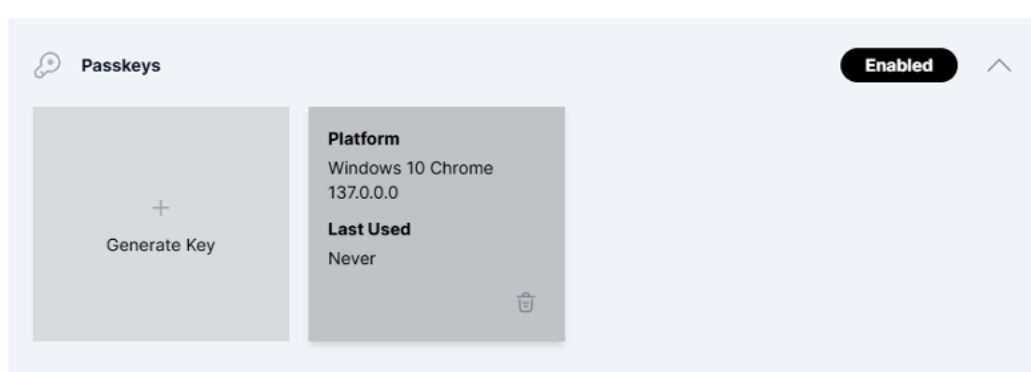


6. You can now log into Nomadix Cloud using your Passkey. You can add multiple Passkeys using different formats such as a PIN or hardware security key.
7. Use the trashcan icon to delete a Passkey.

Change your password

To update your password, follow these steps:

1. Go to User Profile and select the Login & Security tab:
2. Select the drop down for “Password & 2FA”.
3. Enter your old password and new password (passwords must be at least 12 characters long) in the fields below:

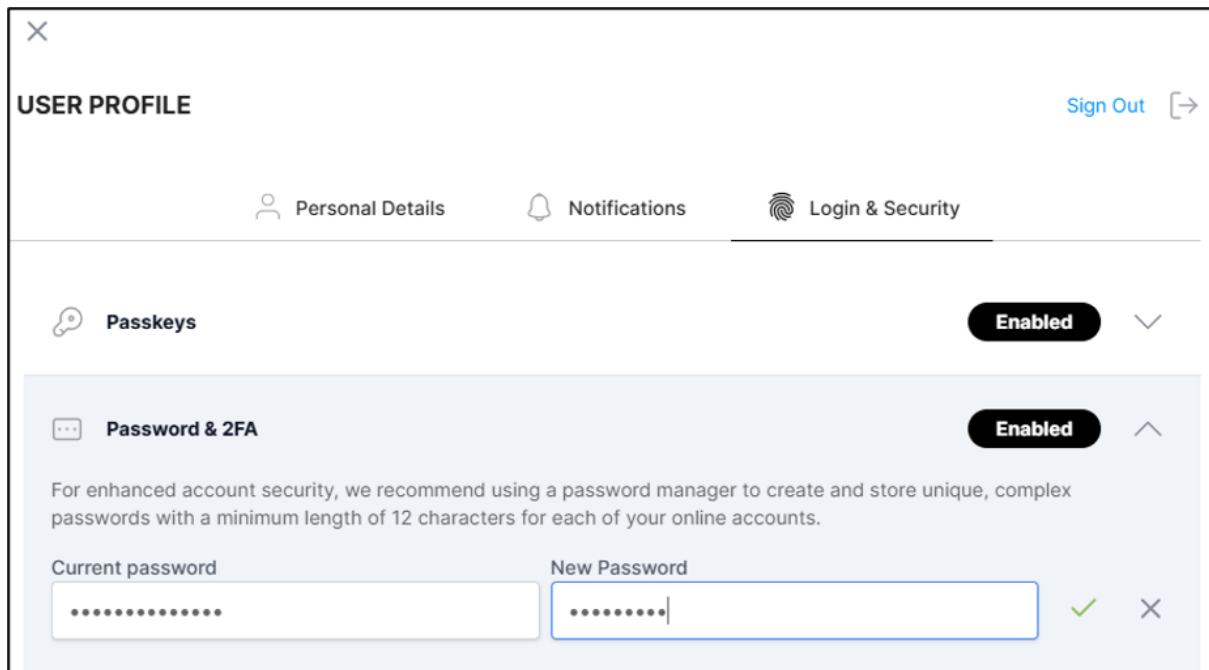


The screenshot shows the 'USER PROFILE' page with the 'Login & Security' tab selected. Under the 'Password & 2FA' section, which is currently 'Enabled', there are two input fields: 'Current password' and 'New Password'. The 'Current password' field contains a series of dots. The 'New Password' field contains a series of dots followed by a vertical bar, indicating it is active. To the right of the 'New Password' field are a green checkmark and a red 'X' icon. Above the 'Password & 2FA' section, there is a 'Passkeys' section also marked as 'Enabled'.

4. Status will show “Updated” to confirm the change went through.

Change Two Factor Authentication settings

1. Go to User Profile and select the Login & Security tab:
2. Select the drop down for “Password & 2FA”.

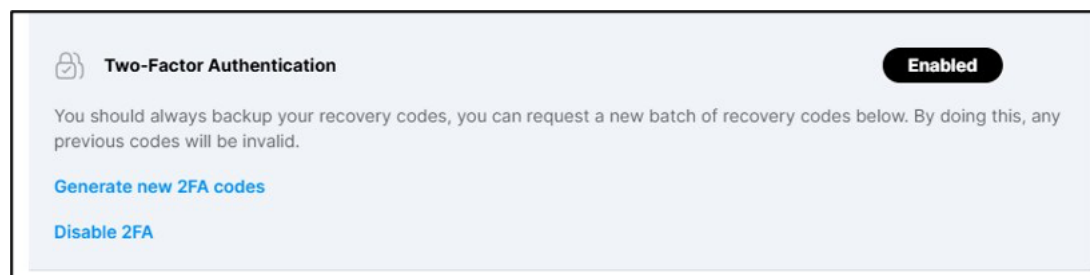

The screenshot shows the 'Two-Factor Authentication' section, which is currently 'Enabled'. Below the status, there is a message: 'You should always backup your recovery codes, you can request a new batch of recovery codes below. By doing this, any previous codes will be invalid.' Below this message are two links: 'Generate new 2FA codes' and 'Disable 2FA'.

3. Click “Generate new 2FA codes” to get a new set of emergency codes in case you lose the device you are running your authenticator app on:


Two-Factor Authentication
Enabled


Save your backup codes! Storing your backup codes in a secure location ensures you can regain access to your account if you lose your authentication device or it stops working.

1bf309ee83	467b37a396
f561027425	69f8c3e0c5
35a04899cf	119ff86be4
67c88f6f68	20b7acf5d4
a7d5b76021	80f6fff1a1

MANAGING USERS

If you have been added to the Nomadix Cloud as an “Admin” you can add, modify, and delete new users from within your organization.

The user list and user management features are found by clicking the “Users” icon in the left-hand menu:

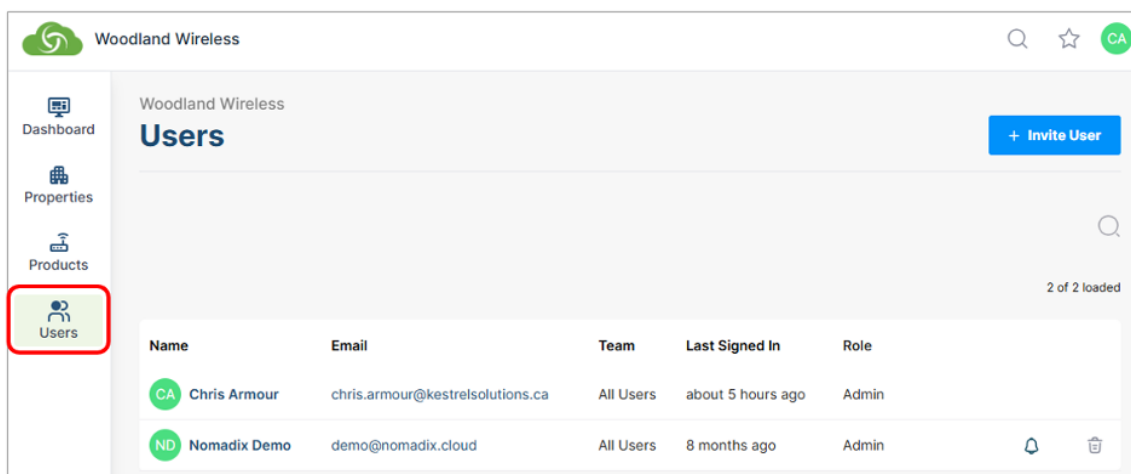

Woodland Wireless

Woodland Wireless

Users

[+ Invite User](#)

2 of 2 loaded

Name	Email	Team	Last Signed In	Role
 Chris Armour	chris.armour@kestrelsolutions.ca	All Users	about 5 hours ago	Admin
 Nomadix Demo	demo@nomadix.cloud	All Users	8 months ago	Admin

Add new users

1. Click the Users icon from the left-hand menu.
2. To start setting up a new user, click “Invite User” in the upper right-hand corner:
3. Choose one of the three user types: Admin – Can invite users to the Nomadix Cloud, modify their settings and delete users. Editor – An editor can change settings on the Cloud and administer products but cannot manage users. Viewer – Can only see metrics and settings but cannot change any settings.
4. Click “Send an Invitation” to send out an invite. The user you have invited will follow the same procedure as above to set up their password, multi-factor authentication and general settings.
5. While an invitation has not yet been actioned by the invitee, you will see these icons in the user list:
The first indicates that the invitation is still pending and the user has not set up their account. Clicking the second icon will the invitation to the user.



Delete users

Notes

As an Admin user in a Nomadix Cloud Organization, you must ensure unused Nomadix Cloud accounts are deleted when a user leaves your organization to ensure the security of the system.

1. Click the Users icon from the left-hand menu.
2. Click the trashcan icon on the right-hand side to delete a user.

Name	Email	Team	Last Signed In	Role		
CA Chris Armour	chris.armour@kestrelsolutions.ca	All Users	about 7 hours ago	Admin		
ND Nomadix Demo	demo@nomadix.cloud	All Users	8 months ago	Admin		

3. You will be prompted if you are sure you want to proceed with the deletion. If you are sure, then click “Ok”.

Warning

Deleted users cannot be recovered!

Resetting a user's password

If user forgets their password, then the Admin user can trigger a password reset mail to be sent to the user on their behalf.

1. While logged in as an Admin user, click users from the left hand menu to go to the user list for your organization:

 Dashboard
  Properties
  Products
  Users

Woodland Wireless

Users

+ Invite User

2 of 2 loaded

Name	Email	Team	Last Signed In	Role	
 Chris Armour	chris.armour@kestrel-solutions.ca	All Users	4 days ago	Admin	 
 Nomadix Demo	demo@nomadix.cloud	All Users	8 months ago	Admin	 

2. Select the user whose password needs to be reset to go to their profile page:

USER PROFILESign Out →

 Personal Details

 Notifications

 Login & Security



ADMIN

APPROVER

Chris Armour 

chris.armour@kestrelsolutions.ca

Woodland Wireless

 All Users

 Timezone

(GMT-05:00) Eastern Time (US & Canada) ▾


 Color Scheme

Auto

 **Light Mode**

 Dark Mode

3. Select the Login & Security tab:
4. Click the "Reset Password" link.
5. The user will receive an email inviting them to reset their password:

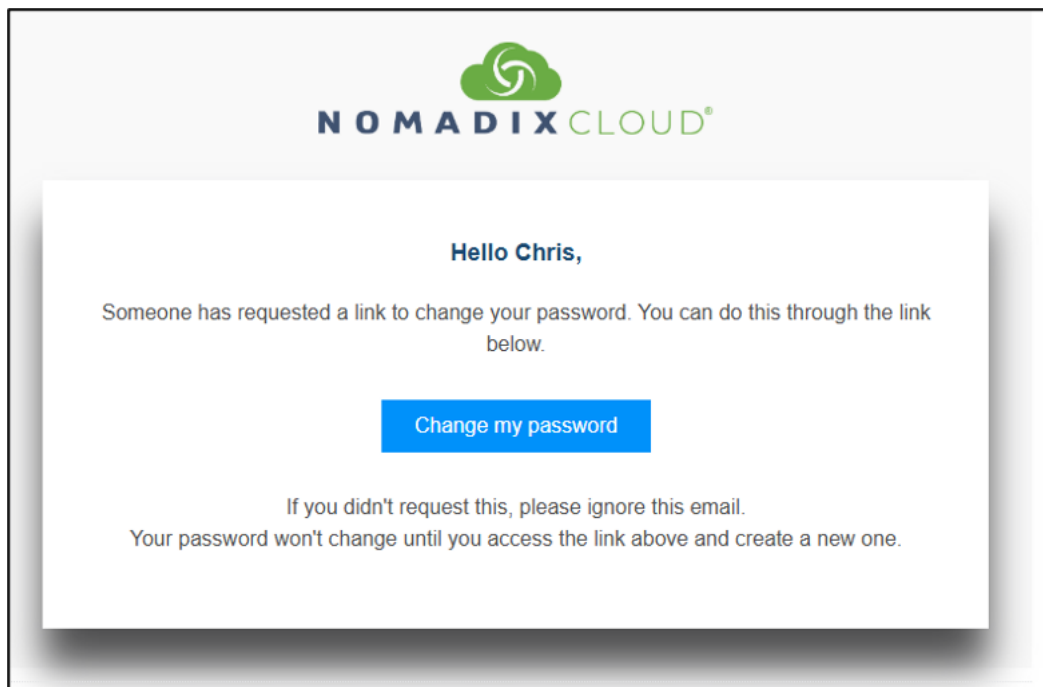


6. The reset process is the same as the initial password setup described above.

Locking a user's account

If a user goes on vacation or an extended leave of absence, it is good practise to suspend their account to reduce the risk of a data breach. If you are an Admin user, you can lock a user's with these steps:

1. While logged in as an Admin user, select a user from the list of users..
2. Go to the Login & Security tab:

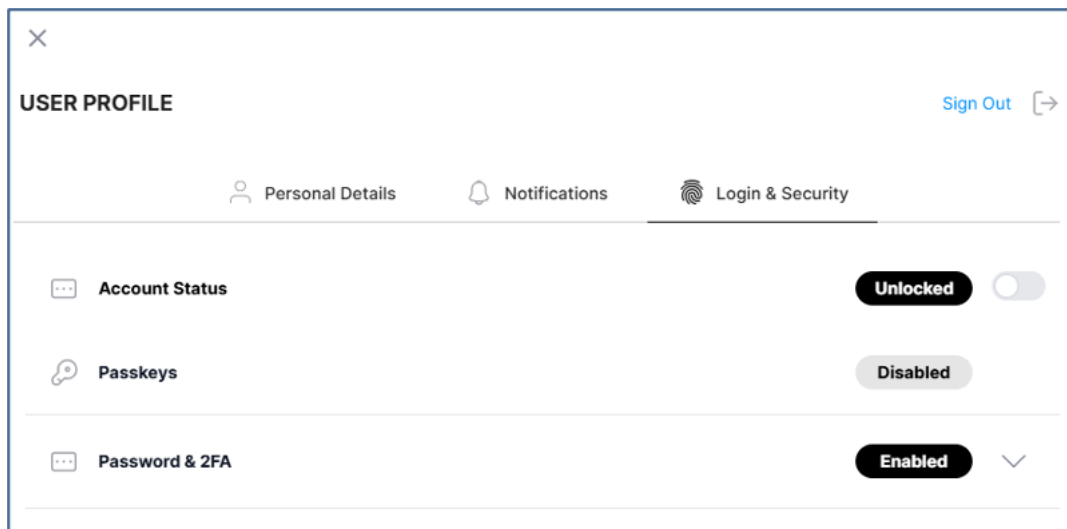

3. In the list of users, the account is now shown with a lock icon:

Name	Email	Team	Last Signed In	Role	
CA Chris Armour	chris.armour@kestrelsolutions.ca	All Users	4 minutes ago	Admin	
ND Nomadix Demo	demo@nomadix.cloud	All Users	9 months ago	Admin	

4. Click the slider for Account Status to lock the account:



5. If the account is locked, the user will not be able to complete the log in process.
6. To unlock the account, select the user again, go to Login & Security and click the toggle to off.

USING SINGLE SIGN ON

One of the key features of the Nomadix Cloud is the ability to access many different Nomadix Products from inside the same portal without having to log in multiple times with different credentials.

Some products are fully integrated into the Nomadix Cloud UI framework, some are partially configured in the Nomadix Cloud and partially in a linked portal and other products have a native portal that is accessed through the Nomadix Cloud.


The table below summarizes the status of each product:

Nomadix product	Status in Nomadix Cloud
Alerts	Fully integrated into the Nomadix Cloud UI.
Casting	Opens a separate portal
Cloud Monitoring	Opens a separate portal
Networks	Fully integrated into the Nomadix Cloud UI.
Passpoint	Fully integrated into the Nomadix Cloud UI.
PMS	Fully integrated into the Nomadix Cloud UI.
EMS	Fully integrated into the Nomadix Cloud UI.
Cloud Telephony	Partially configured in Nomadix Cloud and links to an outside portal.

Procedure

1. Log into the Nomadix Cloud.
2. Click “Products” in the left-hand menu:

NotePartners will only be able to see the products that they are authorized to sell and support. If there is a product missing from the list that your organization should have access to, contact support@nomadix.com.

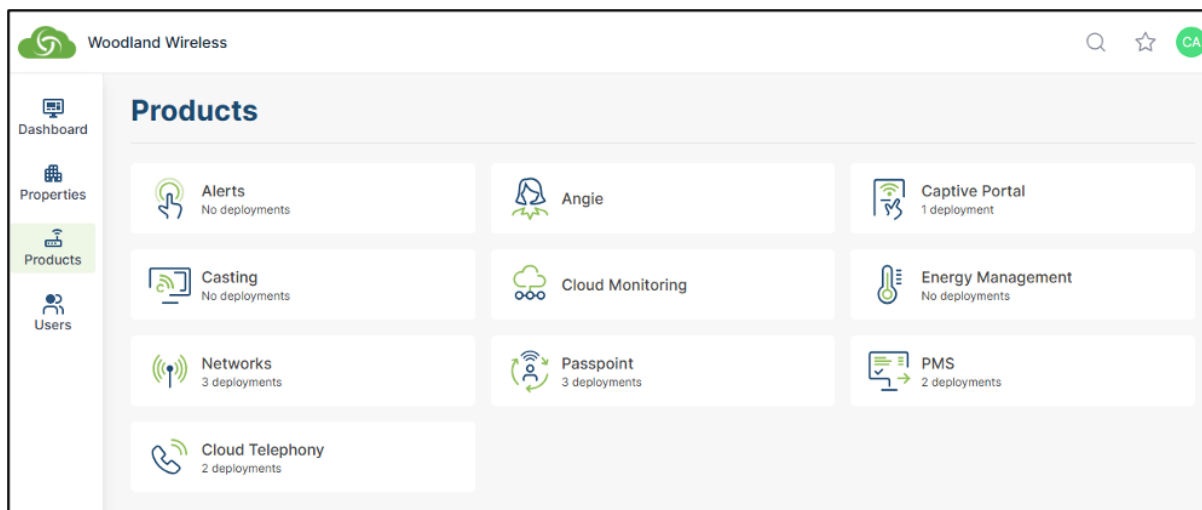

3. Click on one of the tiles to launch the interface for that product.

ADDING A SUB-ORGANIZATION

Typically, a top-level organization is created by Nomadix for a channel partner when they are given access to the Nomadix Cloud Portal.


In most cases, this should be sufficient for a channel partner to track their properties, products, and gateways, but the Nomadix Cloud does provide the ability to create sub-organizations that can be used to organize:

- Customers who purchase from your dealership and then resell your products.

- Partner sub-organizations such as regional offices or affiliated brands.

Procedure


1. Click your organization name in the top left-hand corner to go to the top-level view:

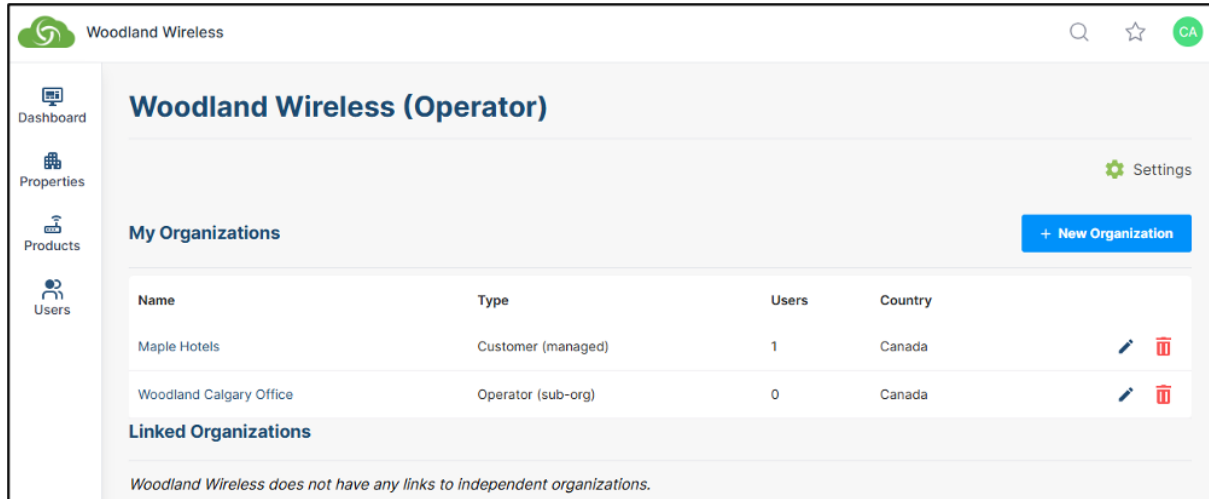


2. Click the “New Organization” button to open the page to set up a new organization. All three fields (Name, Type and Country) are mandatory.

The screenshot shows the 'New Organization' form. It has a header with 'Woodland Wireless' and 'New Organization'. The form contains three mandatory fields: 'Name *' with the value 'Woodland Calgary Office', 'Type *' with a dropdown menu showing 'Sub-Organization', and 'Country of Operation *' with a dropdown menu showing 'Canada'. At the bottom right are two buttons: 'Cancel' (red) and 'Submit' (green).

3. If you create a new sub-organization, then you can manage the users for the sub-organization, and select which products the sub-organization can deploy:

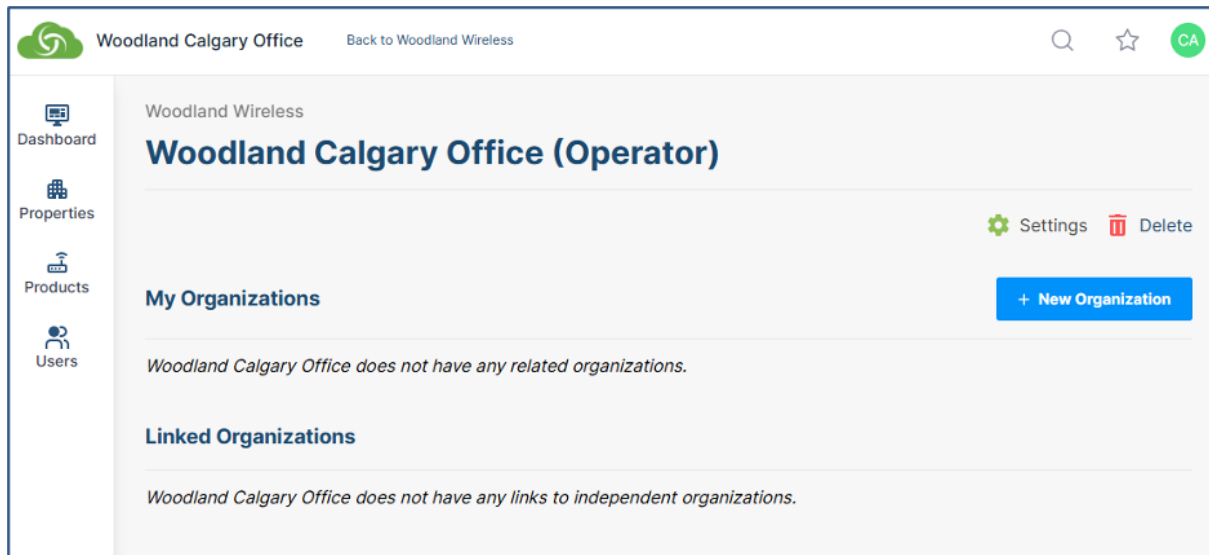

4. If you create a “Customer” type suborganization, you can add users (for instance the hotel IT management team), but the products will only show the products deployed in that group of properties.

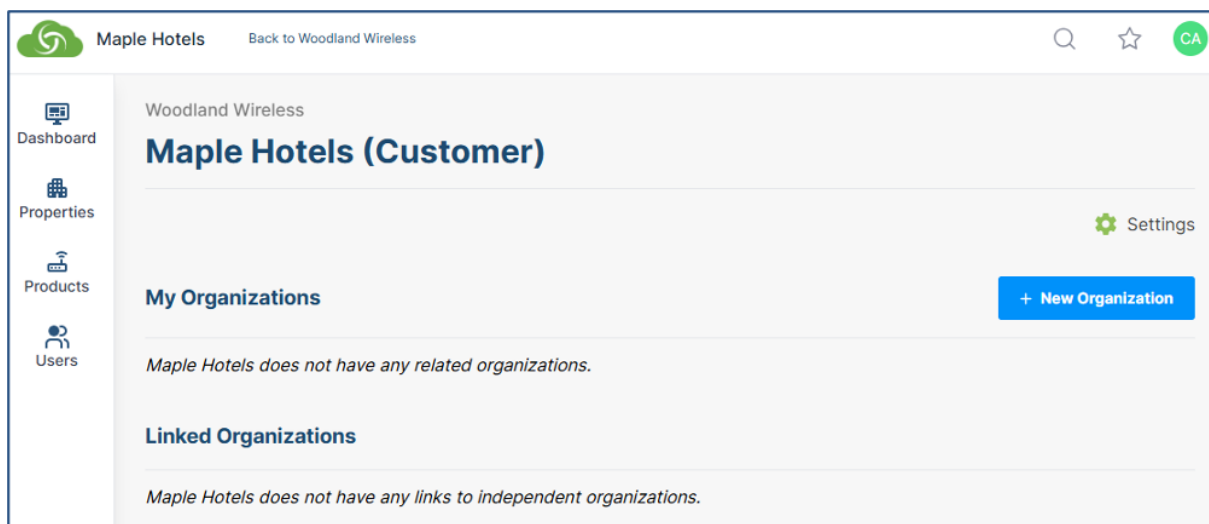

Notes

“Operator” type sub-organizations can create more sub-organizations and customers. “Customer” type sub-organizations can only create more “Customer” type sub-organizations.

Linked Organizations

The Cloud UI also shows “Linked Organization” at the top level for an organization. This is a “sibling” linkage that is built between a channel partner and another organization. For instance, if the channel partner is working with a major hotel brand, that brand may be shown as a “Linked Organization”.

Currently this is only configurable by Nomadix support personnel.

Administration Guide

Download this guide 


INTRODUCTION

Scope and Purpose

Thank you for using Nomadix products. This Administration Guide covers the core functionality of Nomadix Cloud, including management of Organizations, Users, Properties and Products.

Nomadix Cloud Overview

Nomadix Cloud is the single pane of glass management application for all Nomadix products. It offers consolidated configuration and monitoring capabilities for entire fleets of equipment and solutions across thousands of sites via an intuitive web user interface. Hosted by Nomadix, the platform is designed with security and privacy at its core and supports integrations through APIs. Key functionality includes centralized management of Organizations, Users, Properties, Products and more, all accessible via single sign-on.

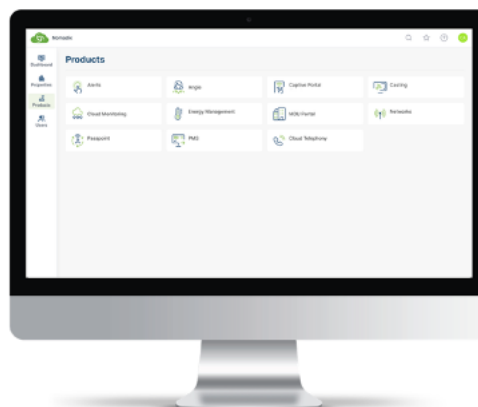

Documentation Conventions

{{snippet.Documentation Conventions}}


Further Reading

This document covers the Nomadix Cloud core functionality for Organizations, Users, Properties and Products management. Please refer to the individual administration guides for complete setup and configuration instructions for each respective Nomadix product.

NOMADIX CLOUD ACCOUNT MANAGEMENT

Login

In a web browser, navigate to: <https://nomadix.cloud/> and enter your **email** and **password** information.

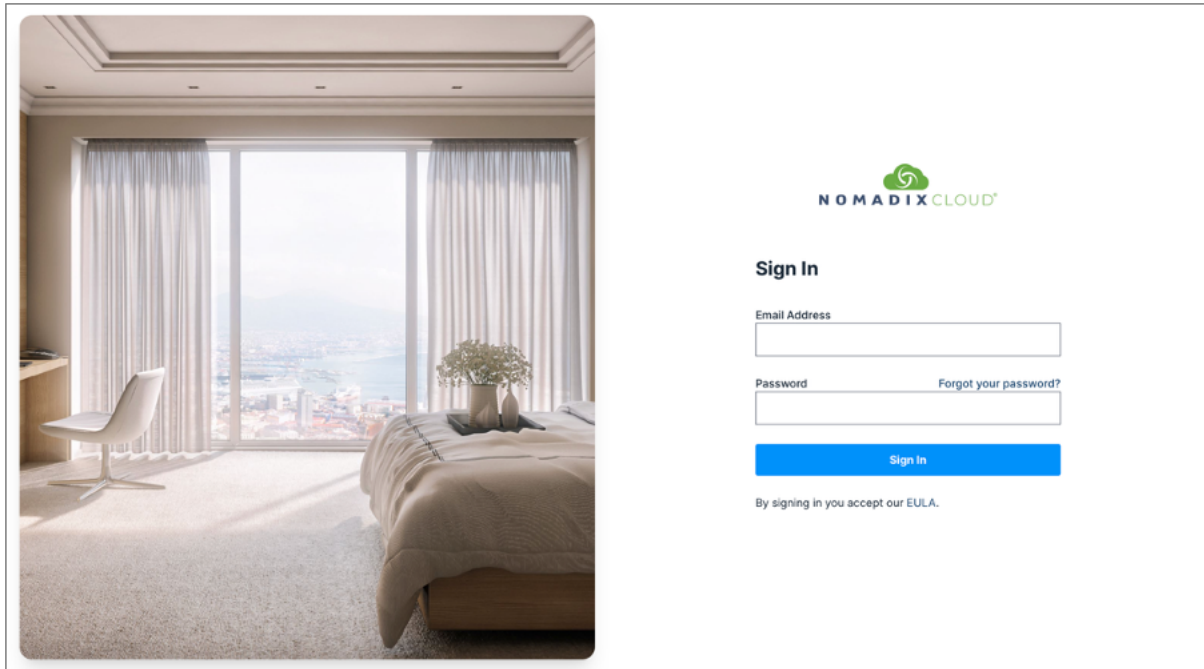

Warning

If you don't have a Nomadix Cloud account, please request one as described in the next section.

Account Creation

Nomadix Cloud access is granted by **invitation** from the administrator(s) of an Organization's account.

Your title goes here

- The initial requires contacting the Nomadix support team.
- Subsequent within an existing organization are done by the administrator(s) of that account.

Organization Account Request

- Email **support@nomadix.com** and request a Nomadix Cloud account creation. Please include:
- Your company's full legal name – this must match an Organization in our records.
- The email address of the prime administrator for your Nomadix Cloud's Organization account.
- The Nomadix team will prepare the account and import your Organization's gateways and properties before sending out an invitation email to complete the Registration process described further in this guide.

Warning


- Please check your email spam folder in case the invite gets routed to it.
- Setting up an Organization may take a few days depending on the amount of preparation work required from the Nomadix support team.

User Account Request

- Users must contact their respective Organization's administrator(s) to request a Nomadix Cloud account creation.
- The Organizations' administrator(s) will send out invitation emails as explained later in this guide with a link to complete the **Registration** process described next.

Account Registration

- New users having requested the creation of an account as described earlier receive an **email invitation** with a link to the **Registration** page:

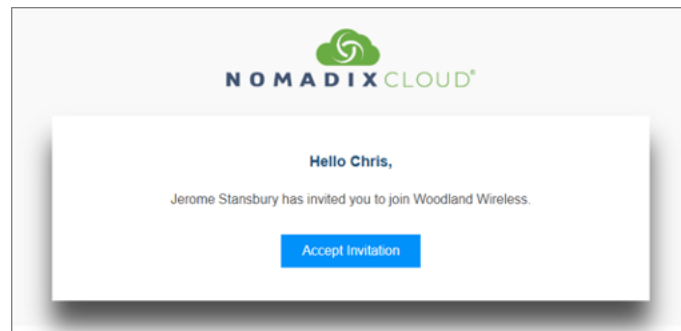

- Click **Accept Invitation** to open the Nomadix Cloud web registration page and fill-in the required fields:

A screenshot of the "Join Woodland Wireless" web registration page. It contains several input fields: "First Name *" with the value "Jane", "Last Name *" with the value "Fenster", "New Password" (masked with dots), and "New Password (for confirmation)" (also masked with dots). Below these is a section for "Two-factor authentication" with a description and a toggle switch labeled "Enable two-factor authentication" which is currently turned on. At the bottom right is a green button labeled "Set up two-factor authentication".

Warning

- To ensure security of your Nomadix Cloud account, always use a complex password and set the slider to enable two-factor authentication.
- Please use two-factor applications such as Google Authenticator or Microsoft Authenticator. Nomadix Cloud doesn't support two-factor authentication via SMS.

- Click **Set up two-factor authentication** to configure it via an authentication application.

Set up two-factor authentication

Two-factor authentication (2FA) is an extra layer of security used when logging into websites or apps.

● **Scan the image below**

Scan this image with the two-factor authentication app on your phone. We recommend using cloud-based TOTP apps such as: 1Password, Authy, LastPass Authenticator, or Microsoft Authenticator.



If you cannot scan, please enter the following code manually:
QJ3TUPEOP8F555G4VEAS86Q5

● **Enter the code from the application**

After scanning the QR code image, the app will display a code that you can enter below.

6-digit code *

Your current password *

Confirm

- Enter the six-digit code and your password, then click **Confirm**. You will be asked to save your security recovery codes in case you lose the device running the two-factor application:


● **Save your security codes**

If you lose access to your phone, you can authenticate to Nomadix Cloud using your recovery codes.

108c6f5ddc	f9353157ca
0dad9b9d6e	e5c1bc4a36
ff3eb2adf2	682b239caa
d58d00dd8	a5d396a693
57bbb46c03	e8ad41c738


I have saved my security codes

- Once you click **I have saved my security codes**, a success prompt message is displayed. Click **Done** and you are ready to use Nomadix Cloud.

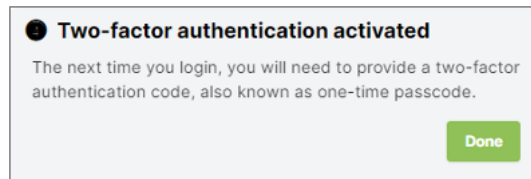

Home Page Dashboard

When you log into Nomadix Cloud, you will first land on your Organization's home page **Dashboard** displaying the following elements:

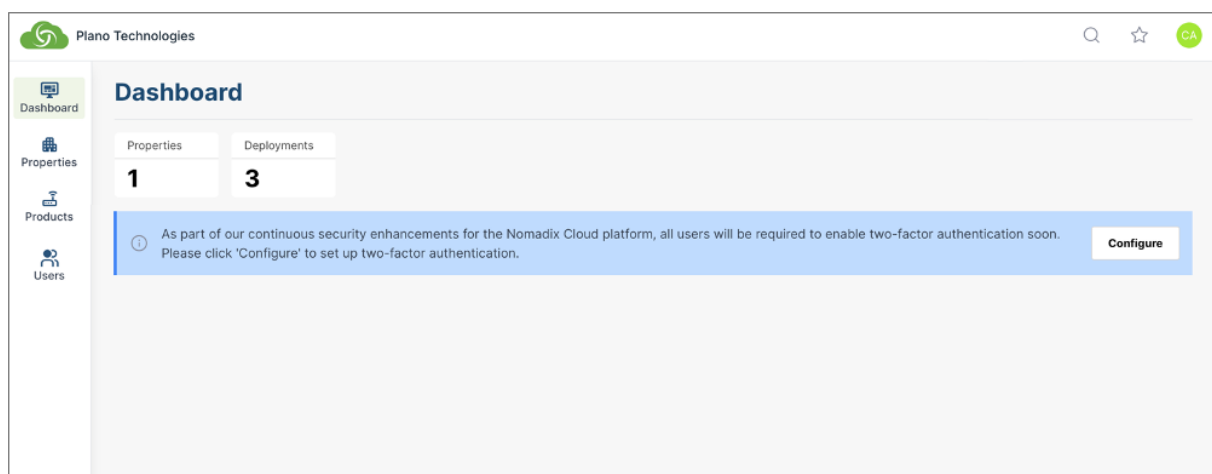


Element	Description
Organization Name	Click your Organization's name in the top left corner of the screen to open its summary page.
Magnifying Glass Icon - Search Bar	Click on the magnifying glass icon in the top right corner of the screen to display the search bar to find Organizations, Users or Properties.
Star Icon - Recent Projects	Click the star icon in the top right corner of the screen to display a panel showing the most recent Properties and Deployments you visited to quickly get back to those locations.
Avatar Profile - Initials	Your avatar profile (showing your initials) is displayed in the top right corner of the screen. Click on it to show a pull-down menu allowing you to: Open your account summary page Change your password Sign out
Left Navigation Shortcuts	The panel on the left side of the screen will always show on every page and provides navigation shortcuts to go straight to the Dashboard, Properties, Products or Users pages.
Central Panel	The central panel shows a summary count for Properties and Products deployments across your whole Organization. It may also display information or warning messages such as in the example screenshot.

Organization Account Management

Organization Summary Page

- Click your **Organization's name** in the top left corner of the screen to open its **Summary Page**:

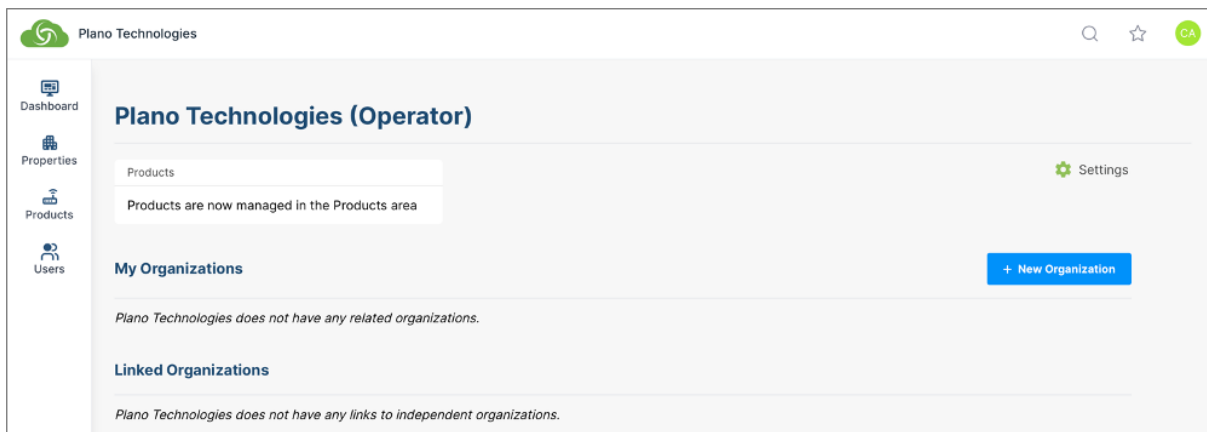

Warning

Products you have access to are setup by Nomadix during the preparation of your account, as per the sales agreement signed with your Organization.


Organization Types

The Organization type (displayed in brackets next to your Organization name) is setup by Nomadix during the preparation of your account. There are 3 types offering different views and permissions within Nomadix Cloud:

- **Operator:** Reselling Nomadix Products and managing them on behalf of multiple Customers
- **Customer:** Using Nomadix Products that could be supplied by multiple Operators
- **Distributor:** Managing several Resellers of Nomadix Products

Organization Account Settings

- Click on the **Settings** icon to edit your Organization account's settings:

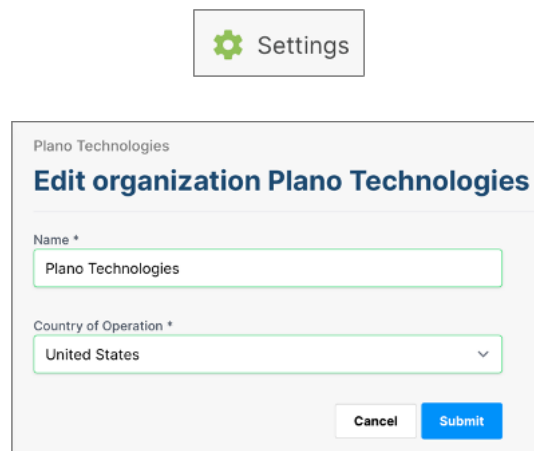

Warning

Since most of an Organization's settings are setup by Nomadix upon the initial account creation, an individual administrator can only change the name and country of operation.

Organization Sub-Accounts

You can manage sub-accounts under your Organization. There are 2 types:

- **Customer:** this creates a tag that can later be available during the creation of individual Properties to group all deployments belonging to a unique brand.
- **Sub-Organization:** this creates smaller groups within an Organization, allowing granular Users management. For example, restricting access to deployments by Region, Projects, etc. by only inviting certain Users to these specific subgroups rather than to the whole Organization.

Notes

You can expand Organization Sub-Accounts by splitting them into further Sub-Accounts, and so on. Just repeat the process.

Warning

Customer type Organizations can only create more Customer type Sub-Accounts.

- Click on the **New Organization** icon to add a Sub-Account and fill-in the required fields:

+ New Organization

Plano Technologies

New Organization

Name *

Type *

✓ Customer
Sub-Organization

Country of Operation *

United States ▼

Cancel
Submit

- You can later **Edit** or **Delete** Sub-Accounts from your Organization's summary page:

Dashboard

Properties

Products

Users

Plano Technologies (Operator)

Products

Products are now managed in the Products area

Settings

My Organizations

+ New Organization

Name	Type	Users	Salesforce ID	Country	
ACME	Customer (managed)	0		United States	✎ ✖

Linked Organizations

Plano Technologies does not have any links to independent organizations.

Linked Organizations

Linked Organizations are separate Accounts where certain reciprocal views and/or permissions are granted due to the nature of their relationships. Examples of Linked Organizations include:

- Master Distributors and their Resellers
- Customer Brands serviced by multiple Resellers


Warning

For privacy and security reasons, Linked Organizations are only configurable by Nomadix. Please contact the support team should you require links to be setup with other Organizations.

User Account Management

Users Summary Page

Click the **Users** shortcut in the left Navigation panel to open the **Users Summary Page**, displaying a list of all users for a given Organization along key information. You can also click on the **Funnel** or **Magnifying Glass** icons to either filter or search through the list:

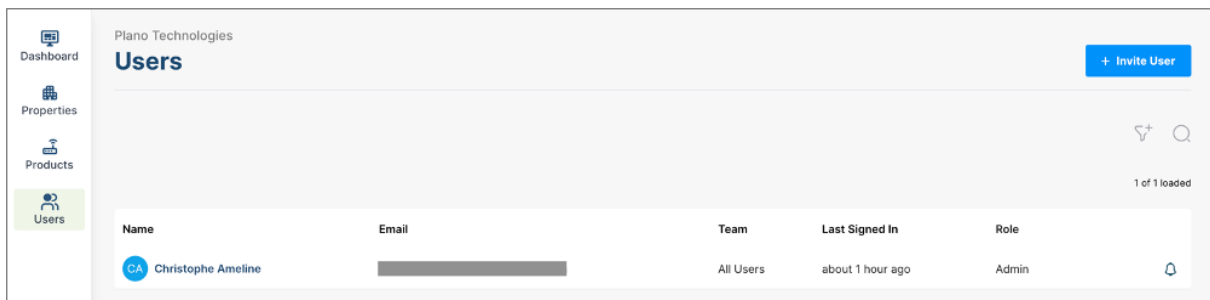

Users Roles

There are 3 types of Users Roles offering different views and permissions within Nomadix Cloud:

- **Admin**: this level allows full Deployment and editing permissions, as well as Organization and Users management.
- **Editor**: this level only allows editing permissions to existing Deployments for the Organization or Sub-Account the User belongs to.
- **Viewer**: this level only allows viewing permissions to existing Deployments for the Organization or Sub-Account the User belongs to.

Delete Users

- Select a User from the list and click on the **trashcan** icon:



Warning

- Administrators must ensure Nomadix Cloud accounts that are unused or belonging to employees who left the company are removed from the system to maintain ongoing security.
- Deleted Users cannot be recovered – they will need to be recreated if necessary.

Invite Users

- Click the **Invite User** button to add new accounts to the Organization and fill-in the required fields, then click the **Send an Invitation** button:

Plano Technologies > Users

Invite User

Email Address

road.runner@acme.com

First Name *

Road

Last Name *

Runner

Role *

☐ Admin

☒ Editor

☐ Viewer

Send an Invitation

Warning

Please ensure you send the invitation from the Sub-Account you wish a User to have access to, if you do not want them to have permissions across the entire Organization.

- **New Users** will be in pending state until they accept their invitation and go through the short **Registration** process as described earlier in this guide. Administrators can **Resend** the invitation if required.



Plano Technologies

Users


+ Invite User

2 of 2 loaded

Name	Email	Team	Last Signed In	Role	
Christophe Ameline		All Users	about 1 hour ago	Admin	
Road Runner		All Users		Editor	

Users Accounts Settings

- Either click on your **avatar profile** in the top right corner of the screen or on a **name** in the Users list to open the **Settings** panel:



Name	Email
 Christophe Ameline	
 Road Runner	

✕

USER PROFILE

Sign Out 

 Personal Details

 Notifications

 Login & Security



EDITOR 

APPROVER

Road Runner 

Piano Technologies
 All Users

 Timezone

(GMT+00:00) Edinburgh



 Color Scheme


Auto

 Light Mode

 Dark Mode

Element	Description
Sign Out	Click to log out of Nomadix Cloud.
Settings Tabs	Switch between configuration settings tabs for Personal Details, Notifications and Login & Security.
Profile Avatar	Click on the paint pot icon next to your profile avatar to customize its color.
Profile Role	Displays the role configured for the profile: Admin, Editor, Viewer. A pull-down list is shown to Admin profiles only where they can select a different role.
Approval Status	Indicates whether a profile is designated as an Approver for changes to a Nomadix Captive Portal configuration. See the Captive Portal documentation for more information.
Name	Click on the pencil icon to modify the profile name.
Organization	Indicates which Organization the User account is a member of.
Timezone	Use the drop-down list to select a timezone. This will impact scheduled activities in Nomadix Cloud.
Color Scheme	Use the slider to switch the Nomadix Cloud interface between light mode, dark mode, or according to the system display settings.


- Click on the **paint pot** icon next to your profile avatar to customize its **color**:

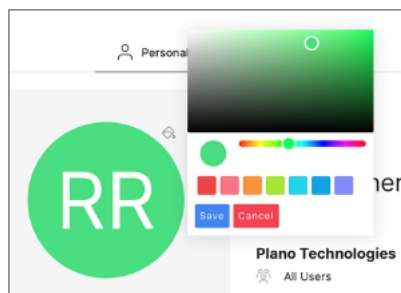

- Click on the **pen** icon next to your profile avatar to change the **First Name** and **Last Name**:




- Click on the **Notifications** tab to set the profile preferences for automated system email communications issued by Nomadix Cloud:

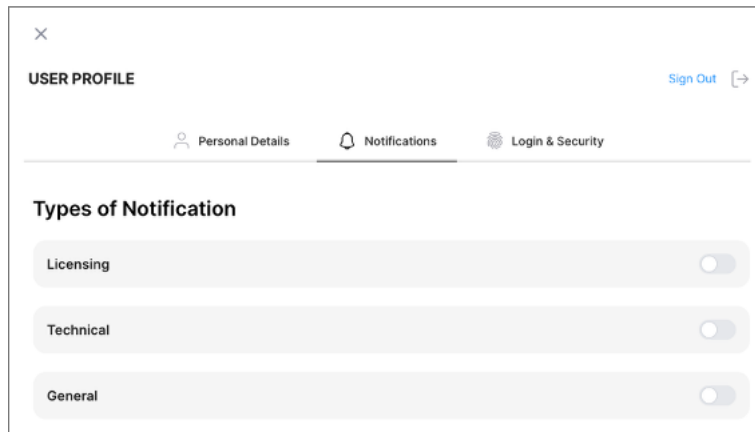

The screenshot shows the 'USER PROFILE' page with the 'Notifications' tab selected. The page has a 'Sign Out' link in the top right. Below the tabs, there is a section titled 'Types of Notification' with three toggle switches: 'Licensing', 'Technical', and 'General'. All three toggles are currently turned off.

- Click on the **Login & Security** tab to check the account status, as well as configure Passkeys and two-factor authentication – as described in other sections of this guide:

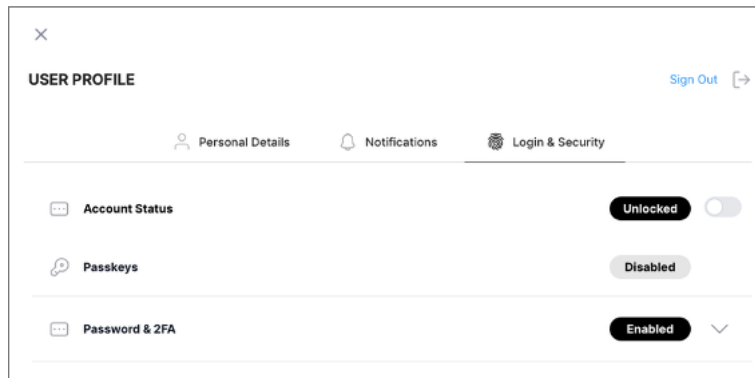


The screenshot shows the 'USER PROFILE' page with the 'Login & Security' tab selected. The page has a 'Sign Out' link in the top right. Below the tabs, there are three settings: 'Account Status' (Unlocked), 'Passkeys' (Disabled), and 'Password & 2FA' (Enabled). Each setting has a toggle switch or a dropdown arrow.

Warning

Only Admin profiles have access to the Account Status functionality. The option is not shown to Editor and Viewer profiles.

- Admin profiles can **lock** and **unlock** an account from this tab:

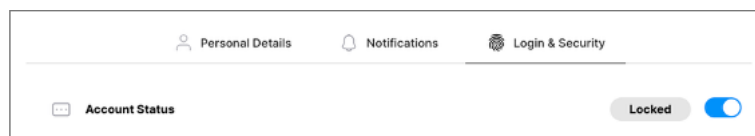

The screenshot shows the 'USER PROFILE' page with the 'Login & Security' tab selected. The 'Account Status' toggle is now turned on, and the label has changed from 'Unlocked' to 'Locked'.

Warning

It is best practice to lock Users accounts when they are on an extended leave of absence to reduce the risk of potential security breach.


Passkeys

Passkeys are a replacement for passwords designed to provide more secure and easier logins.


Warning

The following example is for Windows 11. The process may vary with other operating systems.


- From the **Login & Security** tab, click on the **Generate Key** button:

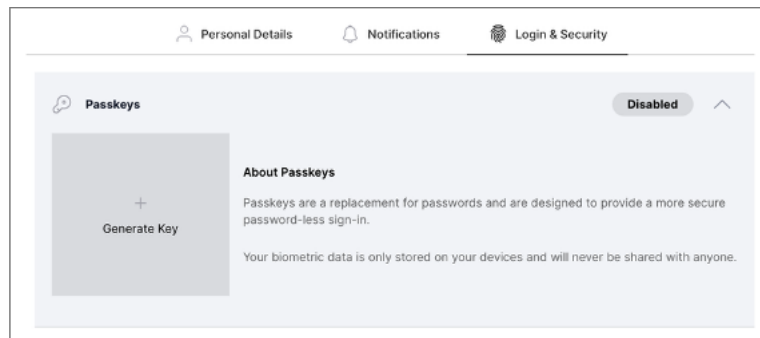


- Click **OK** to proceed:

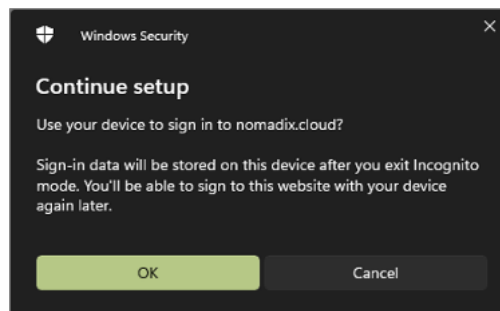


- You can then select a variety of ways to identify yourself. In this example, we will use the fingerprint reader on a laptop, but other choices include setting up a PIN code or using an external security key.

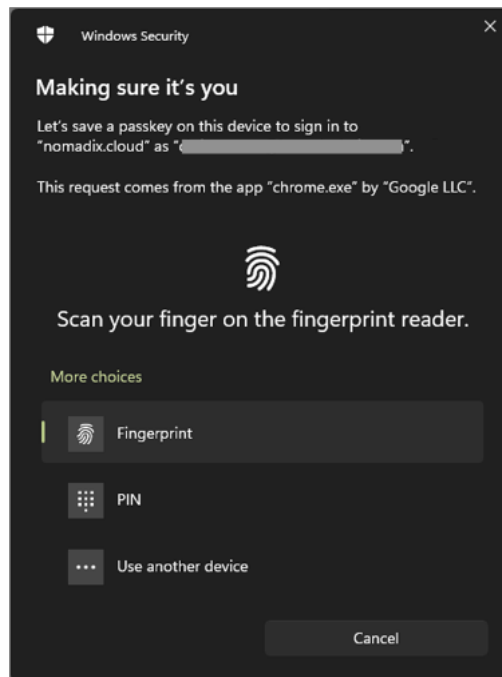

- Once you have scanned your fingerprint, you will get a confirmation that the Passkey has been registered:

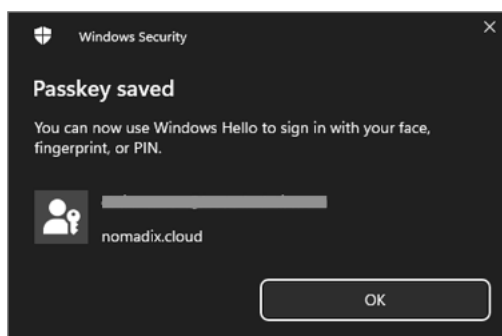

- The Passkey will now show as being registered and **Enabled** in Nomadix Cloud:

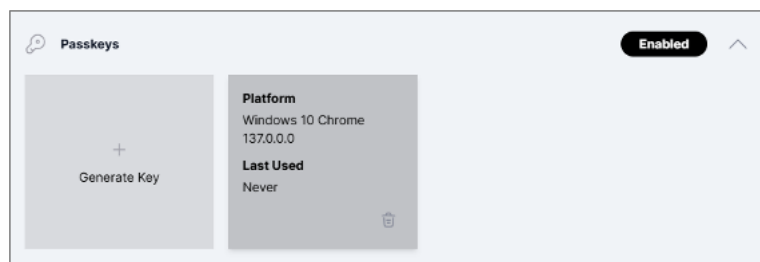

- You can now log into Nomadix Cloud using your Passkey. You can further **add multiple Passkeys** using different formats such as a PIN or hardware security key or **delete** them by clicking on the **trashcan** icon.

Passwords

Users can change their passwords from their Account settings:

- From the **Login & Security** tab, click **Change Password** option. Fill-in the current password, new password and click the tick icon to save the change:

[Change Password](#)

The screenshot shows the 'Login & Security' tab in the Nomadix interface. Under the 'Password & 2FA' section, there are two input fields: 'Current password' and 'New Password'. A green checkmark icon is visible next to the 'New Password' field, indicating that the password meets the requirements. The 'Passkeys' section is set to 'Disabled'.

Warning

Passwords must be at least 12 characters long.


An Administrator can also trigger a Passwords Reset for a user.

- From the **Login & Security** tab, click **Reset Password** option.

[Reset Password](#)

The screenshot shows the 'Login & Security' tab in the Nomadix interface. Under the 'Password & 2FA' section, there is a 'Reset Password' button. A message states: 'By clicking the "Reset Password" button, an email will be sent to the users registered email address with instructions to securely reset their password.' The 'Account Status' is 'Unlocked', 'Passkeys' are 'Disabled', and 'Two-Factor Authentication' is 'Disabled'.

- The User will receive an automated email with a link to change their password:

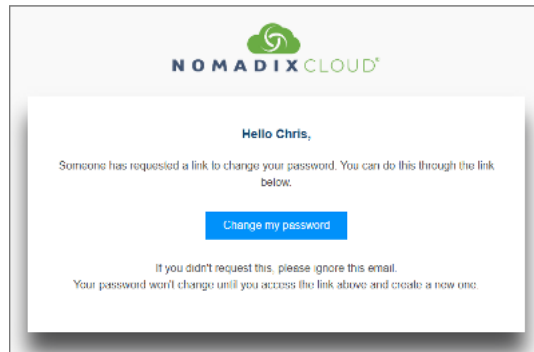

Two-Factor Authentication

If not setup during the account registration process as described earlier in this guide, two-factor authentication can be later configured from the Account settings.

- From the **Login & Security** tab, click **Change Password** option. Fill-in the current password, new password and click the tick icon to save the change:
- Enter the six-digit code and your password, then click **Submit**. You will be asked to save your security recovery codes in case you lose the device running the two-factor application. You are then ready to use this method to log into Nomadix Cloud.

A screenshot of the Nomadix Cloud account settings page, specifically the "Login & Security" tab. The page shows three sections: "Passkeys" (Disabled), "Password & 2FA" (Enabled), and "Two-Factor Authentication" (Disabled). The "Two-Factor Authentication" section is expanded, showing a QR code, a "6-digit code *" input field, and a "Your current password *" input field. There are "Submit" and "Cancel" buttons at the bottom of the section.

Warning

- To ensure security of your Nomadix Cloud account, always use a complex password and set the slider to enable two-factor authentication.
- Please use two-factor applications such as Google Authenticator or Microsoft Authenticator. Nomadix Cloud doesn't support two-factor authentication via SMS.

PROPERTIES AND PRODUCTS DEPLOYMENTS

Add a Gateway to the Fleet

This section covers how to add a single Gateway to the Fleet using the New Gateway Wizard.

Warning

- The initial Fleet import is performed by Nomadix as part of the company account creation.
- When a Nomadix Partner sells and installs a new gateway, it must be manually added to Nomadix Cloud. New gateways are not added automatically.
- Adding a Gateway requires the user to have the relevant Admin access privilege.
- Gateways can be added to existing or new properties.

The New Gateway Wizard simplifies the process of adding a gateway to the Nomadix Cloud and reduces the chances of entering incorrect information. Adding the gateway from the Fleet View combines the steps of deploying a product, creating a property and adding the gateway.


Using the New Gateway Wizard:

- Creates a property (if required)
- Deploys the Networks module
- Adds the gateway to Nomadix Cloud

Adding a Gateway from the Property Level


Use this method when you are already working within a property.

1. Create a new property.
2. Deploy the **Networks** module for the property.

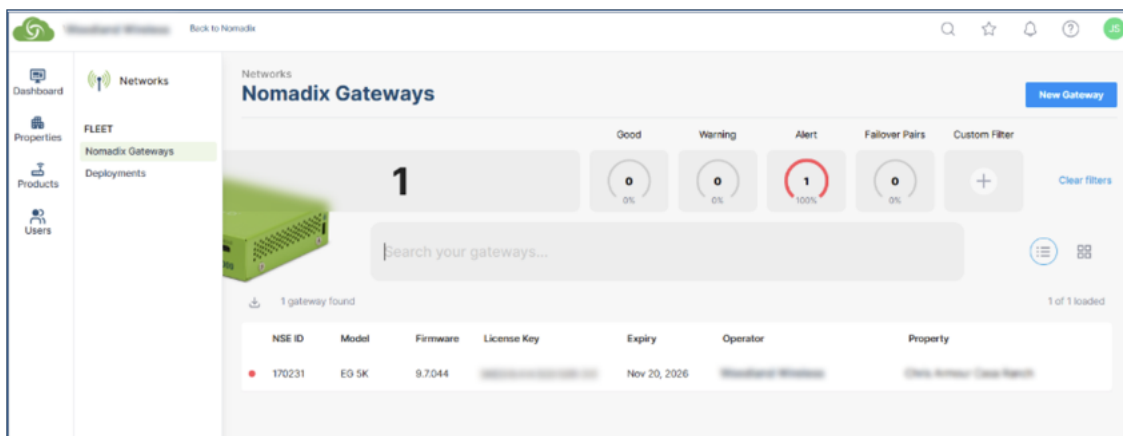

3. From the left menu, select **Nomadix Gateways**.
4. Click the **New Gateway** button in the upper-right corner.
5. Enter the **NSE ID** and **Serial Number** of the gateway and click **Next**.

6. Enter the **room count** for the property, you can use the default contact information or add a new contact set up for property.
7. Click **Add and View**. The new gateway is added to the property and is now ready to be registered and connected to the Nomadix Cloud.

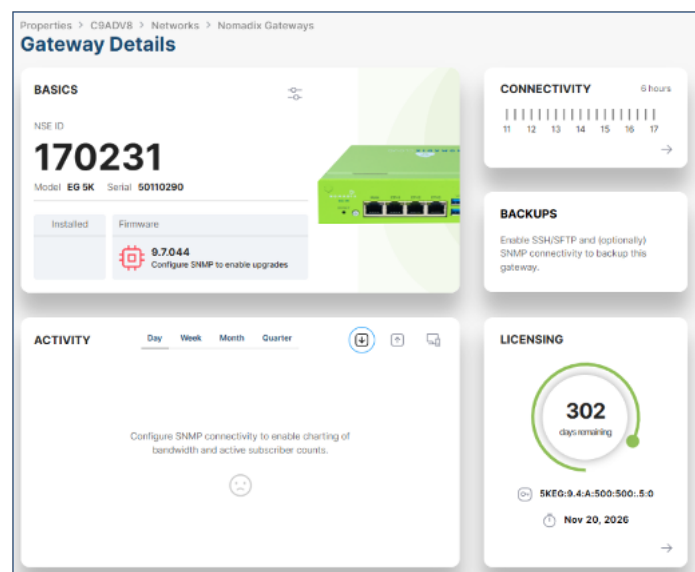


Adding a Gateway from Fleet View

Use this method when adding a gateway from an organization-level view or when the property does not yet exist.


Procedure

1. Navigate to **Fleet View** for your organization.

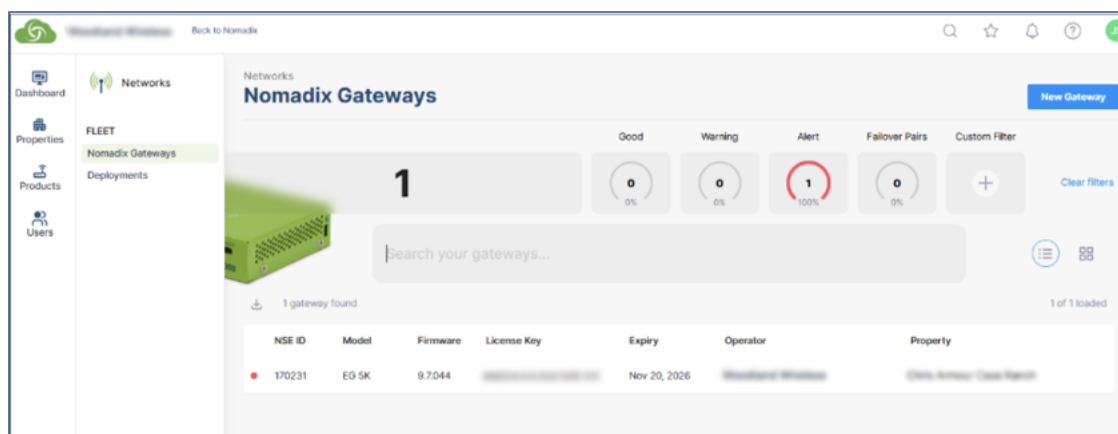

2. Click **New Gateway**.

3. Enter the **NSE ID** and **Serial Number**, then click **Next**.

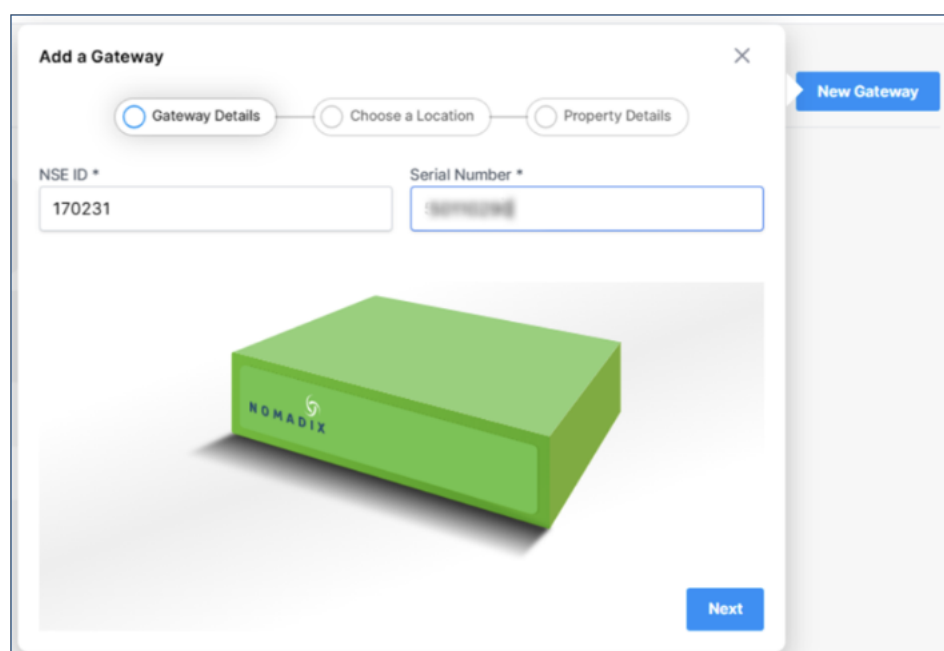

4. Begin entering the **property name and address**, when the correct property appears in the list, select it.

Add a Gateway

Gateway Details **Choose a Location** Property Details

brantford

None of these what you are looking for? [Add address manually](#)

New Gateway

Clear filters

0 of 0 loaded

5. Confirm the property details. If you need to correct it, click **Back** and then re-enter the location information, otherwise click **Next**.

Add a Gateway

Gateway Details **Choose a Location** Property Details

Home2 Suites by

Back

Next

New Gateway

Clear filters

0 of 0 loaded

6. Complete the **New Property** form with below given fields and make sure to accept the EULA at the bottom of the page and click **Add and View**. Mandatory Fields
- Comments** Site Code This can be any unique alpha-numeric identifier. It is best practice to use the same ID assigned to the property from the hotel brand. If the Gateway is going into a lab, then this can be a random number.
 - Venue Type** Select the appropriate venue type from the pull-down list.
 - Room Count** The total number of guest rooms at the property. This value is used for reporting and capacity-related configuration.
 - Contact First Name** The first name of the primary contact for the property.
 - Contact Last Name** The last name of the primary contact for the property.
 - Contact Telephone Number** The contact number of the primary contact. This may be used for operational or support-related communication.
 - Contact Email** The email address of the primary contact. This address is used for notifications and support communication.
- These fields are optional but important for hotel properties. Optional Fields
- Comments** Customer Code A unique identifier assigned to the customer or organization. This code is used to associate the property with the correct customer record and for internal tracking purposes. Sub

BrandThis drop-down lists all the hotel sub-brands which Nomadix works with such as Hilton Garden Inn or Marriott Residence Inn. CustomerThis drop-down includes the major hotel brands serviced by Nomadix and is where you set the Brand type for the location such as Hilton or Marriott. This drop-down also includes non-hotel customer organizations which the MSP has set up.

Add a Gateway

Gateway Details | Choose a Location | Property Details

Site Code *
QLSKD

Customer Code

Venue Type *
Hospitality: Hotel/Resort

Sub Brand
Home2 Suites by Hilton

Room Count *
150

Customer

Contact first name *
John Doe

Contact last name *
Doe


Contact telephone number *
555-555-5555

Contact email *
john.doe@nomadix.com

☒ By deploying a product I accept the [EULA](#).

[Back](#) [Add](#) [Add and View](#)

7. Now the new property has been created, the Networks module deployed, and the gateway is added to the Nomadix Cloud. The gateway is now ready for registration and connection to the Nomadix Cloud.

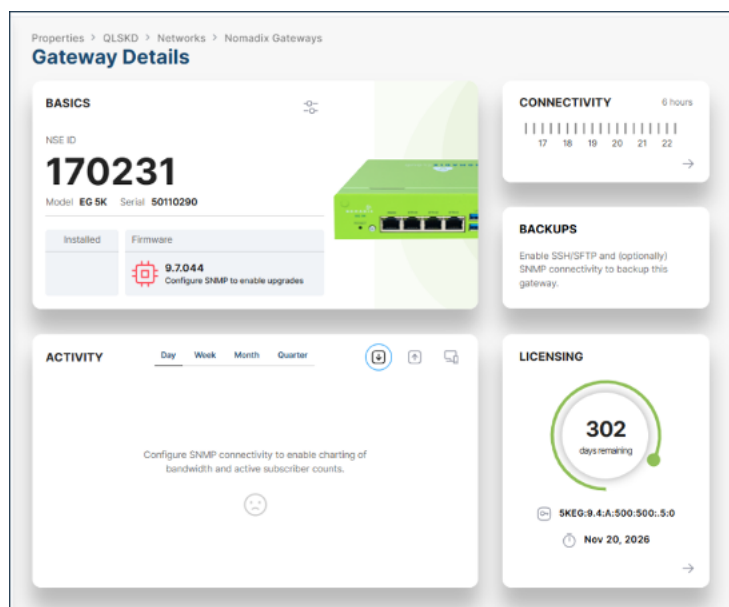

Warning

This document covers the Nomadix Cloud core functionality for Organizations, Users, Properties and Products management. Please refer to the individual administration guides for complete setup and configuration instructions for each respective Nomadix product.

Clone - Setup and Basic Administration Guide

INTRODUCTION

Scope and Purpose

Thank you for using Nomadix products. This Administration Guide covers the features and configuration options available on the Nomadix Cloud platform, as of its release (November 2023). It is aimed at end-users from the Nomadix channel partner community.

Documentation Conventions

{{snippet.Documentation Conventions}}

NOMADIX CLOUD OVERVIEW

Nomadix Cloud is the unified platform for managing and controlling Nomadix products, both for MSPs and property owners. It provides the framework for managing users, access permission and products across the Nomadix portfolio


All Nomadix partners are eligible to use the Nomadix Cloud free of charge

This guide provides instructions for:

- Getting access to the system
- Setting up and managing accounts
- Accessing other Nomadix products from the Nomadix Cloud
- Deploying new products

Nomadix Cloud Web UI Overview

When you first log into the Nomadix Cloud, you will first see the main dashboard page for your organization. This section describes the main navigation elements of the page.

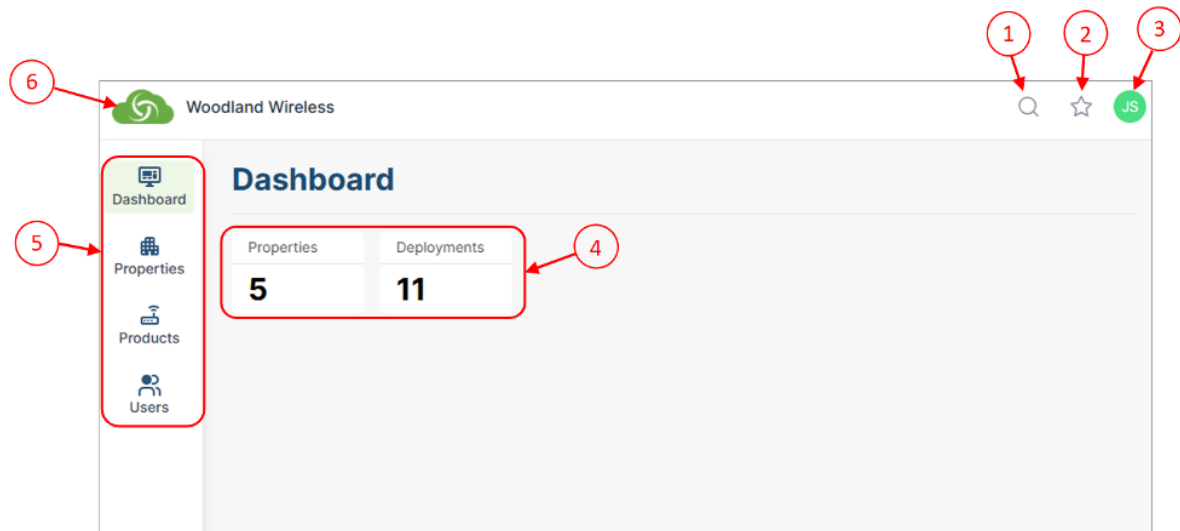


Element	Explanation
1 – Main Search Bar	Use this search bar to find users, properties, and organizations.
2 – User Profile settings	From the Profile icon you can access settings for you profile such as resetting your password, changing the portal color scheme and logging out of the system.
3 – Recent	Click the start to show the most recent properties and deployments you most recently visited so you can go back to those locations.
4 – Properties/ Deployments	This shows the count for properties and product deployments across your whole organization.
5 – Left-hand menu	This gives you access to the dashboard (this page), properties, and users.
6 – Partner top level	Clicking the logo in the upper left corner will take you to the top level for your organization and give you access to areas for managing users and sub-organizations.

GETTING SET UP ON THE NOMADIX CLOUD

To get access to the Nomadix Cloud, you need to send a request to Nomadix Support to be set up and have the initial admin user added to the portal.

Procedure

1. Email support@nomadix.com and request access. Please include: The full legal name of your company – this must match the name of a partner in our records. The email address of the resource who will be the Admin for your Cloud account.
2. Nomadix will import your organization's gateways and properties into the Nomadix Cloud then send out an invitation to complete the registration. Note Setting up an organization may take a few days depending on the work queue of the Nomadix Support team. Please check your email spam folder to make sure the invite has not ended up there.
3. Whomever you designate as the initial account administrator will receive an invitation via email to complete the user sign-up form.

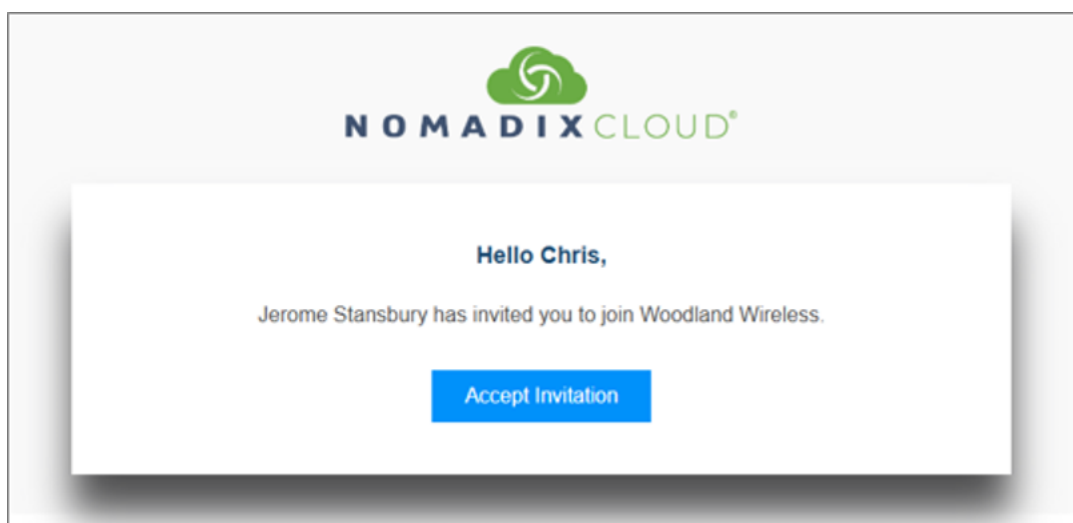

4. Click **Accept invitation** and you will launch the Nomadix Cloud registration page.

Notes To ensure security of your Nomadix Cloud account, always use a complex password and click the slider to enable two-factor authentication. The Nomadix Cloud only supports authenticator applications (such as Google Authenticator or Microsoft Authenticator) for two factor authentication. The Nomadix Cloud does not support two factor authentication via SMS.

Join Woodland Wireless

First Name * Last Name *

Jane Fenster

New Password

.....

New Password (for confirmation)

.....

Two-factor authentication

Protect your account with two-factor authentication. Each time you sign in to your user account, you'll need your password and a one-time passcode.

☒ Enable two-factor authentication

Set up two-factor authentication

5. Click **Set up two-factor authentication** and you are prompted to set up two-factor authentication via an authentication application on your mobile phone.

Set up two-factor authentication

Two-factor authentication (2FA) is an extra layer of security used when logging into websites or apps.

1 Scan the image below

Scan this image with the two-factor authentication app on your phone. We recommend using cloud-based TOTP apps such as: 1Password, Authy, LastPass Authenticator, or Microsoft Authenticator.



If you cannot scan, please enter the following code manually:
QJ3TUPE0PBF555G4VEASB6Q5

2 Enter the code from the application


After scanning the QR code image, the app will display a code that you can enter below.

6-digit code *


Your current password *

Confirm

6. Enter the **six-digit code** and your **password** and click **Confirm** and you are promoted to save your security recovery codes in case you lose you mobile phone.

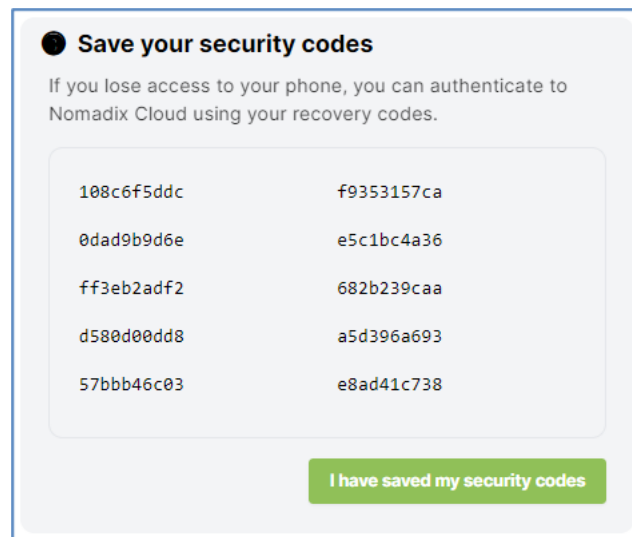

- Once you have confirmed you have saved your security codes, then you are given a success prompt and you are ready to use the Nomadix Cloud.

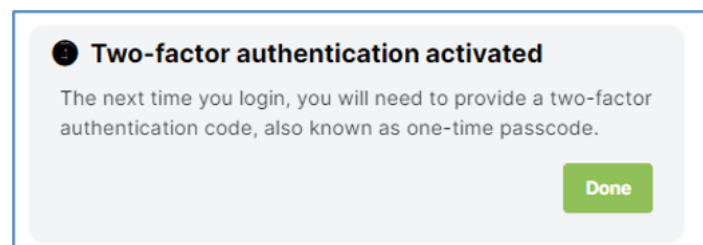

CHANGE ACCOUNT SETTINGS

Once you have completed the sign-up procedure for the Nomadix Cloud, you can customize the look and feel of the portal and manage your basic account settings.


Basic Settings

- Nomadix Cloud users can change various settings for their account by clicking on the icon in the upper right-hand corner:




- This shows the page for user settings:

ElementExplanation
 1 – RoleYour designated role in the organization. This can be:Admin – able to add usersEditor – can configure Nomadix Cloud productsView – only able to view data on products
 2 – Approver statusIndicates if you have been designated an approver for changes to a Nomadix Captive Portal. See the Captive Portal documentation for more information.
 3 – Sign outLog out of the Nomadix Cloud.
 4 – Name and emailClick the pencil icon to modify your name and email.
 5 – OrganizationThis indicates what organization your account is a member of. Typically, this would be the MSP or other type of organization you are a part of.
 6 – TimezoneUse the drop down to select your timezone. This will impact scheduling activities in Nomadix Cloud – such as scheduling gateway firmware downloads.
 7 – Color schemeUse the slider to select if you want to see the Nomadix Cloud UI in light mode, dark mode, or according to your system display settings.

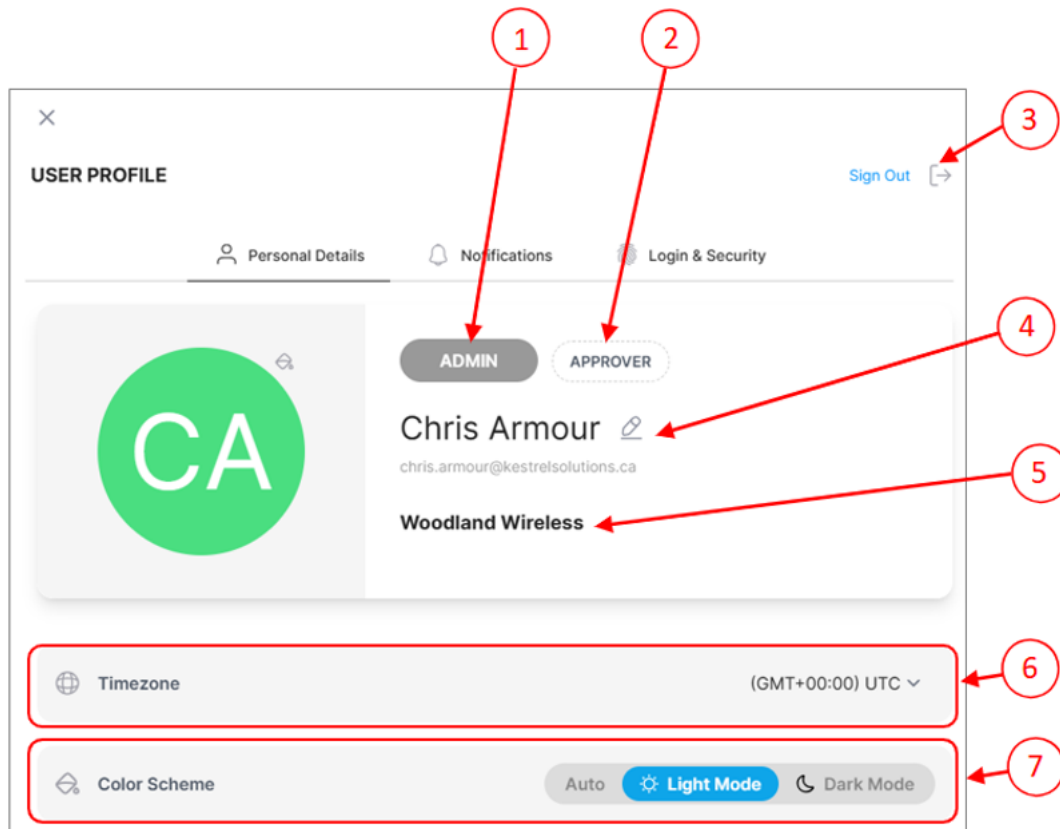

3. Notifications in Nomadix Cloud allow the user to be informed via email of significant changes or events in the system. The Notifications tab includes the following settings:


ElementExplanation1 – LicensingEmails will be generated for products nearing the end of their license terms.2 – TechnicalCommunicates important service related updates such as an upcoming system outage for maintenance.3 – GeneralInforms users of new features or functions on the platform.

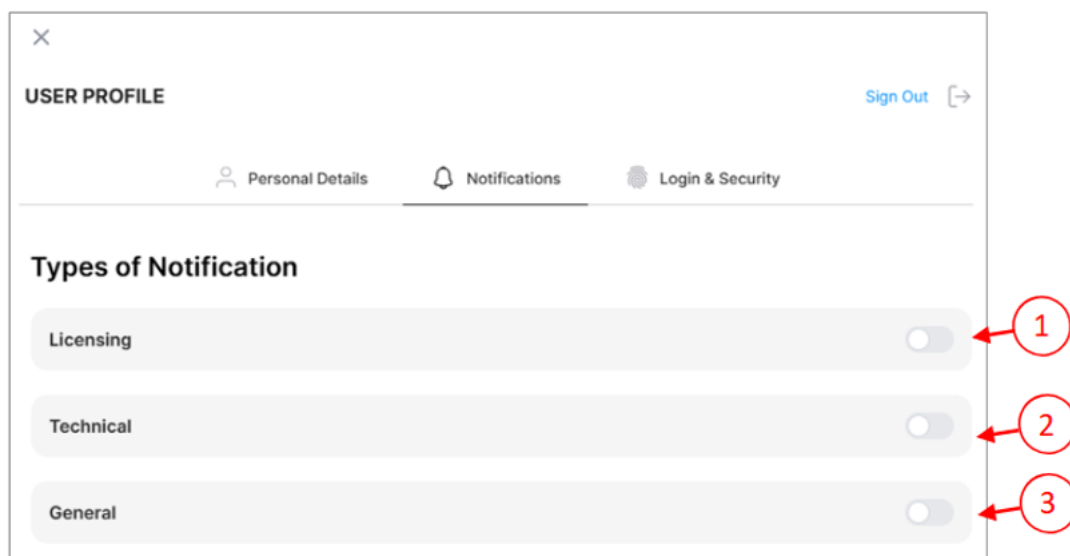


Set up Passkeys

Passkeys are a replacement for passwords designed to provide more security and easier logins. To set up a Passkey:


1. Go to User Profile and select the Login & Security tab:

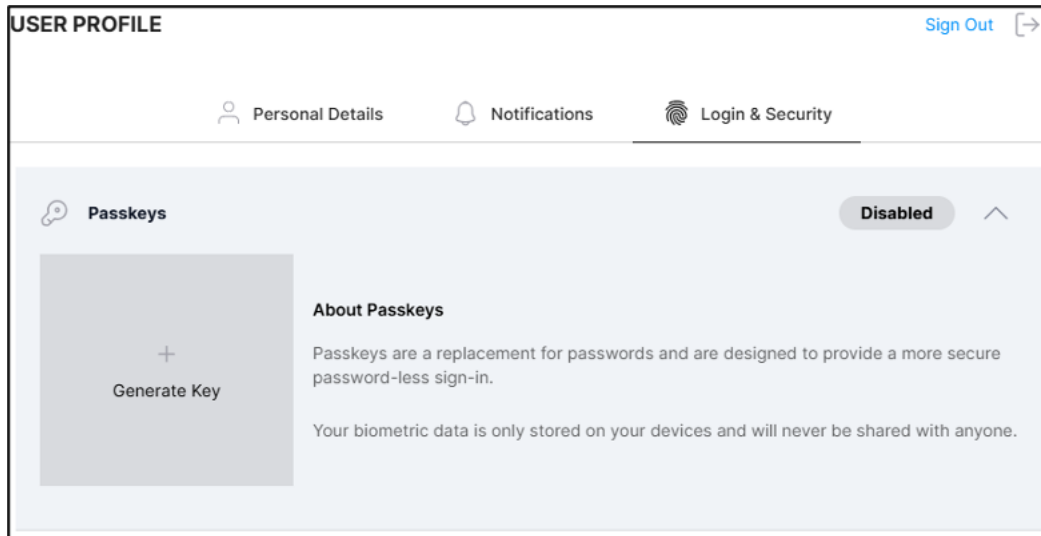


2. Click the “Generate Key” button (note the example provided is for Windows 11 – process may vary on other operating systems) and click OK to proceed:

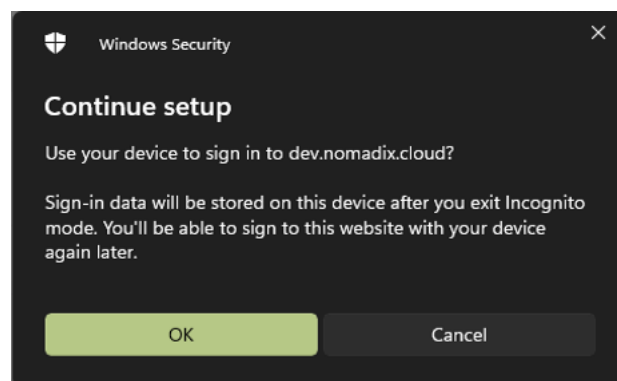


3. You can then select a variety of ways to identify yourself. In this example, using the fingerprint reader on a laptop, but other choices include setting up a PIN code or using an external security key.

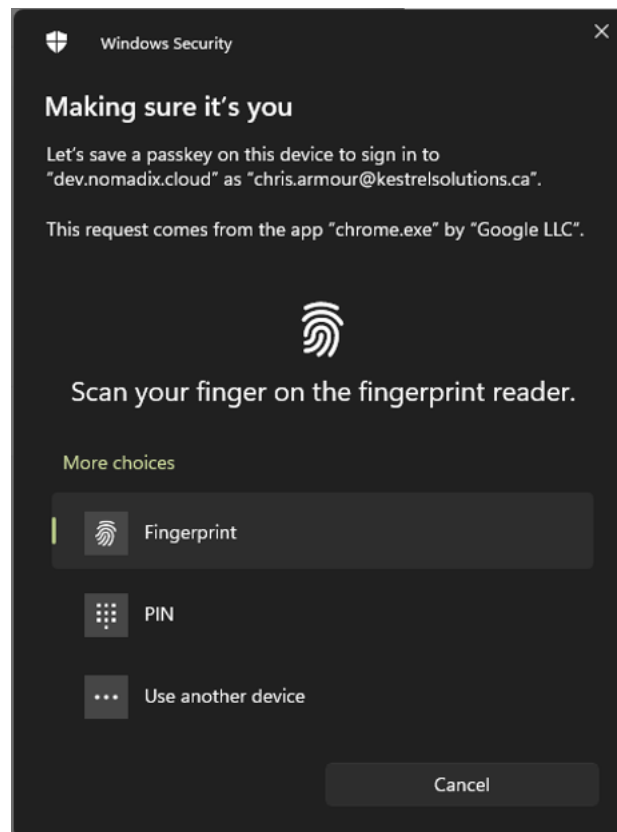

4. Once you have scanned your fingerprint, you will get a confirmation that the Passkey has been registered:

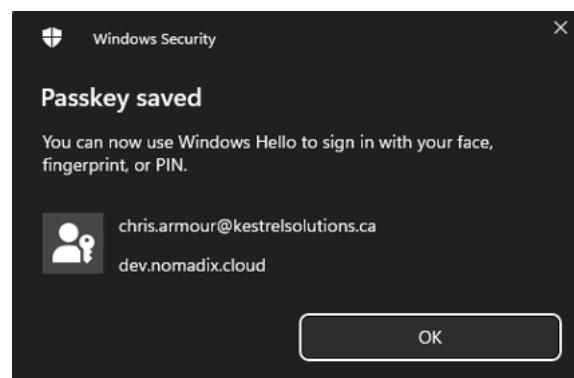

5. The Passkey will now show has being registered in Nomadix Cloud and enabled:

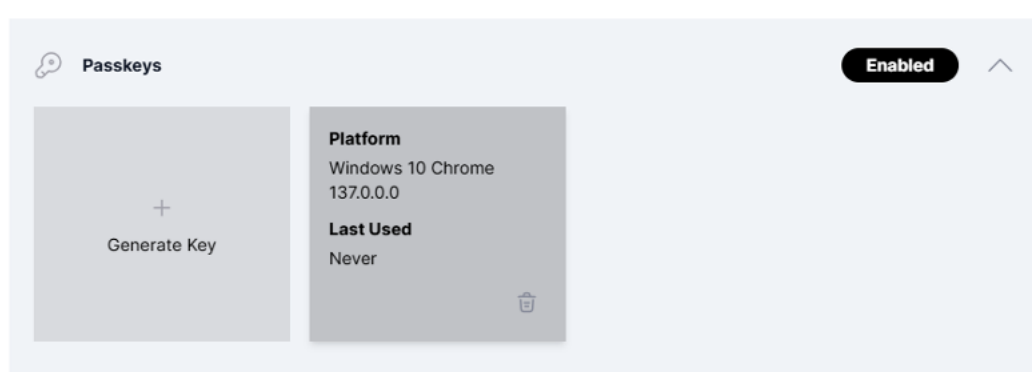

6. You can now log into Nomadix Cloud using your Passkey. You can add multiple Passkeys using different formats such as a PIN or hardware security key.
7. Use the trashcan icon to delete a Passkey.

Change your password

To update your password, follow these steps:

1. Go to **User Profile** and select the **Login & Security** tab.
2. Select the drop down for **Password & 2FA**.
3. Enter your **old password** and **new password** (passwords must be at least 12 characters long) in the fields below:
4. Status will show **Updated** to confirm the change went through.


Change Two Factor Authentication settings

1. Go to User Profile and select the **Login & Security** tab.
2. Select the drop down for **Password & 2FA**.
3. Click **Generate new 2FA codes** to get a new set of emergency codes in case you lose the device you are running your authenticator app on.

MANAGING USERS

If you have been added to the Nomadix Cloud as an Admin you can add, modify, and delete new users from within your organization.

The user list and user management features are found by clicking the **Users** icon in the left-hand menu:

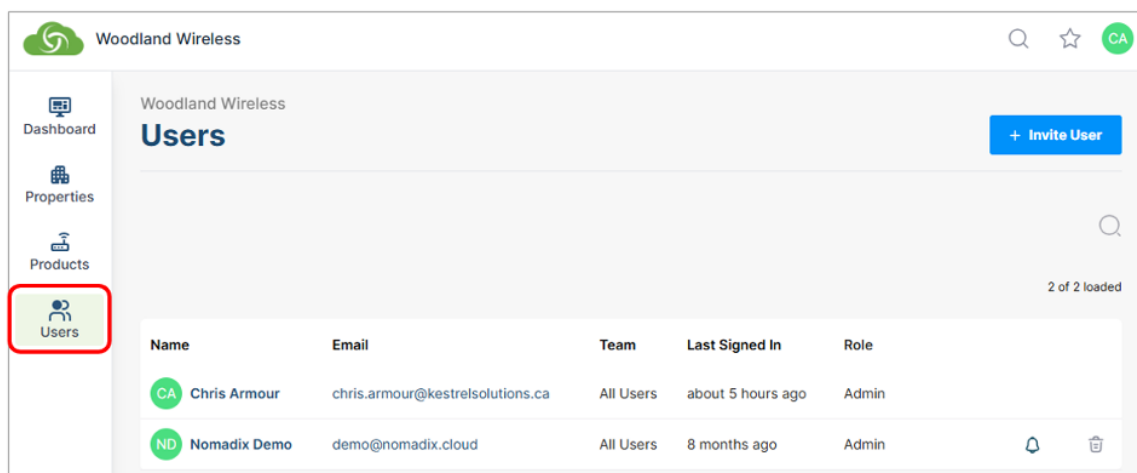

Add new users

1. Click the **Users** icon from the left-hand menu.
2. To start setting up a new user, click **Invite User** in the upper right-hand corner.
3. Choose one of the three user types: Admin – Can invite users to the Nomadix Cloud, modify their settings and delete users. Editor – An editor can change settings on the Cloud and

administer products but cannot manage users. Viewer – Can only see metrics and settings but cannot change any settings.

4. Click **Send an Invitation** to send out an invite. The user you have invited will follow the same procedure as above to set up their password, multi-factor authentication and general settings.
5. While an invitation has not yet been actioned by the invitee, you will see these icons in the user list:
The first indicates that the invitation is still pending and the user has not set up their account. Clicking the second icon will the invitation to the user.



Delete users

Notes

As an Admin user in a Nomadix Cloud Organization, you must ensure unused Nomadix Cloud accounts are deleted when a user leaves your organization to ensure the security of the system.

1. Click the **Users** icon from the left-hand menu.
2. Click the **trashcan** icon on the right-hand side to delete a user.
3. You will be prompted if you are sure you want to proceed with the deletion. If you are sure, then click “Ok”.

Warning

Deleted users cannot be recovered!

Resetting a user's password

If user forgets their password, then the Admin user can trigger a password reset mail to be sent to the user on their behalf.

1. While logged in as an Admin user, click **Users** from the left hand menu to go to the user list for your organization:
2. Select the user whose password needs to be reset to go to their profile page:
3. Select the **Login & Security** tab.
4. Click the **Reset Password** link.
5. The user will receive an email inviting them to reset their password.
6. The reset process is the same as the initial password setup described above.

Locking a user's account

If a user goes on vacation or an extended leave of absence, it is good practise to suspend their account to reduce the risk of a data breach. If you are an Admin user, you can lock a user's with these steps:

1. While logged in as an Admin user, select a user from the list of users.

2. Go to the **Login & Security** tab:
3. In the list of users, the account is now shown with a lock icon.
4. Click the slider for **Account Status** to lock the account.
5. If the account is locked, the user will not be able to complete the log in process.
6. To unlock the account, select the user again, go to **Login & Security** and click the toggle to **off**.

USING SINGLE SIGN ON

One of the key features of the Nomadix Cloud is the ability to access many different Nomadix Products from inside the same portal without having to log in multiple times with different credentials.

Some products are fully integrated into the Nomadix Cloud UI framework, some are partially configured in the Nomadix Cloud and partially in a linked portal and other products have a native portal that is accessed through the Nomadix Cloud.

The table below summarizes the status of each product:

Nomadix product	Status in Nomadix Cloud
Alerts	Fully integrated into the Nomadix Cloud UI.
Casting	Opens a separate portal
Cloud Monitoring	Opens a separate portal
Networks	Fully integrated into the Nomadix Cloud UI.
Passpoint	Fully integrated into the Nomadix Cloud UI.
PMS	Fully integrated into the Nomadix Cloud UI.
EMS	Fully integrated into the Nomadix Cloud UI.
Cloud Telephony	Partially configured in Nomadix Cloud and links to an outside portal.

Procedure

1. Log into the **Nomadix Cloud**.
2. Click **Products** in the left-hand menu. Note Partners will only be able to see the products that they are authorized to sell and support. If there is a product missing from the list that your organization should have access to, contact support@nomadix.com.
3. Click on one of the tiles to launch the interface for that product.

ADDING A SUB-ORGANIZATION

Typically, a top-level organization is created by Nomadix for a channel partner when they are given access to the Nomadix Cloud Portal.

In most cases, this should be sufficient for a channel partner to track their properties, products, and gateways, but the Nomadix Cloud does provide the ability to create sub-organizations that can be used to organize:

- Customers who purchase from your dealership and then resell your products.
- Partner sub-organizations such as regional offices or affiliated brands.

Procedure

1. Click your **organization name** in the top left-hand corner to go to the top-level view.
2. Click the **+New Organization** button to open the page to set up a new organization. All three fields (Name, Type and Country) are mandatory.
3. If you create a new sub-organization, then you can manage the users for the sub-organization, and select which products the sub-organization can deploy.
4. If you create a **Customer** type suborganization, you can add users (for instance the hotel IT management team), but the products will only show the products deployed in that group of properties.

Notes

Operator type sub-organizations can create more sub-organizations and customers. **Customer** type sub-organizations can only create more **Customer** type sub-organizations.

Linked Organizations

The Cloud UI also shows **Linked Organization** at the top level for an organization. This is a **sibling** linkage that is built between a channel partner and another organization. For instance, if the channel partner is working with a major hotel brand, that brand may be shown as a **Linked Organization**.

Currently this is only configurable by Nomadix support personnel.

PDF Downloads

Step-by-step resources for IT teams and installers to correctly deploy and manage Nomadix Cloud.

Latest product guide

Nomadix Cloud Administration Guide (v1.3)

Nomadix Cloud Setup and Basic Administration Guide (v1.1)

Nomadix Cloud Gateways Fleet Management Administration Guide (v1.7)

Clone - Gateways Fleet Management - Administration Guide


INTRODUCTION

Scope and Purpose

Thank you for using Nomadix products. This Administration Guide covers the features and configuration options available on the Nomadix Cloud Gateways Fleet Management module:

- **Fleet View:** display a global view of your entire Nomadix gateways estate, filter and search by groups or by individual deployments requiring attention. Download the results as a csv file
- **License:** check bandwidth, devices and doors licenses, as well as which optional modules are enabled
- **Status:** monitor connectivity status, firmware version and contract expiry date
- **Backup:** save the gateway flash file system securely to the cloud on a regular schedule or as required
- **Firmware update:** keep your fleet of gateways up to the most recent versions of Nomadix software to get the latest features and security updates



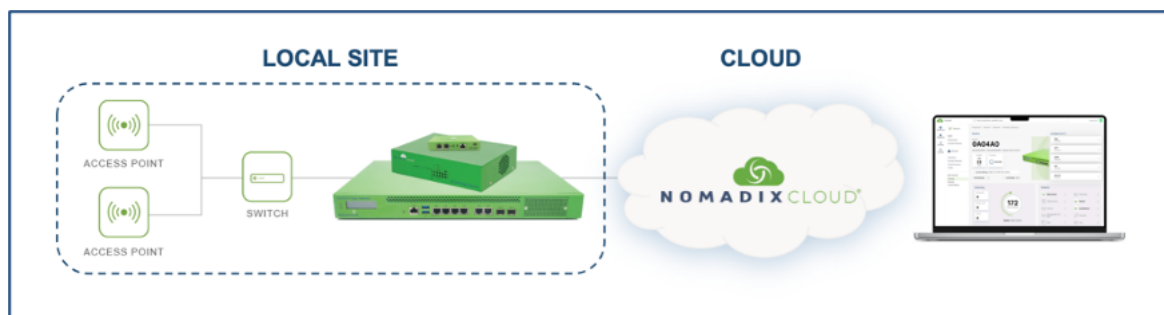

Documentation Conventions

{{snippet.Documentation Conventions}}

NOMADIX CLOUD

Nomadix Cloud is the single pane of glass centralized management platform for all Nomadix products. A secure multi-tenant solution hosted by Nomadix, it offers administration, configuration and supervision via a single sign-on intuitive web-based interface.



Notes

For more information regarding the overall Nomadix Cloud features and functionalities, please refer to the dedicated marketing and technical collateral, as this guide focuses on its Gateways Fleet Management module.

Login

In a web browser, navigate to: <https://nomadix.cloud/> and enter your **email** and **password**.

If you don't yet have an account, click the "**Don't have an account?**" option and follow the process.

Warning

- The first account creation for a new company requires human validation. Please contact your Nomadix representative to ensure they are aware of your request.
- The first account creation for a new company requires human validation. Please contact your Nomadix representative to ensure they are aware of your request.

Add a Gateway to the Fleet

This section covers how to add a single Gateway to the Fleet using the New Gateway Wizard.

Warning

- The initial Fleet import is performed by Nomadix as part of the company account creation.
- When a Nomadix Partner sells and installs a new gateway, it must be manually added to Nomadix Cloud. New gateways are not added automatically.
- Adding a Gateway requires the user to have the relevant Admin access privilege.
- Gateways can be added to existing or new properties. The procedure shows how to create a new property.

The New Gateway Wizard simplifies the process of adding a gateway to the Nomadix Cloud and reduces the chances of entering incorrect information. Adding the gateway from the Fleet View combines the steps of deploying a product, creating a property and adding the gateway.

Using the New Gateway Wizard:

- Creates a property (if required)
- Deploys the Networks module
- Adds the gateway to Nomadix Cloud

Adding a Gateway from the Property Level

Use this method when you are already working within a property.

1. Create a new property.
2. Deploy the **Networks** module for the property.
3. From the left menu, select **Nomadix Gateways**.
4. Click the **New Gateway** button in the upper-right corner.
5. Enter the **NSE ID** and **Serial Number** of the gateway and click **Next**.
6. Enter the room count for the property, you can use the default contact information or add a new contact set up for property.

Adding a Gateway from Fleet View

Use this method when adding a gateway from an organization-level view or when the property does not yet exist.

Procedure

1. Navigate to **Fleet View** for your organization.
2. Click **New Gateway**.
3. Enter the **NSE ID** and **Serial Number**, then click **Next**.
4. Begin entering the **property name and address**, when the correct property appears in the list, select it.
5. Confirm the property details. If you need to correct it, click **Back** and then re-enter the location information, otherwise click **Next**.
6. Complete the **New Property** form with below given fields and make sure to accept the EULA at the bottom of the page and click **Add and View**.
Mandatory Fields
Comments Site Code This can be any unique alpha-numeric identifier. It is best practice to use the same ID assigned to the property from the hotel brand. If the Gateway is going into a lab, then this can be a random number.
Venue Type Select the appropriate venue type from the pull-down list.
Room Count The total number of guest rooms at the property. This value is used for reporting and capacity-related configuration.
Contact First Name The first name of the primary contact for the property.
Contact Last Name The last name of the primary contact for the property.
Contact Telephone Number The contact number of the primary contact. This may be used for operational or support-related communication.
Contact Email The email address of the primary contact. This address is used for notifications and support communication.
Optional Fields
Comments Customer Code A unique identifier assigned to the customer or organization. This code is used to associate the property with the correct customer record and for internal tracking purposes.
Sub Brand This drop-down lists all the hotel sub-brands which Nomadix works with such as Hilton Garden Inn or Marriott Residence Inn.
Customer This drop-down includes the major hotel brands serviced by Nomadix and is where you set the Brand type for the location such as Hilton or Marriott. This drop-down also includes non-hotel customer organizations which the MSP has set up.
7. Now the new property has been created, the Networks module deployed, and the gateway is added to the Nomadix Cloud. The gateway is now ready for registration and connection to the Nomadix Cloud.

Delete a Gateway from the Fleet

This section covers how to delete a single Gateway from the Fleet. Gateways may need to be deleted for a variety of reasons, including:

- Hardware upgrade to a new model and disposal of the old gateway.
- RMA replacement of a faulty gateway.
- The property has transferred to a new Partner.

Warning

- If you need to delete a whole property (for instance, if the property is being transferred to a new Partner), you will need to delete the gateway first then delete the deployments to the property, then delete the property itself.
- Deleting a Gateway requires the user to have the relevant Admin access privilege.

1. Log into Nomadix Cloud, navigate to the property and select the **Networks** tile.
2. Select **Nomadix Gateways** from the sidebar menu.
3. This provides a list of the gateways at the site. Select the **trashcan** icon beside the gateway you wish to delete.

4. You are asked to select the reason for the deletion. Select a one from the dropdown and then click **Submit**.

Warning This is only so that Nomadix can monitor why gateways are being removed from Nomadix Cloud, it does not initiate any processes with Nomadix support or order processing. Please be sure to follow the normal RMA or upgrade procedures before removing the gateway from Nomadix Cloud.

5. Click **OK** on the popup window asking for confirmation to begin the deletion process.

Warning This process will delete all backups and analytics history for the gateway. If the gateway has been connected to the Nomadix Cloud for an extended period, the deletion process may take several minutes to complete.

GATEWAYS FLEET MANAGEMENT

The **Nomadix Gateways Fleet** page is the main interface for administrators to display all the Nomadix gateways they have access to. It aggregates data imported from the Nomadix ordering and licensing systems and parses it into a summary list, offering several options.

Access


- From the Nomadix Cloud home page, navigate to **Products > Networks** to access the Gateways Fleet Management module.
- Then, in the left menu select the **Nomadix Gateways** option.

Notes

The options displayed depend on the administrator's access rights, the products installed base and the type of organization.

Display Elements

Below are the different elements of the Fleet View user interface:

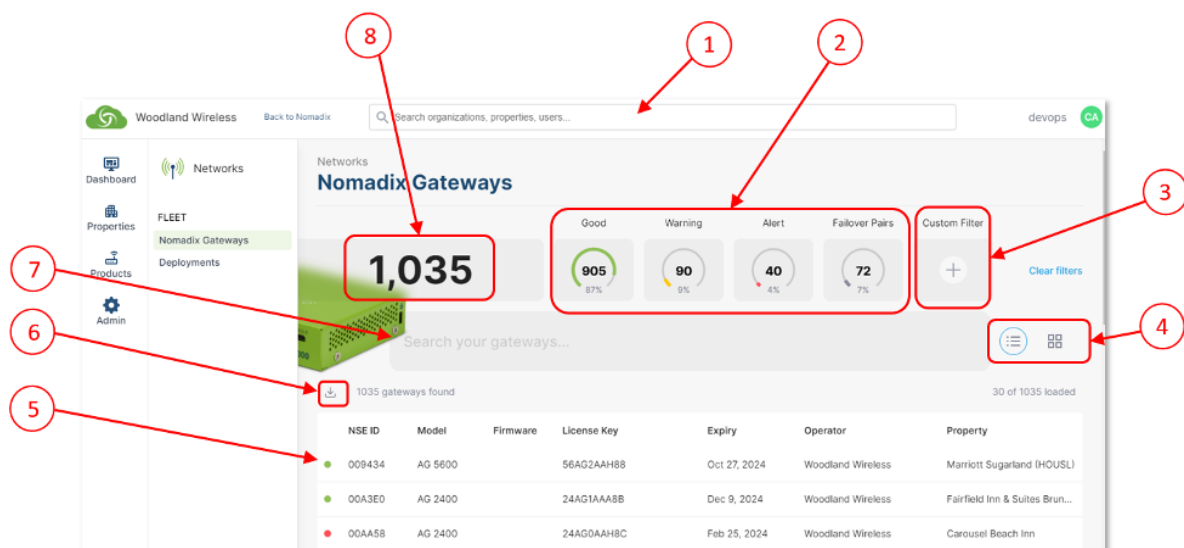

Element	Description
1 – Main Search Bar	Top level search bar that allows to look for organizations, properties and users.
2 – Quick Filter Tiles	These allow to quickly filter the gateways list. Good - Shows gateways that are licensed in good standing. Warning - Shows gateways within 60 days of license expiry. Alert - Shows gateways that are out of licensing or have data anomalies from the import (contact Nomadix to resolve). Failover Pairs - Shows all the failover pairs in the list.
3 – Custom filters	Custom filters allow to select complex sets of filtering criteria to zoom in on sub-sets of gateways of interest such as particular models, firmware versions or hotel brands.
4 – Card View Switch	Displays gateways as cards rather than as a list, which makes it more visual and easier to consult on mobile devices.
5 – Gateways List	Main table of gateways, including key information at a glance.
6 – CSV download	Downloads a comma-separated values file (CSV) of the data currently shown in the gateways list. This can then be used to pass information such as expiry dates to other parts of the organization.
7 – Fleet Search	Allows to search for property name or gateway model or NSE ID.
8 – Total Gateways	Total number of gateways in the Fleet for this organization.

Notes

Several **Quick Filter Tiles** can be selected at the same time to show a combined view.

Custom Filters

The Custom Filter option allows to filter the gateways fleet view by the following parameters (depending on your organization type):

- Model
- Property name
- Firmware version
- Features
- Brand (meaning hotel brand such as Hyatt or Marriott)
- Sub-brand (meaning hotel flags such as Residence Inn or Courtyard)
- Country
- Region
- Sub-region

To use them, follow the instructions below:

1. From the Fleet View, click the “+” under **Custom Filter**.
2. From the list of available parameters, select the desired filters.

3. Selecting **Models** opens a submenu of the available options and previews the number of units.
4. You can select as many items as required from the sub-menu and then click the ← arrow at the bottom to return to the main Custom Menu dialog to continue selecting as many filter parameters as required.
5. The filter criteria appears in a pill or cartouche below the Custom Filter button. The filter can be edited with the **pencil icon** or removed with the “x” to the right of the pill.
6. You may select as many filter criteria as required and then use the download icon to download a CSV of the list for further processing in a spreadsheet application.

Multi-Organization Views

This section explains the types of **organizations** in Nomadix Cloud and how their Fleet information views vary.

Warning

- Multi-Organization Management is only required for companies in need of overall visibility of a Nomadix gateways installed base managed by multiple sub-organizations, for example Distributors for their Indirect Resellers or large End Customers serviced by multiple Managed Services Providers.
- All views described below – apart from Operator - are only available by specific requests to Nomadix and following a review of their legitimacy.

Distributor View

A **Distributor** is an organization that markets Nomadix products via a channel of **Indirect Resellers** that don't themselves have a direct contractual relationship with Nomadix. Typically, Distributors may not know where gateways end-up being ultimately deployed, however they do follow up on yearly service contracts.

Distributor Fleet View characteristics:

Distributor View	Distributor Access Rights
NSE IDModelOperating OrganizationLicense expiry	Can filter by model/country/region/sub region, but not by brand/sub-brand.Cannot click through from Fleet View to see the property or gateway pages.Can have sub-organizations

Operator View

An **Operator** is typically a **Managed Service Provider** with a direct relationship with Nomadix (i.e. not buying through Distributors).

Operator Fleet View characteristics:

Operator View	Operator Access Rights
Full	Can use all available filters such as model, brand/sub-brand, region and so on. Can add new users, deploy products, and configure products. Can perform actions on the gateway such as backup or upgrade the firmware.

Customer

A **Customer** is typically a company where **Managed Services Providers** or **Indirect Resellers** sell, deploy and support Nomadix equipment.

Customer Fleet View characteristics:

Customer View	Customer Access Rights
NSE IDModelFirmwareLicense KeyExpiryOperating OrganizationProperty	Cannot create properties or deployments.Can create users inside their organizations, but cannot configure products.

Hotelier

A **Hotelier** is a special type of customer that is setup to be associated with a major hotel brand such as Hyatt or Marriott. Once a hotel brand is selected, then that organization can see the gateways fleet view of all properties that share that brand designation.

Hotelier Fleet View characteristics:

Hotelier View	Hotelier Access Rights
NSE IDModelFirmwareLicense KeyExpiryOperating OrganizationProperty	Can click through from the Fleet View to see the gateways detailed information, however, cannot make changes to the gateways such as perform backups or upgrade firmware.Can see all their properties and click through to see the status of deployments at the sites.

Sub-Organization

A **Sub-Organization** can be setup by an Organization as an isolated entity that sits under its main umbrella.

Sub-Organization Fleet View characteristics:

Sub-Organization View	Sub-Organization Access Rights
Same as original type	Sub-Organization users cannot see the information associated with their Parent Organization. The Parent Organization can see all the information associated with the Children Organizations. Operators can create both Customers and Sub-Organizations. Customers can be used for individual properties serviced by Sub-Organizations. Sub-Organizations can be a regional office or subsidiary of the Parent Organization. Customers can only create further Sub-Organizations. Hoteliers can be used for different sub-brands of the main brand. Any number of levels of Sub-Organizations can be set, but it is recommended to not build too many recursive layers.

GATEWAY INDIVIDUAL MANAGEMENT

The **Gateway Details** page displays general information for an individual device, including identification, firmware, connectivity, backup, licensing and activity.


Access

There are a couple of ways to access the Gateway View, as described below:

Menu	Description
Products Menu  Products	From the Nomadix Cloud home page, click on the Products icon in the left menu, then click on the Networks tile, which takes you to the Fleet View (described in the previous chapter). Select a device from the list or search for a specific gateway.
Properties Menu  Properties	From the Nomadix Cloud home page, click on the Properties icon in the left menu. Select a site from the list or search for a specific one. Click on the Networks tile, then click on Nomadix Gateways in the left menu and finally select the device from the list.

Display Elements

Below are the different elements of the Gateway Details user interface:

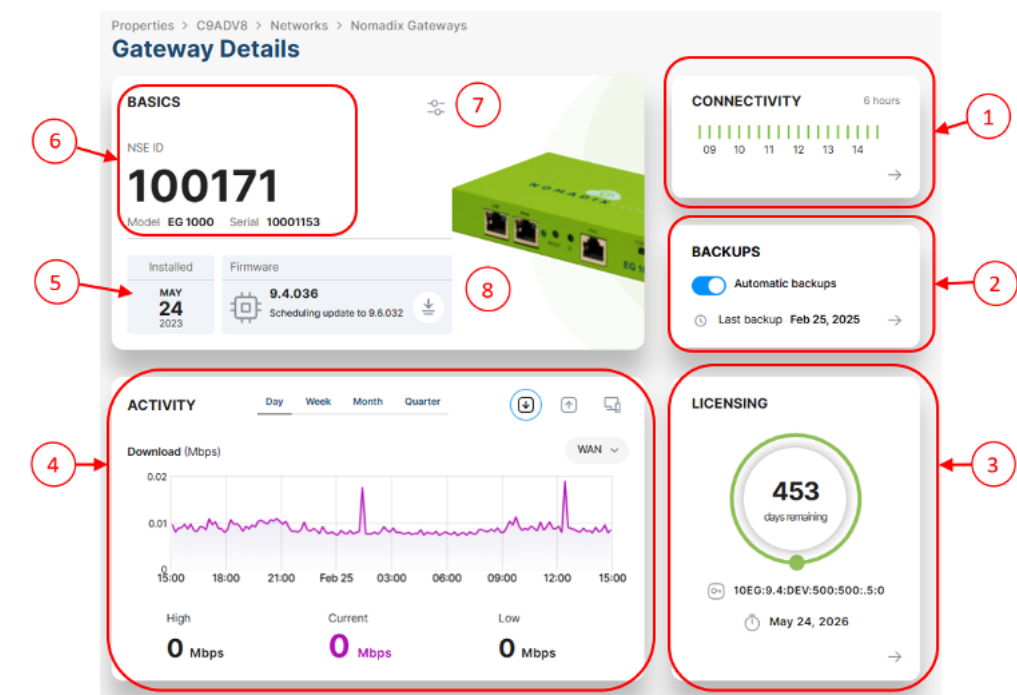

Element	Description
1 – Connectivity	This shows a summary of the gateway connectivity status over the last 12 hours (configuring gateway connectivity is described further in this guide).
2 – Backups	Move the slider to turn Auto Backup on or off (how to configure this function is described further in this guide).
3 – Licensing	The Licensing area shows the basic parameters licensed to the gateway and provides a countdown timer to how long is left before they expire. Includes the raw license string for the Gateway in case it is required for support. Click the → icon in the bottom right of the panel to access more licensing detail.
4 – Activity	The activity panel shows graphs of the recent download and upload bandwidth being utilized on the gateway. It also shows how many subscriber devices have been authorized via the gateway. More detail on using the Activity panel later in the guide.
5 – Installation Date	This is the date when the gateway first went live and contacted the Nomadix licensing server.
6 – Gateway Identification	This shows the main identifying information for the gateway: NSE ID Serial Number Model
7 – Maintenance Settings	Allows for a time and day to be set up to check if a firmware upgrade is available and, if one is available, to apply the upgrade.
8 – Firmware Update	This shows the current installed version of the firmware and indicates if a new version is available for the gateway.

Connectivity

This section covers the connectivity of a Nomadix Gateway to Nomadix Cloud. The goal is to get all connectivity types working properly and to have the Connectivity panel showing **green**.

Warning

- For Gateway connectivity to function reliably over time, a fixed WAN IP address is required, otherwise the parameters need to be reset every time the ISP rotates addresses.
- If the Gateway is still using the default 172.30.30.172 address, go to Configuration > Ethernet Ports/WAN in the web user interface and set the WAN port.
- The following instructions assume the Gateway has already been added to the Nomadix Cloud.
- For bulk provisioning of connectivity parameters for large gateways' installed bases, please refer to the separate Gateway Connectivity API guide.
- Depending on the firewall configuration at the site, it may be necessary to configure the firewall's Access Control List (ACL) to include the following Nomadix Cloud source IP addresses: 13.40.251.03.11.3.15535.176.58.147


Connectivity Types

The connection types each have their own functions:

Type	Description
Ping	Indicates basic gateway to Nomadix cloud connection.
SSH/SFTP	Allows the Nomadix cloud to execute gateway Command Line Interface (CLI) commands, upload and download files from the gateway. Used for:Backup and restoreSetting up Management connectivityFirmware upgrade for older firmware versions
SNMP	Simple Network Management Protocol (SNMP) is a networking protocol used for the management and monitoring of the gateway. It is used for: Determining the firmware versionSetting up the Management connectivityCollecting analytics data to populate the graphs The Nomadix Cloud supports both SNMP Version 2 and Version 3.
XML API	This is how the Nomadix Cloud connects to the XML interface on the gateway. It is used for connecting to the PMS module.

Connectivity Status


The Connectivity panel shows a summary of all the connectivity states over the last 12 hours.

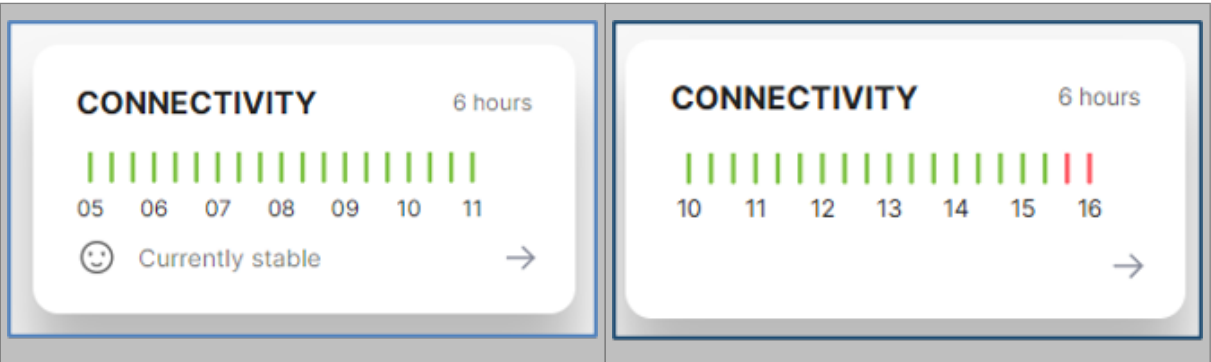

Notes


If one of the connectivity types is down, the status panel will indicate that the connection is unstable.

Selecting the —> icon in the lower right of the Connectivity panel, will open the connectivity drawer which will provide more details on the status of each connection type over the current 24 hours period. For instance, if the SFTP/SSH connection has just gone offline, the status icon will turn red as shown below (the grey indicators are future times):

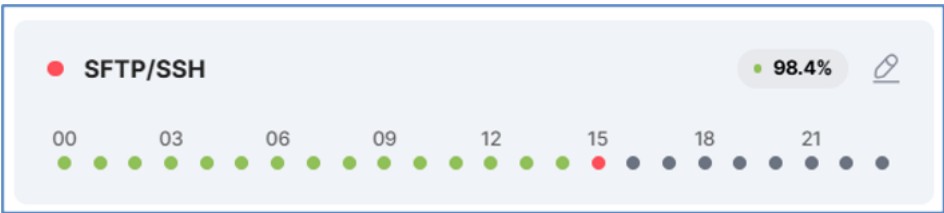

Color	Description
Green	All connectivity types are working and the gateway is reachable by the Nomadix Cloud.
Yellow	A connectivity type has been down for less than 5 minutes (this can appear occasionally for transient issues and then correct itself).
Red	One of the connectivity types is down and the gateway has been unreachable for more than 5 minutes.
Grey	Not configured or future time stamp.

You can then select the pencil icon to correct the configuration of the connection (refer to the instructions for configuring each connectivity). In addition, you can select the icon in the upper right-hand corner to see the connectivity status as a pie chart for better visualization:

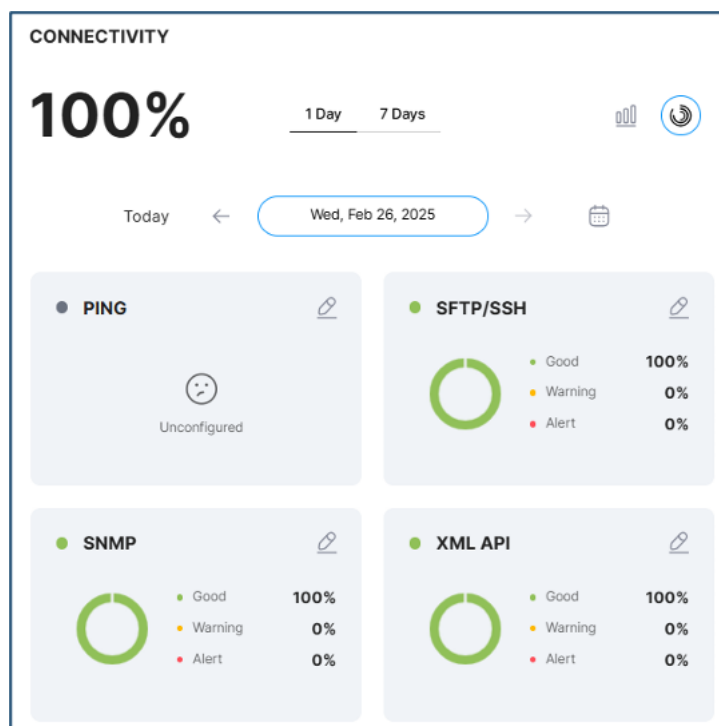

The controls at the top of the panel allow you to select a week's worth of data and select information for time periods going back 90 days:

Connectivity Configuration

Notes

Warning

- Ensure the gateway is up and running, connected to the network and you can log into the Web user interface.
- down its LAN IP address, WAN IP Address, and login credentials (you can type "What is my IP address" in a web browser to find your WAN IP address).
- The first time the Management connection is enabled, the gateway may reboot up to two times.

The following steps detail how to setup the different connectivity types:

1. Log into the Gateway and check what **ports** are being used for what **services** by going to **Configuration > Access Control**. Below are all typical ports for network applications:

In this example, SNMP uses the default port 161.

Configurable Ports	Note: Make sure that the ports are not allocated already
Telnet Port	23
HTTP Port	80
HTTPS Port	443
SSH/SFTP Port	22

NOTE: Port number changes require a reboot to be put into operational effect.


2. Log into the **site router** and configure **Port Forwarding** for each of the services listed above to be directed to the IP address of the Nomadix Gateway:

WarningThe Port Forwarding user interface will vary depending on the make and model of the site router. Depending on the network and WAN setups, the external ports may have to be mapped to different internal ports. This will not impact connectivity to the Cloud. For Ping, you need to enable ICMP rather than a specific port. Check your router's documentation for details. Ping may or may not be reliable depending on the ISP's policies. If Ping does not work, the other connectivity types likely will still work. If required, whitelist the following IP addresses on your firewall: 13.40.251.03.11.3.15535.176.58.147

Port Forwarding List (Max Limit : 64)							
Service Name	External Port	Internal Port	Internal IP Address	Protocol	Source IP	Edit	Delete
Nomadix FTP	22	22	192.168.1.131	TCP			
SNMP Server	161	161	192.168.1.131	UDP			
Nomadix XML	80	80	192.168.1.131	TCP			
Ping	1		192.168.1.131	OTHER			

3. Back in Nomadix Cloud, you can now configure connectivity by clicking on → icon in the bottom right of the Connectivity panel:


This opens the drawer for configuring each connectivity setting.

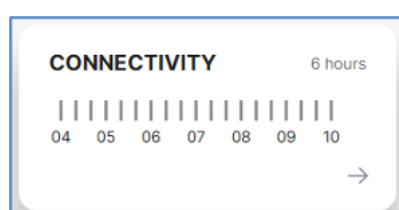

4. Click the **pencil** icon in the upper right corner of each connectivity panel to access the settings:

Ping just requires the WAN IP address
SFTP/SSH requires the WAN IP, port number and login credentials
For SNMP Version 2: On the Gateway, go to Configuration > SNMP and ensure the SNMP Daemon Mode is set to "V2 Only" then set passwords for Get and Set: In the Nomadix

Cloud SNMP panel, select SNMP Version 2c and enter the values for the WAN IP address, port, SNMP version and the Get/Set passwords: For SNMP Version 3: On the Gateway, go to Configuration > SNMP and ensure the SNMP Daemon Mode is set to “V3 Only” then go to Configuration > SNMPv3 and set up the SNMP connection per the gateway documentation. In the Nomadix Cloud SNMP panel, select SNMP Version 3 and enter the values for the WAN IP address, port, SNMP version and the User Name, security protocols and passwords (only Operator and Administrator are supported user names): To setup XML: On the Gateway, go to Configuration > AAA > Options and click the XML settings button: Check the Enable Authentication via XML User Credentials box Click the link for User Credentials (or go to System > Login) and set a password for the default XML user xmlcommand. In the Nomadix Cloud, set the IP address, port, the user as “xmlcommand” and the password: The “Use HTTPS” toggle can be selected to ensure the connection is secured by SSL.

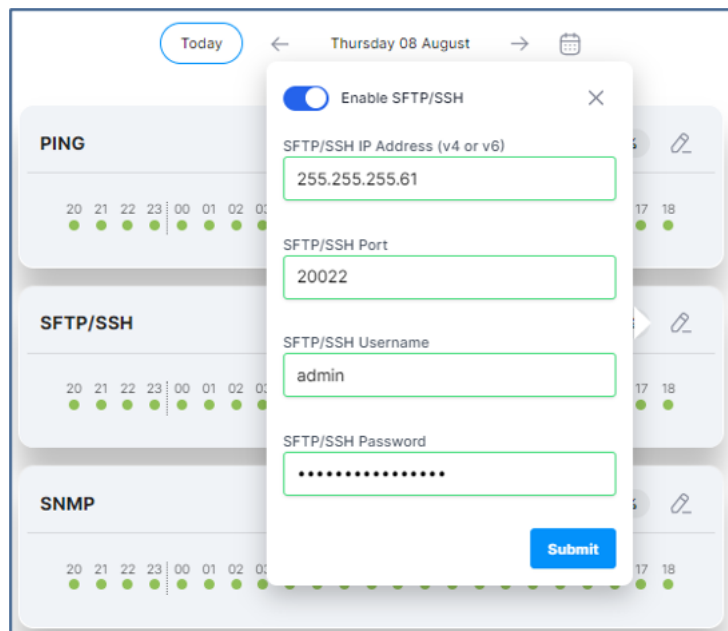

With all steps completed, you should now have all connectivity status indicators showing as “**Green**”.

Backups

An important utility available as part of the Gateways Fleet Management module is the capability to back individual devices to the Nomadix Cloud. This allows for an easy way to capture the current configuration before an important upgrade, or to restore a Gateway in case of a RMA.


The key features include:

- **Automated Daily Backups** - These are retained for one month and then recycled
- **Manual Backups** – with 2 options:
 - – Default one month retention
 - – Retained until deleted. Up to 10 Forever Backups can be retained for each Gateway
- **Backups Downloads** – For offline storage to another system or for manually restoring a Gateway

Warning

- SFTP/SSH connectivity must be enabled for backups to operate.
- Backups only contain the settings for a gateway and are not a complete firmware image.

1. Move the **slider** to the “on” position to enable Automatic Backups.
2. To access further configuration parameters, click the → icon in the lower right of the Backup panel. This opens a drawer with the listing of backups for the gateway and associated controls:
3. To trigger a Manual Backup, click the **Backup Now** button in the upper right corner. When complete, it will show as a Manual Backup with the date, time, and firmware version. Hovering over the backup will reveal additional controls described below:
IconDescription
a – Pencil IconChange the description of the backup.
b – Pin IconAllows you to designate a backup as “forever”, meaning it will not be deleted after 30 days.
c – Download IconAllows you to download a zip file of the backup.
d – Restore IconTrigger a restore of the backup file.
e – Trashcan IconDelete a backup you no longer need.

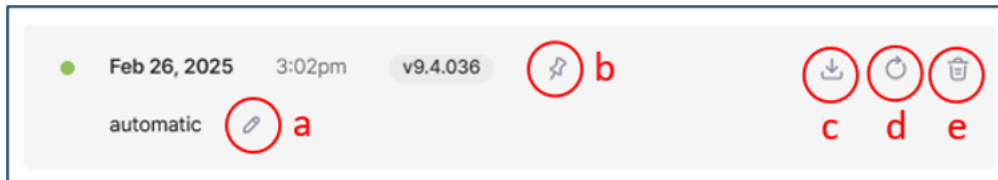


Warning


You can only restore onto the same version of firmware as the backup.

Licensing

The Licensing panel provides a basic overview of the status of the gateway license:

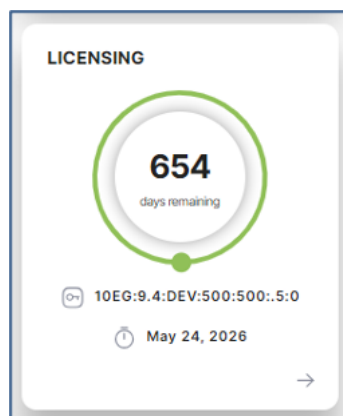

To see a more detailed description of each module or product licensed for the gateway, click the → icon in the lower left corner of the panel:

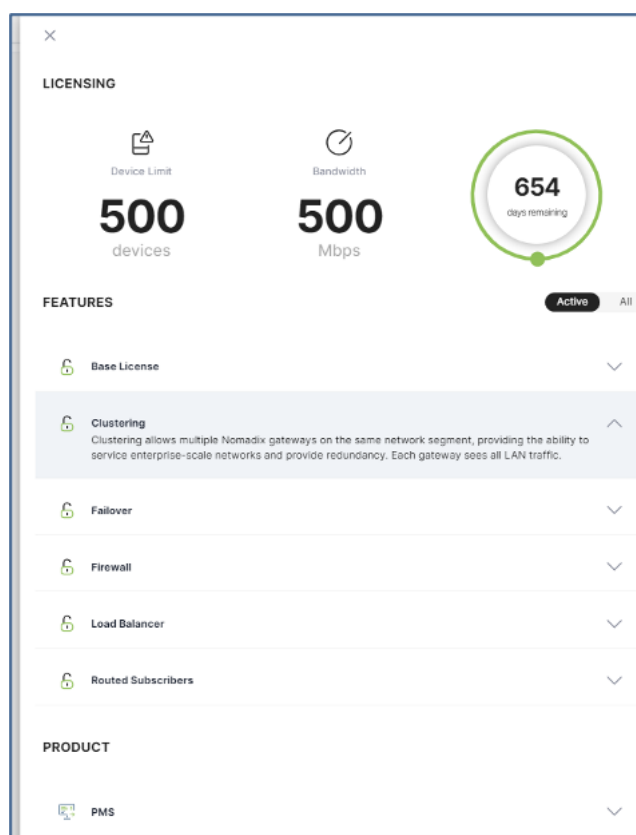


Each module can be selected to see its function. Selecting “All” in the upper right corner will show all possible available modules or products for the gateway.


Activity

The Activity panel provides real-time insight into how the gateway is performing to help monitor services and troubleshoot potential issues with the site configuration. There are three available graphs:

1. **Download** shows the download stream activity on the selected port (see below on how to select different ports):

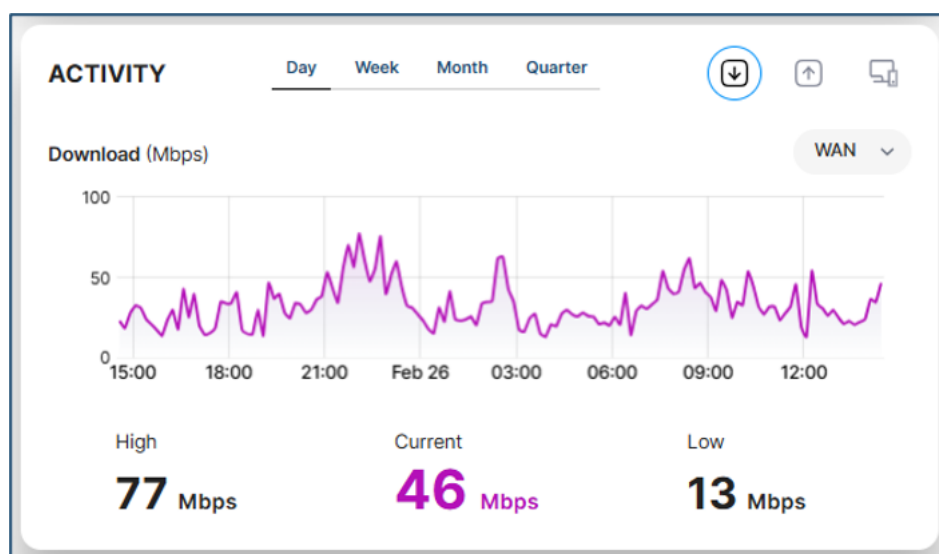

2. **Upload** shows the current upload stream activity of the selected port (see below on how to select different ports):

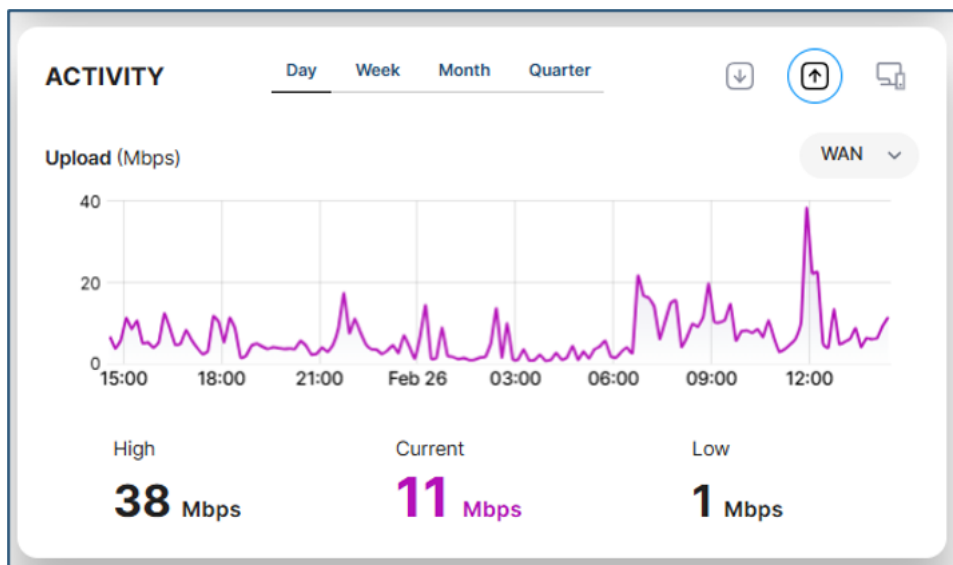

3. **Devices** reflects the number of user devices currently authorized through the gateway – such as via a captive portal – as counted in the gateway web UI at Subscriber Administration → Current:


You can select timeframes of the current day, the previous week, previous month or previous quarter to examine activity levels. To see a detailed information for a specific timeframe, just put your mouse pointer over the graph:






You can select different gateway ports to monitor the upload and download graphs.

1. From the upload or download graph, click the drop-down menu in the upper right corner and select the port you wish to monitor. The graphs will populate accordingly:

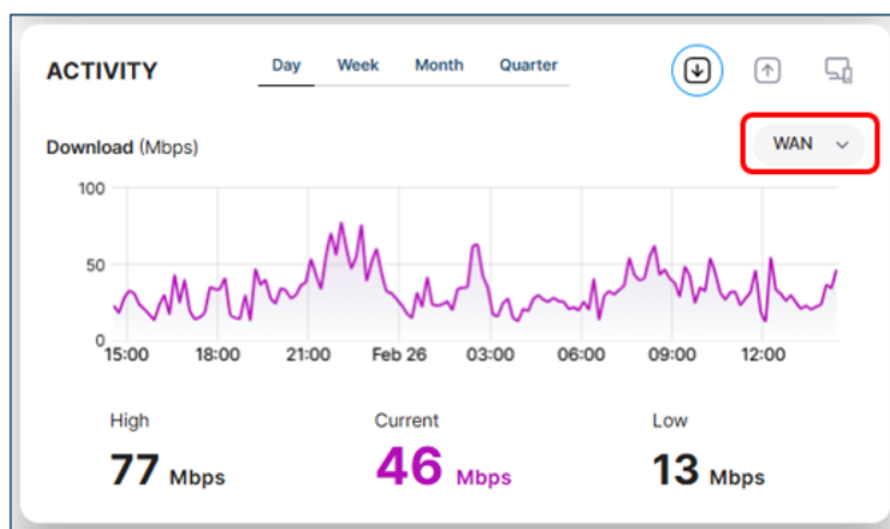

2. Depending on the model of gateways, there will be more or less ports available for monitoring. For example, for an EG 6000 you would see this list:

Note For more information on the ports shown, please refer to the documentation for your model of Nomadix gateway.

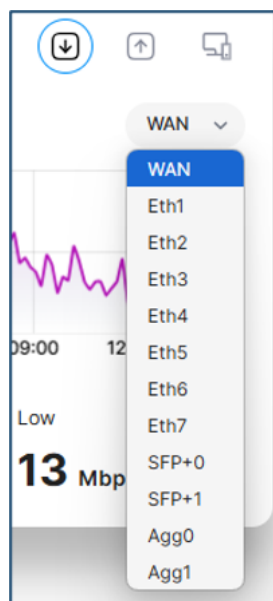

Firmware Update

Nomadix Cloud allows an administrator to update the Gateway firmware directly from the Status page, as well as schedule future updates. The Gateway Status page will show if a new version is available as shown below:



Warning


- SSH/SFTP, SNMP and Management must be enabled for this functionality to be available.
- Firmware upgrade from Nomadix Cloud does not currently support downgrading firmware.

Procedure


If the Gateway Status page indicates that a new firmware version is available, follow these steps:

1. Click the **Upgrade** icon to select the new firmware version you wish to upgrade to:

Warning Versions of the gateway firmware before 8.16 need to be updated to 8.16 before the gateway can be updated to 9.0 firmware versions. The Cloud upgrade process will prompt you to perform the interim upgrade.

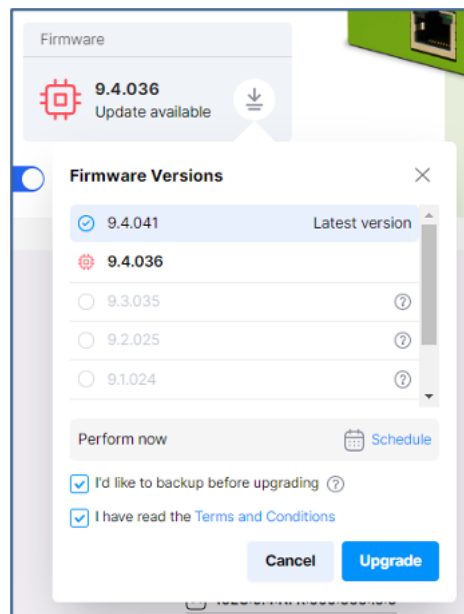

2. If you wish to schedule the upgrade for a later time (for instance, when the gateway traffic is low), then click **Schedule** to open the dialog box below (to skip scheduling, proceed to step 7).
3. Use the **slider** to select a day up to a month in advance for the upgrade.
4. Click **Time** to set the time for the upgrade:
5. Use the **slider** to select a time for the upgrade and click the → icon in the bottom right to accept the schedule.
6. To discard a scheduled upgrade, click **Reset** in the lower left corner of the dialog box.
7. With either a schedule set or without, you can opt to do a **backup** before upgrading (recommended). Warning You must accept the standard terms and conditions for a firmware upgrade. The firmware panel now shows that the upgrade has been scheduled.
8. Once the scheduled time is reached, the firmware panel shows a progress message.
9. After the upgrade, the gateway is in self test mode for approximately 5 minutes, but is processing traffic. Warning Do not perform any actions with the gateway WebUI or CLI during this self-test interval.
10. When the upgrade is complete, the panel shows success message below.

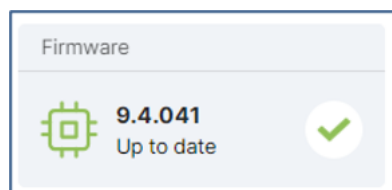

Maintenance Settings

Maintenance settings allow you to configure a regular time for an upgrade to occur whenever new firmware versions are available.

1. Select the **Maintenance Settings** icon from the Gateway status page.
2. From this dialog, select **Schedule** to pick a day and time.
3. Select a day of the week for the upgrade to occur.
4. Click **Time** and select a time with the slider. Warning The gateway reboots during the upgrade process, so best practice is to select a time when the site is typically quiet.

5. You can choose to have the upgrade happen either in your local time zone or the one of the property.
 6. Click **Schedule** to set the upgrade time and you will get a confirmation message.
 7. To remove the settings from a gateway, click **Unset**.
-