Manualslib.com - The Global Manuals Library

AKAI DECA BUDDY HV10 SERVICE MANUAL




Table of Contents

SAFETY INSTRUCTIONS
SAFETY CHECK AFTER SERVICING
SPECIFICATIONS
HOW TO USE THIS PARTS LIST
Parts List
Pc Board Blk
Pc Main Blk
Pc Operation Blk
Pc MIDI Foot Blk
Pc Pow Sw Blk
FINAL ASSEMBLY BLOCK
Schematic Diagram
Other ManualsLib Projects

AKAI professional


SERVICE MANUAL

Deca Buddy HV10

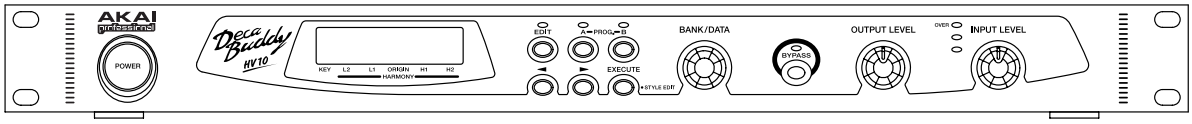

HARMONY PROCESSING UNIT

1. Parts identified by the symbol are critical for safety. Replace them only with the parts number specified.
2. In addition to safety, other parts and assemblies are specified for conformance with such regulations as those applying to spurious radiation.
   These must also be replaced only with the specified replacements.
   Examples : Noise blocking capacitors, noise blocking filters, etc.
3. Use specified internal wiring. Note especially :
   1) Wires covered with PVC tubing
   2) Double insulated wires
   3) High voltage leads
4. Use specified insulating materials for hazardous live parts. Note especially :
   1) Insulation Tape
   2) PVC tubing
   3) Spacers (insulating barriers)
   4) Insulation sheets for transistors
   5) Plastic screws for fixing micro switches
5. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.), wrap the ends of the wires securely around the terminals before soldering.

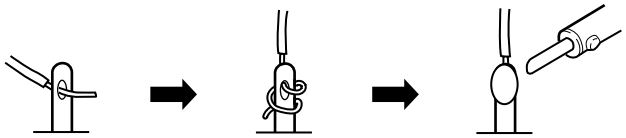

6. Make sure that wires do not contact heat producing parts (heat sinks, oxide metal film resistors, fusible resistors, etc.).
7. Check that replaced wires do not contact sharp edged or pointed parts.
8. Also check areas surrounding repaired locations.
9. Make sure that foreign objects (screws, solder droplets, etc.) do not remain inside the set.

SAFETY CHECK AFTER SERVICING

After servicing, make measurements of leakage-current or resistance in order to determine that exposed parts are acceptably insulated from the supply circuit. The leakage-current measurement should be done between accessible metal parts (such as chassis, ground terminal, microphone jacks, signal input/output connectors, etc.) and the earth ground through a resistor of 1500 ohms paralleled with a 0.15 F capacitor, under the unit's normal working conditions.
The leakage-current should be less than 0.5 mA rms AC. The resistance measurement should be done between accessible exposed metal parts and power cord plug prongs with the power switch (if included) "ON". The resistance should be more than 2.2 M ohms.

SYMBOLS FOR PRIMARY DESTINATION

Unit destinations are indicated with letters as shown below.

Symbols	Principal Destinations
A	U.S.A
B	England
E	Europe
J	Japan
V	Germany
X1	Japan
X4	Universal Area

MAKE YOUR CONTRIBUTION TO PROTECT THE ENVIRONMENT

Used batteries with the ISO symbol for recycling as well as small accumulators (rechargeable batteries), mini-batteries (cells) and starter batteries should not be thrown into the garbage can.
Please leave them at an appropriate depot.

PRECAUTIONS FOR LITHIUM BATTERY

The lithium battery may explode when incorrectly replaced.
[OBSERVE THE FOLLOEING WHEN REPLACING]

Replace with the same make and type or equivalent recommended by manufacturer.
Place battery in correct polarity.
Do not short the terminals.
Do not charge battery.
Do not dispose of battery in fire.

I. SPECIFICATIONS

Terminals:
- MIC input (Input impedance: Effect On/4k ohms or more, Off/True Bypass)
- LINE input (Input impedance: 33k ohms or more)
- MIC output (Output impedance: Effect On/1k ohms or less, Off/True Bypass)
- LINE R output (Output impedance: 1k ohms or less)
- LINE L output (Output impedance: 1k ohms or less)
- MIDI IN
- MIDI OUT/THRU
- FOOTSWITCH x 3 (PROGRAM A, PROGRAM B and ON/OFF (COMBI))
- DC IN (9 Volts)

Controls:
- INPUT LEVEL control
- OUTPUT LEVEL control
- BANK/DATA control
- BYPASS button
- PROGRAM A button
- PROGRAM B button
- EDIT button
- < button
- > button
- EXECUTE/STYLE EDIT button
- POWER switch

Indicators:
- LED x 3 (Input Level Indicator)
- LED x 4 (PROGRAM A, PROGRAM B, EDIT, and BYPASS)
- LCD 16 x 2 line with backlight

Power supply:
- 9V DC/250mA, Proprietary AC Adaptor included

Dimensions:
- 483 (W) x 202 (D) x 43.7 (H) mm

Weight:
- 1.8kg

Accessories:
- Operators Manual, Proprietary AC Adaptor

✻ The specifications above are the subject to change without prior notice.

II. PARTS LIST

ATTENTION

1. **When placing an order for parts, be sure to list the Part No., Model No. and the description of each part. Otherwise, the non-delivery of the part or the delivery of a wrong part may result.**
2. **Please make sure that Part No. is correct when ordering. If not, a part different from the one you ordered may be delivered.**
3. **Since the parts shown in Parts List or Preliminary Service Manual may have been the subject of changes, please use this Parts List for all future reference.**

HOW TO USE THIS PARTS LIST

1. This Parts List lists those parts which are considered necessary for repairs.
2. Parts not shown in the Parts List will not in principle be supplied.
3. How to read the Parts List.

1. PC MAIN BOARD BLK

Ref. No.	Part No.	Description
D5	ED-431276C	D SCHOT 1S30-J T05
D110	ED-431276C	D SCHOT 1S30-J T05
:		
:		
IC5	EI-811073J	ICTRC-6593
IC10	EI-811068J	IC HD74HC157FP

Service parts classification

These reference symbols correspond with component symbols in the Schematic Diagrams.

2. FINAL ASSEMBLY BLK

Ref. No.	Part No.	Description
1.	SA-349332	FOOT
2.	ZS-344754C	ST PAN30x06STL CMT
	:	
	:	
44.	SP-417333J	COVER TOP
45.	ZS-418385J	BT BID30X06STL BNI EATRH LOCK
46-A	EW-380905J	AC CORD 250S KP300 KS16A H B J [J]
46-B	EW-368420J1	AC CORD 200SKP30KS B AC [A]
46-C	EW-410608J	AC CORD 250 KP4819D KS31A B E [E,V]

Symbols for primary destination
[A] U.S.A. [J] Japan
[B] England [V] Germany
[E] Europe [x1] Japan
[X4] Universal Area

Safety critical component

This number corresponds with the individual parts index number in the figure.

WARNING

INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.

AVERTISSEMENT

IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉDE L'APPAREIL, NE REMPLACER QUE DES PIÉCES RECOMMANDEES PAR LÉ FABRICANT.

1. PC BOARD BLK

Ref.No.		Part No.	Description
1	BA	L8020A020A	PC(#) MAIN BLK HV10

PC(#) MAIN BLK HV10 CONSISTS OF FOLLOWING PC BOARDS.

* PC MAIN BLK
* PC OPERATION BLK
* PC MIDI FOOT BLK
* PC POW SW BLK

2. PC MAIN BLK

Ref.No.		Part No.	Description
D1	ED	811455J	D SILICON H 1SS133T-77 T26
D2	ED	386225J	D SILICON 1N4002 T26 100/1.0A
D3	ED	811455J	D SILICON H 1SS133T-77 T26
D4	ED	811455J	D SILICON H 1SS133T-77 T26
D101	ED	811455J	D SILICON H 1SS133T-77 T26
D102	ED	811455J	D SILICON H 1SS133T-77 T 26
IC1	EI	821275X	IC ADSP-2186MKST-300
IC2	EI	821289X	IC HD64F3644H
IC3	EI	821276X	IC PCM3003E FP16T
IC4	EI	387934J	IC HD74HC04P
IC5	EI	821645X	IC HD74HC93P
IC6	EI	810589J	IC M51957BL
IC7	EI	821704X	IC 24LC128-I/P
IC8	EI	387937J	IC HD74HC74P
IC9	EI	821646X	IC NJM2391DL1-25 FPTE1T16E
IC10	EI	812843J	IC NJM317F
IC11	EI	400856J	IC NJM78M05FA
IC12	EI	403306J	IC NJM4558L
IC13	EI	403306J	IC NJM4558L
IC14	EI	403306J	IC NJM4558L
J1	EJ	821446X	PHONE J NC3FAH1-0
J2	EJ	821447X	PHONE J NC3MAH
J3	EJ	821408X	PHONE J YKB22 -5331 S.NUT 6.3
J4	EJ	821409X	PHONE J YKB22 -5330 S.NUT 6.3
J5	⚠ EJ	812072J	SOCKET DC HTJ-020-05A 1P
J6	EJ	821408X	PHONE J YKB22 -5331 S.NUT 6.3
L1	EH	416656J	COIL FIX 1 LAP02TA T26 100J
L2	EH	418442J	COIL FIX 1 LAP02TA T26 1R2J
RL1	EQ	820421X	RELAY SIG RY-9WK 1TR 9V
RL2	EQ	820421X	RELAY SIG RY-9WK 1TR 9V
TR1	ET	362209	TR 2SC3330 S,T,U T05
TR2	ET	362209	TR 2SC3330 S,T,U T05
TR3	ET	362209	TR 2SC3330 S,T,U T05
TR6	ET	364492	TR DTC114TS T05
TR7	ET	364291	TR DTA144ES T05
TR8	ET	364492	TR DTC114TS T05
TR10	ET	364082	TR DTA114TS T05
X1	EI	821280X	OSC X'TAL AT-49 11.2896MHZ
X2	EI	821279X	OSC X'TAL AT-49 37.5MHZ
X3	EI	821706X	OSC X'TAL HC-49/S 10.000MHZ

3. PC OPERATION BLK

Ref.No.		Part No.	Description
D411	ED	812087J	D LED L-934SRD-G RED
D412	ED	813021J	D LED L-934SYD YELLOW
D413	ED	812086J	D LED L-934SGD GREEN
D414	ED	812087J	D LED L-934SRD-G RED
D415	ED	812086J	D LED L-934SGD GREEN
D416	ED	813021J	D LED L-934SYD YELLOW
D417	ED	812087J	D LED L-934SRD-G RED
IC401	EI	821282X	IC NJU7032D
IC402	EI	403306J	IC NJM4558L
SW401	ES	349474	SW TACT SKHHAM004A
SW402	ES	349474	SW TACT SKHHAM004A
SW403	ES	349474	SW TACT SKHHAM004A
SW404	ES	349474	SW TACT SKHHAM004A
SW405	ES	349474	SW TACT SKHHAM004A
SW406	ES	349474	SW TACT SKHHAM004A
SW407	ES	349474	SW TACT SKHHAM004A
VR401	EV	812887J	VR ROTARY RK09L1140 L12.5 A104
VR402	EV	821653X	VR ROTARY RK09L12D0 A104 L=12.5
SW701	ES	813048J	SW ROTARY ENCODER EC11B202 L15

4. PC MIDI FOOT BLK

Ref.No.		Part No.	Description
D501	ED	811455J	D SILICON H 1SS133T-77 T26
IC501	ET	430926J	DETECTOR PC400
J501	EJ	812069J	PHONE J HTJ -064-13H 6.3
J502	EJ	812069J	PHONE J HTJ -064-13H 6.3
J503	EJ	812069J	PHONE J HTJ -064-13H 6.3
J504	EJ	812765J	DIN J HDC-052A-12 2*5P
TR501	ET	364492	TR DTC114TS T05
TR502	ET	364492	TR DTC114TS T05


5. PC POW SW BLK


Ref.No.		Part No.	Description
SW601	ES	820630X	SW PUSH SDKLA10300 01 -1

6. FINAL ASSEMBLY BLK

Ref.No.		Part No.	Description
1	SB	820646X	BUTTON POWER
2	SE	820647X2	ESCUTCHEON POWER
3	SP	821659X	PANEL TOP
4	SE	821661X	SHEET DISPLAY
5	EM	821647X	IND LCD L1672B1J000
6	SB	821662X	BUTTON PUSH (A)
7	SK	821335X	KNOB (A)
8	SK	821336X	KNOB (B)
9	SH	821663X	HANDLE SUPPOTOR
10	SA	821664X	FOOT
11-A	⚠ AX	821687X	AC ADAPTER L8020 J (PLUG IN)
11-B	⚠ AX	821688X	AC ADAPTER L8020 C,A (PLUG IN)
11-C	⚠ AX	821689X	AC ADAPTER L8020 E,V,B(CORD IN)
12	⚠ EJ	428247N	PLUG ADAPTOR ECPL01BKR5 BS5733

FINAL ASSEMBLY BLOCK

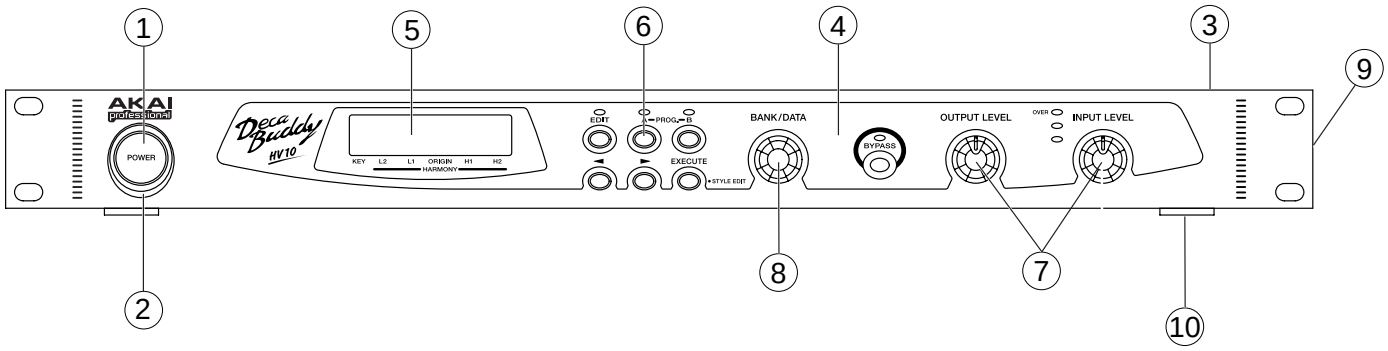


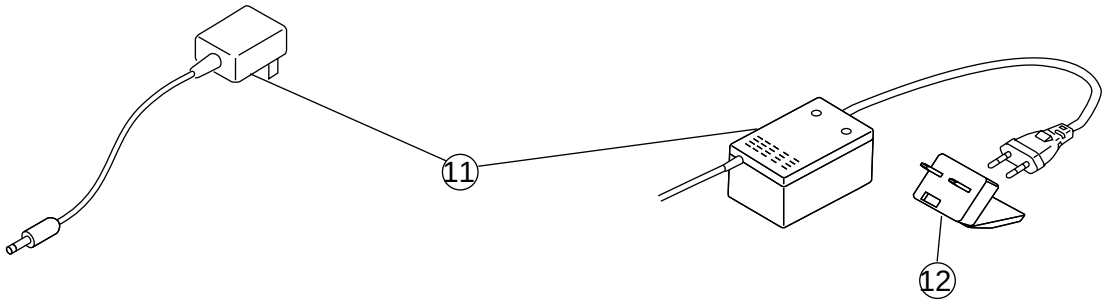

AKAI professional M.I. Corp.

4-7-3, KITA-YAMATA, TSYZUKI-KU, YOKOHAMA, JAPAN

SERVICE SECT. PHONE : +81-45-914-8530 FAX : +81-45-914-8531

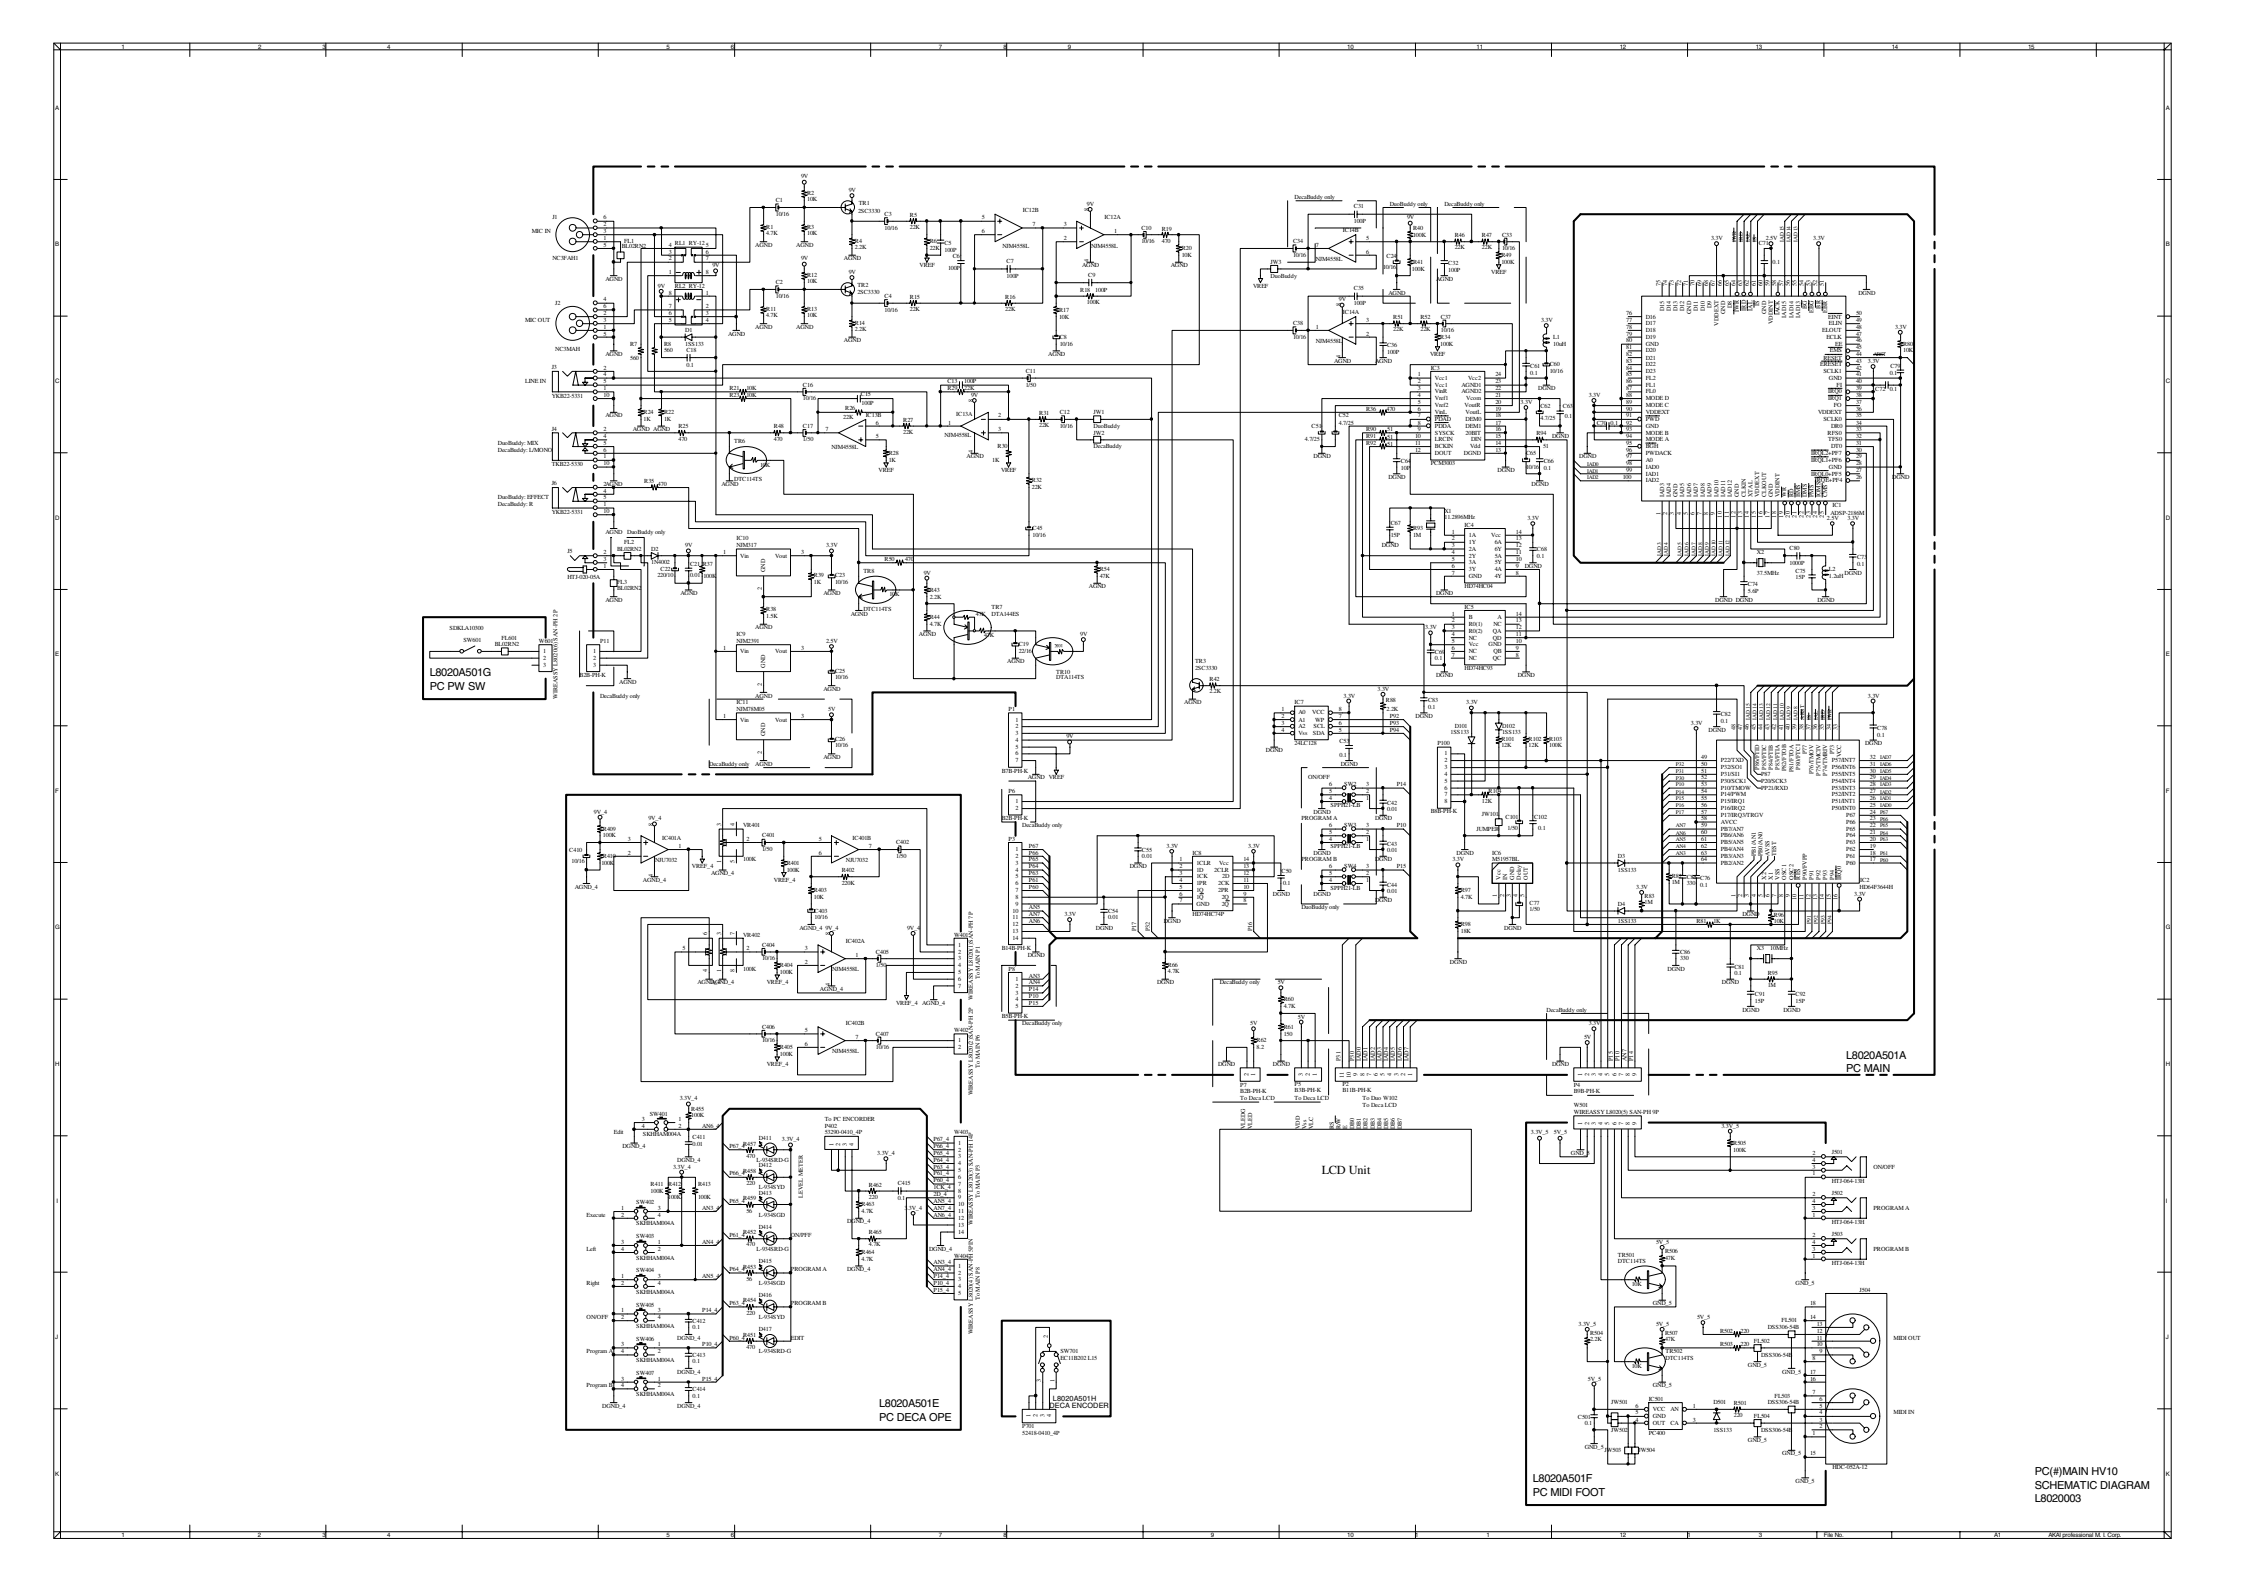
L8020A501G
PC PW SW
L8020A501A
PC MAIN
L8020A501E
PC DECA OPE
L8020A501H
DECA ENCODER
LCD Unit
L8020A501F
PC MIDI FOOT
PC(#)MAIN HV10
SCHEMATIC DIAGRAM
L8020003

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages