



Measuring instruments conform with
EN 50 081-1 + EN 50 082-1

Please read before operation

- Never carry out measurements on live parts.
- Adhere to the measuring ranges in the sensor.
- The data on accuracy refers to the following adjustment conditions: 1013 mbar, 22 ° C, wind tunnel with free jet Ø 350 mm. • Overheating or flow overloading can destroy the probes.
- Observe the permissible storage and transport temperature and the permissible operating temperature (e.g. protect the instrument from direct sunlight) • Inexpert handling or use of force make your warranty claim invalid.

Changing the settings

When switching on the instrument keep the HOLD button pressed until one of the following options appear.

The following settings can be changed

Auto Off function:	On - Off
Temperature unit:	° C - ° F
incl. the velocity unit:	m/s - fpm

Change the setting via the START/ STOP button. Press the Hold button and you will return to the current measurement to which the changed settings apply.

Technical data on testo 415

Sensor: Hot wire, NTC

Meas. range m/s: 0 to 10 m/s or 0 to 2000 fpm

Accuracy: ± 0.05 m/s $\pm 5\%$ of m.v. (0 to 2 m/s)
 ± 10 fpm $\pm 5\%$ of m.v. (0 to 400 fpm)
 ± 0.5 m/s $\pm 5\%$ of m.v. (2 to 10 m/s)
 ± 98 fpm $\pm 5\%$ v. Mw (400 to 2000 fpm)

Measuring range ° C: 0 to +50 ° C or 32 to +122 ° F

Accuracy: ± 0.5 ° C or ± 0.9 ° F

Resolution: 0.01 m/s - 1 fpm (<1000 fpm)
10 fpm (from 1000 fpm)
0.1 ° C - 0.1 ° F

Operating temperature: 0 to +50 ° C

Storage/transport temp.: -20 to +70 ° C

Housing: ABS (black) Dimensions: 190x57x42 mm


Weight: approx. 300 g Battery type: 9V block

Note: Slightly raised temperature in the case of still air

Velocity: 0,0 m/s temperature display: +1,0 ° C

Velocity: 0,1 m/s temperature display: +0,4 ° C

Warranty: Instr.: 2 years; probe: 1 year

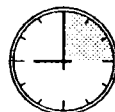


Auto Off function

If the Auto Off function is activated the instrument automatically switches off after 10 minutes (but not if Hold is activated)

Changing the battery

"Bat" appears in the display when the battery lifetime remaining is approx. 30 minutes (when the normal lifetime is 20 h, referring to alkaline manganese battery type) . The instrument switches off automatically if the battery power is insufficient. Unscrew the housing, remove the used battery and put in new battery (9V block) and observe polarity

**Initial operation -
On/Off button**

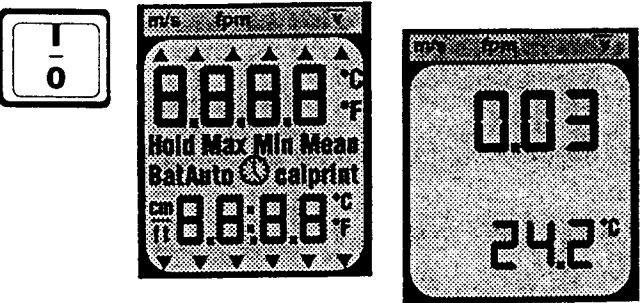

When the instrument is switched on a short display and function test is carried out.


Memory function for maximum and minimum values - Calling up averaging: Hold button

You can jump between the following displays by repeatedly pressing the Hold button


- 1st press: Measured values are fixed in the display
 - 2nd press: Saved maximum values are displayed
 - 3rd press: Saved minimum values are displayed
 - 4th press: Averaging is activated
- See **Averaging** for more details ...

Averaging:

Following the HOLD/MAX/MIN functions time averaging is called up via the Hold button:

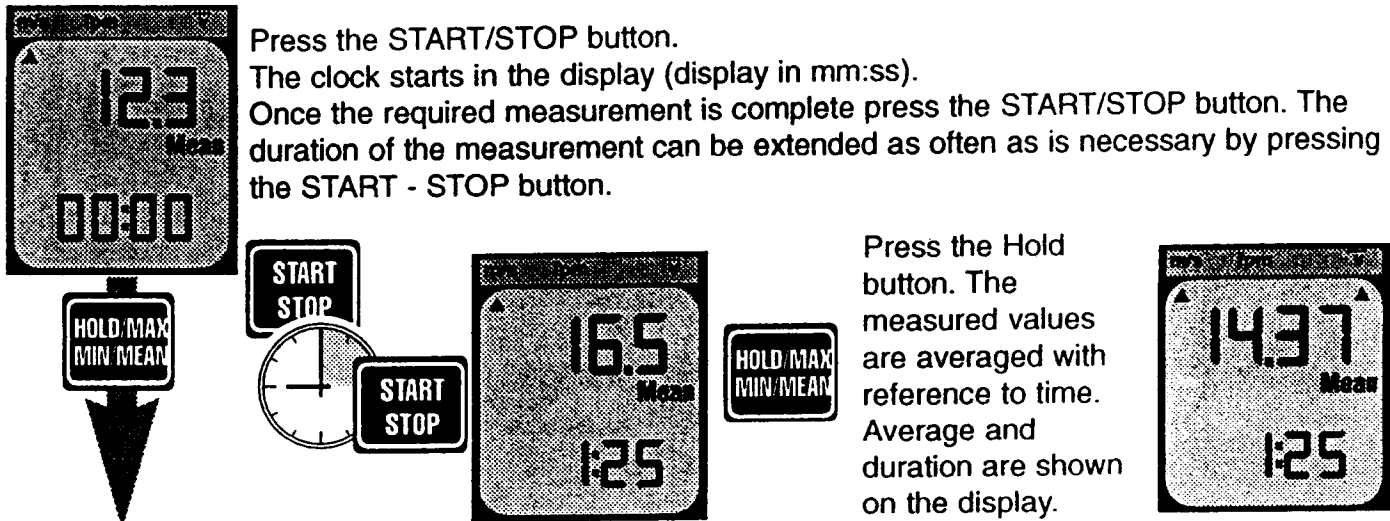

Multi-point averaging is activated:

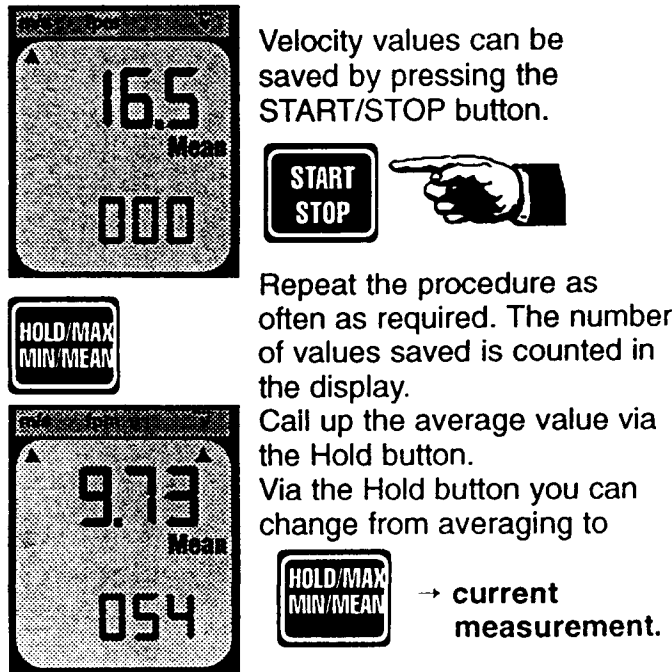

Ordering data

testo 415 measuring instrument with attached velocity probe incl. battery and Instruction manual		0560.4150
9V rechargeable battery		0515.0025
Recharger		0554.0025
TopSafe (indestructable protective sleeve)		0516.0183
Case.....		0516.0182
Accessory set consisting of multi-purpose clip (for jacket pocket, belt and as a wall holder), probe holder, carrier loop		0554.0550