

KEYWAVE



Keywave-KW307

Human Presence Sensor Module


- Revolutionary new Radar technology
- Ultra-low power consumption
- Detects multiple and stationary People
- Reduces false alarms

User Guide and Datasheet

Version 2.0 | 2026-06-25, Keywave Technology Ltd.

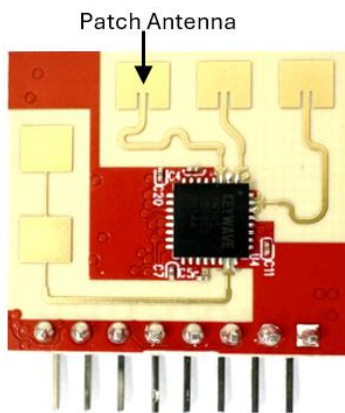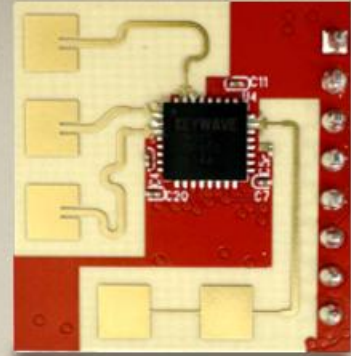

Front view
(antenna facing forward)

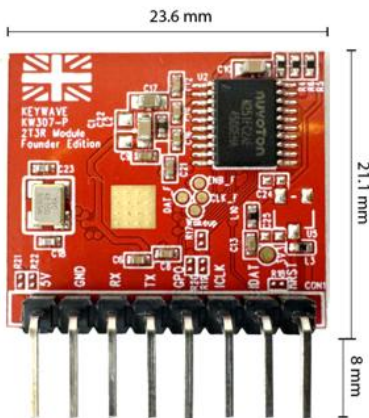

Back view



Side View

Product Overview

The **KW307** is a compact 24 GHz RF-based **human presence sensor module** designed to detect both moving and stationary people in indoor and outdoor, embedded sensing applications. With integrated antenna, UART target reporting, configurable detection range, adjustable field of view, and support for multi-target tracking of up to three people, the KW307 enables reliable presence-based control for smart buildings, automation, energy-saving systems, and human-machine sensing applications.


Key Features

- 24 GHz RF-based human presence sensing module
- Detects both moving and stationary humans
- Multi-target tracking of up to four people
- Reports target distance and angle information via UART
- Configurable detection range, field of view, gain, sensitivity, and hold time
- Typical 100° field of view, configurable up to 120°
- Distance accuracy up to ± 5 cm and angle accuracy up to $\pm 3^\circ$
- Strong immunity to fan clutter, wind, and vibration
- Supports 3.6V ~ 5V power input
- PC GUI tool for configuration, scenario presets, and real-time detection monitoring

Typical Applications

- Smart lighting and HVAC control, Smart building automation
- Room and desk occupancy detection
- Energy-saving monitoring systems, Smart home and appliance control
- Washroom automation, including urinal and hand dryer sensing
- Human-machine interface and embedded presence detection
- Evaluation and prototyping for RF sensing products
- Recommended clearance zone: at least 10mm in total (front and back).

Module Dimensions & Pin Definitions

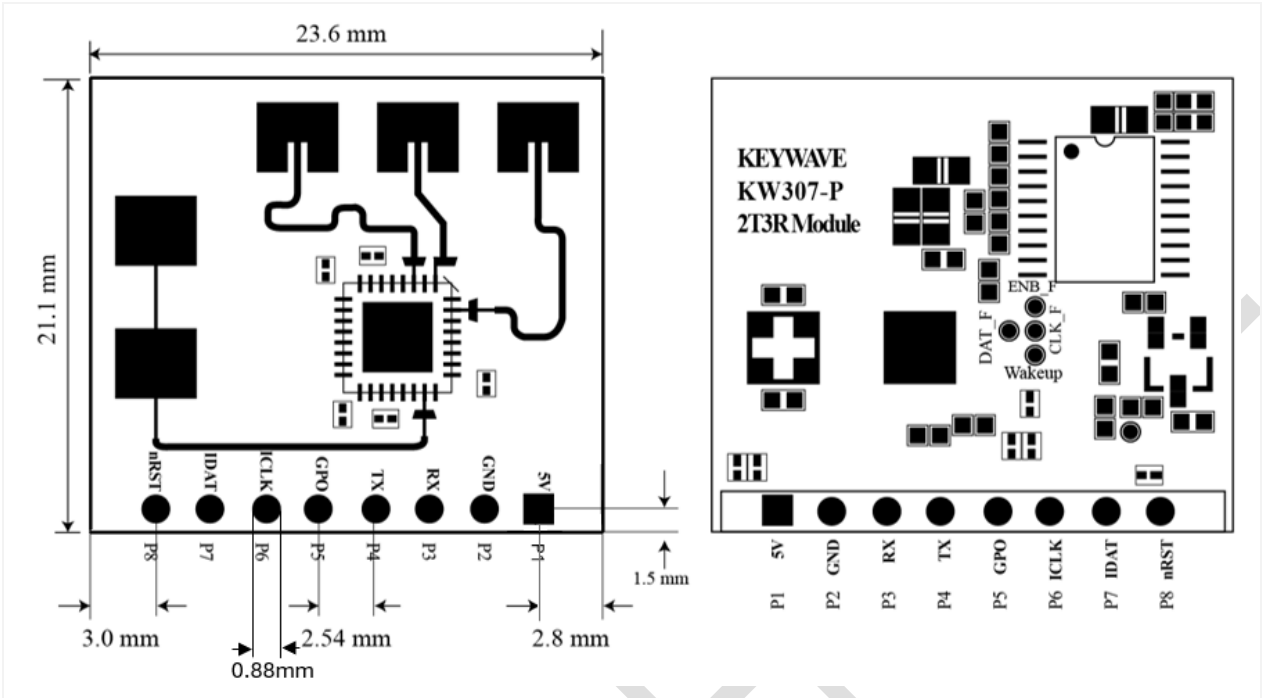

Description	Min.	Typ.	Max.	Unit
Module Length	23.58	23.6	23.62	mm
Module Width	21.08	21.1	21.12	mm
Module Thickness	1.57	1.6	1.63	mm
Hole Dimension	0.875	0.88	0.9	mm
Pin Header Diameter		0.6		mm

Pin	Symbol	Type	Description
P1	5V	Power	5V power supply
P2	GND	Ground	Ground
P3	RX	Input	UART Rx signal
P4	TX	Output	UART Tx signal
P5	GPO	Output	General-purpose output
P6	ICLK	Input	Programming clock signal
P7	IDAT	Input	Programming data signal
P8	nRST	Input	System reset signal (active low)

- 5V Power Mode: Supply voltage is regulated by an on-chip LDO to power the internal core.

Block Diagram


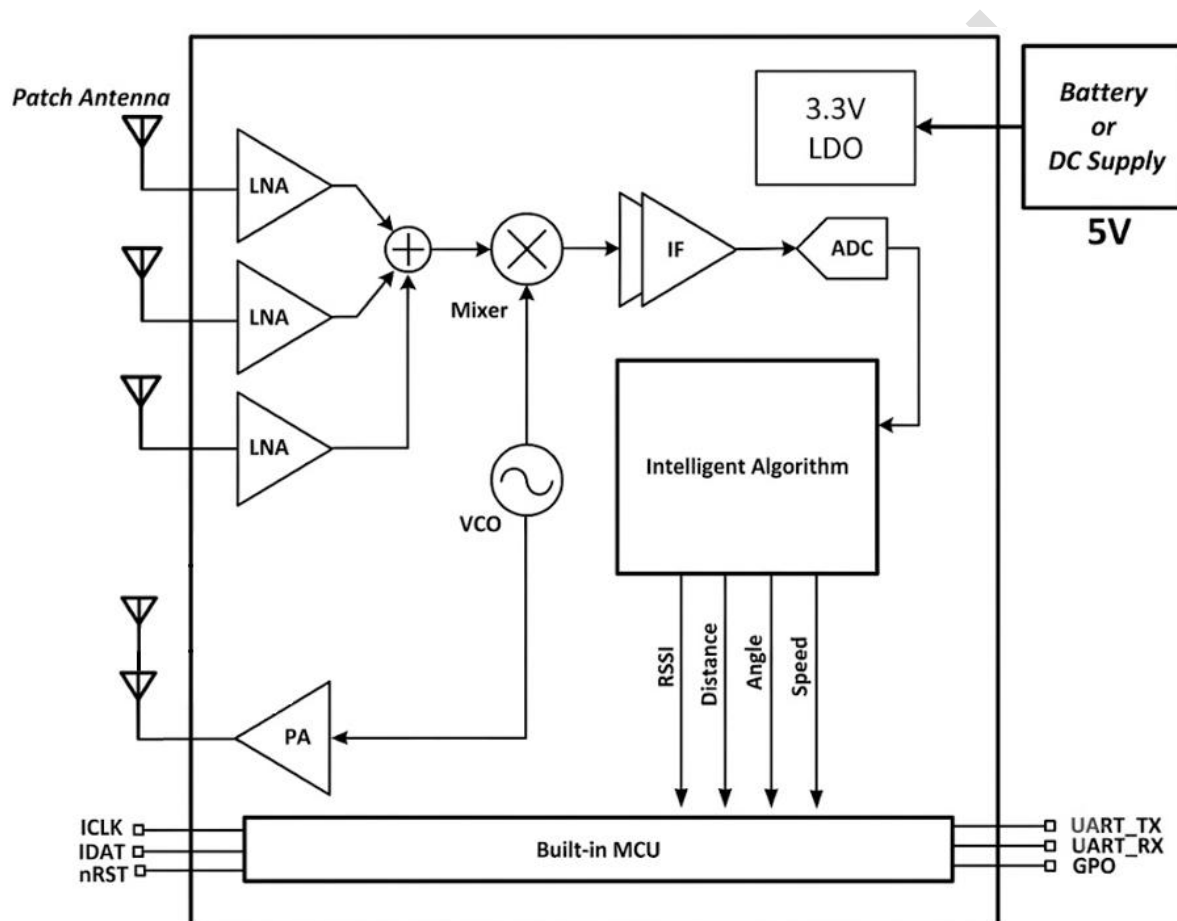


Figure : KW307 Block Diagram

Mounting Suggestion

- **Optimal Installation Height:** For best results, mount the sensor at a height of 1.5m to 2m above the floor.
- **Avoid Obstructions:** Ensure a clear line of sight. Avoid placing the sensor behind metallic objects or thick glass, as these may block or attenuate the radar signal.
- **Directional Alignment:** If the target area is close to the mounting point tilt the sensor slightly downward (approx. 10° – 15°) to maximize FOV coverage.
- **Stability:** Mount the sensor on a rigid surface. Although the KW307 has superior immunity to vibration, a stable mount ensures the highest possible accuracy for stationary detection.
- **Clutter Management:** Position the sensor away from large moving mechanical parts (such as large industrial fans) to maintain the best tracking performance for multiple people.

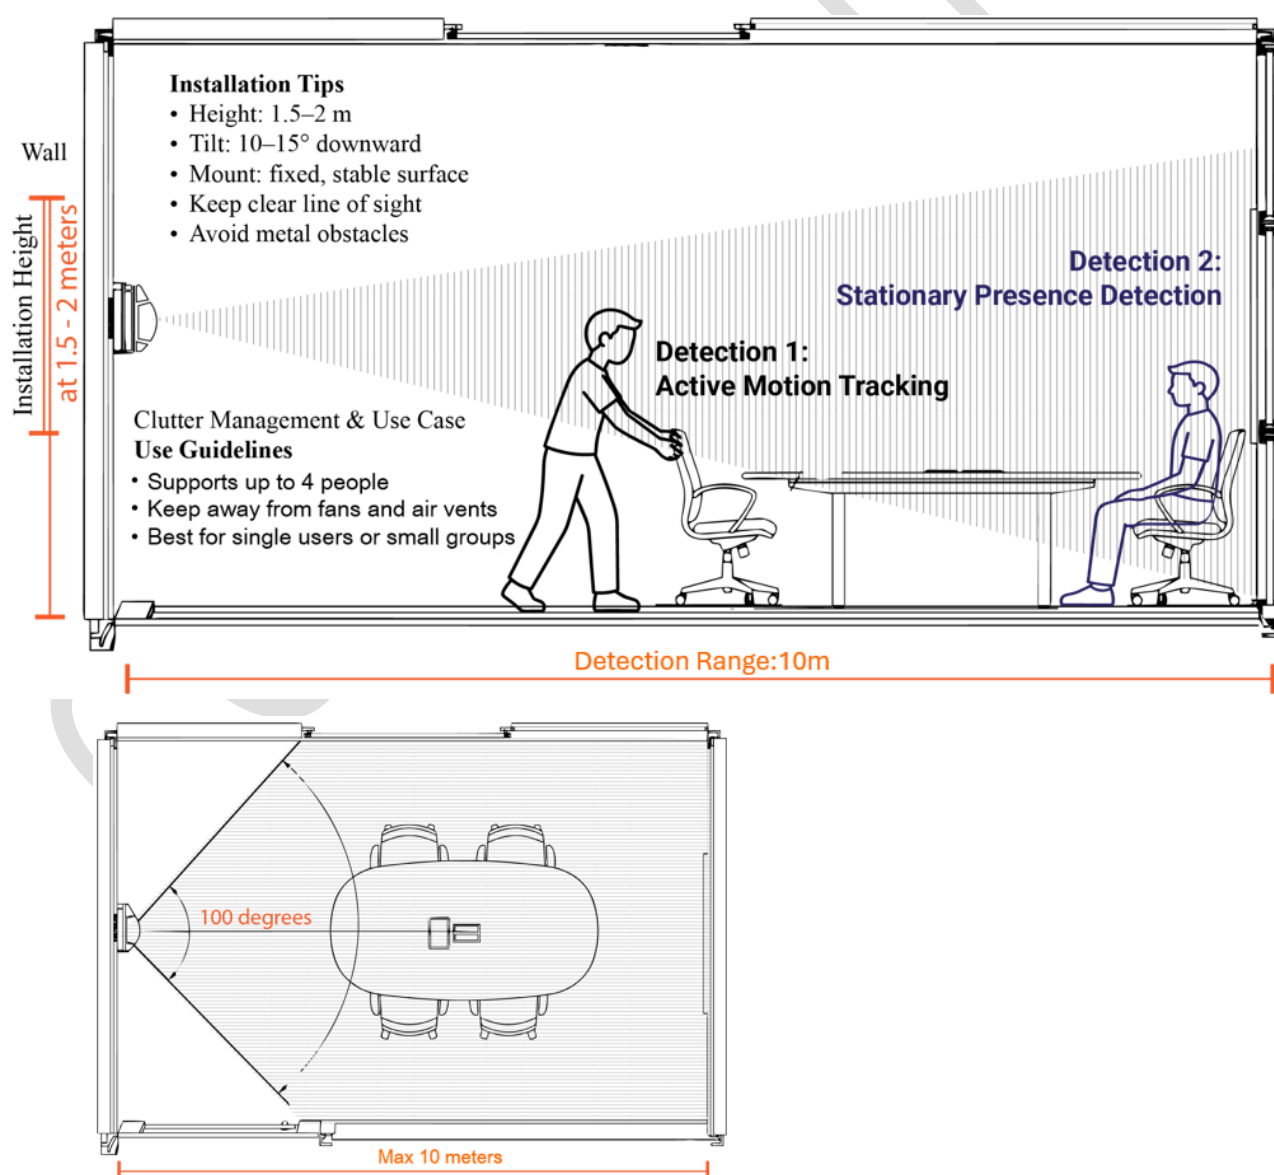


Configuration and monitoring tool

The KW307 configuration and monitoring tool is a GUI application designed to help you get up and running as fast as possible.

The tool allows you to:

- Configure sensor detection parameters, making it easy to tune the KW307 to your application
- Choose pre-set tuning parameters for common applications.
- Monitor real-time detection status, on an intuitive graphical display.

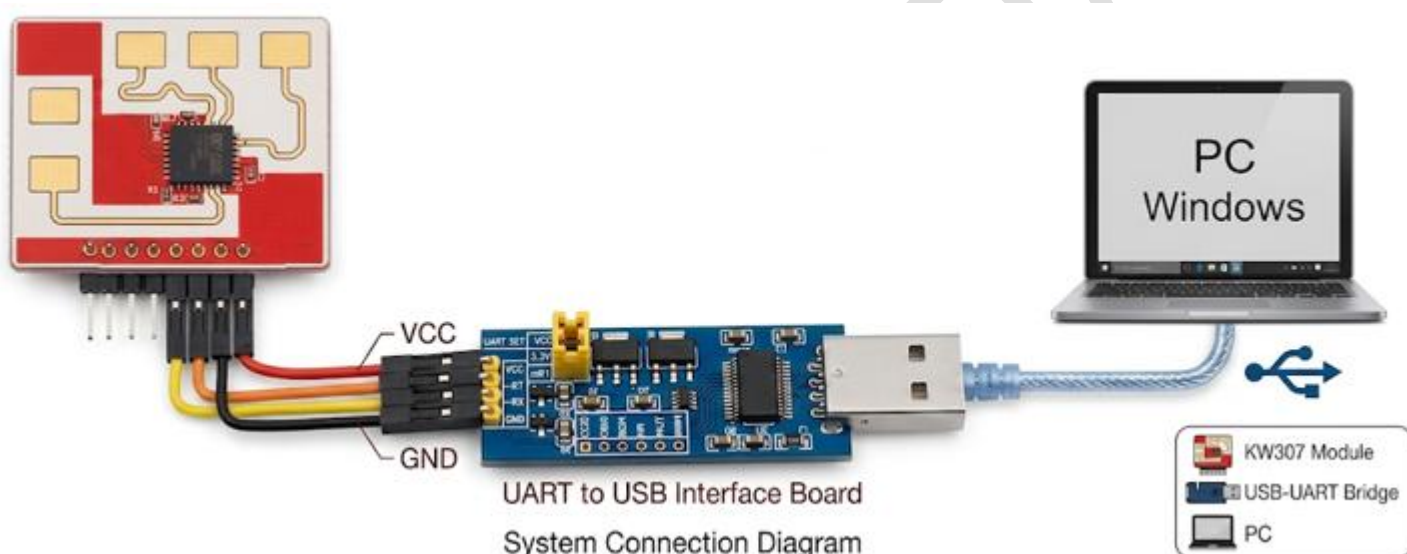


- The configuration tool uses a USB to UART adapter to communicate from a Windows PC to the KW307.
- Note the Pin spacing for the KW307 is 2.54mm.
- UART RX/TX interface must be 3.3V. (Not 5V Tolerant).

CAUTION :

- When connecting the adaptor, or bridge board, ensure you use a data-capable USB cable, not a charge only cable.
- Take care when connecting the cable as connection errors may permanently damage the hardware module.
- The configuration tool software can be found at: <https://keywavetech.co.uk/products>

GUI Configuration Overview

- Please follow the 6 steps below to complete the parameter configuration.

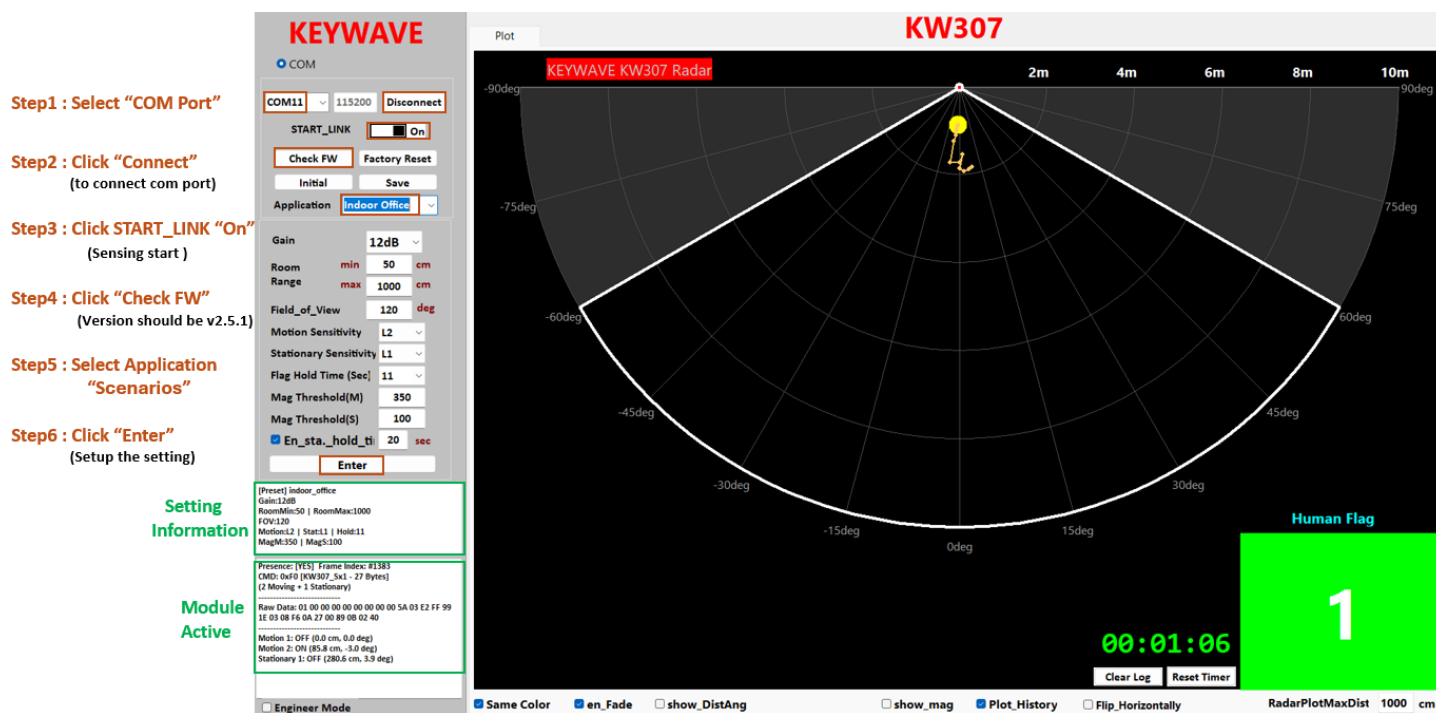

- The pre-loaded application scenarios comes with pre-defined optimal parameters, while still allowing users to fine-tune settings for specific applications.

Function	Range	Description
Application Mode	5 scenarios	Outdoor, Indoor_office, Desk, Urinal, Hand_dryer
Gain	-3db ~ +21db	Adjust radar signal strength. (+21dB: the maximum adjustable signal strength.)
Room Dist (min/max)	10 ~ 1000	Set the range size for radar detection. (cm)
FOV	0 ~ 120	Set the radar field of view. (degree)
Motion Sensitivity	L0 ~ L9	The ability to detect a moving human. L0: Most sensitive (i.e., Wave hands or shake heads) L9: Least sensitive (i.e., Walk one step)
Stationary Sensitivity	L0 ~ L9	The ability to detect subtle movement of a stationary human. L0: Most sensitive (i.e., Breath) L9: Least sensitive (i.e., Wave hands or shake heads)
Flag Hold Time	1 ~ 60	Set the hold time of Human Flag as human leaves detection area (Sec).
Mag Threshold (M)	0 ~ 1000	Signal strength above the mag threshold will be identified as valid targets for a moving human. (Environment-dependent, default: 350)

Function	Range	Description
Mag Threshold (S)	0 ~ 1000	Signal strength above the mag threshold will be identified as valid targets for a stationary human. (Environment-dependent, default: 100)
En_sta. hold time	1 ~ 60	The tracking dot on the radar plot will vanish if the target remains stationary for the configured seconds . (Sec) * It needs to tick the enable box to turn on this function.

- Configuration parameters can be saved to persistent memory; they will remain intact after a power cycle and be loaded at the next startup.

Function	Description
Factory Reset	Clicking "Factory Reset" will clear the saved NVM (Non-Volatile Memory) settings in the MCU and restore the system to its factory firmware defaults.
Save	Clicking "Save" will overwrite the MCU's stored NVM configuration with the current settings. The saved configuration remains effective even after a power outage.
Initial	Loads the configuration parameters currently stored in the MCU's NVM.

Ordering Information

Contact: Q@keywavetech.co.uk

Item	Description
Product	KW307 Human Presence Sensor Module
Part number	KW307
Module variant	KW307-P
Product name	KW307 Human Presence Sensor Module
Sensor type	24 GHz RF-based human presence sensor module
Interface	UART, GPO, programming interface pins
Supply options	3.6V ~ 5V supply input
Package / module type	PCB module with integrated antenna
Module dimensions	Approximately 23.6 mm × 21.1 mm
Pin header	2.54 mm pitch on KW307 module
Hardwar version	KW307-P-M1
Firmware version	v2.5.1
GUI revision	v3.18
Datasheet version	v2.0
Evaluation support	PC GUI configuration and monitoring tool

For the latest updates, visit our website: www.keywavetech.co.uk

Keywave Technology Limited reserves the right to make changes to its products at any time to improve reliability or manufacturability. Keywave Technology Limited does not assume any liability arising from the use of any device or circuit described herein. KEYWAVE TECHNOLOGY LIMITED MAKES NO WARRANTY HEREIN AND SPECIFICALLY DISCLAIMS ALL WARRANTIES INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS.

Patent Information The products and applications illustrated herein (including transformer construction and circuits external to the products) may be covered by one or more U.K. and foreign patents, or potentially by pending U.K. and foreign patent applications assigned to Keywave Technology Limited. A complete list of Keywave Technology Limited patents may be found at www.keywavetech.co.uk.

Life Support Policy KEYWAVE TECHNOLOGY LIMITED PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT OF KEYWAVE TECHNOLOGY LIMITED. As used herein:

1. A Life support device or system is one which, (i) is intended for surgical implant into the body, or (ii) supports or sustains life, and (iii) whose failure to perform, when properly used in accordance with instructions for use, can be reasonably expected to result in significant injury or death to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

Keywave Technology Limited, the Keywave Technology Limited logo, KW307 are trademarks of Keywave Technology Limited. Other trademarks are property of their respective companies. ©2026, Keywave Technology Limited.

www.keywavetech.co.uk