KVM-BOARD / FRISK case fit check

Actual size (1:1). Print at 100% - do not use 'fit to page'.

If the 100 mm scale at the bottom does not measure 100 mm, the print is scaled.

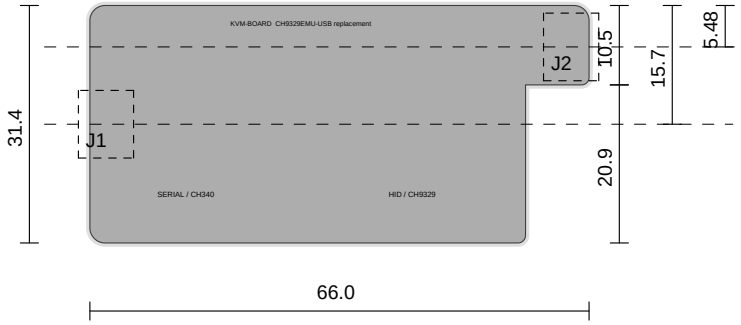

board (solid grey, 1:1)

0.5 mm case clearance (light grey)

connector centre line

100 mm scale check (mm)



HOW TO CHECK

1. Print this page at 100% / 'Actual size'.
2. Measure the 100 mm scale below with a steel rule.
3. Cut out the solid grey board and drop it into the tray.
4. The light grey band is the 0.5 mm clearance to the case wall: board 66.0 x 31.4, case inner 67.0 x 32.4.
5. The notch (8.4 x 20.9 mm) must clear the latch island; the 10.5 mm lobe leaves 0.5 mm clearance.
6. J1 (left) and J2 (right) mouths sit 1.5 / 1.28 mm past the board edge. J1 is flush with the outer wall; J2 is about 0.2 mm inside it.
7. Cut 10 x 4 mm openings through the whole wall, 1.4 to 5.1 mm above the tray floor. Chamfer the outside by about 0.3 mm, and centre the board in the tray.
8. There are no mounting holes: use tape or foam, with about 1 mm spacer under the board.

DIMENSIONS (mm)

board	66.0 x 31.4 x 1.6
case	67.0 x 32.4 inner, 1.0 wall
wall gap	0.5 all round
J1 / J2 centre	15.7 / 5.48 from the top edge
mouth	J1 1.5 / J2 1.28 past the edge
notch	8.4 x 20.9, lower-right
	upper-right lobe 10.5 mm wide

Generated by scripts/gen_print_sheet.py from kvm-board.kicad_pcb