KVM-BOARD / FRISK case fit check

Actual size (1:1). Print at 100% - do not use 'fit to page'.

If the 100 mm scale at the bottom does not measure 100 mm, the print is scaled.

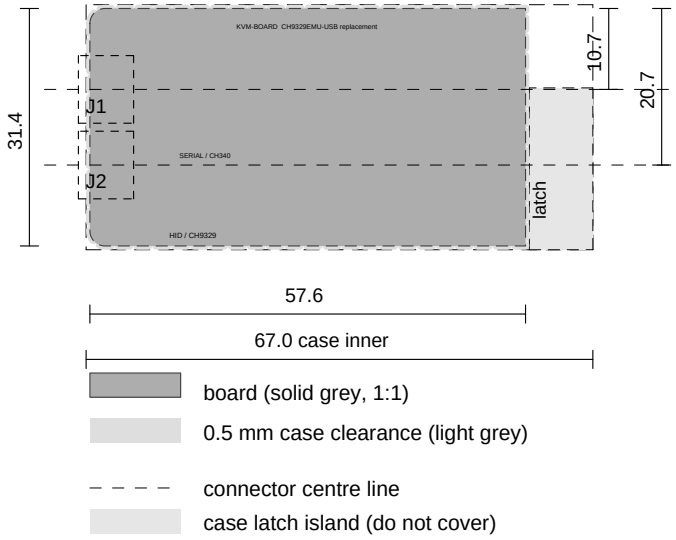

HOW TO CHECK

1. Print this page at 100% / 'Actual size'.
2. Measure the 100 mm scale below with a steel rule.
3. Cut out the solid grey board and drop it into the tray.
4. Board 57.6 x 31.4, case inner 67.0 x 32.4. The light grey band is the 0.5 mm clearance to the left, top and bottom walls.
5. The right edge is one straight cut, 0.5 mm from the latch island. The right 8.9 mm of the tray stays empty.
6. Both Type-C mouths are on the left edge at 10.7 and 20.7 mm from the top (5.0 mm either side of centre). Each mouth overhangs the edge by 1.5 mm.
7. Cut one 20 x 4 mm opening through the tray wall, centred between the two dashed centre lines. Both ports sit inside the lid notch, so the lid is not cut. Chamfer the outside by about 0.3 mm.
8. There are no mounting holes: use tape or foam, with about 1 mm spacer under the board.

DIMENSIONS (mm)

board	57.6 x 31.4 x 1.6
case	67.0 x 32.4 inner, 1.0 wall
left/top/bottom gap	0.5
right edge	0.5 from the latch island
J1 / J2 centre	10.7 / 20.7 from the top
connector pitch	10.0 (5.0 each side of centre)
mouth	1.5 past the left edge

100 mm scale check (mm)



Generated by scripts/gen_print_sheet.py from kvm-board.kicad_pcb