KVM-BOARD / FRISK case fit check

Actual size (1:1). Print at 100% - do not use 'fit to page'.

If the 100 mm scale at the bottom does not measure 100 mm, the print is scaled.

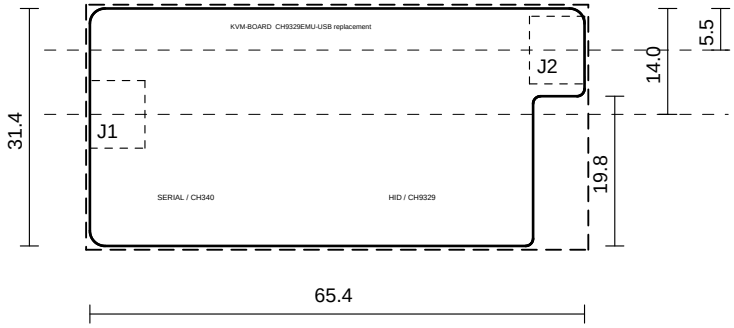

board outline (solid, 1:1)

case tray 66.4 x 32.4 (dashed)

connector centre line

100 mm scale check (mm)



HOW TO CHECK

1. Print this page at 100% / 'Actual size'.
2. Measure the 100 mm scale below with a steel rule.
3. Cut out the solid outline and drop it into the tray.
4. The dashed line is the tray: 66.4 x 32.4 mm; the board is 0.5 mm smaller on every side.
5. The notch (6.8 x 19.8 mm) must clear the latch island in the lower-right corner of the tray.
6. J1 (left) and J2 (right) mouths must sit on the case walls; cut about 10 x 4 mm openings there, 1.4 to 5.1 mm above the tray floor.
7. There are no mounting holes: use tape or foam, with about 1 mm spacer under the board.

DIMENSIONS (mm)

board	65.4 x 31.4 x 1.6
case tray	66.4 x 32.4
case outer	69 x 37, tray depth 9.8
J1 centre	14.0 from the top edge
J2 centre	5.5 from the top edge
notch	6.8 x 19.8, lower-right

Generated by scripts/gen_print_sheet.py from kvm-board.kicad_pcb