
Panoramic Timelapse Jig

v1.2 JCD Limited edition

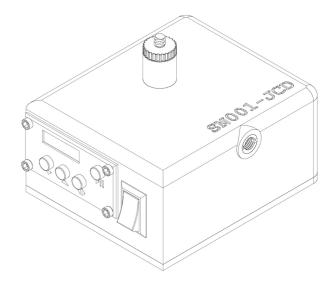

Panoramic Timelapse Jig

v1.2 JCD Limited edition



Checking the Package Contents



Panoramic Timelapse Jig




Universal 1/4" mount




User manual

Components

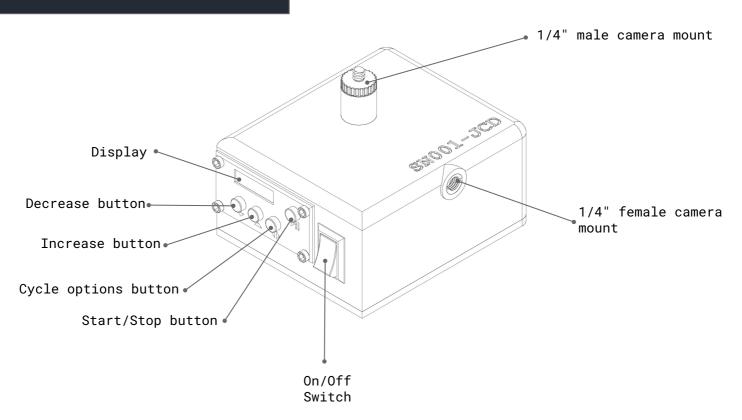

Components

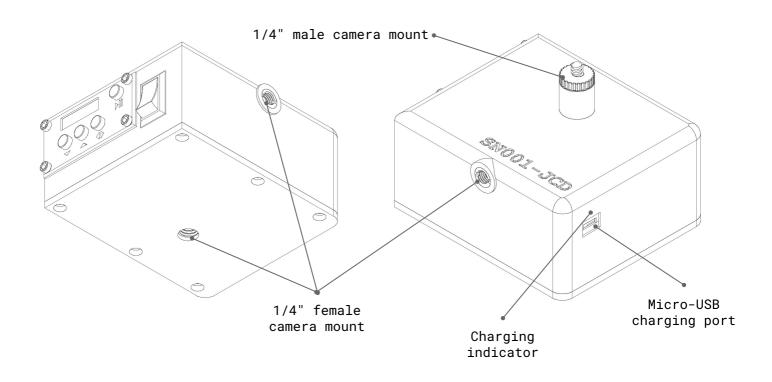

Charging

Use a standard Micro-USB cable to charge the device

Charging indicator	Status
Blinking Red	Charging
Solid Red	Fully charged
Solid Blue	In use

Display - Setup

Use the Option button ◆ to cycle between the option



TIME: Defines how long will take to move the full range of define angle. Use \(\ldots \) to increase or decrease time.



ANGLE: Defines the panoramic movement range. Use
▲/▼ to increase or decrease angle.



MODE: Defines the movement mode. Use \triangle/∇ to cycle between modes.

Modes

There are 6 movement modes:

Mode	Movement
Loop CW	Continually moves clockwise respecting the speed defined by Angle and Time.
Stop CW	Moves clockwise the defined Angle on the defined Time then stops.
Sweep CW	Starts moving clockwise the defined Angle and Time then perform the same movement counter-clockwise. Keeps moving until Start/Stop is pressed again
Loop CCW	Continually moves counter-clockwise respecting the speed defined by Angle and Time.
Stop CCW	Continually moves counter-clockwise respecting the speed defined by Angle and Time.
Sweep CCW	Starts moving counter-clockwise the defined Angle and Time then perform the same movement clockwise. Keeps sweeping until Start/Stop is pressed again.

Display - Moving

Use the Start/Stop button | | to start and stop the movement.

