

[← Go Back](#)

Hardware

WisGate Edge Pro



Tutorials

Getting Started with
WisGate Edge Gateway
Devices

Mounting WisGate Edge
Pro on a Pole

**Update WisGate Edge
Gateway Device
Firmware**

Home / Hardware / WisGate Edge Pro
**Update WisGate Edge Gateway Device
Firmware**

Update WisGate Edge Gateway Device Firmware

Tutorial to update the firmware version
of the WisGate Edge gateway device
variants

Author · Pablo Marquínez · Last
revision · 04/23/2020

ON THIS PAGE

Introduction

Goals

Hardware and Software
Needed

Requirements

Instructions

Next Steps



Introduction

This tutorial will show you how to
update the firmware of your
WisGate Edge gateway.

Goals

The goals of this tutorial are the
following:

Download the latest firmware
version for the Wisgate Edge
gateway

Install the latest firmware
version on the Wisgate Edge
gateway

Hardware and Software Needed

**WisGate Edge Pro or WisGate
Edge Lite 2**

Help

In this tutorial, we assume that you have already connected the gateway to your local network and that you can access it using your preferred method. Please refer to the [Getting Started with WisGate Edge Gateway Devices tutorial](#) for detailed guidance.

Instructions

Download the Latest Firmware Version

To update your product's firmware, click here to download the **latest firmware version**. You will receive ZIP file named

```
WisGateOS_<version>_ARDUINO_RAK.zip
```

. Unzip this file to extract the required firmware files.

The latest version of the WisGate Edge Gateway devices is 2.2.2. Once the device is updated to version 2.2.2 **it is**

 **not possible to downgrade the version of the firmware to an older version anymore**, download the release notes [here](#) to know more.

Connect to the WisGate Dashboard

There are several methods to access the WisGate dashboard (using default values):


Connecting via the Wi-Fi® Access Point of the device (Dashboard IP:

```
192.168.230.1 )
```

directly to the gateway
(Dashboard IP:

192.168.230.1)


Connect the Gateway to your LAN and obtain its DHCP IP address (You will need to discover the device's IP)

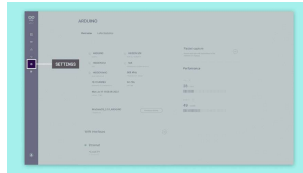

WisGate dashboard


Upload the Firmware

On the WisGate Dashboard, open the Settings page and click on the "Firmware" tab.

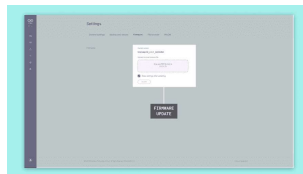

WisGate gateway
dashboard settings page

Now, drag and drop or open the browse file option to select the firmware file downloaded in the previous step. As you can see in the image below, it is in .bin.rwi format.

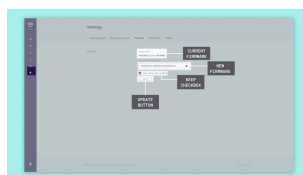


WisGate firmware file
uploaded to the gateway

With the latest firmware uploaded, now click on the "Update" button. This will flash the new firmware to your gateway.



Remember to check the box "Keep settings after updating" not to erase your gateway's settings

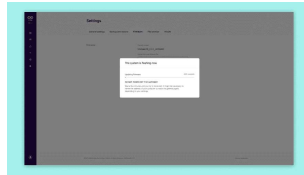

WisGate new firmware flashing process

After flashing the new firmware, your gateway will reboot itself, and it may be unavailable for a few minutes.

Next Steps

Make sure to check periodically to see if your gateway has the latest firmware to avoid bugs and security issues.

Suggest changes

The content on docs.arduino.cc is facilitated through a public [GitHub repository](https://github.com).

If you see anything wrong, you can edit

Need support?

[Help Center](#)
[Ask the Arduino Forum](#)
[Discover Arduino](#)
[Discord](#)

License

The Arduino documentation is licensed under the [Creative Commons Attribution-Share Alike 4.0](#) license.

Was this article helpful?

