

[← Go Back](#)

Hardware


[UNO Mini Limited Edition](#) ▾[Tutorials](#)[A Guide to the Arduino
UNO Mini Limited Edition](#)

[Home](#) / [Hardware](#) / [UNO Mini Limited Edition](#) / [A Guide to the Arduino UNO Mini Limited Edition](#)

A Guide to the Arduino UNO Mini Limited Edition

Learn how to set up the UNO Mini Limited Edition (LE), a miniature version of the classic UNO board. This guide includes instructions and technical information to get started with your board.

Author · [Karl Söderby](#) · Last revision · 10/07/2025

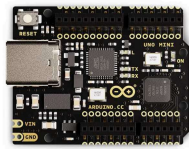

The Arduino UNO Mini
LE

The [Arduino UNO Mini LE](#) is a great little board that is very much like its dad: the good ol' UNO. It uses the same microcontroller, **ATmega328P** and the same USB-Serial Processor **ATmega16U2**, but differs in size and some other areas. Some notable differences are:

The UNO Mini LE has a USB-C® connector

The female header pins are half the pitch of the original UNO (due to its small size).

It does not feature a barrel plug connector for external

ON THIS PAGE

Goals

[Hardware & Software Needed](#)

[Setup & Installation](#) —

[Arduino IDE 1.8.X](#)

[Arduino IDE 2](#)

[Cloud Editor](#)

[The Blink Example](#)

[Technical Specifications](#) +

[Help](#)

supplies: **VIN** and **GND**. The limit for these pins are 6-21V and should not be exceeded.

In this guide, we will go through some requirements, installation instructions, ideas for projects and some technical specifications. If you want to visit the official documentation for this board, you click on the link below:

[Official documentation for Arduino UNO Mini LE..](#)

Goals

The goal with this guide is to:

- Set up and test out your UNO Mini LE board.

- Provide you with a technical overview of the board.

Hardware & Software Needed

- [Arduino UNO Mini LE](#)

- Arduino IDE ([online](#) or [offline](#) versions).

- USB-C® cable.

Setup & Installation

If you need help installing your UNO Mini LE board, you can follow any of the guides below. The board is based on the classic **AVR core**, which means the installation is identical to the

Arduino IDE 1.8.X

The UNO Mini LE can be programmed through the **Classic Arduino IDE 1.8.X**. To install your board, you can check out the guide below:

[Installing classic AVR boards.](#)

Arduino IDE 2

The UNO Mini LE can be programmed through the **Arduino IDE 2**. To install your board, you can check out the guide below:

[How to use the board manager with the Arduino IDE 2](#)

Cloud Editor

The UNO Mini LE can be programmed through the **Cloud Editor**. To get started with your board, you will only need to install a plugin, which is explained in the guide below:

[Getting started with the Cloud Editor](#)

The Blink Example


To test out your UNO Mini LE board, you can upload & run the **Blink** example. Inside any editor, navigate to:

File > Examples > 01.Basics > Blink

The code is also available from the snippet below. Upload the code to your board.

```
1 void setup() {  
2   pinMode(LED_BUILTIN,  
3 }  
4  
5 void loop() {  
6   digitalWrite(LED_BUI  
7   delay(1000);  
8   digitalWrite(LED_BUI  
9   delay(1000);  
10 }
```

When the upload is finished, the **built-in LED** will turn on and off every one second.

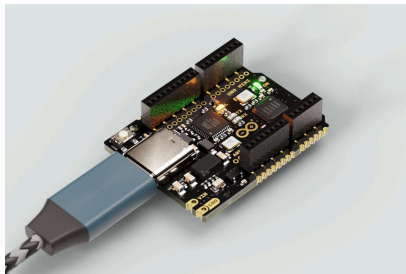

Technical Specifications

In this section, we will explore some of the technical aspects of the UNO Mini LE, such as pinout, datasheet, schematics and external power sources.

These are also available from the [official documentation for the UNO Mini LE board](#).

Pitch

The pitch (distance between pin


half the distance compared to the classic, regular sized UNO (0.1", 2.54 mm).

Dimension

Width: **26.70 mm**

Length: **34.20 mm**

Pinout

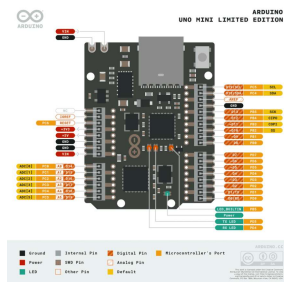

Arduino UNO Mini LE
Pinout

If you want a more detailed pinout, please refer to the

 [UNO Mini LE Resources](#)
section in the
documentation.

Datasheet


The UNO Mini LE has an in-depth datasheet that covers all of the technical aspects of the board. You can download from the resources section in the [UNO Mini LE's documentation page](#).

Schematics

The schematics for this board is available through an interactive viewer in the [resources section](#) of

External Power

Unlike the classic UNO, the UNO Mini LE does not have a barrel jack plug. Although there are two pins dedicated for external power sources, such as batteries. Look for the **VIN** and **GND** pins at the corner of the board, and connect your power source (+ to VIN, - to GND).

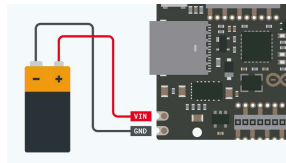

Connecting a battery to the UNO Mini LE

Please note that the recommended range is 6-21 volts. Anything outside that range can damage your board.



Suggest changes	Need support?	License
The content on docs.arduino.cc is facilitated through a public GitHub repository. If you see anything wrong, you can edit this page here .	Help Center Ask the Arduino Forum Discover Arduino Discord	The Arduino documentation is licensed under the Creative Commons Attribution-Share Alike 4.0 license.

Was this article helpful?

