

[← Go Back](#)

Hardware

[Nano 33 BLE Sense](#)[Community Projects](#)[Edge Impulse with the
Nano 33 BLE Sense](#)[Gesture Recognition with
the Nano 33 BLE Sense](#)[Get Started With Machine
Learning on Arduino](#)[Getting Started with
OpenMV](#)[Reading Temperature &
Humidity on Nano 33 BLE
Sense Rev2](#)[Connecting Two Nano 33
BLE Sense Boards Through
I2C](#)[Accessing Accelerometer
Data on Nano 33 BLE
Sense Rev2](#)[Accessing Gyroscope Data
on Nano 33 BLE Sense Rev2](#)[Accessing Magnetometer
Data on Nano 33 BLE Sense
Rev2](#)[Debugging with Lauterbach
TRACE32 GDB Front-End
Debugger](#)[Controlling the On-Board
RGB LED with Microphone](#)[Proximity Detection with
the Nano 33 BLE Sense](#)[Detecting Colors with the
Nano 33 BLE Sense Board](#)[Voice Commands With The
Arduino Speech
Recognition Engine](#)[Connecting Two Nano 33
BLE Sense Boards Through](#)

[Home](#) / [Hardware](#) / [Nano 33 BLE
Sense Rev2](#) / [Accessing
Accelerometer Data on Nano 33
BLE Sense Rev2](#)

Accessing Accelerometer Data on Nano 33 BLE Sense Rev2

Learn how to measure the relative position of the Nano 33 BLE Sense Rev2 through the BMI270 and BMM150 IMU system.

Author · [Nefeli](#) · Last
· [Alushi](#) · revision · 10/31/2025

This tutorial will focus on the IMU system with the **BMI270** and **BMM150** modules on the Arduino Nano 33 BLE Sense Rev2, in order to measure the relative position of the board. This will be achieved by utilizing the values of the accelerometer's axes and later print the return values through the Arduino IDE Serial Monitor.

Goals

The goals of this project are:

Understand how the IMU system on the Arduino Nano 33 BLE Sense Rev2 works.

Use the [BMI270_BMM150 library](#).

Read the raw data of the accelerometer sensor.

ON THIS PAGE

Goals

[Hardware & Software Needed](#)

[The IMU System on Arduino
Nano 33 BLE Sense Rev2](#) +

[Creating the Program](#)

[Testing It Out](#) +

[Conclusion](#)

[Help](#)

Print out live data through the Serial Monitor.


Hardware & Software Needed

This project uses no external sensors or components.

In this tutorial we will use the Arduino Create Cloud Editor to program the board.

The IMU System on Arduino Nano 33 BLE Sense Rev2

IMU stands for: inertial measurement unit. It is an electronic device that measures and reports a body's specific force, angular rate and the orientation of the body, using a combination of accelerometers, gyroscopes, and oftentimes magnetometers. In this tutorial we will learn about the IMU system that is included in the Arduino Nano 33 BLE Sense Rev2 Board.

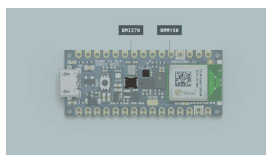

The Arduino Nano 33 BLE Sense Rev2 IMU system.

The IMU system on the Arduino Nano 33 BLE Sense Rev2 is a combination of two modules, the 6-axis BMI270, and the 3-axis BMM150, that together add up to a combined 9-axis IMU system that can measure acceleration, as well as rotation and magnetic fields all in 3D space.

The BMI270_BMM150 Library

The Arduino BMI270_BMM150 library allows us to use the Arduino Nano 33 BLE Rev2 IMU system without having to go into complicated programming. The library takes care of the sensor initialization and sets its values as follows:

Accelerometer range is set at $[-4, +4]g$ ± 0.122 mg.

Gyroscope range is set at $[-2000, +2000]$ dps ± 70 mdps.

Magnetometer range is set at $[-400, +400]$ uT ± 0.014 uT.

Accelerometer Output data rate is fixed at 104 Hz.


Gyroscope Output data rate is fixed at 104 Hz.

Magnetometer Output data rate is fixed at 20 Hz.

If you want to read more about the sensor modules that make up the IMU system, find the datasheet for the [BMI270](#) and the [BMM150](#) here.

Accelerometer

An accelerometer is an electromechanical device used to measure acceleration forces. Such forces may be static, like the continuous force of gravity or, as is the case with many mobile devices, dynamic to sense movement or vibrations.




How the accelerometer works.

In this example, we will use the accelerometer as a "level" that will provide information about the position of the board. With this application we will be able to read what the relative position of the board is as well as the degrees, by tilting the board up, down, left or right.

Creating the Program

1. Setting up


Let's start by opening the Arduino Cloud Editor, click on the **Libraries** tab and search for the **BMI270_BMM150** library. Then in **> Examples**, open the **SimpleAccelerometer** sketch and once it opens, rename it as **Accelerometer**.

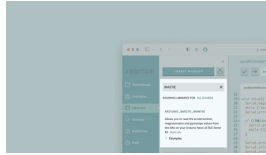

Finding the library in the Cloud Editor.

2. Connecting the board

Now, connect the Arduino Nano 33 BLE Sense Rev2 to the computer and make sure that the Cloud Editor recognizes it, if so, the board and port should appear as shown in the image below. If they don't appear, follow the [instructions](#) to install the plugin that will allow the Editor to recognize your board.

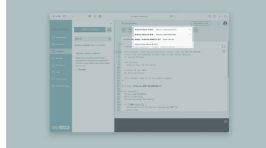

Selecting the board.

3. Printing the relative position

Now we will need to modify the code on the example, in order to print the relative position of the board as we move it in different angles.

Let's start by initializing the the x, y, z axes as `float` data types, and the

```
int degreesX = 0;
```

 and

```
int degreesY = 0;
```

 variables

before the `setup()`.

In the `setup()` we should **remove** the following lines of

```
1 Serial.println();  
2 Serial.println("Accele  
3 Serial.println("X\tY\t
```

Since the raw values of the three axes will not be required, we can remove the lines which will print these. Similarly, we should **remove** the following lines from the `loop()`:

```
1 Serial.print(x);  
2 Serial.print('\t');  
3 Serial.print(y);  
4 Serial.print('\t');  
5 Serial.println(z);
```

Instead, in the `loop()` we tell the sensor to begin reading the values for the three axes. In this example we will not be using the readings from the Z axis as it is not required for this application to function, therefore you could remove it.

After the

`IMU.readAcceleration`

initialization, we add four `if` statements for the board's different positions. The statements will calculate the direction in which the board will be tilting towards, as well as provide the axe's degree values.

```
1  if(x > 0.1){
2      x = 100*x;
3      degreesX = map(>
4      Serial.print("T:
5      Serial.print(deg
6      Serial.println('
7      }
8  if(x < -0.1){
9      x = 100*x;
10     degreesX = map(>
11     Serial.print("T:
12     Serial.print(deg
13     Serial.println('
14     }
15  if(y > 0.1){
16      y = 100*y;
17      degreesY = map(>
18      Serial.print("T:
19      Serial.print(deg
20      Serial.println('
21      }
22  if(y < -0.1){
23      y = 100*y;
24      degreesY = map(>
25      Serial.print("T:
26      Serial.print(deg
27      Serial.println('
28      }
```

Lastly, we `Serial.print` the results value and add a `delay(1000);`.

Note: For the following code to properly work, the board's facing direction and inclination during the initialization of the code, need to be specific. More information will be shared on the "testing it out" section.

4. Complete code

If you choose to skip the code building section, the complete code can be found below:

```
1  /*
2   Arduino BMI270_BMM
3
4   This example reads
5   sensor and continu
6   or Serial Plotter
7
8   The circuit:
9   - Arduino Nano 33
10
11   created 10 Jul 20
12   by Riccardo Rizzo
13
14   This example code
15  */
16
17  #include "Arduino_BI
18
19  float x, y, z;
20  int degreesX = 0;
21  int degreesY = 0;
22
23  void setup() {
24    Serial.begin(9600);
25    while (!Serial);
26    Serial.println("St
27
28    if (!IMU.begin())
```

Testing It Out

In order to get a correct reading of the board data, before uploading the sketch to the board hold the board in your hand, from the side of the USB port. The board should be facing up and "pointing" away from you. The image below illustrates the board's position and how it works:




Interacting with the X and Y axes.

Now, you can verify and upload the sketch to the board and open the Monitor from the menu on the left.

If you tilt the board upwards, downwards, right or left, you will see the results printing every second according to the direction of your movement!

Here is a screenshot of the sketch returning these values:

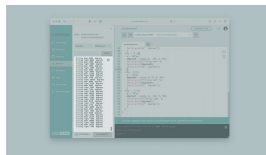

Printing out the "tilt
condition" of the
board.

Troubleshoot

Sometimes errors occur, if the code is not working there are some common issues we can troubleshoot:

- Missing a bracket or a semicolon.

- Arduino board connected to the wrong port.

- Accidental interruption of cable connection.

- The initial position of the board is not as instructed. In this case you can refresh the page and try again.

In this simple tutorial we learned what an IMU sensor module is, how to use the **BMI270_BMM150** library, and how to use an Arduino Nano 33 BLE Sense Rev2 to get data. Furthermore, we utilized the 3-axis accelerometer sensor, in order to measure and print out the degrees and relative position of the board.

Suggest changes

The content on docs.arduino.cc is facilitated through a public GitHub repository. If you see anything wrong, you can edit this page [here](#).

Need support?

[Help Center](#)
[Ask the Arduino Forum](#)
[Discover Arduino](#)
[Discord](#)

License

The Arduino documentation is licensed under the [Creative Commons Attribution-Share Alike 4.0](#) license.

Was this article helpful?

