

[← Go Back](#)

Hardware

WisGate Edge Pro



Tutorials

[Getting Started with
WisGate Edge Gateway
Devices](#)[Mounting WisGate Edge
Pro on a Pole](#)[Update WisGate Edge
Gateway Device Firmware](#)[Home](#) / [Hardware](#) / [WisGate Edge Pro](#) /[Getting Started with WisGate Edge
Gateway Devices](#)

ON THIS PAGE

Introduction

[Goals](#)[Hardware & Software Needed](#)[What's Included in the Box](#)[Instructions](#) +[Next Step](#)[Conclusion](#)[Trademark Acknowledgments](#)

Getting Started with WisGate Edge Gateway Devices

Tutorial for setting up the WisGate Edge
gateway device variants

Author · Pablo Marquínez · Last
revision · 02/28/2025

Introduction

This tutorial will show you how to get started with your **WisGate Edge** gateway and how it can be utilized by itself. It will showcase the connection to **The Things Network™**. We will go through the local and online setup.

Goals

The goals of this article are:

- Setup the hardware
- Connect locally to the Gateway
- Open the dashboard panel
- Create a Gateway on The Things Network™(TTN)
- Setup the credentials on the device from TTN
- Test the Gateway (optional)

Hardware & Software Needed

[Help](#)

WisGate Edge Pro or WisGate Edge Lite 2

Ethernet Cable (x2)

What's Included in the Box

The package includes:

WisGate Edge Gateway
(supports LoRa® technology)

PoE Injector (with its power cable, IEC)

Pole mounting mechanical pieces

Instructions

Setup the Hardware

The device can be supplied from 37 to 57 VDC with a PoE or with a Solar panel (12 VDC). You can supply it through the Solar Panel cable (12V cable) or with an ethernet cable with PoE.

In case of the PoE, you can use the PoE Injector included with the kit by connecting your LAN to the LAN port and the PoE port to the Gateway.

Connect to the WisGate Dashboard

There are different ways to access the WisGate:


Connecting to its Wi-Fi® Access Point (dashboard IP: 192.168.230.1)

(dashboard IP:
192.168.230.1)

Connecting your Gateway to
your LAN, getting its DHCP IP
(You will need to discover the
device's IP)


Once you got the IP of your Gateway
you can type it in your browser to
access the dashboard.

The first time you attempt to login it
will require you to set up the
password of your dashboard, set
your password, click set password
and save it.

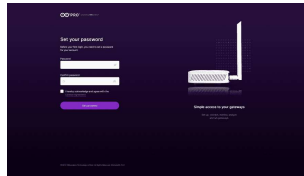

Web dashboard - first
login

Once the password is set, you will
now be able to see and interact with
the dashboard panel.

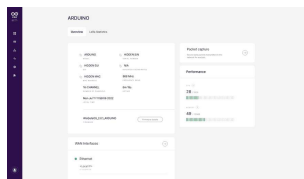

WisGate dashboard

The Wi-Fi Access Point that is
running, by default it is open,
we recommend you to set a
password with WPA2-PSK

i encryption to secure your
device, you can do that by
accessing the Wi-Fi settings
going to network > LAN > Wi-Fi
> Settings

Create the Gateway on TTN Dashboard

Go to


<https://cloud.thethings.network>

and pick your region's cluster, in our case we pick Europe.




TTN zone picker

Now chose the gateway button.

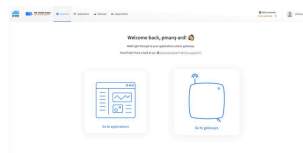


TTN device type selection

It will open the Gateways page, click the create gateway button

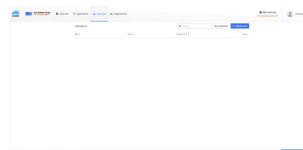

TTN Gateways dashboard

Fill the required forms.

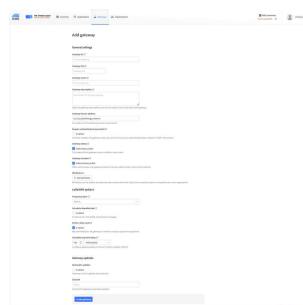

TTN Gateway creation

Fill the information

Gateway ID: unique ID for your gateway inside the things network platform.

Gateway EUI: The EUI of your WisGate Gateway (Get it on the overview page on the WisGate dashboard)

Gateway name: Name of the Gateway on your TTN's profile


Gateway Server Address: the Address of the LoRa®-based network (format:

`wss://<cloudServer>`)

LoRa® network options,
Frequency plan: select the recommended plan or the one that fits your project

Click the "Create gateway" button at the end of the page.


You will see the new gateway added to your list.

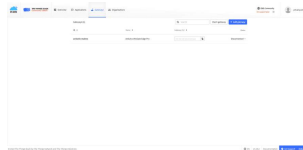

TTN Gateway created

Setup Your Gateway with the TTN Credentials

Access to the Network configuration by clicking on its button.

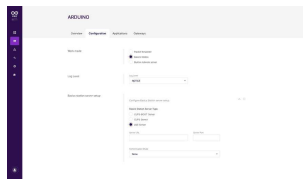

WisGate web dashboard

On the configuration tab select the work mode to "Basic station"



WisGate basic station
configuration

Then at the "Basic station server
setup" section pick the "LNS Server"
as a type.

Fill the Server URL with


```
wss://eu1.cloud.thethings.netw  
ork
```

(for EU) and the port **8887**

The authentication Mode "TLS
Server & Client token
Authentication"


Choose the file with the certificates
that you can download from [here](#)

And the client token that you can
get inside the TTN Gateway's
dashboard panel.

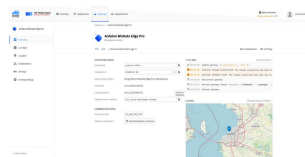

Wisgate gateway
configuration with TTN
info

Click the API key on the top right
and create a new one.

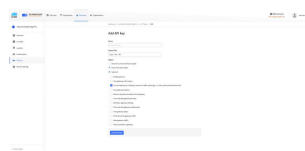

Wisgate dashboard using
TTN's API key

Gateway Server for traffic exchange"

Then paste it on the WisGate dashboard form as

Authorization: <YOUR_API_KEY>

Click "Save changes".

After finishing the setup you could see the Gateway status being "Connected"



TTN dashboard showing the gateway online

Test (Optional)

Follow this tutorial to connect to the GateWay [Connecting MKR WAN 1300 to The Things Network \(TTN\)](#)

Next Step

Set up the gateway to be a Network Server and MQTT client to connect directly to the Arduino Cloud.

Conclusion

In this tutorial you learned how to setup the LoRa® technology-based Gateway.

Trademark

Acknowledgments

LoRa® is a registered trademark of Semtech Corporation.

**Suggest
changes**

The content on docs.arduino.cc is facilitated through a public GitHub repository. If you see anything wrong, you can edit this page [here](#).

**Need
support?**

[Help Center](#)
[Ask the Arduino Forum](#)
[Discover Arduino](#)
[Discord](#)

License

The Arduino documentation is licensed under the [Creative Commons Attribution-Share Alike 4.0](#) license.

Was this article helpful?