

**Honeywell**

---

**Global User Station**

# **Display Migrator User's Guide**

**Release 120**

**GU28120**

**7/98**

**TotalPlant**

# Notices and Trademarks

Copyright 1998 by Honeywell Inc.

July 20, 1998

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

Honeywell and **TotalPlant**, and TDC 3000 are U.S. registered trademarks of Honeywell Inc.

Other brand or product names are trademarks of their respective owners.

Honeywell Inc.  
Industrial Automation and Control  
Automation College  
2820 West Kelton Lane  
Phoenix, AZ 85053-3028  
**1-800-852-3211**

## About This Document

This document provides you with the steps required to execute the GUS Display Migrator from a Global User Station and test the displays to ensure they function as they did prior to the migration.

This document is written for those who are trained and/or experienced with

- MS Windows environment,
- Location and file type of existing GUS displays,
- operation and navigation of a Global User Station, and
- operation of the TPS Command Processor.

## Revision Notes

The following list provides notes concerning all revisions of this document.

| DocID   | RevID | Date | Notes           |
|---------|-------|------|-----------------|
| GU28120 | 1.0   | 7/98 | General release |

## About This Document

---

## References

### Honeywell documents

The following list identifies all Honeywell documents that may be sources of reference for the material discussed in this publication.

| Document Name                                    | Document Number | Binder Number |
|--------------------------------------------------|-----------------|---------------|
| Display Translator User's Guide                  | GU26100C        |               |
| Display Builder User's Guide                     | GU23120         |               |
| Display Scripting User's Guide                   | GU24120         |               |
| TPS System Administration Guide                  | TP06100B        |               |
| File Transfer Installation and Use - GUS Version | HI-FLTRN1       |               |
| Picture Editor Reference Manual                  | SW09-550        | TDC 3032-2    |
| Picture Editor Form Instructions                 | SW12-550        | TDC 3032-3    |
| Picture Editor Data Entry                        | SW11-550        | TDC 3032-3    |
| Actors Manual                                    | SW09-555        | TDC 3032-2    |

## Contacts

The following list identifies important contacts within Honeywell.

| Organization                                                                                             | Telephone                                                                           | Address                                                                                                                            |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Honeywell IAC Internet Web Site: <a href="http://www.iac.honeywell.com">http://www.iac.honeywell.com</a> |                                                                                     |                                                                                                                                    |
| Technical Assistance Center                                                                              | USA<br>1-800-822-7673<br><br>Arizona<br>(602) 313-5558<br><br>Fax<br>(602) 313-4842 | Honeywell Inc.<br>Industrial Automation and Control<br>Mail Drop 1S1<br>16404 North Black Canyon Highway<br>Phoenix, AZ 85053-3028 |

# Contents

|                                                               |           |
|---------------------------------------------------------------|-----------|
| <b>1. INTRODUCTION .....</b>                                  | <b>7</b>  |
| <b>1.1 Overview .....</b>                                     | <b>7</b>  |
| Welcome .....                                                 | 7         |
| <b>1.2 What You Will Have When You're Done .....</b>          | <b>7</b>  |
| Display migration.....                                        | 7         |
| <b>1.3 Summary of Steps.....</b>                              | <b>7</b>  |
| Big picture of what you'll be doing .....                     | 7         |
| <b>2. TO RUN THE GUS DISPLAY MIGRATOR .....</b>               | <b>9</b>  |
| <b>2.1 Introduction .....</b>                                 | <b>9</b>  |
| In preparation to run GUS Display Migrator .....              | 9         |
| <b>2.2 Two Ways to Accomplish the Display Migration .....</b> | <b>10</b> |
| Choose one of two ways .....                                  | 10        |
| Directory-by-directory display migration .....                | 10        |
| File-by-file display migration.....                           | 11        |
| Make an output directory.....                                 | 11        |
| Note your file paths .....                                    | 11        |
| <b>2.3 GUS Migrator Display .....</b>                         | <b>12</b> |
| Scope .....                                                   | 12        |
| Illustration.....                                             | 12        |
| <b>2.4 Running the GUS Display Migrator .....</b>             | <b>13</b> |
| Steps to run Display Migrator .....                           | 13        |
| <b>3. BATCH VALIDATE AND SAVE .PCT FILES.....</b>             | <b>19</b> |
| <b>3.1 Validation and Save Procedure .....</b>                | <b>19</b> |
| Steps needed to validate, then save new .PCT files .....      | 19        |
| What is it validating? .....                                  | 19        |
| What is not validated? .....                                  | 19        |
| When is validation required? .....                            | 19        |
| GUS Validator Display.....                                    | 20        |
| Validation messages .....                                     | 21        |
| Validation Log Error List - data description.....             | 21        |
| <b>3.2 Running the GUS Display Validator .....</b>            | <b>22</b> |
| Steps to run Display Validator .....                          | 22        |

## Contents

---

|                                                                    |           |
|--------------------------------------------------------------------|-----------|
| <b>4. VERIFY CORRECT OPERATION OF DISPLAYS .....</b>               | <b>27</b> |
| <b>4.1 Steps to Take .....</b>                                     | <b>27</b> |
| Run display .....                                                  | 27        |
| <b>5. EXAMPLE MIGRATION TO A NEW RELEASE .....</b>                 | <b>29</b> |
| <b>5.1 Overview .....</b>                                          | <b>29</b> |
| <b>5.2 Site Example .....</b>                                      | <b>29</b> |
| General GUS Configuration .....                                    | 29        |
| Site Configuration .....                                           | 30        |
| Common Operating Procedure Before Receiving New GUS Software ..... | 31        |
| Common Operating Procedure After Receiving New GUS Software .....  | 31        |
| <b>INDEX .....</b>                                                 | <b>35</b> |

## Tables

|           |                                 |    |
|-----------|---------------------------------|----|
| Table 2-1 | Running the GUS Migrator .....  | 13 |
| Table 3-1 | Running the GUS Validator ..... | 22 |

## Figures

|            |                                    |    |
|------------|------------------------------------|----|
| Figure 2-1 | GUS Migrator Dialog Display .....  | 12 |
| Figure 3-1 | GUS Validator Dialog Display ..... | 20 |
| Figure 5-1 | Generic Plant Site Layout .....    | 30 |

# 1. Introduction

## 1.1 Overview

### Welcome

The Global User Station (GUS) Display Migrator is a tool that runs on a Honeywell **TotalPlant** Solution (TPS) System Global User Station. It is used when you are migrating to new GUS software to convert display files from a previous GUS Display Builder version to the new version.

GUS display files (.pct files) that were used with an older version of GUS Display Builder are not compatible with the new GUS Display Builder and GUS software you are installing. Therefore, you must run your previous version GUS displays through the GUS Display Migrator, which will convert those files into compatible files.

## 1.2 What You Will Have When You're Done

### Display migration

By using the GUS Display Migrator, the previous version of GUS display files (.pct files) are converted into display files usable by the new GUS software and validated.

## 1.3 Summary of Steps

### Big picture of what you'll be doing

The general steps you will go through to complete the GUS display migration are to

- install Display Migrator software associated with your previous version of GUS Display Builder (from the new CD-ROM),
- run the Migrator with concurrent or separate validation,
- validate new .pct file and compile script, and
- run the converted displays to verify correct operation.



## 2. To Run the GUS Display Migrator

### 2.1 Introduction

#### In preparation to run GUS Display Migrator

Prior to running GUS Display Migrator, be sure you know and/or have written down the path (directory/file pathnames) to your existing display files. For good file management now and in the future, the directory name containing your .pct files should reflect the revision of GUS Display Builder under which those files were created. For further details, see the ATTENTION bulletin below.

You will be creating a new directory to contain the newly converted .pct files. That directory should also reflect the revision of GUS Display Builder in which those files were created.

---

#### Attention

To determine in which version a display was built, try to open the display in the current release. A dialog box indicating the release in which the display was built will pop up.

Incompatible file format (0x.....)

Input file was built by using Builder Version x.x.xx (pictures\_xx.x)

File requires migration to the current version of Display Builder

If not, call the TAC for assistance in determining the version that the display was built in.

Software migrations can be made much easier to manage if you set up a file system on your GUS that defines which version was used.

This could be done by creating a directory with a name that includes the version number of the GUS Display Builder that was used to create the .pct files (example: name the directory GPB10019, for GUS Display Builder version 100.0.19). Place all your current .pct files in that directory.

When you are ready to run the GUS Display Migrator, first create the output directory, giving it a name that reflects the new GUS Display Builder software version. Then run GUS Display Migrator, naming that directory as your receiving (output) directory.

---

## 2.2 Two Ways to Accomplish the Display Migration

### Choose one of two ways

Running the GUS Display Migrator can be performed in one of two ways, determined by your existing file structure (how the files are organized into directories and files on your GUS hard drive), and how you want the file structure of your newly migrated display files to be. These two ways are called:

- File-by-file, and
- Directory-by-directory.

### Directory-by-directory display migration

Directory-by-directory can be used when all of your graphics files to be migrated are in one directory and are being written to one directory after the display migration. This method selects for migration all files within a specified “input” directory in GUS, and places the converted files in a specified “output” directory on the GUS.

Restrictions:      No wild cards allowed

Do not attempt to migrate more than 25 files at a time. (Because of this restriction, you may have to move .pct files into different directories to reduce the number of .pct files in the directory you are about to migrate to 25 or less.)

If .pct files with the same name already exist in the output directory, they will be overwritten, without a warning message.

Input directories and output directories cannot have exactly the same names.

---

### Attention

All files should be display builder files. If a non-display file (Ex:ffilewdl) is encountered, the migration will pause with an error dialog “File Format Not Valid” and user intervention is required to continue with the migration process.

---

---

### Attention

The GUS Display Migrator will accept any file type contained in the input file name or directory (doesn't have to be a .pct). If it detects a file type other than .pct, it will output a message stating, “Wrong File Format.” Those non-display files will not be migrated.

---

### **File-by-file display migration**

If File-by-file is chosen, you select individual file names to be migrated, one at a time. It will usually take more time to migrate all of your files using this method, so typically you would only use File-by-file if your graphics files are in more than one directory, or when you only have one or two .pct files to migrate.

Restrictions:      No wild cards allowed

If .pct files with the same name already exist in the output directory, they will be overwritten without a warning message.

Input directories and output directories cannot have the exact same names.

---

### **Attention**

The GUS Display Migrator will accept any file type contained in the input file name or directory (doesn't have to be a .pct). If it detects a file type other than .pct, it will output a message stating, "Wrong File Format." Those non-display files will not be migrated.

---

### **Make an output directory**

You should create a directory to receive the newly migrated files at this time, giving it a name that reflects the software version of the GUS Display Builder to which you are migrating. (Example: GPB10019 for GUS Display Builder software version 100.0.19)

### **Note your file paths**

Prior to running the GUS Display Migrator, note the path(s) to your .pct (input) files and decide where you are going to put your converted .pct (output) files. You will enter these paths when entering the Migrator command.

## 2.3 GUS Migrator Display

### Scope

All migrations take place using the GUS Migrator Dialog Display. The display has the option of validating the GUS display file as the migration takes place.

### Illustration

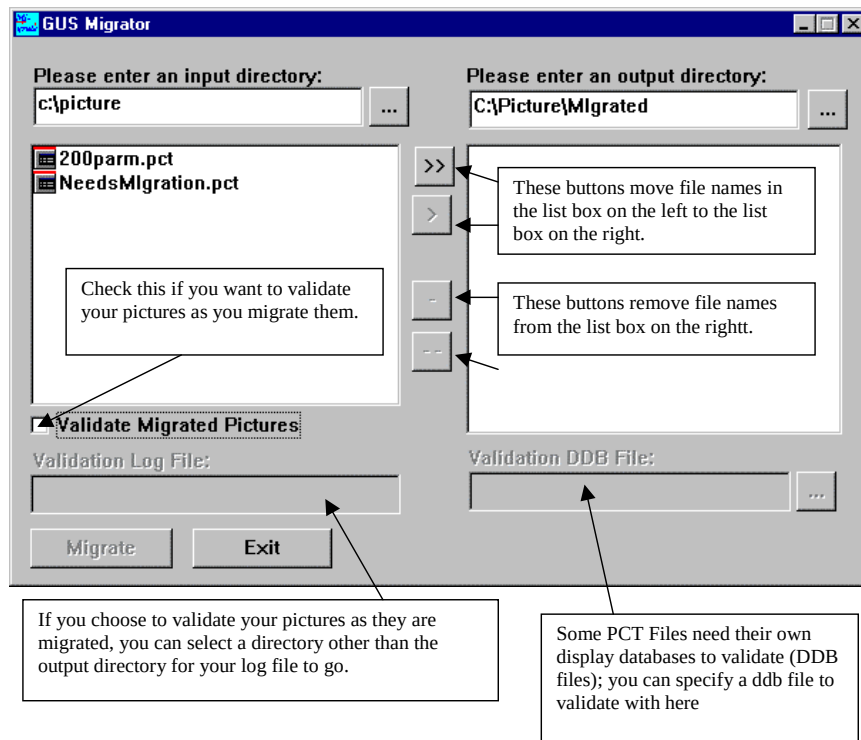


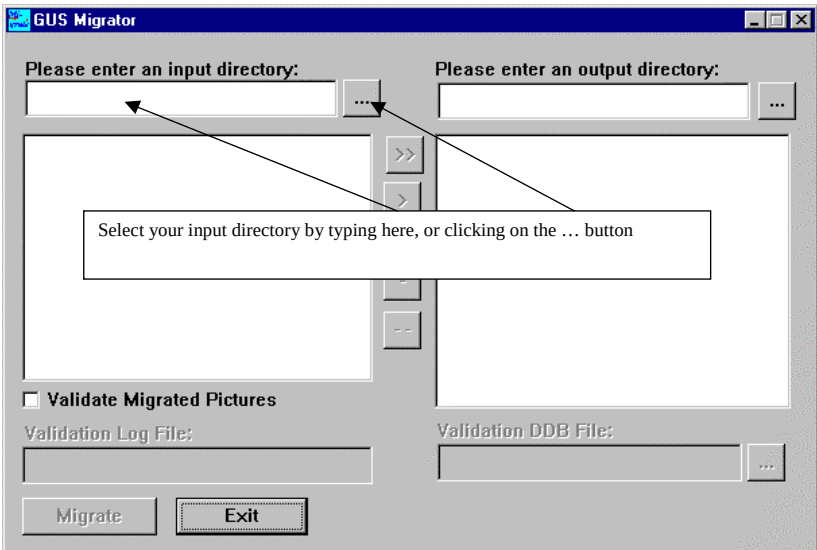
Figure 2-1 GUS Migrator Dialog Display

## 2.4 Running the GUS Display Migrator

### Steps to run Display Migrator

Follow the steps below to execute the GUS Display Migrator program.

**Table 2-1 Running the GUS Migrator**

| Step | Action                                                                                                                                                                                                                                                      |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Install the GUS Display Migrator software associated with your <b>previous version</b> of GUS Display Builder. It can be found on the new version of the CD-ROM.</p> <p>Refer to the <i>TPS System Administration Guide</i> for the step to do this.</p> |
| 2    | <p>Select the START button on the tool bar.</p> <p>Select PROGRAMS, HONEYWELL TPS, GUS Display Migrator.</p>                                                                                                                                                |
| 3    | <p>The Migrator Display appears. Select your input directory.</p>                                                                                                        |

**Table 2-1 Running the GUS Migrator**

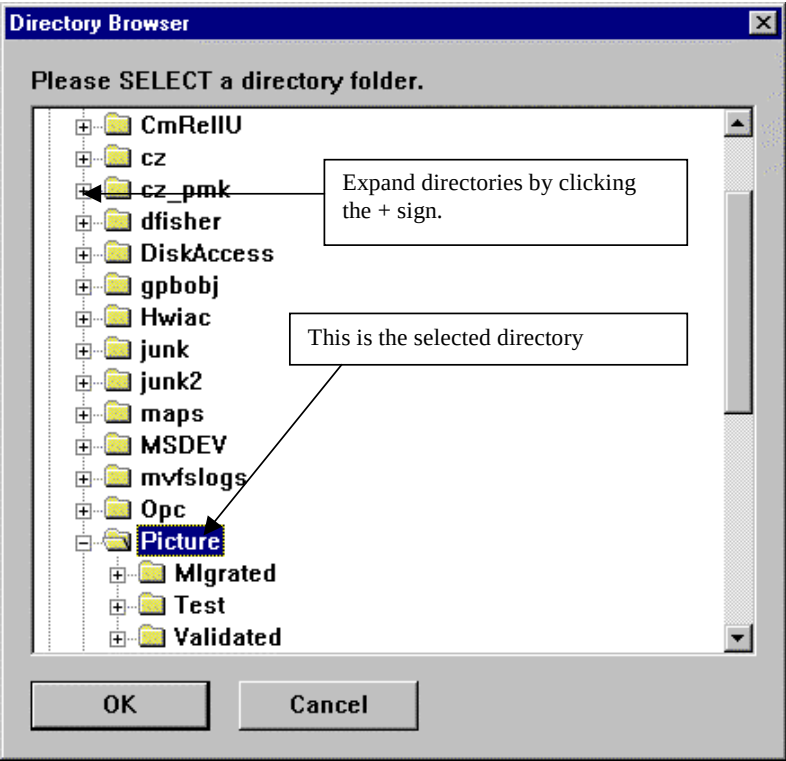
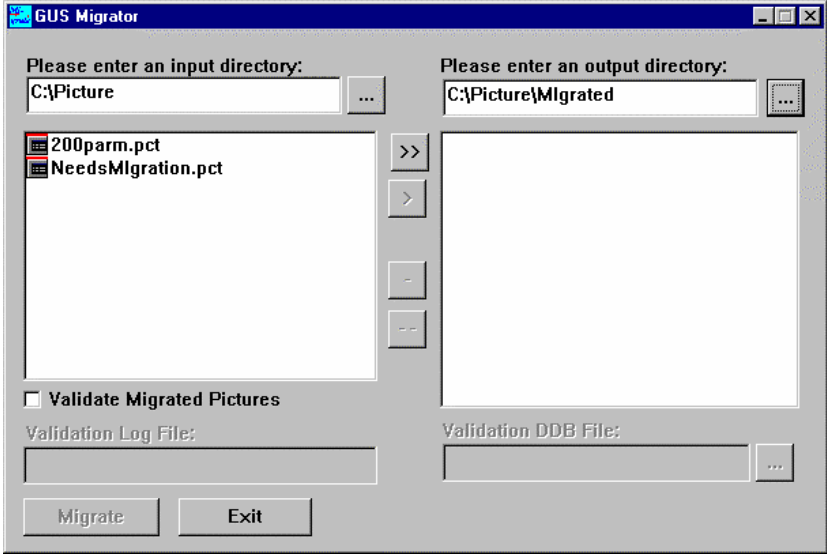
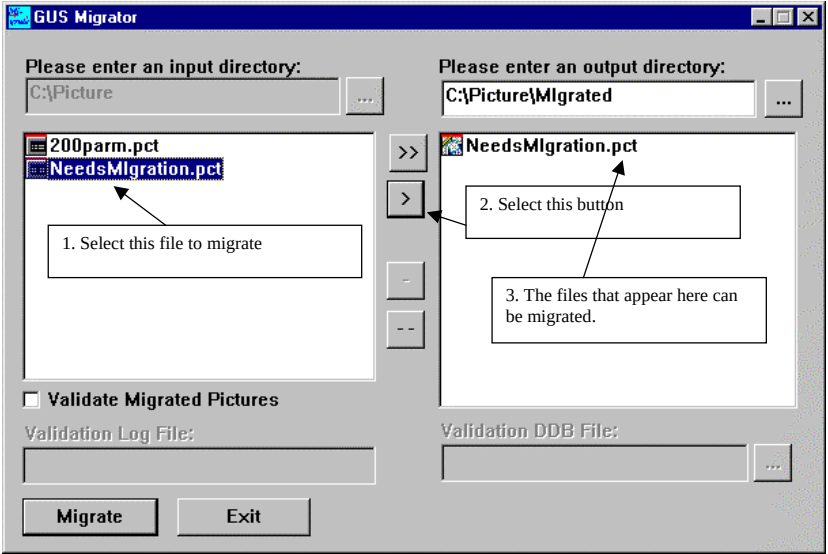
| Step | Action                                                                                                                                                                                            |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4    | <p>If you select the ... button shown in Step 3, the directory browser appears. Now select the directory.</p>  |

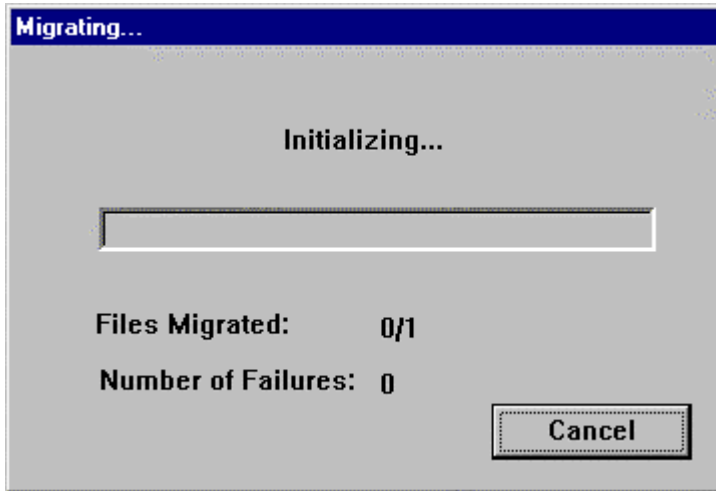
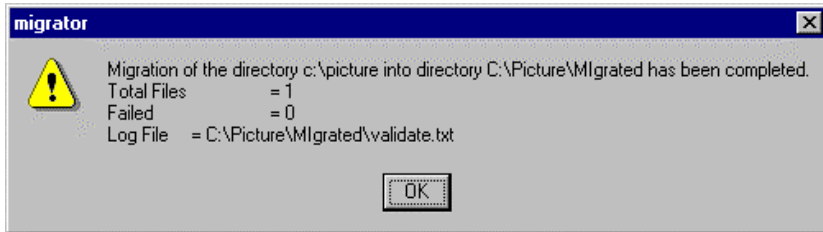
Table 2-1      Running the GUS Migrator

| Step | Action                                                                                                                                                                                                                                                                                                         |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5    | <div><p>Repeat the procedure (Steps 3 and 4) for the output directory. When you are finished you should have something like this:</p><p>The output directory cannot be the same directory as the input directory.</p></div> |

**Table 2-1 Running the GUS Migrator**

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6    | <p>Now it is time to select which files you want to migrate. The files that will be migrated will have to appear on the right-hand list. To do this, select the files on the left-hand list. Click the &gt; button to move only the selected files in the left-hand list to the list on the right. Hit the &gt;&gt; button to move all the files on the left-hand list to the right. Here is an example:</p>  <p>By holding down the shift key multiple files can be selected.</p>                                                                                                                                                                                            |
| 7    | <p>Once you have selected the files to migrate, you can optionally tell the Migrator to validate each picture as it is migrated using the Validate Migrated Pictures check box. If you choose this option, specify a Validation Log File name in the Validation Log File edit box. If an already existing file is specified, the log entries will be appended to that file.</p> <p>If a DDB file is required to validate the files, enter the file path name (directory +file) in the Validation DDB File edit box. If this is omitted, it will default to a file named "validate.txt."</p> <p>Only one file can be specified for all of the files in the list. If there is more than one .DDB file required, the files will have to be migrated separately.</p> |

**Table 2-1 Running the GUS Migrator**

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8    | <p>Now you are ready to migrate the picture. Simply click the migrate button in the lower left-hand corner. You will get the following progress dialog box showing you the status of the validation process.:</p>  <p>If you hit the cancel button on this dialog box, the process will stop at the end of processing the file already started. Once the migration process is complete, you will see the following message:</p>  <p>This tells you the number of files migrated and the number of failures.</p> <p>If you have files that failed to migrate, you can look in the log file for details on why it failed.</p> |
| 9    | Exit the Migrator.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |



## 3. Batch Validate and Save .PCT Files

### 3.1 Validation and Save Procedure

#### Steps needed to validate, then save new .PCT files

Follow the steps below to validate and save each newly validated .pct file. Note that if the validation is unsuccessful, the save will not occur. If further details are needed regarding the validation process, refer to the *Display Builder User's Guide* (GU23200).

---

#### Attention

The validation procedure compiles the script and verifies the LCN references are properly defined on the TPS system to which your GUS is connected.

Therefore, the validate function must be run before a display can run.

---

#### What is it validating?

The display validate function can be run either offline or online. It

- compiles all scripts (object scripts, embedded display scripts, display scripts, etc.),
- checks syntax of the variable expressions on the object's dynamics (e.g., bar, rotate), and
- if the validation is performed online, validates external data references in all scripts, and validates expressions on the dynamics of each object.

#### What is not validated?

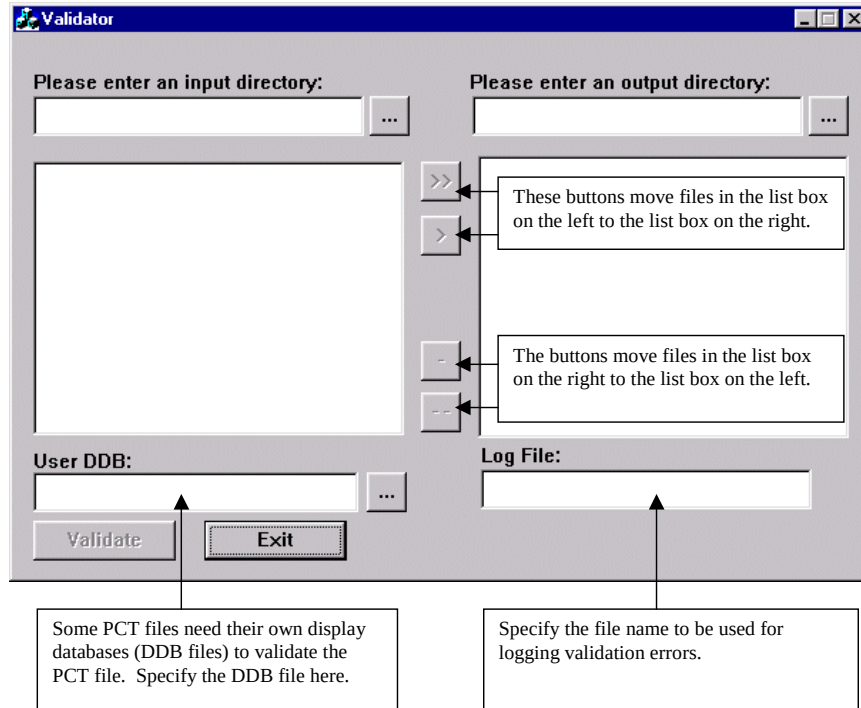
Function calls used in scripting or for object dynamics are not validated. If improper function calls are programmed, errors will be detected and enunciated at runtime.

#### When is validation required?

- When migrating to a new release
- When a display is edited/changed in the display builder
- When a display is moved to a different TPN (LCN) site (the internal ids of tag names may be different)

### GUS Validator Display

If the “Validate Migrated picture” box is not checked on the Migrator Display when the file(s) are migrated, the files can be validated using the Validator Dialog Display.



**Figure 3-1 GUS Validator Dialog Display**

### Validation messages

When each display validation process has completed, one of these actions will occur:

| If There Were...                          | You Will See This...                                                            |
|-------------------------------------------|---------------------------------------------------------------------------------|
| Errors found during display validation    | Errors in the log file and a red "X" on the icon in the right side of the list. |
| No errors found during display validation | The icon for the validated picture no longer appears disabled.                  |

If errors occur during validation, you should open the log file in a text editor to determine what errors occurred during the validation process.

### Validation Log Error List - data description

Below are the descriptions of the data in each validation error.

| Column    | Description                                                                                                       |
|-----------|-------------------------------------------------------------------------------------------------------------------|
| Object    | The name of the object whose script and/or dynamic has the error                                                  |
| Location  | Identifies the data reference in error and the location of the error (either the script or which object dynamics) |
| Message   | Contains a description of the error                                                                               |
| File Name |                                                                                                                   |

For further information about the Validation Error List, see the *Display Builder User's Guide (GU23200)*.

---

### Attention

Validation of a good subpicture that defines inline parameters will report validation errors unless they have been bound to default values.

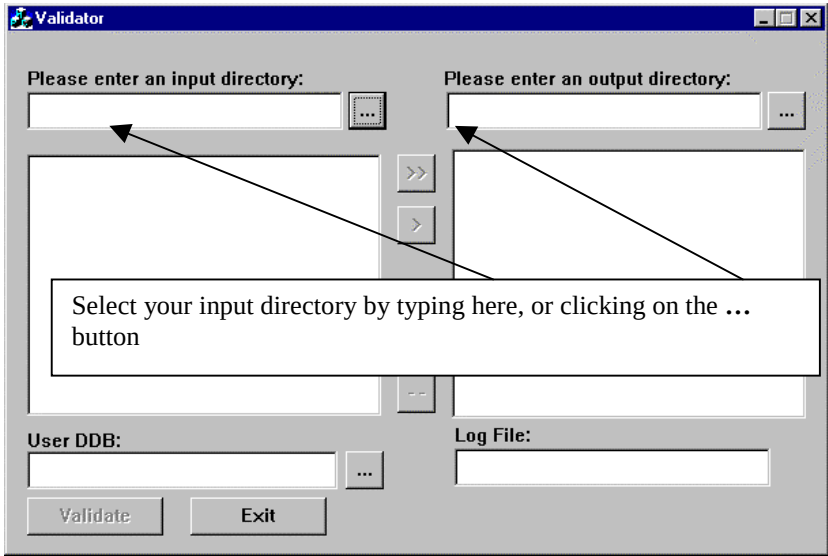
---

## 3.2 Running the GUS Display Validator

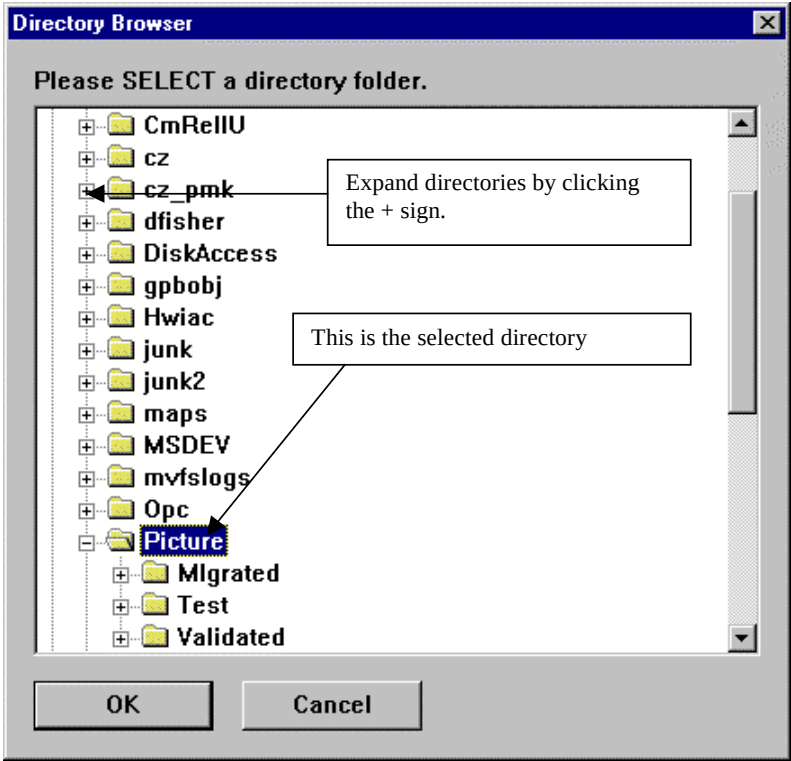
### Steps to run Display Validator

Follow the steps below to execute the GUS Display Validator program.

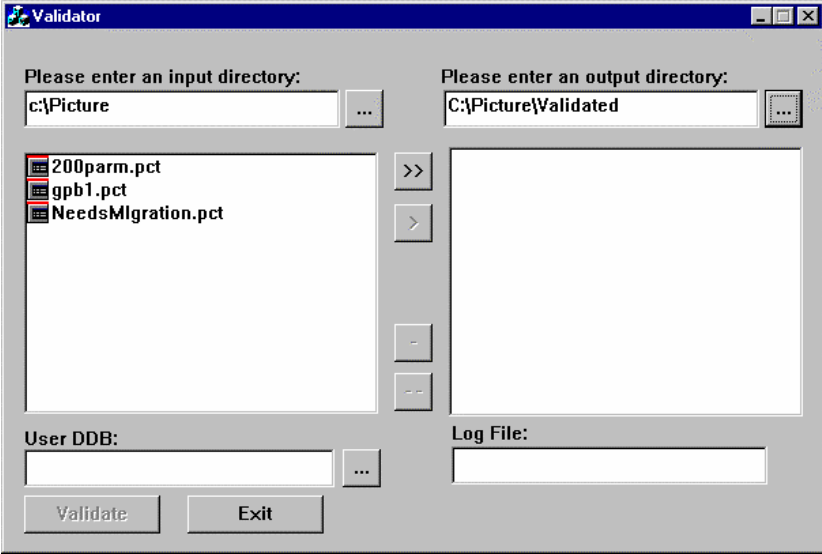
**Table 3-1 Running the GUS Validator**

| Step | Action                                                                                                                                             |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | From Program Manager,<br>Select the START button on the tool bar.<br>Select PROGRAMS, HONEYWELL TPS, GUS Display Validator.                        |
| 2    | The Validator Display appears. Select your input directory.<br> |

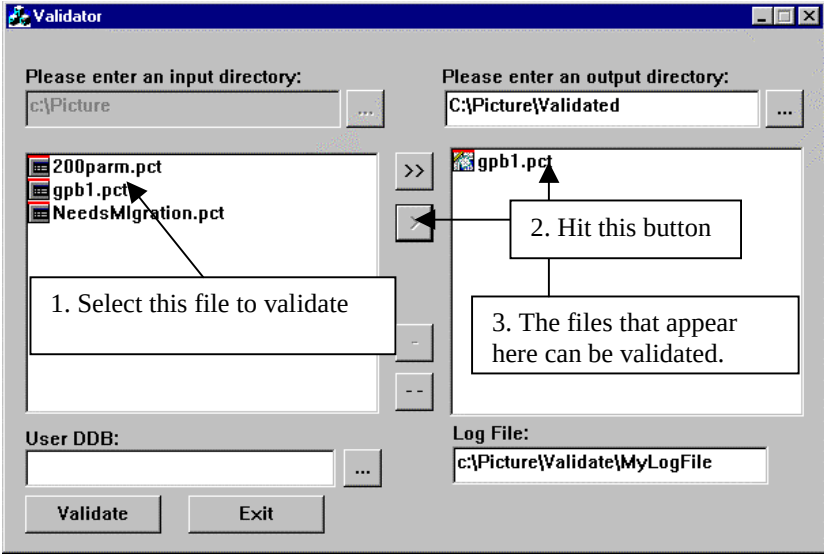
**Table 3-1 Running the GUS Validator**

| Step | Action                                                                                                                                                                                            |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3    | <p>If you select the ... button shown in Step 3, the directory browser appears. Now select the directory.</p>  |

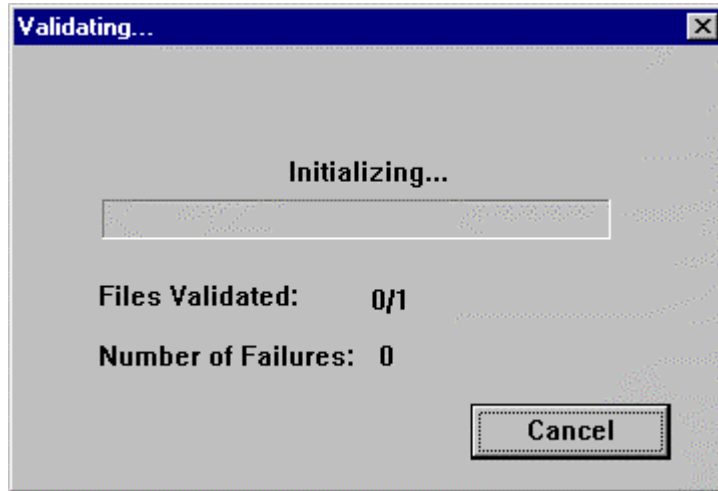
**Table 3-1 Running the GUS Validator**

| Step | Action                                                                                                                                                                                                                                                                                                |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4    | <p>Repeat the procedure (Steps 3 and 4) for the output directory. When you are finished you should have something like this:</p>  <p>The output directory cannot be the same directory as the input directory.</p> |

**Table 3-1 Running the GUS Validator**

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5    | <p>Now it is time to select which files you want to validate. The files that will be validated will have to appear on the right-hand list. To do this, select the files on the left-hand list. Click the &gt; button to move only the selected files in the left-hand list to the list on the right. Hit the &gt;&gt; button to move all the files on the left-hand list to the right. Here is an example:</p>  <p>If a DDB file is required to validate the file, specify the file name in the User DDB edit box.</p> <p>Specify your log file name and complete path name in the Log File edit box. If this is omitted, it will default to a file named "validate.txt."</p> |

**Table 3-1      Running the GUS Validator**

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6    | <p>Now you are ready to validate the picture. Simply click the validate button in the lower left-hand corner. You will get the following progress dialog box showing you the status of the migration process:</p> <div data-bbox="545 600 1258 1087"></div> <p>If you hit the cancel button on this dialog box, the process will stop at the end of processing the file already started.</p> |
| 7    | Exit the Validator.                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## 4. Verify Correct Operation of Displays

### 4.1 Steps to Take

#### Run display

Each display must be run to verify that all aspects of that display function as they did prior to display migration and validation. In other words, actually bring up the display on your station as you would when on-process, and see if everything works as expected.

Some general checks you could make:

- Does the display appear the same?
- Does it behave the same (colors, selectability, change zones, values fed by the process, etc.)?

Check for errors in cases where the display is not acting the same, and take corrective action, as necessary.

## **Verify Correct Operation of Displays - Steps to Take**

---

## 5. Example Migration to a New Release

### 5.1 Overview

Several tasks must be accomplished when an operating TPS GUS facility receives a new release of TPS GUS software :

- The software must be upgraded.
- The GUS Displays must be migrated.
- There must be a systematic cutover of all engineering GUS Stations.
- There must be a systematic cutover of all on process operations GUS Stations.

Every TPS GUS plant site is designed, configured, and operated differently. This section provides an example migration of GUS Displays and a systematic approach to cutover all engineering and process operation GUS Stations. This is an example only and is not intended to be an exact, step-by-step procedure. This section can be used to demonstrate concepts, guidelines, and ideas on how to migrate systems to a new release.

### 5.2 Site Example

#### General GUS Configuration

The example site consists of:

- several working engineering GUS stations used for development and testing of GUS Displays,
- one primary server, which holds the master, tested, reviewed versions of GUS Displays, which are or have been distributed to the operational GUS Stations,
- Several Operational GUS Stations – Runtime only.

## Site Configuration

The example site configuration is shown in the following figure:

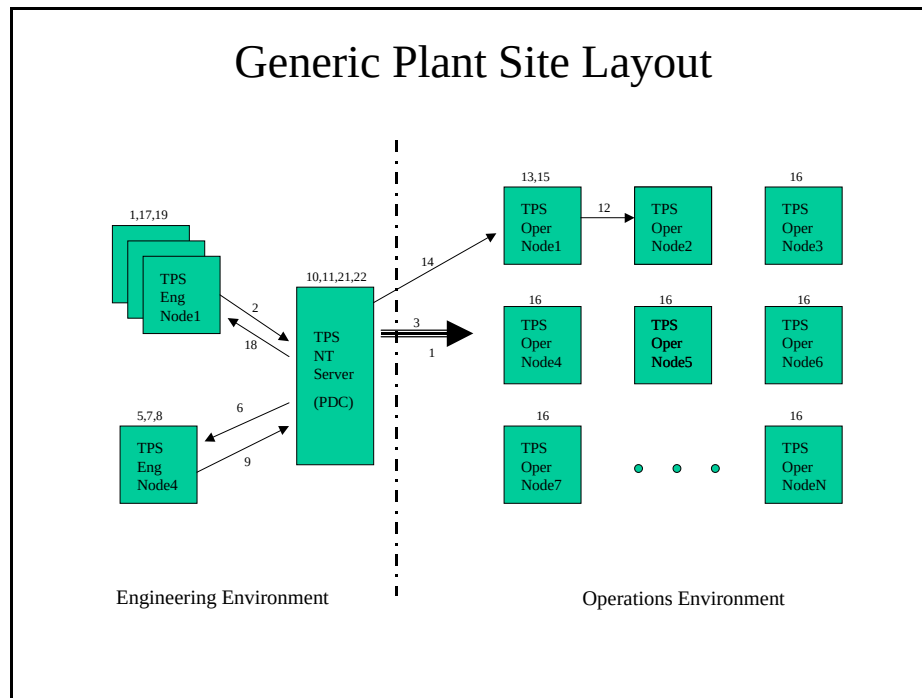


Figure 5-1 Generic Plant Site Layout

### Common Operating Procedure Before Receiving New GUS Software

| Step | Action                                                                                                                                                                                        |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Engineers create, modify, and test GUS Displays                                                                                                                                               |
| 2    | Engineers commission GUS Displays by copying them to the NT Server (PDC).                                                                                                                     |
| 3    | GUS displays are replicated to Operational Stations. Replication can be either automatic or manual. Automatic replication can be done using NT Replication Services described in this manual. |
| 4    | Operations stations use newly modified GUS Displays as they are replicated to each individual station.                                                                                        |

### Common Operating Procedure After Receiving New GUS Software

#### *Upgrade One Engineering Station*

| Step | Action                                                                                                                                   |
|------|------------------------------------------------------------------------------------------------------------------------------------------|
| 5    | Take one TPS Engineering station (for discussion, call it <i>TPS Eng Node 4</i> ) and upgrade it to the new Release of TPS GUS software. |
| 6    | Manually copy the commissioned GUS Displays from the NT Server to <i>TPS Eng Node 4</i> .                                                |
| 7    | Migrate the GUS Displays using the GUS Display Migrator matching the release version of the old software release.                        |
| 8    | Test all of the migrated GUS Displays on <i>TPS Eng Node 4</i> .                                                                         |
| 9    | Copy all the GUS Displays to a new location on the NT Server. Do not overwrite the old GUS Displays on that server.                      |

## Example Migration to a New Release - Site Example

---

### *Upgrade the NT Server*

| Step | Action                                                                       |
|------|------------------------------------------------------------------------------|
| 10   | Disable automatic replication from the NT Server to the Operations Stations. |
| 11   | Install TPS/software as described in this manual on the NT Server.           |

### *Upgrade One Operations Station*

| Step | Action                                                                                                               |
|------|----------------------------------------------------------------------------------------------------------------------|
| 12   | Transfer operations functions from the selected TPS Operations station to another station on the network.            |
| 13   | Install appropriate TPS GUS software packages and configure the selected TPS Operations station.                     |
| 14   | Manually copy the newly migrated GUS Displays from the NT Server to that station.                                    |
| 15   | Resume operating through TPS GUS Displays on that station.                                                           |
| 16   | Repeat Steps 12 through 15 on each operations station individually until all operations stations have been upgraded. |

### *Upgrade Remaining Engineering Stations*

| Step | Action                                                                                                                 |
|------|------------------------------------------------------------------------------------------------------------------------|
| 17   | Install appropriate TPS GUS software packages and configure the selected TPS Engineering station.                      |
| 18   | Manually copy the newly migrated GUS Displays from the NT Server to that station.                                      |
| 19   | Resume use of the TPS GUS Engineering station for GUS Display development and maintenance.                             |
| 20   | Repeat Steps 17 through 19 on each Engineering Station individually until all Engineering Stations have been upgraded. |

### *Return to Normal Operations*

---

**Example Migration to a New Release - Site Example**

---

| <b>Step</b> | <b>Action</b>                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>21</b>   | On the NT Server, save the old GUS Displays to a safe storage location. Copy the newly migrated GUS Displays to the Automatic replication area of the NT Server. |
| <b>22</b>   | Enable Automatic replication or manual replication processes.                                                                                                    |
| <b>23</b>   | Done.                                                                                                                                                            |

## Example Migration to a New Release - Site Example

---

# Index

## **A, B, C, D**

Directory-by-directory display migration, 10  
Display migration-what actually happens, 7

## **E**

Executing GUS Display Migrator program, 13  
Executing GUS Display Validator program, 22

## **F**

File-by-file display migration, 10  
Function calls, 19

## **G, H**

General steps, 7

## **I, J, K, L**

Input directory and output directory names, 10, 11  
Input file and output file names, 11  
Intended audience, iii

## **M, N**

Make an output directory, 11  
Maximum number of files migrated at one time, 10  
Migration Procedure, 13  
Migrator Display, 12

## **O**

Overview, 7

## **P, Q**

PCT (input) files, 11  
PCT (output) files, 11  
PCT files with the same name, 11

## **R**

Running GUS Display Migrator, 9

## **S, T, U**

Steps to run Display Migrator, 13  
Steps to run Display Validator, 22

## **V**

Validate and save newly validated .pct file, 19  
Validation Error List - data description, 21  
Validation messages, 21  
Validation procedure, 19  
Validation-what is it validating?, 19  
Validation-what is not validated?, 19  
Verify display runs okay, 27

## **W, X, Y, Z**

Wild cards, 10



---

FAX Transmittal

FAX No.: (602) 313-4842

---

David Downey

Total FAX pages:

\_\_\_\_\_  
(including this page)

### Reader Comments

Title of Document:

Display Migrator User's Guide

Document Number:

GU28120

Issue Date:

7/98

Comments: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Recommendations: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

### FROM:

Name: \_\_\_\_\_ Date: \_\_\_\_\_

Title: \_\_\_\_\_

Company: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ ZIP: \_\_\_\_\_

Telephone: \_\_\_\_\_ FAX: \_\_\_\_\_

**FOR ADDITIONAL ASSISTANCE**

| <b>Write</b>                                                                                                                    | <b>Call</b>                                                                                                                   |
|---------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Honeywell Inc.<br>Industrial Automation and<br>Control<br>Automation College<br>2820 West Kelton Lane<br>Phoenix, AZ 85053-3028 | <b>Technical Assistance Center (TAC)</b><br>1-800-822-7673 (48 contiguous states except<br>Arizona)<br>602-313-5558 (Arizona) |



**Honeywell**

---

Industrial Automation and Control

*Helping You Control Your World*

**Automation College**

**2820 W. Kelton Lane**

**Phoenix, AZ 85023-3028**