

Honeywell

Honeywell Hi-Spec Solutions

GUSPro Installation Guide

GP05-150

R150

02/2009

Notices and Trademarks

**Copyright 2009 by Honeywell International Inc.
Release 150 February 2009**

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

Honeywell, ASM, Abnormal Situation Management, @sset.MAX, **TotalPlant** and Uniformance are U.S. registered trademarks of Honeywell International Inc. GUSPro, Alarm Configuration Manager, Event Analyst and UserAlert are trademarks of Honeywell International Inc.

Microsoft, Windows, and Windows 2003 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Oracle is a registered trademark of Oracle Corporation.

Other brand or product names are trademarks of their respective owners.

Honeywell International
Process Solutions
2500 West Union Hills Drive
Phoenix, AZ 85027
1-800-343-0228

About This Document

This document describes how to install and configure ProTrend and ProMenu. It also details the architecture for GUSPro server and client.

Release Information

Document Name	Document ID	Release Number	Publication Date
GUSPro Installation Guide - GP05	GP05-150	150	02/2009

Document Category
Installation and Upgrades

Revision Notes

The following list provides notes concerning all revisions of this document.

Doc ID	Rel ID	Date	Notes
GP05-110	R110	10/02	Initial Publication
GP05-110	R110	05/2003	Doc PAR fixes: 1-9VGG9, 1-CFI9J, 1-C9F4Q Change Request: CR398
GP05-150	R150	06/2004	PAR fixes 1-TWVZO
GP05-150	R150	02/2009	PAR fixes 1-4ANFBA

References

The following list identifies all documents that may be sources of reference for material discussed in this publication.

GUSPro (R150)

Document Title	Doc ID
ProMenu User Guide	GP20-150
ProTrend User Guide	GP21-150
GUSPro Software Change Notice	GPro150-SCN
GUSPro Specification and Technical Data	GP03-150

Alarm Configuration Manager (R120)

Document Title	Doc ID
Alarm Configuration Manager Installation and Setup Guide	ACM120-IG
Alarm Manager User Guide	ACM120-AlarmMgrUG
Alarm Enforcer User Guide	ACM120-AlarmEnfUG
ACM Administrator User Guide	ACM120-AdminUG
Alarm Configuration Manager Software Change Notice	ACM120-SCN
Alarm Configuration Manager Specification and Technical Data	ACM120-ST

Event Analyst (R130)

Document Title	Doc ID
Event Analyst Installation and Setup Guide	EA130-IG
Event Analyst User Guide	EA130-UG
Event Analyst Software Change Notice	EA130-SCN
Event Analyst Specification and Technical Data	EA130-ST

UserAlert (R130)

Document Title	Doc ID
UserAlert Installation and Setup Guide	UA130-IG
UserAlert Configuration User Guide	UA130-ConfigurationUG
UserAlert Monitor User Guide	UA130-MonitorUG
UserAlert Software Change Notice	UA130-SCN
UserAlert Specification and Technical Data	UA130-ST

Other related documents include:

- Uniformance® documentation
- Oracle® documentation

Support and Other Contacts

Location	Organization	Address	Phone/Facsimile
United States and Canada	Honeywell Solution Support Center	Honeywell TAC, MS P13, 2500 West Union Hills Drive, Phoenix, AZ, 85027	Phone: 1-800 822-7673 602- 313-5558 (In Arizona) Facsimile: (602) 313-3293
Note: Calls are answered by dispatcher between 6:00 A.M. and 4:00 P.M. Mountain Standard Time. Emergency calls outside normal working hours are received by an answering service and returned within one hour.			
Europe	Honeywell TAC-EMEA	TAC-BE02 Hermes Plaza Hermeslaan, 1HB-1831 Diegem, Belgium	Phone: +32-2-728-2732 Facsimile: +32-2-728-2696
Pacific	Honeywell Global TAC – Pacific	Honeywell Limited Australia 5 Kitchener Way Burswood 6100, Western Australia Email: GTAC@honeywell.com	Phone: 1300-300-4822 (toll free within Australia) +61-8-9362-9559 (outside Australia) Facsimile: +61-8-9362-9564
India	Honeywell Global TAC – India	Honeywell Automation India Ltd. 56 and 57, Hadapsar Industrial Estate Hadapsar, Pune –411 013, India Email: Global-TAC- India@honeywell.com	Phone: +91-20- 66039400 Facsimile: +91-20- 66039800

Location	Organization	Address	Phone/Facsimile
Korea	Honeywell Global TAC – Korea	Honeywell Co., Ltd 17F, Kikje Center B/D, 191, Hangangro-2Ga Yongsan-gu, Seoul, 140- 702, Korea Email: Global-TAC- Korea@honeywell.com	Phone: +82-2-799-6317 +82-11-9227-6324 Facsimile: +82-2-792-9015
People's Republic of China	Honeywell Global TAC – China	Honeywell (China) Co., Ltd 33/F, Tower A, City Center, 100 Zunyi Rd., Shanghai 200051, People's Republic of China Email: Global-TAC- China@honeywell.com	Phone: +86- 21-52574568
Singapore	Global TAC – South East Asia	Honeywell Private Limited Honeywell Building 17, Changi Business Park Central 1, Singapore 486073 Email: GTAC- SEA@honeywell.com	Phone: +65-6580-3500 Facsimile: +65-6580-3501 +65-6445-3033
Taiwan	Global TAC – Taiwan	Honeywell Taiwan Ltd. 17F-1, No. 260, Jhongshan 2nd Road. Cianjhen District Kaohsiung, Taiwan, ROC Email: Global-TAC- Taiwan@honeywell.com	Phone: +886- 7- 536 2567 Facsimile: +886-7-536 2039

Support and Other Contacts

Location	Organization	Address	Phone/Facsimile
Japan	Global TAC – Japan	Honeywell Japan Inc. New Pier Takeshiba, South Tower Building, 20th Floor, 1-16-1 Kaigan, Minato-ku, Tokyo 105-0022, Japan Email: Global-TAC- JapanJA25@honeywell. com	Phone: +81-3-6730-7160 Facsimile: +81-3-6730-7228
Elsewhere	Call your nearest Honeywell office.		
World Wide Web	Honeywell Solution Support Online: http://www.honeywell.com/ps		
Training Classes	Honeywell Automation College: http://www.automationcollege.com		

Symbol Definitions

The following table lists those symbols used in this document to denote certain conditions.

Symbol	Definition
	ATTENTION: Identifies information that requires special consideration.
	TIP: Identifies advice or hints for the user, often in terms of performing a task.

Symbol Definitions

Contents

1.	Introduction	13
1.1	Purpose.....	13
1.2	Overview	14
1.3	Architecture.....	15
1.3.1	Hardware Components	17
1.3.2	Software Components.....	21
1.4	Required Installation Services	25
2.	Required Hardware and Software.....	27
2.1	Introduction	27
2.2	Oracle Server.....	27
2.3	GUSPro Server	29
2.4	GUSPro GUS Client	31
2.5	GUSPro Desktop Client.....	33
2.6	Application Software	35
3.	Installation Overview	37
3.1	General Installation Information.....	37
3.2	Oracle Server.....	40
3.3	GUSPro Server	41
3.4	GUSPro Clients	42
3.5	Upgrading From GUSPro R100	43
3.6	Upgrading From GUSPro R110	44
4.	ProMenu and ProTrend Software Installation	45
4.1	Introduction	45
4.2	Installation	46

Contents

4.3 Optional Private TPN OPC Server Installation	54
5. Configuration Overview	57
5.1 General Information	57
5.2 Configuration Recommendations	57
5.3 GUSPro Configuration Utility	59

1. Introduction

1.1 Purpose

The following applications in the TPS systems provides convenient access to essential data, advanced trending, predictive alert notifications, and advanced alarm setting configuration.

- Alarm Configuration Manager™ (ACM)
- Event Analyst™ (EA)
- UserAlert™ (UA)
- ProMenu
- ProTrend

ProMenu and ProTrend are available in the TPS Software CD. ACM, EA, and UA can be purchased individually.

1.2 Overview

When the applications are installed together, the suite of applications works together in an integrated environment which provides the following functions and features:

- Convenient access to essential data and utilities, including trends, advanced analysis tools, standard operating procedures, maintenance information and detailed alarm information.
- Advanced trending and trend analysis tools to improve operator awareness and facilitate continuous improvement.
- Predictive alert notification to monitor process, safety, environmental, quality and equipment conditions, prior to them becoming alarms.
- Advanced alarm setting configuration.

Individually, the applications provide the following functions and features.

Alarm Configuration Manager

Alarm Configuration Manager provides advanced alarm setting configuration functionality, which is a key component of alarm management. This functionality includes the rationalization, documentation and change management of an alarm system, so that it fulfills its design goals.

Event Analyst

Event Analyst presents a coordinated view of selected process variables and system events, including process alarms, operator changes and other events.

UserAlert

UserAlert is designed to reduce the plant operator's workload by automatically monitoring process conditions and providing early notification of events. UserAlert notifies operators of user-defined, time-based and process value-based conditions. Automatic notification helps prevent abnormal events and ensures that required tasks are not forgotten.

ProMenu

ProMenu provides context-sensitive navigation from within a GUS graphic display directly to the applications, as well as to other applications, documents and GUS displays.

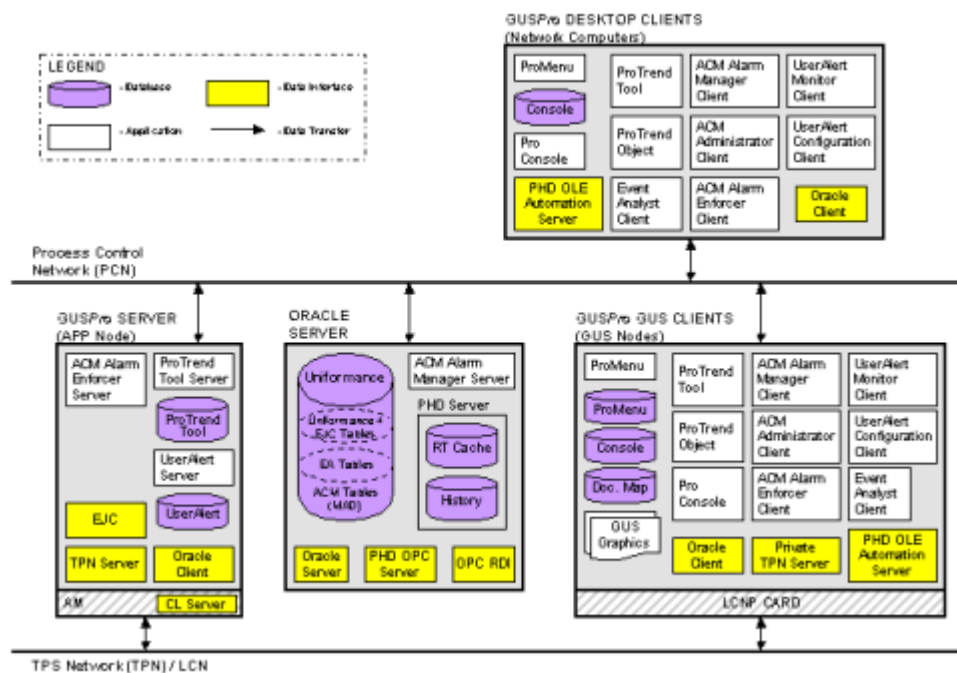
ProTrend

ProTrend is the Trend package that includes a ProTrend Object and a ProTrend Tool application.

1.3 Architecture

Each application has its own unique hardware and software requirements. When the applications are combined together in a single system, the individual hardware and software components are integrated as shown in Figure 1 and Figure 2.

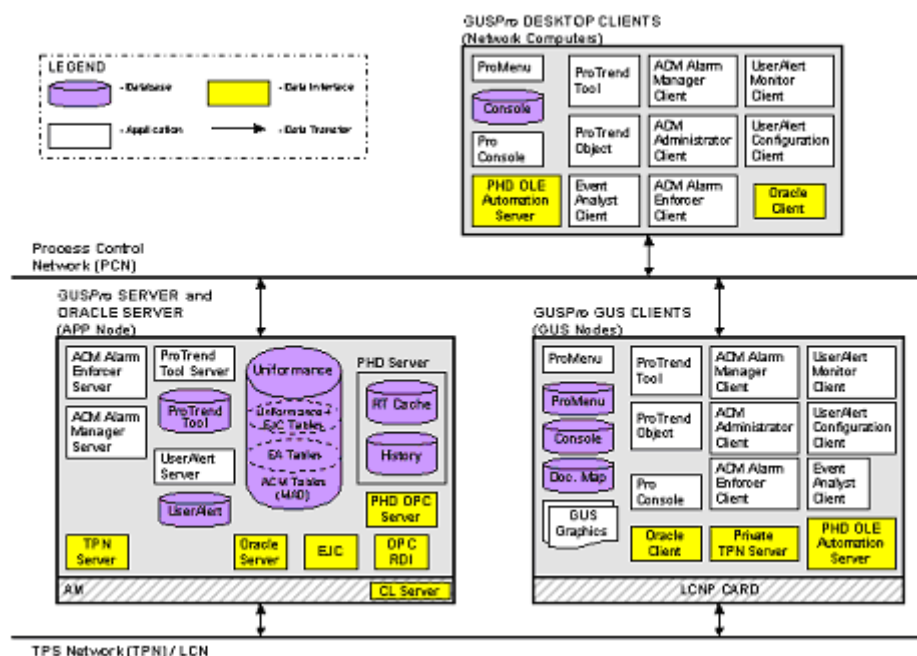
Figure 1 Hardware and Software Architecture - Split Servers



1. Introduction

1.3. Architecture

Figure 2 Hardware and Software Architecture - Combined Servers



1.3.1 Hardware Components

Table 1 briefly describes the hardware components required when the applications are set up together in a single system.

Table 1 Hardware Components

Component	Description
Oracle Server	The Oracle Server houses the Oracle Server software, the Uniformance database tables and the PHD Server that collects and stores process data for the applications. As part of Event Analyst database installation, a series of Event Analyst-specific database tables are added to the Uniformance database in Oracle. As part of Alarm Configuration Manager installation, the Master Alarm Database (MAD) tables are added to the Oracle database. In addition, the Alarm Manager Server is installed on the Oracle Server. (NOTE: The ACM database schema in Oracle is separate from the Uniformance database schema.)
GUSPro Server	The GUSPro Server is an Application Processing Platform (APP) node, which is required for Plant History Database (PHD) data collection from a TPS Network (TPN). For Event Analyst, the Uniformance system must be connected to a Honeywell TPS control system with the Network Event Journal Capture (EJC) option. Event Analyst uses the PHD API to access the PHD history data. It uses the Oracle ODBC Client software to access the Uniformance EJC event data and tag definitions, as well as the Event Analyst tables in Oracle. The following software components are installed on the GUSPro Server: • ACM Alarm Enforcer Server • UserAlert Server and Database (in MSDE) • ProTrend Tool Server and Database (in MSDE) All applications require that a TPN Server be present to provide OPC data access to the Distributed Control System (DCS) tag values and parameters. For ACM, the AM stores the Honeywell TPS tag data required by ACM for sending messages to operator consoles.

1. Introduction
1.3. Architecture

Component	Description
GUSPro GUS Clients	The GUSPro GUS Clients provide access to the application displays and utilities. For Alarm Configuration Manager, the client applications include: • Alarm Enforcer Client • Alarm Manager Client • ACM Administrator Client For Event Analyst, there is one Event Analyst Client application. For UserAlert, the client applications include: • UserAlert Monitor Client • UserAlert Configuration Client The UserAlert Server application and database may also be installed on the GUSPro GUS Clients. For the other applications, the following software components are installed on the GUSPro GUS Clients: • ProMenu Application (which includes Pro Console) • ProMenu Databases (ProMenu, Console and Document Map) • ProTrend Object • ProTrend Tool To provide access to the Honeywell LCN operator and engineering interface, the applications are installed on GUS nodes. The GUS graphics customized for use with ProMenu and ProTrend are also stored on the GUSPro GUS Clients.

Component	Description
GUSPro Desktop Clients	The GUSPro Desktop Clients are basically the same as the GUSPro GUS Clients. They provide access to the same application displays and utilities, but they are set up on Microsoft® Windows® workstations, rather than on GUS nodes. The ProMenu and ProTrend software does not have to be installed on the GUSPro Desktop Clients, with the following exceptions: • If a ProMenu on a GUSPro GUS Client is going to be used to launch one or more of the applications on a GUSPro Desktop Client, then the ProMenu software must be installed on that Desktop Client. • If a GUSPro Desktop Client is going to be used to carry out GUSPro configuration, then the ProMenu software must be present.

Unlike the hardware layouts permitted by the individual Alarm Configuration Manager, Event Analyst and UserAlert applications, all of the GUSPro Server and Client computers must reside in the same Windows 2003 network domain (in the Process Control Network (PCN)). This is necessary to permit data transfer and communications between the various software components.

For GUSPro systems that are installed with Uniformance Release 150/160, the Oracle Server and GUSPro Server must be set up on separate computers, as shown in Figure 1. This arrangement is necessary to accommodate the supported Windows operating system and Oracle software prerequisites.

If the GUSPro system is installed with Uniformance Release 200, the Oracle Server and GUSPro Server may be combined on a single computer, as shown in Figure 2. It is recommended however, that the Oracle Server and GUSPro Server be set up on separate computers. This arrangement ensures a reasonable level of system performance.

The individual client software components, associated with the applications, may be distributed across the GUSPro Client computers provided. It is not necessary for all of the client software components to be installed on each GUSPro Client computer.

Mapping of Hardware Component Names

In the Alarm Configuration Manager, Event Analyst and UserAlert user documentation, the names used for the various hardware components are different than the names used here. Table 2 outlines the mapping between the hardware component names used in the *GUSPro Installation Guide*, and the names used in the individual application documentation.

Table 2 Hardware Naming Conventions

GUSPro Hardware Components	Equivalent Hardware Component Names		
	Alarm Configuration Manager	Event Analyst	UserAlert
Oracle Server	Oracle Server	Uniformance Oracle Server and Uniformance PHD Server	Not Applicable
GUSPro Server	APP		UserAlert Server (APP Node)
GUSPro GUS Clients	ACM Workstation	Event Analyst Workstation	UserAlert Client (GUS Node)
GUSPro Desktop Clients	ACM Workstation	Event Analyst Workstation	UserAlert Client (Network Computer)

NOTES:

1. In the Event Analyst documentation, the Uniformance Oracle Server and Uniformance PHD Server make up what is referred to as the "Uniformance System".
2. UserAlert does not require an Oracle database and, as a result, does not have an Oracle Server. An MSDE database is used instead.

1.3.2 Software Components

Table 3 through Table 8 briefly describes the software components associated with each application.

Table 3 Alarm Configuration Manager Software Components

Component	Description
Master Alarm Database (MAD)	Database tables that store the DCS and EHAS alarm documentation and settings in the Oracle database on the Oracle Server.
Alarm Manager Server	ACM Server software component that connects the ACM client programs to the MAD. The Alarm Manager Server must be installed on the Oracle Server for best performance, but may be installed on a separate GUSPro Server if desired.
Alarm Enforcer Server	ACM Server software component that scans the DCS for alarm discrepancies and enforces MAD values on each DCS. It may be installed on any computer that has access to the TPN Server. For GUSPro systems, it is recommended that the Alarm Enforcer Server software be installed on the GUSPro Server.
ACM Administrator Client	ACM Client software component that provides a user interface for configuring ACM control systems, consoles, alarm groups and other site-specific settings. It may be installed on any GUSPro Client computer.
Alarm Manager Client	ACM Client software component that provides a user interface for editing MAD content, including alarm tags, alarm parameters, equipment definitions, equipment groups and operating modes. It may be installed on any GUSPro Client computer.
Alarm Enforcer Client	ACM Client software component that provides a user interface for running enforcement cycles and generating reports. It may be installed on any GUSPro Client computer.

Table 4 Event Analyst Software Components

Component	Description
Event Analyst Tables	Database tables that store event analysis results in the Uniformance database on the Oracle Server.
Event Analyst Client	Event Analyst Client software component which provides a user interface for Event Analyst's Trend Chart and Event List. It may be installed on any GUSPro Client computer. Oracle Client and the PHD OLE Automation Server must be present on each computer where the Event Analyst Client is installed.

Table 5 UserAlert Software Components

Component	Description
UserAlert Server	UserAlert Server software component that obtains field data through an OPC Server that acts as an interface to the underlying control system. It may be set up on the GUSPro Server or on any other computer in the system.
UserAlert Database	MSDE database tables that store the UserAlert configuration settings. It is installed automatically with the UserAlert Server software.
UserAlert Server Configuration Utility	UserAlert configuration utility that is used to configure the UserAlert database connections, the OPC Server connections, and the alert notification e-mail and pager settings. The utility is installed automatically with the UserAlert Server software.
UserAlert Monitor Client	UserAlert Client software component that allows the operator to view and acknowledge triggered alerts. It may be installed on any GUSPro Client computer.
UserAlert Configuration Client	UserAlert Client software component that provides a user interface for configuring Process, Timer and combination alerts. It may be installed on any GUSPro Client computer.

Table 6 ProMenu Software Components

Component	Description
ProMenu Application	An application that searches the ProMenu, Document Map and Console databases to determine which ProMenu graphic must be invoked for a given tag or equipment name. It also determines which node in a console that a requested application must be invoked on. The Pro Console software is part of the ProMenu application.
ProMenu Databases	There are three databases used by ProMenu: • The ProMenu database defines the mapping between the ProMenu graphics and the tag, equipment and equipment group names, based on a series of rules. • The Document Map databases define the mapping between specific documents (for example, startup procedures) and the tag, equipment or equipment group names, based on a series of rules. (Optional.) • The Console databases specify which applications, documents and types of GUS graphics, may be invoked on each node in a GUSPro console.
ProMenu Configuration Utilities	There are three configuration utilities supplied with ProMenu: • The ProMenu Configuration utility is used to configure the ProMenu database and to specify the storage locations for the ProMenu files. • The Document Map Configuration utility is used to configure the Document Map databases and to specify the storage location for the Document Map database files. (Optional.) • The Console Configuration utility is used to configure the Console databases, to identify the nodes in each GUSPro console and to map the GUSPro consoles to the ACM consoles.
ProMenu Subpicture Samples	ProMenu is supplied with a set of ProMenu subpictures that may be used to create GUS graphics for ProMenu.
GUS Graphic Templates for ProMenu	ProMenu is supplied with a GUS graphic template that may be modified to create GUS graphics for ProMenu.

The ProMenu software may be installed on any GUS*Pro* Client computer. To run the ProMenu GUS graphics, ProMenu must be set up on the GUS*Pro* GUS Clients.

Table 7 ProTrend Software Components

Component	Description
ProTrend Object	The ProTrend Object is an ActiveX control for trends that can be embedded in GUS schematics. It provides the trend display features (trend traces, gridlines, axes, legends, etc.), as well as data collection and error handling functionality. It is installed automatically with the ProTrend software on the GUS<i>Pro</i> Client computers. PHD OLE Automation Server must be installed on each computer where the ProTrend Object is going to run. This includes computers where the ProTrend Tool is to be run, as well as computers where GUS graphics or custom applications that use the ProTrend Object are to be run.
ProTrend Tool Application	The ProTrend Tool encapsulates the ProTrend Object in a standalone application. It packages the trend in a standard way that can be used as is. It allows the operator to dynamically build trends for monitoring and analysis. It is installed automatically with the ProTrend software on the GUS<i>Pro</i> Client computers.
ProTrend Tool Server	ProTrend Server software component that manages the ProTrend Tool settings stored in the ProTrend Tool database. It may be set up on the GUS<i>Pro</i> Server or on any other computer in the system.
ProTrend Tool Database	MSDE database tables that store the ProTrend Tool settings. It is installed automatically with the ProTrend Tool Server software.

Component	Description
ProTrend Database Configuration Application	ProTrend Tool database configuration utility that is used to create the ProTrend Tool database, and to set up the connection between the ProTrend Tool application and the ProTrend Tool database. It is installed automatically with the ProTrend software.
ProTrend Tool Configuration Utility	ProTrend Tool configuration utility that is used to configure the console-wide ProTrend Tool display settings. All of the settings are stored in the central ProTrend Tool database. It is installed automatically with the ProTrend software.
GUS Graphic Templates for ProTrend	ProTrend is supplied with a set of GUS graphic templates that may be modified to create GUS graphics that include the ProTrend Object.

Table 8 Miscellaneous GUSPro Software Components

Component	Description
GUSPro Configuration Utility	An application that links all of the configuration utilities associated with the applications together, so that they can be accessed from a single location. Provides instructions regarding the proper order in which the configuration tasks must be completed.

1.4 Required Installation Services

Software installation services are required with GUSPro Release 150. These services include the installation of the server software and testing of the applications to be sure that they are properly installed. Configuration of the applications is the responsibility of the customer or is available as an optional service from Honeywell. GUSPro Release 150 sale installation services must be included with the purchase of the applications, as part of a TPS software CD.

1. Introduction

1.4. Required Installation Services

2. Required Hardware and Software

2.1 Introduction

This section describes the hardware and software requirements for a GUSPro Release 150 system that combines all of the applications together in a single system.



ATTENTION

When the applications are installed together, some of the hardware and software configurations supported by the individual applications can no longer be supported. As a result, the hardware and software configuration listed here is different than the hardware and software requirements listed in the individual application documents.

2.2 Oracle Server

Hardware

Item	Minimum	Recommended
Processor	Pentium III Class, 450 MHz	Pentium III Class, 600 MHz or faster
Memory	512 MB	1024 MB
Disk Space	9 GB	18 GB or larger
TCP/IP NIC	10 Mbit/sec	100 Mbit/sec



ATTENTION

The Oracle Server hardware requirements must meet the minimum hardware requirements for Oracle and Unifirmance.

2. Required Hardware and Software

2.2. Oracle Server

Software

Item	Version (for Uniformance R150.1)	Version (for Uniformance R200)
Microsoft Windows Operating System	XP or 2003 server	XP or 2003 server
Microsoft Data Access Components (MDAC)	2.51 or higher	2.51 or higher
Oracle Server, including: • Oracle SQL PLUS • Oracle SQL Net Server • Oracle TCP/IP Protocol Adapter	7.3.4	8.1.7
Oracle ODBC Driver	"Oracle73 Ver 2.5" 2.05	"Oracle ODBC Driver" 8.01.07
Uniformance Database	150.1	200
PHD Server	150.1	200
PHD OPC Server	150.1	200



ATTENTION

The version of Oracle to be used with GUSPro is dependent on the version of Oracle supported by Uniformance.

2.3 GUSPro Server

Hardware

Item	Minimum	Recommended
Processor	Pentium III Class, 1 GHz	Pentium III Class, 1 GHz or faster
Memory	512 MB	512 MB or more
Disk Space	9 GB	9 GB or larger
File System Type	NTFS	NTFS
TCP/IP NIC	10 Mbit/sec	100 Mbit/sec
LCNP Card	LCNP4	LCNP4



ATTENTION

The GUSPro Server must be an APP node.

Software

Item	Version (for Uniformance R150.1 Server 160.6 Desktop)	Version (for Uniformance R200 Server, R200 Desktop)
Microsoft Windows Operating System	XP or 2003	XP or 2003
Oracle Client (Required by the Event Journal Collection application used by Event Analyst. Also required by the ACM Alarm Manager Server, if it is to be installed on a standalone GUSPro Server.)	8.1.7 or later	8.1.7 or later
AM Personality	630.1 or later	630.1 or later
APP Base	200 or later	201.1 or later
TPN	200 or later	201.1 or later

2. Required Hardware and Software

2.3. GUSPro Server

Item	Version (for Uniformance R150.1 Server 160.6 Desktop)	Version (for Uniformance R200 Server, R200 Desktop)
CL Server (Optional – see Attention section below)	200 or later	201.1 or later
Uniformance Application Server and Event Journal Collection Application	150.1	200 or later



ATTENTION

- The Event Journal Collection application must be run on a node connected to the LCN (that is, on the GUSPro Server). This application also requires Oracle SQL*Net to be present on the target computer.
 - MSDE 1.0 is installed automatically with the UserAlert Server and ProTrend Tool Server software, if MSDE or SQL Server 7.0 is not already present.
 - For those sites that are planning to run with Uniformance R150.1, the following additional software requirements must be met:
 - If an existing APP node, which is running the Windows NT operating system, is to be used as the GUSPro Server, it must be upgraded to Windows 2003.
 - If PHD Server R150.1 is present on this APP node, it must be moved from the GUSPro Server to the Oracle Server, and the associated OPC RDIs must be modified to suit. (This is because PHD Server R150.1 is not supported in the Windows 2000 operating system.)
 - CL Server is only required if ACM enforcement is initiated from the TPS system by an operator or a program.
-

2.4 GUSPro GUS Client

Hardware

Item	Minimum	Recommended
Processor	Pentium III Class, 1 GHz	Pentium III Class, 1 GHz or faster
Memory	256 MB	256 MB or more
Disk Space	9 GB	9 GB or more
File System Type	NTFS	NTFS
TCP/IP NIC	10 Mbit/sec	10 Mbit/sec or faster
LCNP Card	LCNP4	LCNP4

Software

Item	Version (for Uniformance R150.1 Server, R160.6 Desktop)	Version (for Uniformance R200 Server, R200 Desktop)
Microsoft Windows Operating System	XP (SP 2 or later)	XP (SP 2 or later)
MDAC	2.51 or higher	2.51 or higher
Oracle Client, including: • Oracle SQL PLUS • Oracle SQL Net • Oracle TCP/IP Protocol Adapter	8.1.7 or later	8.1.7 or later
Oracle ODBC Driver	"Oracle ODBC Driver" 8.01.07 or later	"Oracle ODBC Driver" 8.01.07 or later

2. Required Hardware and Software

2.4. GUSPro GUS Client

Item	Version (for Uniformance R150.1 Server, R160.6 Desktop)	Version (for Uniformance R200 Server, R200 Desktop)
GUS Workstation Software NOTE: GUS R311.2 is required if ProMenus are going to be used in Native Window graphic displays. The MSCHEM module (version 63.3), which includes the GP_Menu actor software, is supplied with GUS R311.1.	311.2 or later	311.2 or later
Hi-Spec Base (Supplied with the TPS System Software. Required for the Private TPN Server.)		
Uniformance Desktop (Optional - The Tag Explorer may be used with Event Analyst.) NOTE: Customers who plan to install the Uniformance Desktop software must purchase a separate Desktop license. This license is not supplied with the GUSPro software package.	160.6 or later	200 or later
Uniformance PHD OLE Automation Server Installed with the Uniformance Desktop.	160.6 or later	200 or later
Microsoft Office (Optional - Microsoft Excel is required if the Event Analyst Reporting feature is to be used.)	2003	2003
Adobe Acrobat Reader (Optional - Is required for on-line access to the user documentation.)	4 or later	4 or later



ATTENTION

If the Uniformance Desktop software is not installed, the PHD OLE Automation Server software must be installed on each GUSPro GUS Client where Event Analyst Client or the ProTrend software is going to run.



TIP

- Microsoft Internet Explorer is automatically installed with the Windows 2003 operating system.
 - It is expected that Microsoft Office and Adobe Acrobat Reader would only be installed on the GUSPro Desktop Clients. When this is the case, the associated Event Analyst features (for example, Reporting) would not be available on the GUSPro GUS Clients.
-

2.5 GUSPro Desktop Client

Hardware

Item	Minimum	Recommended
Processor	Pentium II Class, 450 MHz	Pentium III Class, 450 MHz or faster
Memory	128 MB	256 MB or more
Disk Space	500 MB	1 GB or more
File System Type	NTFS	NTFS
TCP/IP NIC	10 Mbit/sec	10 Mbit/sec or faster

Software

Item	Version (for Uniformance R150.1)	Version (for Uniformance R200)
Microsoft Windows Operating System	2003 (SP 2)	2003 (SP 2)
MDAC	2.51 or higher	2.51 or higher

2. Required Hardware and Software

2.5. GUSPro Desktop Client

Item	Version (for Uniformance R150.1)	Version (for Uniformance R200)
Oracle Client, including: • Oracle SQL PLUS • Oracle SQL Net • Oracle TCP/IP Protocol Adapter	7.3.4	8.1.7
Oracle ODBC Driver	"Oracle73 Ver 2.5" 2.05	"Oracle ODBC Driver" 8.01.07
Uniformance Desktop (Optional - The Tag Explorer may be used with Event Analyst.) NOTE: Customers who plan to install the Uniformance Desktop software must purchase a separate Desktop license. This license is not supplied with the GUSPro software package.	150.1 or later	200 or 201.1
Uniformance PHD OLE Automation Server Installed with the Uniformance Desktop.	160.6	200 or 201.1
Microsoft Office (Optional - Microsoft Excel is required if the Event Analyst Reporting feature is to be used.)	2003 (SR 2)	2003 (SR 2)
Adobe Acrobat Reader (Optional - Is required for on-line access to the user documentation.)	4 or later	4 or later



ATTENTION

If the Uniformance Desktop software is not installed, the PHD OLE Automation Server software must be installed on each GUSPro Desktop Client where Event Analyst Client or the ProTrend software is going to run.



TIP

Microsoft Internet Explorer is automatically installed with the Windows 2003 operating system.

2.6 Application Software

The following application releases are supported in GUSPro Release 150:

Application	Release
Alarm Configuration Manager	R120.2 or higher
Event Analyst	R130.2 or higher
UserAlert	R130.2 or higher

2. Required Hardware and Software

2.6. Application Software

3. Installation Overview

3.1 General Installation Information

This section describes the suggested installation procedures for all of the applications together in a single system. The installation procedures are broken down by hardware component. Refer to the individual application *Installation and Setup Guides* for more detailed instructions to install individual software components.

In general, the hardware components must be set up in the following order:

1. Oracle Server
2. GUSPro Server
3. GUSPro Clients (for either the GUSPro Desktop Clients or GUSPro GUS Clients)

In general, the individual applications can be installed in any order once the prerequisite software has been installed on the individual hardware components. The procedures supplied here are provided as a guideline only.



ATTENTION

The PHD automation package must be installed before any other GUSPro software is installed.

3. Installation Overview

3.1. General Installation Information



TIP

As an alternative, some installers may prefer to completely install, setup and test the individual software applications one at a time. If this is the case, the following installation limitations apply:

- GUSPro uses the Honeywell Microsoft Redistributables. They are already installed on any TPS node. If GUSPro is being installed on a desktop PC, the Microsoft Redistributables must first be installed from the Common Components CD.
- The prerequisite software (Windows, Oracle, Uniformance, etc.) must be setup on each computer first.
- Alarm Configuration Manager must be installed and configured before the Event Analyst and UserAlert applications, if equipment groups are to be used.
- The ProMenu and ProTrend applications are installed last. This ensures that Alarm Configuration Manager, Event Analyst and UserAlert can be accessed from the GUSPro Configuration utility.
- If using MSDE1.0, install ProTrend server before UserAlert server.



ATTENTION

The configuration utilities are installed with access limited to Administrators and TPS Engineers with full control.



ATTENTION

The Installation includes a "MSDEServer" component. This component installs an MSDE SQL server. It is intended only for use with ProTrend Standalone installation or for installation of the ProTrendServer package on a node that does NOT already have a SQL server. Do not install this component on a node that already has MSDE or SQL Server already installed.

ProTrend 150 server requires one of the following database server types MSDE 1.0, MSDE 2.0, SQL Server 7.0 or SQL Server 2000. The ProTrend DB Config utility requires the database to support SQL server and Windows authentication. The SA account and blank password are used to create the ProTrend 150 database. If your database does not permit SQL server and Windows authentication or if the SA password is not blank then changes must be made prior to running the ProTrend DB Config utility.

If your database server is SQL Server 7.0 or SQL Server 2000, then the SQL Enterprise manager may be used to change the authentication type and SA account's password. Consult with your SQL server administrator.

If your database server is MSDE 1.0 or 2.0 then the authentication mode is updated if necessary by the authenticate SQL utility included in ProTrends.

3. Installation Overview

3.2. Oracle Server

3.2 Oracle Server

The following table shows the suggested order for installing the prerequisite and application software components on the Oracle Server. (See Oracle Server section, for the prerequisite software release requirements.)

Step	Action	Reference
1	Install the Microsoft Windows operating system and prerequisite Microsoft Data Access Components (MDAC) software.	Microsoft Documentation
2	Install Oracle Server, along with the required Oracle ODBC drivers.	Uniformance and Oracle Documentation
3	Install the Uniformance Database.	Same as Above
4	Install the PHD Server and PHD OPC Server.	Same as Above
5	Add the ACM Master Alarm Database tables to the Oracle database. The ACM MAD tables may be added to the Oracle database instance that includes the Uniformance database tables, but are installed in a separate database schema.	<i>ACM Installation and Setup Guide</i>
6	Install the ACM Alarm Manager Server.	<i>ACM Installation and Setup Guide</i>
7	Add the Event Analyst database tables to the Uniformance database.	<i>Event Analyst Installation and Setup Guide</i>



ATTENTION

If you are setting up the Oracle Server and GUSPro Server on the same computer (as shown in Figure 2), the prerequisite APP node and TPN Server software must be installed on the target computer prior to installing the Oracle Server software.

Once the remaining Oracle Server software components have been installed, proceed with the GUSPro Server software installation, described in Steps 4 through 7 in the GUSPro Server section.

3.3 GUSPro Server

The following table shows the suggested order for installing the prerequisite and application software components on the GUSPro Server. (See GUSPro Server section for the prerequisite software release requirements.)

Step	Action	Reference
1	Install the Microsoft Windows operating system.	Microsoft Documentation
2	Install the prerequisite APP node software, including the TPN Server.	TPS Documentation
3	Install Oracle Client. (Required for standalone GUSPro Servers only.)	Uniformance and Oracle Documentation
4	Install the Uniformance Application Server and Event Journal Collection application.	Same as Above
5	Install the ACM Alarm Enforcer Server.	<i>ACM Installation and Setup Guide</i>
6	Install the UserAlert Server and database.	<i>UserAlert Installation and Setup Guide</i>
7	Install the ProTrend Tool Server and database.	Installation section

3. Installation Overview

3.4. GUSPro Clients

3.4 GUSPro Clients

The following table shows the suggested order for installing the prerequisite and application software components on the GUSPro GUS Clients and GUSPro Desktop Clients. (see GUSPro GUS Client and GUSPro Desktop Client for the prerequisite software release requirements.)

Step	Action	Reference
1	Install the Microsoft Windows operating system and prerequisite MDAC, Microsoft Office and Adobe Acrobat Reader software to suit. Some of these software components are optional. See GUSPro GUS Client and GUSPro Desktop Client section for more information.	Microsoft and Adobe Documentation
2	For GUSPro GUS Clients only, install the prerequisite GUS workstation and Hi-Spec Base software.	TPS Documentation
3	Install Oracle Client, along with the required Oracle ODBC drivers.	Uniformance and Oracle Documentation
4	Install the Uniformance Desktop, if desired.	Same as Above
5	Install the ACM Alarm Manager Client, ACM Alarm Enforcer Client and ACM Administrator Client. Be sure to select the GUSPro Integration component as part of the ACM software installation.	ACM Installation and Setup Guide
6	Install the Event Analyst Client.	Event Analyst Installation and Setup Guide
7	If the Uniformance Desktop is not installed in Step 4, the PHD OLE Automation Server, must be installed from the Uniformance media.	Uniformance and Oracle Documentation
8	Install the UserAlert Monitor Client and UserAlert Configuration Client.	UserAlert Installation and Setup Guide
9	Install the desired ProMenu and ProTrend software components.	Section Installation



TIP

When SafeView is configured on the GUSPro GUS Clients, it is recommended that the SafeView windows *not* be set to always on top and that the multiple display option be selected.

3.5 Upgrading From GUSPro R100

For those customers that are upgrading from GUSPro Release 100, please complete the following operations:

Step	Action	Reference
1	If you are upgrading from Uniformance R150.1 to R200, upgrade both the PHD and Uniformance software and database. (NOTE: This is not a mandatory requirement for GUSPro R150.)	Uniformance Documentation
2	Upgrade the AM Personality (TPS System Software) to R630.1.	TPS Documentation
3	Upgrade the ACM software components, as well as the Master Alarm Database tables in Oracle.	<i>ACM Installation and Setup Guide</i>
4	Upgrade the Event Analyst software components and database in Oracle.	<i>Event Analyst Installation and Setup Guide</i>
5	Upgrade the UserAlert software components and database in MSDE.	<i>UserAlert Installation and Setup Guide</i>

3. Installation Overview

3.6. Upgrading From GUSPro R110

3.6 Upgrading From GUSPro R110

For those customers that are upgrading from GUSPro Release 110, follow the operations:

Step	Action	
1	Uninstall the existing GUSPro software.	
2	Reboot the system.	
3	Install the new GUSPro software (select setup.exe in I386\Packages on the CD).	
4	Perform the following steps to create an Environment Variable for the Default Update Data Source used by the ProTrend Object and Templates.	
	Step	Action
	1	Right-mouse on My Computer and select Properties.
	2	Click on “Environment Variables” on the Advanced Tab.
	3	Under System variables, click new
	4	Enter GPRO_TREND_RTSource as the Variable Name. The Variable Value must be either PHD or the TPS Alias for the TPN Server that is the Update source.
5	If the node already has MSDE installed, run “C:\Program Files\Honeywell\GUSPro\ProTrend\authenticateSQL.exe”. This ensures that the SQL authentication is appropriate.	
6	Reboot	
7	Configure the ProTrend Database, then the ProTrend Tool.	
8	Any existing ProMenu displays that contain the sub_PM_TrendTag.pct must be updated by replacing that embedded display with the updated version.	

4. ProMenu and ProTrend Software Installation

4.1 Introduction

This section describes the software installation procedures for the ProMenu and ProTrend software components.

The software installation procedures for the Alarm Configuration Manager, Event Analyst and UserAlert applications are described elsewhere.

GUSProDir Directory Identification

As part of the ProMenu and ProTrend software installation, the parent installation directory for this software is identified using a System Environmental Variable named GUSProDir. The installer is required to reference this directory on a number of occasions in the ProMenu configuration process. As a result, this directory is referenced as %GUSProDir% throughout the ProMenu User Guide.

The GUSProDir directory is generated based on the install directory specified at installation time. If the default install directory is used, the GUSProDir directory is C:\Program Files\Honeywell\GUSPro.

4. ProMenu and ProTrend Software Installation

4.2. Installation

4.2 Installation

Procedure

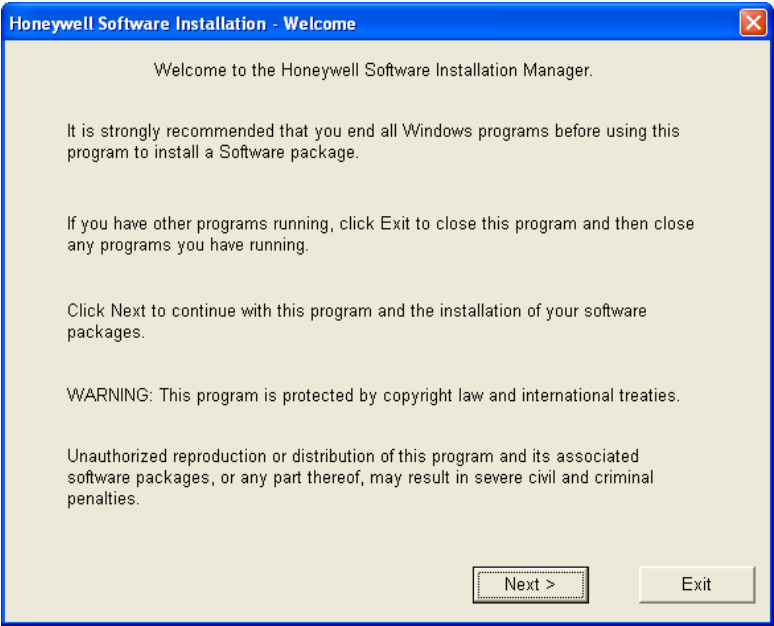
Use the following procedure to install the ProMenu and ProTrend software on the GUSPro Desktop and GUS Client computers. This procedure is also used to install the ProTrend Tool Server software on the GUSPro Server.



ATTENTION

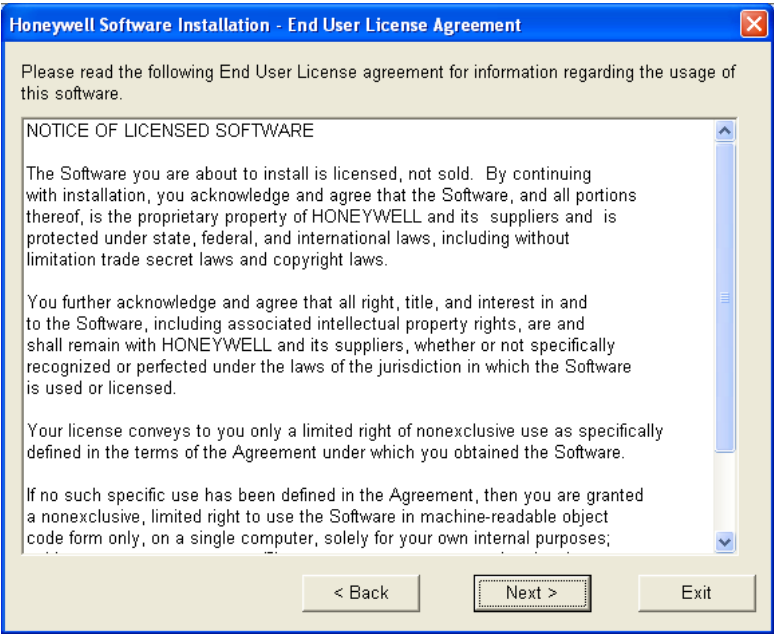
The MSDE is stopped during this installation. Any applications that are using the MSDE must be stopped prior to proceeding.

Step	Action
1	Log on to the target computer using an account with local administrator privileges.

Step	Action
2	Insert the TPS application software installation CD. Click Explore Disk. Open I386\Packages folder and run tpsinstall.exe. The Welcome dialog box appears.  Click Next.

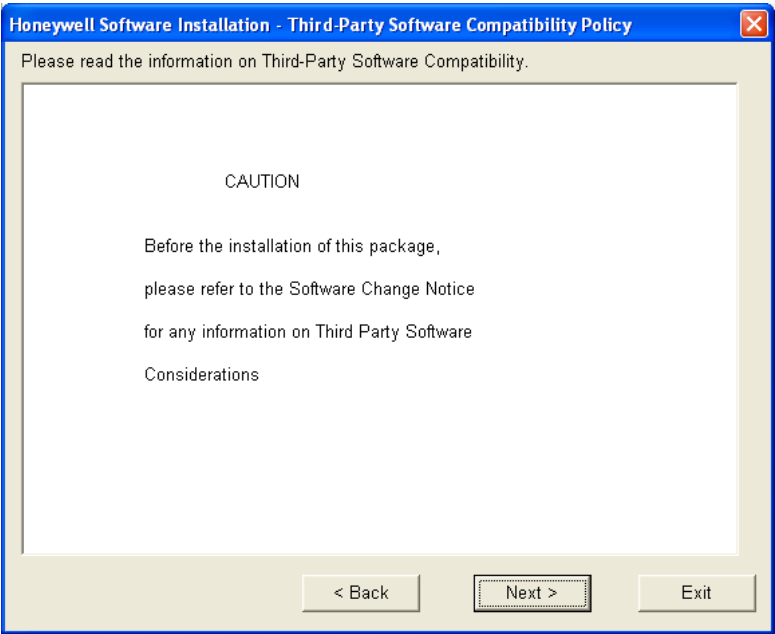
4. ProMenu and ProTrend Software Installation

4.2. Installation

Step	Action
	The End User License Agreement dialog appears. 
3	Read the license agreement and then click Next .

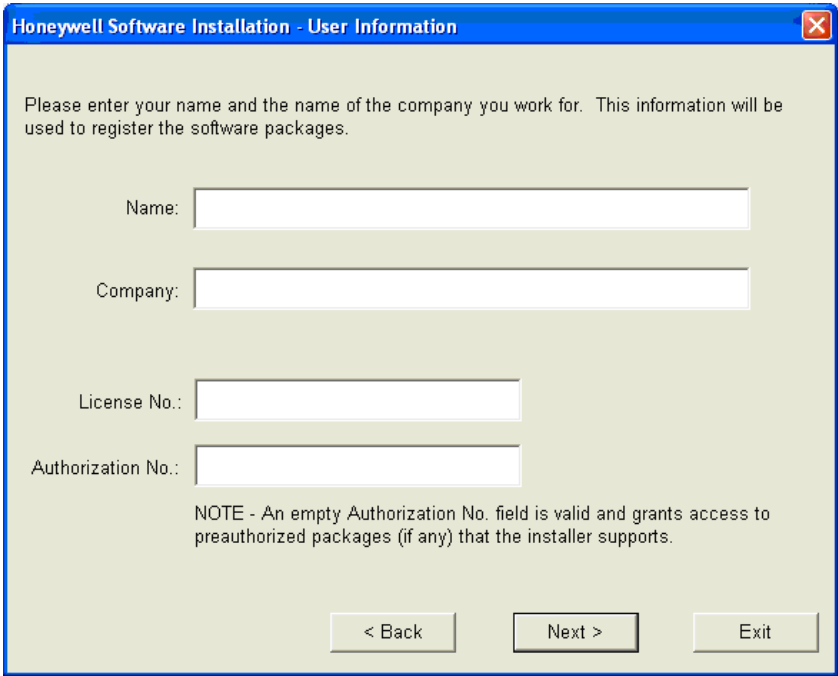
4. ProMenu and ProTrend Software Installation

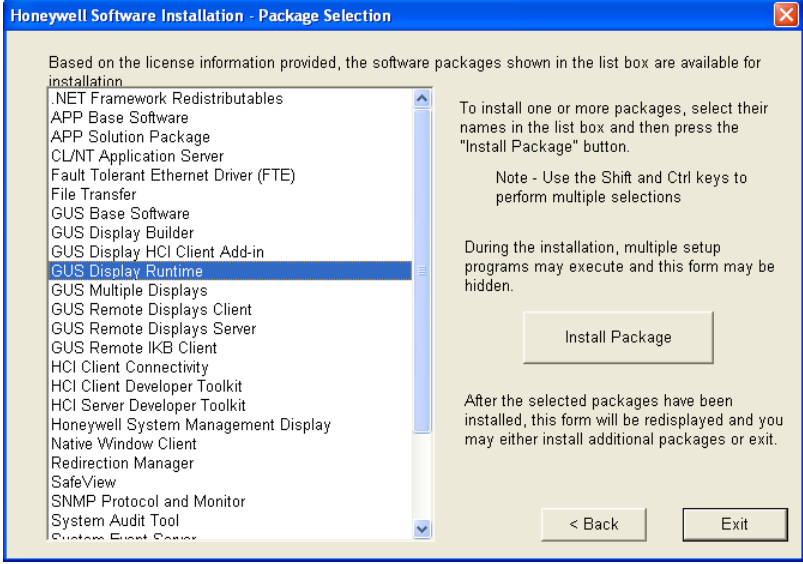
4.2. Installation

Step	Action
	The Third-Party....dialog box appears. 
4	Read the Third-Party Software Compatibility Policy and then click Next .

4. ProMenu and ProTrend Software Installation

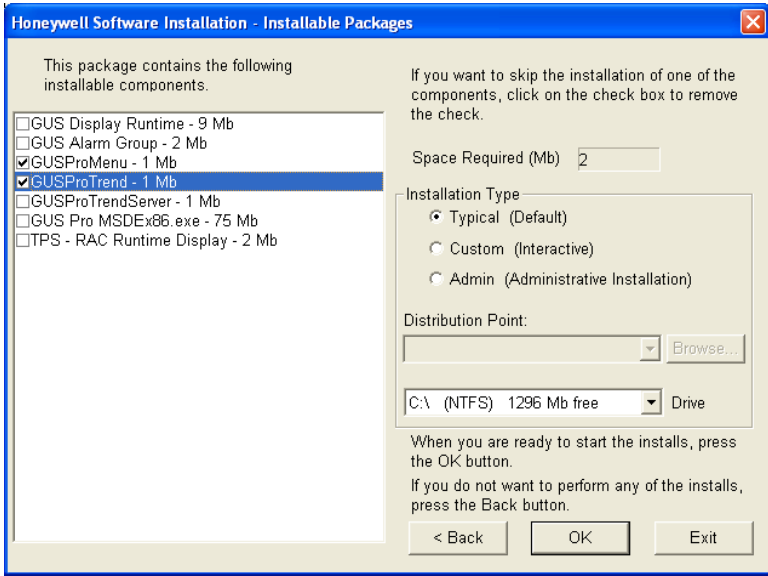
4.2. Installation

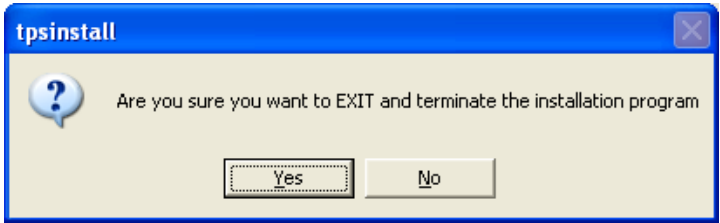
Step	Action
	The User Information dialog box appears. 
5	Enter the following information and then click Next. • Name • Company • License No. • Authorization No.

Step	Action
	The Package Selection dialog box appears. 
6	Select Gus Display Runtime package to Install and click Install Package .
	 TIP Once you select the package the Install Package option is available.

4. ProMenu and ProTrend Software Installation

4.2. Installation

Step	Action
	The Installable Packages dialog box appears. 
7	Select the components GusProMenu and GusProTrend to install and click OK .
	The InstallShield Wizard dialog box appears and installs the selected components.
	 TIP At this point, the required directories are created and the selected software components are installed and/or configured.
8	After installing the selected packages, the Installable Packages dialog appears.  Follow steps 6 through 10 to install more packages.
9	Click Exit .

Step	Action
	The following message box appears. 
10	Click Yes to quit the installation.
	 TIP Upon completion of the software installation, you may be prompted to restart the computer. This depends on the components you have installed.
11	Before using the applications, complete the configuration steps outlined in the following documents: • Section Configuration Tasks of the <i>ProMenu User Guide</i> • Section Initial ProTrend Tool Configuration of the <i>ProTrend User Guide</i>



TIP

For GUSPro Desktop Clients, the ProMenu software is only required for the following reasons:

- If a ProMenu on a GUSPro GUS Client is going to be used to launch one or more of the applications on the GUSPro Desktop Client.
- If the Desktop Client is going to be used to carry out application configuration using the GUSPro Configuration utility.

The ProTrend software is optional for both types of GUSPro Client computers.

It is recommended that one ProTrend Tool Server be set up for each GUSPro console. (See the *ProMenu User Guide* for a description of the GUSPro consoles.)

4. ProMenu and ProTrend Software Installation

4.3. Optional Private TPN OPC Server Installation

4.3 Optional Private TPN OPC Server Installation

Introduction

The ProTrend Object R150 has been validated against the Private TPN Server available with GUS R300 or higher. The Private TPN (PTPN) Server is more limited than the Standard TPN Server in the following ways:

- It cannot be used by non-Honeywell applications. It is not a managed TPS component.
- It has a data access limit of 50 parameters per second (to avoid compromising GUS display updates), so if the ProTrend Object requests exceed this there are delays in retrieving data. Each trace attempts to retrieve three parameters with each update period.

The Private TPN Server is installed as part of the normal GUS installation process with GUS331 or later. The following procedure is required to install the Private TPN Server on an early GUS Release.

Unmanaged PTPN Server Installation on GUS31x

The following are the minimum steps used to install the PTPN server on a non-TPS domain GUS client. For additional details on individual steps, refer to the *TPS System Implementation Guide* and the *TPS System Administration Guide*.



ATTENTION

Reboots were performed between each step, except where noted.

Step	Action
1	Install Windows 2003 Professional from a Microsoft CD.
2	Join a Windows 2003 domain.
3	Configure the audio and video drivers.
4	Install Windows 2003 Service Pack from the TPS CD 100.19 or newer.
5	Install Microsoft Redistributable library from TPS CD 100.19 or newer.
6	Install GUS base software (accepting all defaults) from TPS CD 100.19 or newer.

4. ProMenu and ProTrend Software Installation

4.3. Optional Private TPN OPC Server Installation

Step	Action
7	Install GUS personality from GUS TPN CD 630.1b or newer.
8	Configure the LCNP K4 board.
9	Create custom load LCN (if required) or update your History Module with the new GUS files and load native window. Do not reboot.
10	Install the HiSpec base software from TPS CD 100.19 or newer.
	ATTENTION Do not enter a password for the PTPN server. A default password is provided, but is not displayed. If you enter a password, the applications are not able to use the PTPN. Do not reboot.
11	Use DCOMCNFG to do the following: Grant HCI_TPNServer access and launch permission to everyone. Set the HCI_TPNServer identity to a fixed account (TPSComServer is recommended).
12	Load the Native Window.

4. ProMenu and ProTrend Software Installation

4.3. Optional Private TPN OPC Server Installation

5. Configuration Overview

5.1 General Information

This section contains recommendations for setting up the applications together on a single system. These recommendations are provided as an aid for integrating the features and functionality of the applications. For detailed configuration instructions for the Alarm Configuration Manager, Event Analyst and UserAlert applications please refer to the associated *Installation and Setup Guide*.

This section also describes how to use the GUSPro Configuration utility, which is installed with the ProMenu software, but that may be used with all of the applications.

5.2 Configuration Recommendations

Application Configuration Guidelines

As part of Alarm Configuration Manager configuration, the installer must identify the equipment and equipment groups that are of interest to ACM. Each equipment definition contains a collection of DCS tags related to a piece of equipment. Each equipment group contains a collection of DCS tags, equipment definitions and operating modes.

The ACM equipment and equipment groups are used as a master list for configuring all of the application equipment groupings, including those used by the Event Analyst, UserAlert and ProMenu applications.

As a result, it is recommended that the equipment and equipment group names defined in ACM be used as the starting point for defining the User Files in Event Analyst. Similarly, in UserAlert the alerts must be assigned to ACM equipment and equipment group names.

ProMenu

ProMenu provides context-sensitive navigation from within a GUS Graphic directly to the applications and other applications. In order for this utility to work with all of the applications, the same names must be used for the Alarm Configuration Manager equipment and equipment groups, Event Analyst User Files and UserAlert alerts.

5. Configuration Overview

5.2. Configuration Recommendations

Alarm Configuration Manager

Alarm Configuration Manager provides tools that make it easier to define the equipment groups based on PRIMMODs. If the PRIMMODs have been named and associated with equipment groups, these can be used to initialize the equipment or equipment groups for the ACM database. Customers must organize their ACM equipment and equipment groups with this in mind.

UserAlert

In UserAlert it is possible to filter alerts based on equipment or equipment group names. The alerts must be set up with the same names as the ACM equipment or equipment groups.

Event Analyst

In order to take full advantage of ProMenu functionality, it is recommended that the following Event Analyst User File naming convention be followed when configuring User Files for equipment or equipment groups:

EA_<equipment_name>.txt

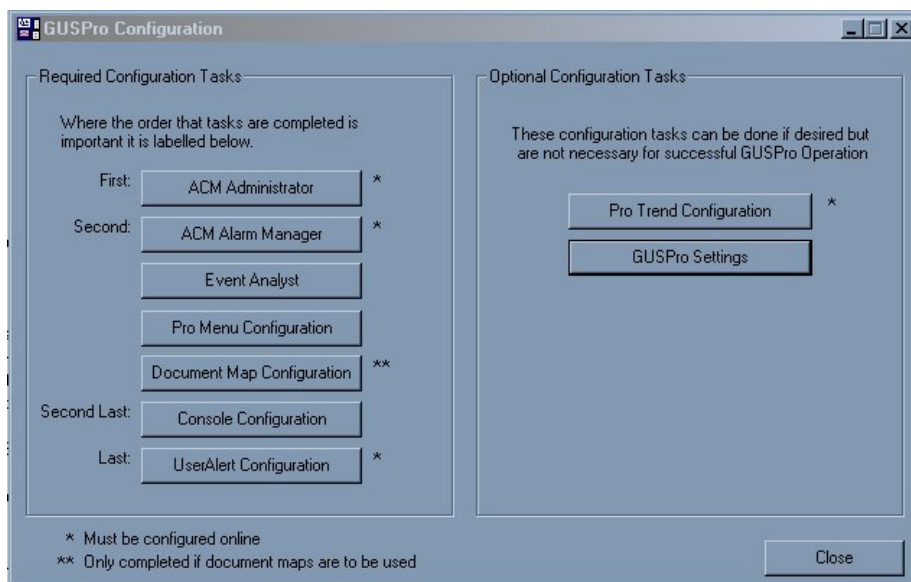
For example, EA_TWR123.txt could be the User File name for the equipment defined in the "TWR123" equipment group.

5.3 GUSPro Configuration Utility

Purpose

The GUSPro Configuration utility (Figure 3) provides a common access point for the configuration utilities supplied with the applications.

Figure 3 GUSPro Configuration Utility



The GUSPro Configuration utility is used to navigate between the required and optional configuration tasks. The required tasks are shown in the order in which they must be completed. Although it is recommended that the configuration tasks are done in a fully configured TPS system, only some configuration tasks actually require it. (The configuration tasks for Alarm Configuration Manager, UserAlert and ProTrend must be done on-line.) It is recommended however, that all configuration tasks be done on-line since all of the configuration tasks require access to the Alarm Configuration Manager database.

The GUSPro Configuration utility does not keep track of the configuration tasks that have already been completed or that still need to be done. The installer is responsible for managing the configuration process to ensure it is successfully completed.

5. Configuration Overview

5.3. GUSPro Configuration Utility

Access

To access the GUSPro Configuration utility, be sure that you are logged on using an account with local administrator privileges. Open the Windows **Start** menu and select **Programs**. In the Programs submenu, open the **Honeywell OPS** program group and select **GUSPro** followed by **GUSPro Configuration**.



TIP

For consistency, the GUSPro Configuration utility must be run on one of the GUSPro Client computers. By using the same computer for all of the configuration tasks, duplication of effort and configuration errors can be avoided.

Functions and Features

The configuration process is broken down into required and optional configuration tasks. The following tables briefly describe the utilities that are launched by each of the GUSPro Configuration utility buttons. References to more detailed information are also provided.

Table 9 GUSPro Configuration Required Task Buttons

Button	Description	Reference
ACM Administrator	Launches the ACM Administrator, which is used to configure the ACM control system, consoles, alarm groups and other site-specific settings. This configuration task must be completed on-line.	<i>ACM Installation and Setup Guide</i> <i>ACM Administrator User Guide</i>
ACM Alarm Manager	Launches the ACM Alarm Manager, which is used to configure the ACM Master Alarm Database contents, including alarm tags, alarm parameters, equipment definitions, equipment groups, and operating modes. The equipment and equipment groups that are set up by this application are used by other applications. This configuration task must be completed on-line.	<i>ACM Installation and Setup Guide</i> <i>ACM Alarm Manager User Guide</i>

Button	Description	Reference
Event Analyst	Launches Event Analyst, which is used to configure the Event Analyst User Files. If Event Analyst User Files are built using the ACM equipment group naming conventions, the associated equipment definitions can be collected directly from ACM.	<i>Event Analyst Installation and Setup Guide</i> <i>Event Analyst User Guide</i>
ProMenu Configuration	Launches the ProMenu Configuration utility. When defining Equipment ProMenus, the equipment and equipment group names can be collected directly from ACM.	<i>ProMenu User Guide</i>
Document Map Configuration	Launches the Document Map Configuration utility. When defining the Document Map rules, the equipment and equipment group names can be collected directly from ACM. This configuration task is only completed if document maps are to be used.	<i>ProMenu User Guide</i>
Console Configuration	Launches the Console Configuration utility, which is used to do the following: • Define the GUSPro consoles. • Identify the nodes in each console. • Determine which applications, documents and types of GUS graphics may be invoked on each node in a console. • Map the GUSPro consoles to the ACM consoles.	<i>ProMenu User Guide</i>
UserAlert Configuration	Launches the UserAlert Configuration Client, which is used to configure alerts. Any alerts based on equipment must be built using equipment defined in ACM. UserAlert includes a utility for selecting existing ACM equipment. This configuration must be completed on-line.	<i>UserAlert Configuration User Guide</i>

5. Configuration Overview

5.3. GUSPro Configuration Utility

Button	Description	Reference
	ATTENTION UserAlert Configuration does not launch unless the GUSPro console configuration that maps GUSPro consoles to ACM consoles has been completed.	

Table 10 GUSPro Configuration Optional Task Buttons

Button	Description	Reference
ProTrend Configuration 	Launches the ProTrend Tool Configuration utility, which is used to change the ProTrend Tool settings, if required. This configuration task must be completed on-line. ATTENTION Do not run the ProTrend Tool Configuration utility until after the ProTrend Tool database and registry entries have been set up. The ProTrend Tool Configuration utility cannot be run successfully before these tasks have been completed. (See the "Initial ProTrend Tool Configuration" instructions in the <i>ProTrend User Guide</i> for details.)	<i>ProTrend User Guide</i>
GUSPro Settings	Launches the GUSPro Settings display. It is used to change the file storage location settings used by the ProMenu application.	<i>ProMenu User Guide</i>

The GUSPro Configuration utility can be shut down at any time by clicking **Close**.

Honeywell

Process Solutions
2500 West Union Hills Drive
Phoenix, AZ 85027